折后尺寸:148.5 x 90 mm

180 mm

297 mm

Festive

Santa's Lighting Magic Light Box Controller

Santa's Lighting Magic Light Box Controller is the simple and fun solution to turning on and off your Christmas tree lights by push of switch.

Contents:

	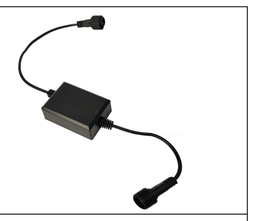
Magic Light Box Controller (requires 3 x AA batteries, not included)	Wireless RF Receiver
A LED light string containing 250/500 bulbs	LED power adaptor

Festive

Installation :

1:Plug your LED power adaptor to the end marked with **In**.

2:Plug your LED light string to the end marked with **Out**.

3:Insert the 3 x AA batteries into the battery compartment on the magic light box.

4:Plug the transformer into the wall socket (do not use extension leads) and turn the switch on at the socket.

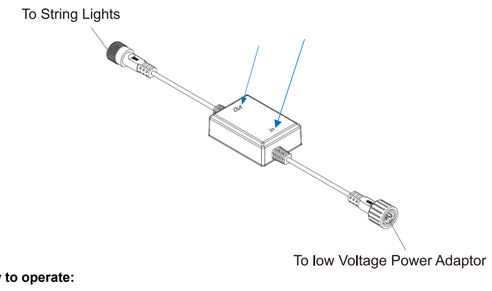

How to operate:

Push the plunger on the magic light box, the light set comes on.

Push the plunger again, the light set goes out.

Pressing the MODE button can change the function of the light. Each press MODE button changes one lighting function. There are a total of 8 lighting modes.

Please note that the magic light box needs to have a clear line of sight to the inline RF receiver, and it may not work if walls or partitions obscure the boxes line of sight to the receiver.

PLEASE NOTE: Although the magic light box and receiver is to be indoors at all times, this item can be used on light sets that are outdoors, as long as the transformer and receiver is indoors.

Festive

How to change the batteries on the magic light box:
At the base of the magic light box, you will see a battery compartment cover, remove the cover.

Next insert 3 x AA 1.5V DC batteries following the correct polarity markings.

Place the cover back on.

Warnings:
Transformer and RF receiver must remain indoors at all times.
This set is for indoor use only.
Keep the batteries away from children, if swallowed seek urgent medical attention immediately.
An adult must carry out battery replacement and installation.
Check that you have the correct type and quantity of batteries.
Do not short circuit the battery terminals.
Do not modify the battery compartment in any way.
Do not mix used and new batteries.
Do not mix alkaline, standard, lithium or rechargeable batteries.
Remove batteries from product when not in use for long periods of time.

Store unused batteries in their original packaging.
Do not recharge non-rechargeable batteries.
Keep away from heat or a direct flame.
Install carefully to prevent any damage to the batteries.
Remove exhausted batteries from this product.
Care and use:
Clean with a dry cloth.
Always remove batteries when not in use.
Always store in dry conditions.

Troubleshooting:

Q: why does the magic light box controller no longer work or has lost the sound function?
A: When the battery is low in power, it may not have enough power to send the ON/OFF signal to the receiver or play the sound effect. We suggest replacing the batteries with a new set.

Q: I have tried brand new batteries, and it doesn't seem to turn the set ON or OFF?
A: The magic light box controller is not paired or has disconnected with the wireless RF receiver, please turn off the main power supply to the low voltage adaptor, remove the batteries out of the Magic Light Box, wait for 5 minutes, put the batteries back in, then repeat the pairing process.

Festive

Electrical ratings:

This ITEM operates on 4.5V DC 0.36W
LED non-replaceable bulb rating 3V 0.06A 0.18W Max.

This Symbol indicates that this product is covered by legislation for waste electrical electronic products. When the product has reached the end of its life, please do not dispose of it with general household waste. Consider the environment and take it to a recognised recycling facility

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

III

LIGHTSET