
Remote Control Pairing

Turn on the remote control and place it within 10cm of the device.

Press and hold the "△" key for 4 to 5 seconds.

1. Release the buttons after the indicator light flashes.
2. Pairing prompt appears on the screen, "Paired Successfully" is displayed. The remote control has been paired successfully.



If pairing still fails, you need to disconnect the projector from the power source, then restart it following the above steps again.

Voice Control

Voice control of remote control: Press and hold the language button " " of remote control, move closer to the remote control and give a voice command, then release the voice button to complete voice control.

Focus Setting

Method 1: Manual focus

1. Press the focus key "◈" on the remote control to navigate to the focus screen.
2. On the focus screen, press the up and down arrow keys on the remote control to adjust the focus manually.



Method 2: Auto focus

1. From the home screen, navigate to Setting > Projector, then select Auto Focus. The system will automatically adjust the image into sharp focus.




2. While using the app, press the "⋯" key to enter quick settings for adjustments.

Tips: The interface will be updated. New information please refer to the actual display for the interface style.

Calibration Settings

Method 1: Manually trigger automatic correction

Moving the projector can trigger real-time autofocus and keystone correction to complete image calibration in one step.



Method 2: Manual correction

1. From the home screen, navigate to Setting > Projector, then select Manual Keystone Correction to enter the manual adjustment interface.



2. While using the app, press the "⋯" key to enter Quick Settings, then navigate to All Settings for adjustments.

Tips: The interface for this product has been to date, please refer to the actual display for the interface style.

Wireless Screen Casting

AirPlay:

a. Open the AirPlay app on the projector.

b. In a video app or audio player, tap the video/ or audio to stream wirelessly to the projector. Alternatively, open Control Center and select the Screen Mirroring/ to share your screen.

c. Select this TV or streaming device.

Screen Sharing:

Make sure your devices are connected to the same Wi-Fi or Ethernet network.

a. Open the Screen Sharing app on the projector.

b. Swipe down to open the Control Center and select the "Screen Mirroring" or "Cast" function on your device. The name and location of this function may vary by device.

c. Select your device name from the device list to share your phone/computer screen to this device.

Note:

This function supports Android and Windows 10 or above operating systems. Some devices may not support screen casting. Screen sharing performance may vary depending on your device.



Wired Connection for Screen Casting

1. Connect the projector and the input device using an HDMI cable.
2. Press the "⊡" button on the remote control and select the HDMI channel to complete the connection display.



Cleaning Method

Please make sure the power plug is unplugged before cleaning.

Do not use pesticides or other volatile chemicals on the projector or lens. Do not let rubber or vinyl products contact the projector for a long time, which will damage the coating and make it peeled off.

- Projector cleaning:

1. Wipe with a soft, dry cotton cloth. If it's dirty seriously, wipe with soft cloth that deals with diluted neutral detergent, then dry with a clean and dry cloth. Please pay more attention if used with chemical fiber cloth.
2. Don't use thinner, benzene or any other solvents to avoid quality reduction or coating peeling off etc.
3. A brush can be inserted into the front of the vacuum cleaner to remove dirt inside the vents. Please don't use vacuum cleaner without connector, or direct with vents directly.
4. Please don't scrape the projector with nails or any other hard objects so as to avoid scratches.

- Lens cleaning:

1. Wipe lens with the same method for camera lens: please use professional lens dryer or cleaning paper for glasses, ensure lens are not scratched.

- Inlet and Outlet Dust Cleaning:

1. Dust in the inlet and outlet will prevent vent holes and increase the internal temperature, which will cause defect.
2. Disconnect power line after turn off the projector.
3. Clean the exterior with an electric vacuum cleaner, please install mesh head adapter on the vacuum cleaner first,Don't use vacuum cleaner with no connector or brush.
4. Replace the stale-proof cotton cleaning cloth.

Hazardous and Harmful Substance, Element Name and Content

Hazardous substances

Part name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybro. biphenyls (PBB)	Polybro. phenyl ethers (PBDE)
Shell	O	O	O	O	O	O
Optical Modules	O	O	O	O	O	O
Circuit Board	O	O	O	O	O	O
Fan	O	O	O	O	O	O
Other Wires	X	O	O	O	O	O
Remote Control	O	O	O	O	O	O
Power Supply	O	O	O	O	O	O

O: Content of the hazardous substance in all homogeneous materials of the component are under the limits of SJ/T 11363-2006.

X: Content of the hazardous substance exceed the limit requirements specified by SJ/T 11363-2006 in at least one homogeneous material of the component. The components labeled "X" have no substitutes due to global technology development limits. Circuit board assembly * : including printed circuit board and its components, electronic components, etc.

The number in this icon represents the projector's service life under normal environment (without battery).

After-sales Service Policy:

Projectors enjoy 12 months of warranty service from the date of purchase in the official store.If the purchased projector has defects, please contact the corresponding purchase store for processing.

Note: The warranty policy only applies to projectors purchased in the official store. Projectors purchased from other stores are not subject to this policy, and the purchase information of other stores shall prevail.

Users who need after-sales service or exercise warranty rights, please exercise the purchase account to contact the corresponding purchase store.

Due to different warranty policies of each region, users who did not purchase in the official store should contact the corresponding retailer for warranty service.

If projectors purchased from other channels require official assistance, the warranty period shall be redetermined based on the SN on the bottom of the projector (Projectors without SN or damaged SN are all classified as projectors without warranty).

The circumstances not covered by the warranty:

Projector damages caused by the user, including but not limited to: burns, liquid or food spills, cracks, breaks, items caused by falling, overdamage of the projector or extreme temperatures or other projector defects caused by human behavior.And the warranty will be void in any of the cases.

The projector under warranty does not cover the appearance damage in consumed devices or other gifts in the box, product outer surface/coating and external parts, including but not limited to cracks, dents or scratches on the housing, lens, buttons and other accessories,and product deterioration caused by normal wear and tear, including but not limited to wear or stains.

Damage caused by refusal to or incompatibility issues when using unauthorized repairs or disassembly, modification and use of third-party parts.

Projector failure caused by any software program (whether provided with the product or subsequently installed.

Irreversible damage to the machine caused by downgrading firmware updates from developers.

Projector damage caused by disasters such as fire, floods, lightning and other forms of force majeure.

Product's warranty period has expired.

wanbo



Wanbo Projector

Cube 2S Instruction Manual

Before using this projector, please read this Instruction Manual carefully.

Thank you for purchasing our products.For your safety and proper use of this product, please read this Instruction Manual carefully before using it.We also provide user support and product warranty services.Improper use may cause damage or other losses.Kindly note that we will not be responsible for any damage or loss caused by failure to follow the instructions provided in this manual.

Important Safety Precautions

You are recommended to use the projector in a dark room to achieve the best viewing effect

1. Please don't install in places that directly blown by cold and warm air of air-conditioning, water condensation or high temperature where may lead to projector failure.
2. Ensure adequate ventilation and vent are not blocked to prevent heat accumulation inside the projector.
3. Please prevent foreign matters such as nails or paper scraps from falling into the projector. Do not insert any metals such as iron wire or screwdriver into the projector. Please turn off the power immediately and turn to professional technician to remove it if any foreign matters fall into the body.
4. Do not place any liquid on this projector to avoid risk of electric leakage.
5. Please use soft packaging materials to move the projector, keep the projector from violent vibration.
6. Screw wear the screws will become not during and after we use the projector, it may lead to scrap if we touch with hand.
7. Please don't look directly into the lens when it's on so as to protect our eyes from injury.

⚠ Note:

- Don't open the shell to prevent electric shock. Please turn to qualified professional technician for repair if the maintenance as no parts are provided together with the projector to avoid a repair.
- Don't expose the projector to rain or moisture so as to prevent misfire or electric shock.
- The projector is applicable to be used under a temperature of 0-40℃ for a safe use.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

To maintain compliance with FCC's RF exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm from your body.

Important Safety Precautions



Basic Parameters

Items	Wanbo Projector	Display Principle	LCD
Light Source	LED	Working Environment	+5~40℃
Operation Mode	Remote Control	Input Port	HDMI/USB
Output Port	Headphone Audio Output	Machine Size	110×110×210mm
Net Weight	1.24kg	Power Supply	AC 100-240V 50/60Hz 2A Max
Accessory	User Manual / Remote Control / Power Cord		


List of Items



Note: Thank you very much for purchasing Wanbo projector, Please check whether the physical product and accessories you received are consistent with those of the list. If not, please contact the customer service of Wanbo in time.


Projection Distance Reference

Projection size (inch)	40	70	100	120
Screen length * width (cm)	69*39	102*57	221*125	266*150
Lens + screen (m)	1.2	1.2	2.5	3.2



Note: The best projection distance for this projector is about 1.2m-3.5m, if the distance is too far, the brightness and clarity will decrease, affecting the viewing experience.


Introduction to Projector Appearance

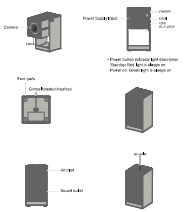

External Device Connection



Remote Control

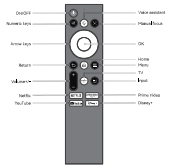

Facebook Twitter Instagram

封底	1	2	3	4	5	6	封面
7	8	9	10	11	12	13	14

图纸号	S02(VIDAA)-SMS01-002	类型	Cube 2S 英文说明书
颜色	单色黑印刷	尺寸	折前尺寸:810*120mm 折后尺寸:90*120mm
材质工艺	128g铜版纸 白色 ; 9页风琴折双面		
备注			