DPVR®

# 用户指南

注册DPVR账号

www.dpvt.com

说明书中图片仅供参考,以实物为准



## 产品装箱单

| | | |
|---|---|---|
| 主设备 | 大视VR一体机 | P1 PRO(MAX) |
| 配件 | USB线<br>说明书&三包凭证<br>手柄 | |



## 按键/接口/指示灯状态说明






| 按键 | 描述 |
|---|---|
| 电源键 | 短按 引导/睡眠唤醒<br>长按2秒 开机/提示关机<br>长按8秒 强制关机 |
| 返回键 | 短按 返回功能<br>长按2秒 Home功能 |
| 触控板 | 滑动 翻页功能<br>点触 确认 |
| 音量键 | 调节音量大小 |

| 接口 | 描述 |
|---|---|
| 音频接口 | 可插入耳机（不支持耳机线上的音量调节/智单等功能） |
| Micro USB接口 | 充电/数据传输 |
| TF卡槽 | 打开防尘塞，将TF卡按图示插入 |

| 指示灯状态 | 描述 |
|---|---|
| 蓝灯常亮 | 设备处于正常工作状态 |
| 绿灯常亮 | 充电充满 |
| 红灯常亮 | 电量不足 |
| 黄灯常亮 | 充电状态 |

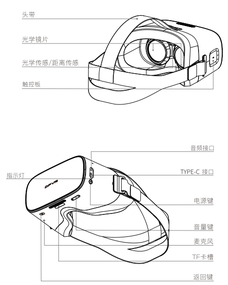

## 头带安装及调节说明

安装及调试头带

头带分别穿过两侧和顶部拉环，粘贴至合适位置即可





## 触控板说明

点触操作

1.转动头部，使屏幕上的光标对准需要选择的菜单。
2.使用手指点触触摸板。



左右滑动，翻页

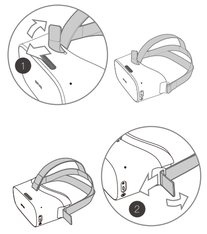上下滑动，可滚动列表



## 光标定位说明

设备能识别头部转动，并且可以将头部转动定位到屏幕显示区域。

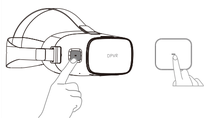


## 选择说明

通过转动头部和点触触摸板，可以选择应用程序和选项。

1.转动头部，使光标移动至需要选择的区域。
2.点击触摸板（设备右侧）。

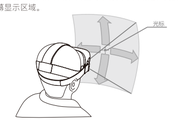



## 手柄使用说明

### 一.产品概述

| | |
|---|---|
| 产品名称 | DPVR 蓝牙手柄 |
| 产品型号 | BC301 |
| 重量 | 45g |
| 尺寸 | 12mmx37mmx34mm |
| 连接 | 蓝牙 |
| 电池 | 2XAAA |

### 二.按键定义






### 三.按键使用说明

| | | | |
|---|---|---|---|
| Home键 | | 短按 | 返回主界面 |
| | | 长按2秒 | 重新定位视场 |
| | | 长按5秒 | 蓝牙手柄开/关机 |
| 返回键 | | 短按 | 返回上级菜单 |
| 触控板 | | 滑动 | 滚动页面 |
| | | 点按 | 确认 |
| 扳机键 | | 按压 | 确认 |

### 四.指示灯状态
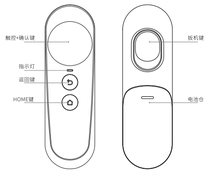
| | |
|---|---|
| 开机未配对 | 白色指示灯闪烁（每秒一次） |
| 配对中 | 白色指示灯长亮 |
| 配对完成 | 白色指示灯熄灭 |
| 正常使用按键时 | 白色指示灯亮起 |
| 低电量 | 快速闪烁（每秒两次） |

### 五.配对

· 确保主机蓝牙功能打开。
· 当主机处于配对状态时，根据主机界面提示，同时按下“返回键”和“Home键”进行配对。配对成功后白色指示灯熄灭。
· 配对不成功，白色指示灯会闪烁（每秒一次）。
· 如果白色指示灯熄灭，但目标主机未显示手柄连接。请检查附近是否有其它设备干扰。排除干扰后重新尝试配对。



## 安全信息

使用设备前，请先阅读以下安全信息，以确保安全和正确使用。

**遵循下面提供的警告信息以防止火灾或爆炸等事故。**

–请勿使设备受到物理碰撞或挤压。
–使用制造商认可的充电器和配件。
–请勿用湿手触碰设备。此外，请勿在洗手间等液体环境中或在进行游泳等活动中使用设备。
– 此图标表示仅适用于非热带气候条件使用。

**遵循下面的警告以防止伤人或损坏设备**

–请勿将设备存放在过热或过冷的地方，建议在温度介于0℃至35℃的环境温度下使用该设备。
–设备在低于0℃或高于40℃的环境温度下进行充电有可能对电池造成损伤。
–设备不用时，请置于阴凉干燥的地方存放。禁止设备透镜直对阳光或强光源，以防止屏幕被强光灼伤。
–保持设备干燥，请勿在雷雨天气的室外使用设备。
–为防止在使用耳机时可能发生的听力损害，请勿长时间使用高音量。
–本设备不建议低于13岁以下未成年人使用，13岁以下的未成年人及65岁以上老年人使用时，监护人需限制其使用时间，保证间歇使用和休息。



DPVR®

# User guide

Follow us on Wechat
Register for a DPVR account

www.dpvt.com

The images in the instructions are for illustration purposes only and do not constitute a guarantee of the product specifications.



## Packing List

| | | |
|---|---|---|
| Device | DPVR P1 PRO(MAX) | |
| Accessories | USB cable<br>Instructions and warranty card<br>Handle | |



## Instructions for the buttons /ports/indicators






| Buttons | Description | |
|---|---|---|
| Power button | Press and release<br>Press and hold<br>Press and hold for eight seconds | Standby/wake<br>Power on/off<br>Force power off |
| Return button | Press and release<br>Press and hold for two seconds | Return to previous interface<br>Return to Home screen |
| Touchpad | Slide<br>Tap | Scroll<br>Enter |
| Volume buttons | Adjusting sound volume | |

| Ports | Description |
|---|---|
| Headphone jack | 3.5mm earphone（Volume adjustment/play/pause function on the earphone cable is not supported） |
| Micro-USB port | Connect to the charger (device does not charge when worn). Can be connected to a computer for data transfers. OTG supported |
| TF card slot | Open dust cover, then insert TF card as shown in the picture |

| Indicator status | Description |
|---|---|
| Steady blue light | Power on/Device is operating normally |
| Steady green light | Charging complete |
| Steady red light | Low battery |
| Steady yellow light | Device is charging |

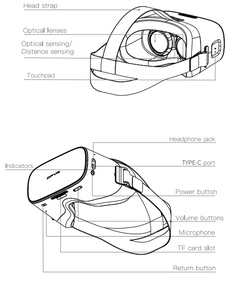

## Instructions for head strap mounting and adjustment

The head strap passes through the rings on both sides and the top respectively, and then adjust to proper fit.





## Touchpad instructions

Touch operations

1. Turn your head to move the screen cursor to the desired menu.
2. Tap on the touchpad with your finger.



Slide left or right to turn a page

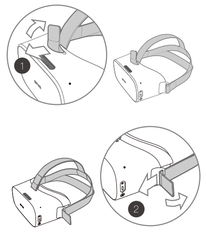Slide up or down to look through a list



## Cursor positioning instruction

The device is capable of sensing the movements of the user's head. It is also capable of positioning to the corresponding part of the screen in accordance with head movements.

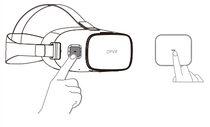


## Selection

You can choose the desired apps or items by turning your head or by using the touchpad.

1. Turning your head to move the cursor to the desired position.
2. Tap on the touchpad (on the right side of the device).





## Controller Instruction

### 1. Product overview

| | |
|---|---|
| Product name | DPVR Bluetooth Controller |
| Product model | BC301 |
| Weight | 45g |
| Size | 12mmx37mmx34mm |
| Connection | bluetooth |
| Battery | 2xAAA |

### 2. Key setting instruction






### 3. Key function description

| | | |
|---|---|---|
| Home button | | Press the button to return to the main interface |
| | | Press and hold for 2 seconds to adjust the Controller position |
| | | Press and hold for 5 seconds to turn on/off the bluetooth Controller |
| Return key | | Return to the previous menu |
| Touchpad | | Scroll the page by sliding |
| | | Click to confirm |
| Trigger button | | Press the button to confirm |

### 4. Indicator status
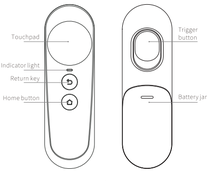
| | |
|---|---|
| Boot but not connected | Indicator light flashes(Once a second) |
| Being connected | Indicator light keeps on |
| Connected successfully | Indicator light go out |
| Low power of controller | Indicator light flashes quickly(Twice a second) |

### 5. Controller connection

•Make sure the VR headset bluetooth is enabled
•Please press and hold the return key and the home button until the VR headset successfully identifies the controller. When the controller is connected successfully, the white indicator light will go out.
•Controller connection failed, the white indicator light flashes (once a second)
•If the white indicator light is off but the controller is not connected successfully, please confirm whether it is interfered by the signal from other nearby devices. After removing signal interference, try connecting again



## Safety information

Please read the following information prior to using the device to ensure your safety and the correct use of the device.

**For your safety, please adhere to the following safety precautions**

–Prevent physical impact to the device from collision or drops.
–Use only manufacturer-approved chargers and accessories with the device.
–DO NOT touch the device with damp or wet hands, and do not use the device in damp conditions such as bathrooms, swimming pools or areas where you may come in contact with water while wearing the device.

**To avoid injury and prevent damage to the device, please adhere to the following safety precautions**

–Do not place or store device in hot or cold locations. The recommended usage and storage environment temperature should be between 0 °C and 35 °C.
–Charging the device at ambient temperatures below 0 degrees Celsius or above 30 degrees Celsius may cause damage
–When the device is not in use, store it in a cool, dry place. Do not expose the lens to direct sunlight or strong light sources to prevent screen burns.
–Keep the device dry. Do not use the device outdoors in damp weather or rain.
–To prevent hearing impairment, do not use earphones or headphones at high volume for extended period of time.
–Not recommended for use by children under 13 years of age. Children under 13 and adults over 65 years old need proper guidance to limit duration and ensure rest time.



DPVR®

# 사용 설명서

동작 계정 생성후
DPVR 계정 가입

www.dpvt.com

사용 설명서 상의 이미지는 실제 제품과 차이점 수 있습니다.



## 제품 구성

| | | |
|---|---|---|
| 본체 | DPVR원신원 | P1 PRO(MAX) |
| 부속품 | USB 케이블<br>설명서 및 A/S 증명서<br>핸드폴러 | |



## 버튼/포트/표시등 상태 설명






| 버튼 | | 설명 |
|---|---|---|
| 전원 버튼 | | 터치 화면 켜짐/슬립 모드 해제<br>길게 2초 기기 시작/종료 알림<br>길게 8초 강제 종료 |
| 돌아가기 버튼 | | 터치 돌아가기<br>길게 2초 홈 가능 |
| 터치패드 | | 슬라이드 페이지 넘기기<br>터치 확인 |
| 음량 버튼 | | 음량 크기 조절 |

| 포트 | 설명 |
|---|---|
| 오디오 포트 | 이어폰 연결가 가능하나, 이어폰을 통해 음량 조절 및 일시 정지/재생 기능은 지원 하지 않음 |
| Micro USB 포트 | 충전, 데이터 전송 |
| TF 카드 슬롯 | 보호캡을 열어 TF 카드를 이어지와 같이 삽입 |

| 표시등 상태 | 설명 |
|---|---|
| 파란색 | 기기가 정상 작동 중 |
| 초록색 | 100% 충전됨 |
| 빨간색 | 배터리 부족 |
| 노란색 | 충전 중 |

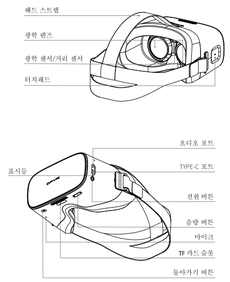

## 헤드 스트랩 장착 및 조절 설명

헤드 스트랩을 그림과 같이 상단과 양 옆 연결 고리에 순서대로 끼운 후 적절히 붙여서 사용하세요.





## 터치패드 설명

터치 조작

1. 머리를 움직이어 화면 상의 선택하려는 메뉴로 커서를 이동하십시오.
2. 손가락으로 터치패드를 터치하여 조작하십시오.



좌우 슬라이드 - 페이지 넘김

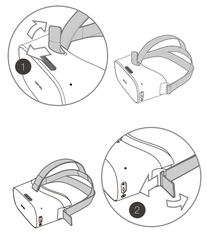상하 슬라이드 - 리스트 스크롤



## 컨트롤러 매뉴얼

### 1. 제품 개요
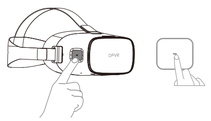
| | |
|---|---|
| 제품명 | DPVR 블루투스 컨트롤러 |
| 제품모델 | BC301 |
| 중량 | 45g |
| 사이즈 | 12mm * 37mm * 34mm |
| 연결 | 블루투스 |
| 배터리 | 2 * AAA |

### 2. 버튼 기능 설명






### 3. 버튼 사용 설명

| | | | |
|---|---|---|---|
| 홈버튼 | | 짧게 누르기 | 메인화면으로 돌아가기 |
| | | 2초 동안 길게 | 시야 위치 재설정 |
| | | 5초 동안 길게 | 블루투스 컨트롤러 전원 끄기/켜기 |
| 뒤로 가기 | | 버튼짧게 | 이전화면으로 돌아가기 |
| 터치패널 | | 슬라이딩 | 슬라이딩 화면 |
| | | 클릭하기 | 확인하기 |
| 트리거 버튼 | | 클릭하기 | 확인하기 |

### 4. 표시 등 상태
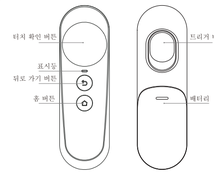
| | |
|---|---|
| 기기가 페어링되지 않는다 | 천천 표시등이 깜빡깜빡 함(초당 한번) |
| 페어링 중 | 천천 표시등 길게 켜짐 |
| 페어링 됨 | 천천 표시등 켜짐 |
| 버튼을 정상 사용할 때 | 천천 표시등 켜짐 |
| 배터리 잔량 부족 | 빠르게 깜빡 깜빡(초당 두번) |

### 5. 컨트롤러 연결(페어링)

– VR 헤드셋의 블루투스 기능이 활성화되어 있는지 확인하십시오.
– VR 헤드셋이 컨트롤러와 연결(페어링) 될 때까지 홈도가기 버튼과 홈 버튼을 길게 누릅니다. 컨트롤러가 성공적으로 연결되면 흰색 표시등이 켜집니다.
– 컨트롤러 연결에 실패했을 경우, 흰색 표시등이 1초 간격으로 깜빡입니다.
– 흰색 표시등이 켜져 있지만 컨트롤러가 성공적으로 연결되지 않을 경우, 주변의 다른 블루투스 장치에 의해 간섭을 받는지 확인하십시오. 블루투스 장치의 신호 간섭을 제거한 후 다시 연결(페어링)을 시도 하십시오.



## 포인트 위치 설명

머리를 움직여 선택하고자 하는 위치에 커서를 위치시킬 수 있습니다.

## 선택 설명

머리를 움직이거나 패드를 터치하여 앱 또는 항목을 선택할 수 있습니다.

1. 머리를 움직여 원연상의 선택하려는 메뉴에 커서를 이동시키십시오.
2. 터치패드를 터치하십시오.(디바이스 우측)





## 안전 정보

기기를 사용하기 전에 다음의 안전 정보를 참고하여 올바르게 사용하여야 합니다.

안전을 위해 다음 내용을 준수하십시오.
– 기기를 떨어뜨리거나 물리적 충격을 주지 마십시오.
– 제공되는 충전기 및 부품을 사용하십시오.
– 젖은 손으로 기기를 만지거나, 욕실이나 수영장 같은 곳에서 사용하지 마십시오.

부상을 방지하고 기기의 손상을 방지하기 위해 다음 사항을 준수하십시오.
– 기기를 너무 뜨겁거나 차가운 곳에 보관하지 마십시오.
기기 보관에 적합한 온도는 0° ~35° 입니다.
– 온도라고 이야 말는 32° 이상의 환경에서 기기 충전을 할 경우 배터리 성능에 손상을 줄 수 있습니다.
– 기기를 사용하지 않을 때는, 서늘하고 건조한 곳에 보관하십시오.
기기 렌즈를 직사광선이나 강한 광원에노출 할 경우, 스크린(화면)이 손상될 수 있습니다.
– 기기를 건조한 환경에서 사용하고, 습하거나 비가 오는 날씨에 실외에서 사용을 하지 마십시오.
– 청력 손상을 예방하기 위해서 이어폰 또는 헤드셋을 사용할 경우에는 높은 볼륨으로 장시간 사용 하지 마십시오.
– 13세 미만의 청소년에게는 기기 사용을 권장하지 않으며, 13세 이하의 청소년 또는 65세 이상의 노인이 기기를 사용할 경우 보호자의 관리하에 제한된 시간의 사용과 충분한 휴식을 취하도록 하십시오.

DPVR®

# 利用案内

Follow us on Wechat
Register for a DPVR account

www.dpvt.com

The images in the instructions are for illustration purposes only and do not constitute a guarantee of the product specifications.



## パッケージリスト

| | | |
|---|---|---|
| モデル | DPVR P1 PRO(MAX) | |
| アクセサリ | USB ケーブル<br>説明書及び保証カード<br>コントローラー | |



## ボタン、ポート及びインディケータースのご案内






| ボタン | | 説明 |
|---|---|---|
| 電源ボタン | | 押す 2秒長押し、3秒長押し。 電源オン/オフ、強制停止 |
| 戻るボタン | | 押す 2秒長押し 前に戻る、ホーム画面に戻る |
| タッチパッド | | スライド 選択<br>タップ 確認 |
| 音量ボタン | | 音量調節 |

| ポート | 説明 |
|---|---|
| ヘッドフォンジャック | 3.5mm イヤホン（音量調節/再生/一時停止などの機能はサーブルを使用できません） |
| マイクロUSBポート | お手持ちのmicro USBケーブルで充電器を使用することで充電可能（電源が100%の時は充電しません）。外部デバイスに接続し、データの読み取りや伝送などに対応します。OTG対応。 |
| MicroSD カードスロット | スロットカバーを外し、microSDカードを挿入して使います。 |

| インジケーターステータス | 説明 |
|---|---|
| 青色に点灯 | 電源オン/デバイスが正常に動いている意味 |
| 緑色に点灯 | 充電完了 |
| 赤色に点灯 | バッテリ不足 |
| 黄色に点灯 | 充電中 |

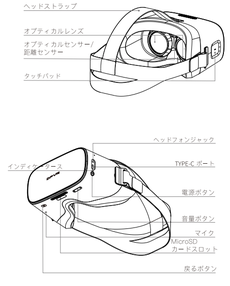

## ヘッドストラップの説明 装着及び調節

ヘッドストラップは、それぞれ両側の輪っかおよび上部の輪っかを通過し、適切な位置に取り付けられる。





## タッチパッド案内

操作案内

1. 頭を動かし、画面カーソルを目的のメニューに移動します。
2. アイテムにカーソルの位置を合わせてタッチパッドをタップすると選択ができます。



左右にスライドしてページを変えることができます

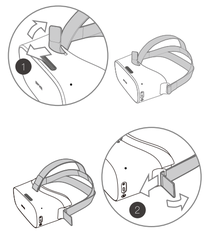上下にスライドしてリストが表示されます



## カーソル位置の説明

このデバイスは、ユーザの頭の動きを感知することができます。
頭の動きに応じて画面の位置を沖めることも可能です。

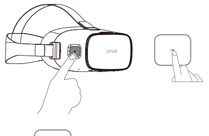


## 選択

頭を動かしたり、タッチパッドを利用して、ご希望のアプリやアイテムを選択できます。

1. 頭を動かしてカーソルを目的の位置に移動させます。
2. デバイスの右側にあるタッチパッドをタップし選択決定します。

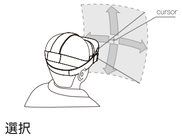



## コントローラ手引き

### 一.製品概要

| | |
|---|---|
| 製品名 | DPVRブルートゥースコントローラ |
| 製品型番 | BC301 |
| 重量 | 45g |
| サイズ | 12mmx37mmx34mm |
| 接続 | ブルートゥース |
| バッテリー | 2XAAA |

### 二.ボタン設置説明






### 三.ボタン手引き

| | | |
|---|---|---|
| ホームボタン | | タップでホームページに戻します |
| | | 2秒長押しでコントローラの位置が調節されます |
| | | 5秒長押しでコントローラの電源をオン/オフにします |
| 戻るボタン | | タップで前の画面に戻ります |
| タッチパッド | | 滑るこでページスクロールします |
| | | タップで決定します |
| 引き金ボタン | | タップで決定します |

### 四、ランプ状態説明
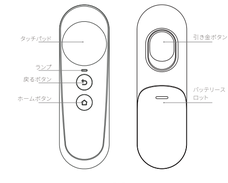
| | |
|---|---|
| コントローラは未だ接続されていません。 | 白いランプが点灯します（秒間1回） |
| コントローラは接続中 | 白いランプが点灯します |
| コントローラは接続完了 | 白いランプが消灯します |
| コントローラのボタンを押すと。 | 白いランプが一瞬点灯します |
| コントローラの電源不足 | ランプが急速に点滅します（秒間2回） |

### 五、接続手引き

•①ヘッドセットのブルートゥース機能がオンにされているのを確保してください。
•②コントローラが認識されるまで戻るボタンとホームボタンを同時に長押ししてください。コントローラの接続は常ブ上昇。白いランプが消えます
•③コントローラの接続は失敗すると、白いランプが閃きます（秒1回）
•④いランプが消えたが、コントローラの接続がまだ成功しない場合は、他のデバイスから信号干渉されているかどうかを確認してください。信号干渉を排除した上で、改めて接続してください



## 安全に関するお知らせ

当製品をご利用する前に、下記の安全に関する情報をお読みください。

**火災や爆発などの事故を防ぐため、下記の安全に関する情報をお読みください。**

–物理的な衝撃（衝突や落下など）やデバイスの損傷を防ぐこと
–純正機器は純正品あるいは承認された製品をご利用ください。
–濡れた手でデバイスに触れないでください。また、濡れた環境（浴室など）や水浴などの作業中は、デバイスを使用しないでください

**デバイスの損傷を防ぐため、下記の安全に関する情報をお読みください。**

–高温と高温または低温の場所に設置または保管しないでください。室内温度(0～40℃の環境でのご利用を推奨致します。
–高周波波が0℃以下または40℃以上の環境で充電するとデバイスが損傷する可能性があります。
–デバイスを使用しないときは、涼しく乾燥した場所に保管してください。直射日光や強い光源レンズをさらさないでください。
–デバイスは乾燥した状態で保管してください。雨の日に外室でのご使用はしないでください。
–イヤホンやヘッドフォンの使用により、聴力が低下するの未防ぐため、大音量まだは長時間の視聴はしないでください。
–13歳未満の未成年者による デバイスの使用は禁止しません。
デバイスが13歳未満の未成年者さら18歳以上の高齢者によって使用される場合、保護者は使用時間を制限し、ユーザーが使用期間の間に休憩を取るようにする必要があります。

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.