纸　　张：100g书写纸
尺　　寸：350X120mm　折后70X120mm　（风琴折页，正反印刷，不留线框）

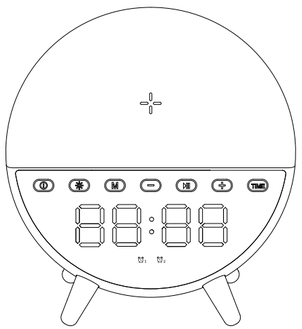

AW-W7D无线充闹钟

使用前请仔细阅读本使用说明书，并请妥善保管

电池充电注意事项：

产品内置可充电锂电池，请在首次使用前(或者产品没电时)按照如下操作充电：
- 将USB充电线USB-C接头连接主机DC IN端口进行充电。
- 将USB充电线连接电脑USB充电端口，或者其他USB端口进行充电。

请按照如下操作，可延长电池使用寿命：
- 首次充电请充满电，时长约2小时。
- 不得过度充电(超过24小时)，不得过度待机(超过3个月)，过度充电或者放空电池有损电池使用寿命，电池保持正常充满电可以延长电池使用寿命，电池寿命会随着时间慢慢缩短。

产品概况

感谢购买本公司无线充闹钟，本产品集无线充电/时钟闹钟/小夜灯等功能一体。

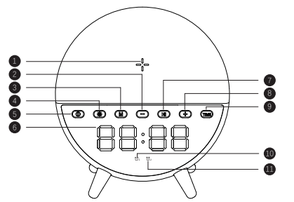

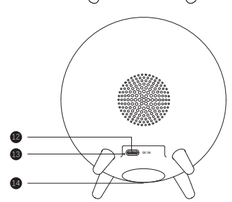

❶ 无线充区域　❷ -键　❸ M键
❹ 氛围灯键　❺ 开/关机键　❻ LED数显
❼ N键　❽ +键　❾ TIME键
❿ 闹钟1指示灯　⓫ 闹钟2指示灯　⓬ 充电插口
⓭ 电池充电指示灯　⓮ 氛围灯/无线充指示灯

操作指南

按键	功能	操作
	开机/关机	长按3秒
	显示屏亮度调整 100%/50%/25%	短按
	氛围灯亮度调整 100%/50%/25%/OFF	短按
	闹钟时间设置	1.长按M键2秒，“时”在闪烁，通过 键进行调整“时”，短按 键确认“时”数。 2. 当“时”在闪烁中，短按 键，跳到“分”闪烁了，同样方法调节“分钟”。当“时”或者“分”闪烁时，如没有操作，10秒后自动退出。
	闹钟开启	1.短按 键1次，闹钟1打开。 2.再短按 键1次，闹钟2打开。再短按一下 键，退出设置。
	闹钟关闭	1.短按 键1次，闹钟1关闭。 2.再短按 键1次，闹钟2关闭。再短按一下 键，退出设置。
	回看闹钟时间	1.短按 键1次，显示闹钟1时间。 2.再短按 键1次，显示闹钟2时间。5秒后自动返回时钟显示界面。
	正常，减时/减分钟	短按
	快速，减时/减分钟	长按
	“时”、“分”确认	短按
	闹钟 ON/OFF确认	长按2秒
	正常，加时/加分钟	短按
	快速，加时/加分钟	长按

按键	功能	操作
	时钟时间设置	1.长按 键2秒，“时”在闪烁，通过 键进行调整“时”，短按 键确认“时”数。 2.当“时”在闪烁中，短按 键，跳到“分”闪烁，同样方法调节“分钟”。当“时”或者“分”闪烁时，如没有操作，10秒后自动退出
1.当闹铃响起时，短按任意键，关停闹铃。如果没有人为关停，闹铃响5分钟后，自动停止。 2.氛围灯记忆功能，当重新开机，氛围灯保持关机前的状态。		

指示灯说明

状态	闪灯方式
电池充电中	充电指示灯红灯长亮
电池充满电	充电指示灯红灯熄灭，绿灯长亮
无线充待充	氛围灯关闭时，无线充指示灯绿灯长亮
无线充充电中	氛围灯关闭时，无线充指示灯绿灯熄灭，红灯长亮
无线充设备充满电	氛围灯关闭时，无线充指示红灯熄灭，绿灯长亮
放上非无线充设备	氛围灯关闭时，无线充指示灯橙色灯快闪
开机	首次开机氛围灯暖白光100%亮度，下次开机时系统记忆前次关机时氛围灯的亮度

产品参数

产品型号：W7D
电池容量：3.7V/500mAh
充电时间：≈2H
充电输入：5V/1A

产品尺寸：131*75*146mm
无线距离：<5mm
无线输出功率：5W 7.5W 10W 15W
无线充适配器：5V/2A，9V/2A

注意事项

无线充电器给移动设备充电过程中，在移动设备上运行耗电量大的应用程序或长时间在设备上使用应用程序，移动设备发热升高，这属于正常情况，不会影响设备的使用寿命或性能。
- 请勿将本产品丢弃，暴露在雨中或潮湿环境中，接触水可能会导致产品故障损坏或引起危险。
- 请勿敲击或摔打本产品，敲击或摔打可能会导致产品损坏。
- 请勿自行拆卸，更改或修理本产品。
- 请勿将产品投入火中，以免发生爆炸危险。
- 请勿将磁条卡(包括信用卡、电话卡、银行存折及登记卡)放置在正在充电的设备附近，避免设备产生的磁场将磁条卡损坏。

配件清单

❶ 无线充闹钟×1
❷ USB-C充电线×1
❸ 说明书×1

警告

本产品非供14岁以下儿童作为玩具使用，请遵循说明谨慎使用。给产品充电时，请使用输出电压/电流5V/1A或以上充电器进行充电。并使用标配USB线。产品禁止投入水中或者火中使用，如发生异常情况，请立即停止使用。

保修卡

1. 本保修卡仅保修因生产、技术及质量问题造成的性能故障。
2. 保修期为1年。产品售出日起生效。
3. 人为损坏，顾客需支付维修配件费用及往返运费。
4. 保修卡需字迹清晰，如有遗失，恕不补办。
5. 本保修卡最终解释权归本公司所有。

姓名	手机
产品型号/名称	购买日期
地址	
故障描述	

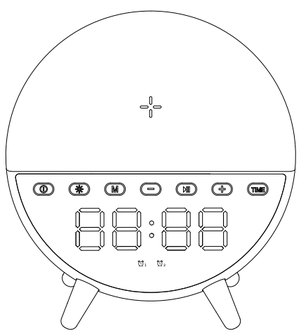

AW-W7D Wireless Charger & Alarm Clock

Please read this user manual carefully before use and keep it properly for future reference.

Battery Charging Instructions:

This product contains a built-in rechargeable lithium battery. Before initial use (or when the battery is depleted), please charge it as follows:
- Connect the USB-C plug of the charging cable to the DC IN port on the main unit to begin charging.
- Connect the USB end of the charging cable to a computer USB charging port or any other standard USB power source to initiate charging.

To extend the battery lifespan, please follow the guidelines below:
- Ensure the battery is fully charged during the first charge, which takes approximately 2 hours.
- Avoid overcharging (exceeding 24 hours) and prolonged storage in a fully depleted state (exceeding 3 months). Overcharging or completely draining the battery may shorten its service life.

Product Overview

Thank you for purchasing our Wireless Charger & Alarm Clock. This product integrates multiple functions, including wireless charging, time/clock display with alarm, and a night light.

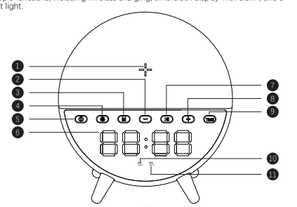

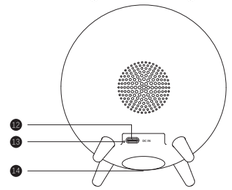

❶ Wireless Charging Area　❷ Volume Down Button　❸ Mode Button
❹ Ambient Light Button　❺ Power On/Off Button　❻ LED Display
❼ Next Button　❽ Volume Up Button　❾ Time Setup Button
❿ Alarm 1 Indicator　⓫ Alarm 2 Indicator　⓬ Charging Port
⓭ Charging Indicator　⓮ Ambient/Wireless Charging Indicator

Operation Guide

Button	Function	Operation
	Power On/Off	Long press for 3 seconds
	Display Brightness Adjustment 100% / 50% / 25%	Short Press
	Ambient Light Brightness Adjustment 100% / 50% / 25%/OFF	Short Press
	Alarm Time Setting	1. Press and hold the M button for 2 seconds until the “hour digits” start blinking. Use the buttons to adjust the “hour”, then briefly press the button to confirm the “hour” setting. 2. While the “hour digits” are blinking, briefly press the button again to switch to the “minute digits” blinking. Adjust the “minutes” using the same method. If no operation is performed while the hour or minute digits are blinking, the system will automatically exit the setting mode after 10 seconds.
	Alarm On	1. Briefly press the button once. When blinks, press and hold the button for 2 seconds until the indicator light stays on steadily. This indicates Alarm 1 is ON. 2. Briefly press the button once again. When blinks, press and hold the button for 2 seconds until the indicator light stays on steadily. This indicates Alarm 2 is ON. Briefly press the button one more time to exit the setting.
	Alarm Off	1. Briefly press the button once. When blinks, press and hold the button for 2 seconds until the indicator light turns off. This indicates Alarm 1 is OFF. 2. Briefly press the button once again. When blinks, press and hold the button for 2 seconds until the indicator light turns off. This indicates Alarm 2 is OFF. Briefly press the button one more time to exit the setting.
	Review Alarm Time	1. Briefly press the button once. When blinks, the display will show the set time for Alarm 1. 2. Briefly press the button once again. When blinks, the display will show the set time for Alarm 2.The screen will automatically return to the clock display interface after 5 seconds.
	Normal Speed, Hour Down / Minute Down	Short Press
	Fast Speed, Hour Down/Minute Down	Long Press
	Fast Speed, Hour Down/Minute Down	Short Press
	Alarm On/Off Confirmation	Long press for 2 seconds

Button	Function	Operation
	Normal Speed Hour Up/Minute Up	Short Press
	Fast Speed, Hour Up/Minute Up	Long Press
	Clock Time Setting	1. Press and hold the button for 2 seconds until the “hour digits” start blinking. Use the buttons to adjust the “hour”, then briefly press the button to confirm the hour setting. 2. While the “hour digits” are blinking, briefly press the button again to switch to the “minute digits” blinking. Adjust the “minutes” using the same method. If no operation is performed while the “hour” or “minute” digits are blinking, the system will automatically exit the setting after 10 seconds.
1. When the alarm is ringing, briefly press any button to turn off the alarm. If not manually turned off, the alarm will automatically stop after 5 minutes. 2. The ambient light features a memory function. After a power restart, the ambient light will resume its previous state before shutdown.		

Indicator Light Illustrations

Status	Flashing Light Pattern
Battery Charging	Flashing Light Pattern
Battery Fully Charged	The charging indicator’s red light turns off and the green light stays steadily on.
Wireless Charging Standby	When the ambient light is off, the wireless charging indicator stays steadily green.
Wireless Charging In Process	When the ambient light is off, the wireless charging indicator’s green light turns off and the red light stays steadily on.
Wireless Charging Device Fully Charged	When the ambient light is off, the wireless charging indicator’s red light turns off and the green light stays steadily on.
Non-Wireless Charging Device Detected	When the ambient light is off, the wireless charging indicator flashes orange rapidly.
Power ON	Upon first startup, the ambient light defaults to warm white at 100% brightness. On subsequent startups, the system will retain the brightness level set before the previous shutdown.

Product Specifications

Model Number: W7D
Battery Capcity: 3.7V/500mAh
Charging Time: ≈2H
Charging Input: 5V/1A

Product Size: 131*75*146mm
Wireless Distance: <5mm
Wireless Output Power: 5W 7.5W 10W 15W
Wireless Charging Adapter: 5V/2A, 9V/2A

Notes

When the wireless charger is charging the mobile device, running a power-consuming application on the mobile device or using an application on the device for a long time will cause the mobile device to heat up. This is a normal situation and will not affect the service life of the device. or performance.

- Do not dispose of this product, expose it to rain or moisture, exposure to water may cause product failure, damage or cause danger.
- Do not knock or beat this product, knocking or beating may cause damage to the product.
- Do not disassemble, alter or repair this product by yourself.
- Do not throw product into fire to avoid explosion hazard.
- Do not place the magnetic stripe card (including credit cards, phone cards, bank passbooks and registration cards) near the device being charged to avoid the magnetic stripe card being damaged by the magnetic field generated by the device.

What’s in the box

❶ Wireless Charger & Alarm Clock×1
❷ USB-C Charging Cable×1
❸ User Manual×1

FCC Statement

Do not disassemble, alter or repair this product by yourself.
Do not throw product into fire to avoid explosion hazard.
Do not place the magnetic stripe card (including credit cards, phone cards, bank passbooks and registration cards) near the device being charged to avoid the magnetic stripe card being damaged by the magnetic field generated by the device.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

WARNING

This product is not intended for use as a toy by children under 14 years of age, Please follow the instructions carefully.Please use the charger with output voltage/current above 5V/1A for charging and use standard USB cable.Do not use in water or fire. If any abnormal situation occurs, please stop using immediately.

Warranty Card

1. This warranty card only covers performance failures due to production,technical and quality issues.
2. The warranty period is 1 year and the product will be valid from the date of sale.
3. Man-made damage,custmers need to pay for repair parts and shipping costs.
4. The warranty card needs to be legible.If it is lost,it will not be reissued.
5. The final interpretation of this warranty card belongs to the company.

Name	Mobile Phone
Model/Product Name	Date of Purchase
Address	
Fault description	