240612

MINI Printer Manual

English Deutsch Français España

Italiano Russian 日本語

English 01-06

España 07-10

Deutsch 11-15

Italiano 16-20

日本語 21-25

Français 26-30

Please read the instructions carefully before using this product

The specification is for reference only, the specific operation shall be in kind

Brief Introduction

English

Welcome and thank you for choosing our products, in order to understand and use our products more quickly, it is recommended that you read this manual carefully before use, and keep it properly for future reference. Warnings and precautions in the instruction manual should be complied with. If there is any reference error; we hope that users will understand that the design content will be changed without notice.
This product is a unique shape, exquisite design, easy to operate children's digital printer; designed for children's digital products, so that children in use to learn more imagination play, experience the fun of nature.

Key/interface specification

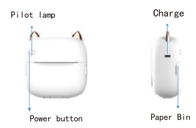

Please charge for the first time and unplug the charger before use

Power indicator status

English

	Green light is on/quick flashing	Standby/charge completed
	Red light is always on/off	Charging/Charging completed
	Green light flashing	Print head hot/short of paper

Use the wizard

1. Charge for 1-2 hours before use and remove the power supply Press and hold the power button for three seconds to turn it on/off.

2. Apple store or Google search:
Fun Print installed APP to use.

fun print
Image print
Open

3. Turn on the Bluetooth function of the phone and connect the printer from the "My printers" option of the downloaded application. After successful connection, printing can be used

Paper replacement course

English

1.Take out the old paper roll and put the new paper roll in the direction shown. The paper should be put straight and not crooked. (Note: The new thermosensitive paper needs to be exposed to 2 cm / 0.787in)

2. Cover the paper bin, the machine can automatically absorb paper after normal use.

3.After the above steps are correct, the machine can print normally.

Please pay attention to the paper loading direction when printing without pictures

Battery Warning Not

English

1.Please use 5V 1A charger to charge according to the specification to avoid damage to the machine.
2.Disassembly, impact, extrusion or fire are prohibited;
3.If severe bulging occurs, do not continue to use;
4.Do not put in high temperature environment, battery after immersion is prohibited to use;
5.Replacement with the wrong type of battery can be explosive, be sure to follow the instructions to dispose of used batteries.

Matters needing attention

1.When charging, please gently insert or pull out the charging line to prevent excessive force damage to the port;
2.After charging, please unplug the charging line in time;
3.In order to avoid danger; do not use or charge in high temperature, high humidity, excessive smoke and dust environment, such as: bathroom, steam room, open fire, etc;
4.Improper charging may lead to print head damage;
5.Do not touch the print head to prevent overheating and scalding;
6.Tear paper blade sharp, be careful not to touch.

Q&A

English

Q1. Did you find a printer that can be connected?
A1: Please charge to ensure Bluetooth is working properly.

Q2. Printer connection issue
A. Please turn on the Bluetooth function of your phone again and connect the printer from the app.
Printer B does not support simultaneous operation by multiple people. It can only be connected to one phone. Please turn off Bluetooth function for other phones.

Q3. What if the printer cannot print?
A. Confirm whether the Bluetooth of the phone is turned on, and exclude the possibility of others connecting to the printer (if someone is connecting to the printer, the power light will not flash).
B. Check if the thermal paper is used up and replace the printing paper in a timely manner. If the print head overheats, please wait for the print head to cool before attempting printing. Restart the printer.

Q4. Print out no screen/print out white paper?
A:Answer: Please turn the paper roll in the opposite direction. Please ensure that the printing surface (smooth surface) points towards the printing port.

Q5. Printing unclear?
A: Please try adjusting the print density.
B: If the image printing is not good, you can adjust the contrast or use the original image for printing.
C. Please charge in a timely manner, with a power supply of over 50%.
D. please use a cotton swab containing medical alcohol to wipe the print head to ensure it is clean and dry.

Q6. No paper output after successful printing?
A: Rewind the paper, it should not be fluffy

Information to User

English

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
The device has evaluated to meet general RF exposure requirement.
The device can be used be in portable exposure without restriction.