75*60mm 100g书写纸 单色印刷

Aqua Audio

Waterproof Bluetooth Speaker

Aqua Audio

AquaAudio
Waterproof
Bluetooth Speaker

INSTRUCTION MANUAL

USING SUCTION CUP

The AquaAudio speaker can be affixed to glass, tiles, and most other smooth surfaces.

Before using the suction cup, please clean the suction cup and the surface to which the speaker will be affixed.

Make sure both surfaces are dry and clean.

Press the speaker softly to the surface to force out the air in the suction cup.

To remove the speaker from the wall, hold the speaker, and use your finger nail to let in some air into the suction cup, then lift the speaker to take it off from the wall/object.

CONTROLLING YOUR MUSIC

Once the AquaAudio speaker is connected to your device (mobile phone, tablet, PC, laptop etc.), you are free to control your music any way you want directly from the speaker.

Press the Volume UP and Volume DOWN button to increase or decrease the volume. The speaker will prompt a tone to indicate that the speaker is at its maximum or minimum volume. Pressing the Volume UP and DOWN buttons only increases or decreases the volume of the speaker, but it does not increase or decrease the volume of your Bluetooth device. The Volume can also be adjusted from your Bluetooth device (sound source).

To switch to the previous or next track, simply press the Previous or Next button on the speaker. This will switch to the previous/next track in the playlist of the Bluetooth device.

Press the Play/Pause button on the speaker to start or pause songs.

INTRODUCTION

Thank you for purchasing the AquaAudio waterproof Bluetooth speaker. Before using the product, please read this manual carefully.

FCC Statement
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.

TABLE OF CONTENTS

SPEAKER OVERVIEW	1-2
CHARGING YOUR SPEAKER	3
PAIRING YOUR DEVICE	4
WATER RESISTANT FEATURES	4
USING SUCTION CUP	5
CONTROLLING YOUR MUSIC	6
ANSWERING CALLS	7
USING SIRI	7
BATTERY STATUS ON IPHONE AND IPAD	8
SPECIFICATIONS	9
SAFETY INFORMATION	10-11

ANSWERING CALLS

You can use the speaker as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. The built-in microphone will pick up your voice.

To answer a call, press the TALK button and speak and listen directly on the speaker.
To end a call, press the TALK button again.
To refuse a call, press and hold the Talk button.
To redial the last number called, double press the TALK button.

USING SIRI

When the speaker is connected to an iPhone/iPad via Bluetooth, press and hold the TALK button for 3 seconds to activate the Siri function on the iPhone/iPad. Then talk to the speaker after hearing the"Siri" sound.

Please note that your iPhone/iPad may not be able to recognize your voice when the speaker is being used in a noisy environment. Siri may not work if the iPhone/iPad is not connected to the internet.

BATTERY STATUS ON IPHONE AND IPAD

When the speaker is connected to an iPhone/iPad via Bluetooth, the battery status of the speaker will be displayed on the top of the iPhone/iPad screen; it will be displayed next to the Bluetooth symbol.

Please note that the battery status icon can be vertical or horizontal, depending on the Bluetooth device and its operation system.

SPEAKER OVERVIEW

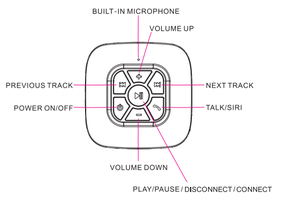

SPEAKER OVERVIEW

SPECIFICATIONS

Weight :	117g(speaker only)
Speaker driver :	40MM, 4 Ohm water resistant
Speaker output :	3W
Frequency Response :	60Hz-16KHz
Signal-to-Noise Ratio :	≥75db
Distortion :	≤0.5%
Battery life :	3 hours at 100% volume 10 hours at 30% volume
Battery Charging voltage :	5V
Working voltage :	3.3--4.3V
Battery charging time :	2-2.5 hours
Battery capacity :	550mAh
Interface :	Micro USB charging port
Operating Frequency Range :	2.4GHz-2.48GHz
Bluetooth transmission distance :	32-50 feet
Bluetooth compliant :	V5.3

SAFETY INFORMATION

⚠ WARNING
Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Clean the speaker only with a dry cloth.
- Do not expose your speaker to extremely high or low temperatures.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block ventilation openings.

Battery/Charging Hazard
- Do not dispose your speaker in a fire. The battery could explode causing injury or death.
- Only charge the speaker in accordance with this User Manual.
- Do not charge the speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

Automobile Accident Hazard
- Do not leave or store the speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

Fall Hazard
- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off the edge.

CHARGING YOUR SPEAKER

Before your first use, or when the battery power is depleted, recharge the speaker with the USB charging cable included in the package.

Plug the Micro USB pin into the charging port on the back of the speaker, and the other end of the cable (the standard USB 2.0) plug into the USB port of a computer, or use a USB adapter (not included) to plug the USB charger into a wall outlet.

The LED indicator light will turn red when it is being charged. When it is fully charged, the LED indicator light will go off. Full charge duration is approximately 2-2.5 hours.

The speaker can be charged while in use. The battery of the speaker will be charged until the charging process completes. The speaker will then be powered by the DC input directly and the battery will be in sleep mode after it is fully charged; thus saving the battery power for when the device is unplugged.

PAIRING YOUR DEVICE

1. Press the Power button for 2-3 seconds to turn on the AquaAudio speaker. (Press and hold the same button again for 3-5 seconds to turn the AquaAudio speaker off)
2. Upon powering on, the speaker automatically goes into bluetooth mode and pairing mode, and the LED indicator light will be blinking in red and blue to indicate 'Pairing Mode'.
3. Select 'Enable Bluetooth' on your Bluetooth device. Bluetooth controls are typically found in the tools or settings menu. Turn on Bluetooth connectivity and make sure your device is "visible" or "discoverable".
4. Choose "add new Bluetooth device" or "setup Bluetooth device" on your device. It will search for the AquaAudio Bluetooth speaker.
5. As your Bluetooth device discovers possible items to connect to, it will list their names. Select the device named AquaAudio. This will connect your speaker to your Bluetooth device. There will be a voice prompt "connected" to indicate the Bluetooth has connected successfully.
6. If you want to connect with another Bluetooth device, press and hold the Play/Pause button, the speaker will be disconnected from the previous device and then you can repeat the paring process again
7. If asked for a password, please enter "0000".
8. Once connected, you can select on your device to play music and answer calls and it will be heard on the AquaAudio speaker.

WATER RESISTANT FEATURES

1.The AquaAudio speaker is water resistant. It is resistant to rain, water jets and water splashing, etc. so it can be used in the shower, outside on a rainy day, by the swimming pool, on a boat and on the beach. However, DO NOT insert the speaker into water.
2.PLEASE NOTE – Before using the AquaAudio speaker in a wet environment, make sure to remove the cable connections. Failure to remove the cable connection may result in water leaking into the speaker and cause irreparable damage.

⚠ CAUTION
- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer. Or charge the speaker with a wall main charger supplied from the same store where you purchase this speaker. Other chargers may look similar, but using them could result in electric shock and could damage the speaker.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

FCC

FCC NOTICE This decive complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
1.This device may not cause harmful interference,and
2. This device must accepet any interence received,including interfernce that may cause undesired operation.

FCC CAUTION
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

To locate the FCC and IC identification numbers, please look on the underside of the speaker.

CE STATEMENT
This product is compliant with the CE directive.

CE

LIMITED 1-YEAR WARRANTY

Gideon Products, LLC warrants to the original purchaser that the AquaAudio Waterproof Bluetooth Speaker shall be free from any defects, in material or workmanship, for a period of one (1) year from the date of purchase.

Any AquaAudio Waterproof Bluetooth Speaker which is found to be defective during the warranty period will be replaced by Gideon Products, LLC. All returns for in-warranty replacements must be accompanied by proof of date of purchase satisfactory to Gideon Products, LLC, and must be delivered or shipped no later than one (1) week after the end of the warranty period.

For questions & comments, or warranty related inquires email us at:
info@gideonproducts.com
ATTN: Customer Relations

Distributed by:
Gideon Products, LLC
Lakewood, NJ 08701
Web: www.gideonproducts.com