Browan Communications Inc.
No.15-1, Zhonghua Rd.,
Hsinchu Industrial Park,
Hukou, Hsinchu,
Taiwan, R.O.C. 30352
Tel: +886-3-6006899
Fax: +886-3-5972970

Document Number	BQW_02_0030.003

MerryIoT Hub

WLRRTES – 106V2

User Manual

Revision History

Revision	Date	Description	Author
.001	Feb. 09, 2021	First release	Gary
.002	June. 06, 2021	Update WEB GUI Power input 5V DC/2A	Jason/Joey
.003	Nov. 08, 2023	New naming	Vincent

Copyright

© 2021 BROWAN COMMUNICATIONS INC.

This document is copyrighted with all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of BROWAN COMMUNICATIONS INC.

Notice

BROWAN COMMUNICATIONS INC. reserves the right to change specifications without prior notice.

While the information in this manual has been compiled with great care, it may not be deemed an assurance of product characteristics. BROWAN COMMUNICATIONS INC. shall be liable only to the degree specified in terms of sale and delivery.

The reproduction and distribution of the documentation and software supplied with this product and the use of its contents are subject to written authorization from BROWAN COMMUNICATIONS INC.

Trademarks

The product described in this document is a licensed product of BROWAN COMMUNICATIONS INC.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Contents

REVISION HISTORY **1**
COPYRIGHT **2**
NOTICE **2**
TRADEMARKS **2**
CONTENTS **3**
CHAPTER 1 – INTRODUCTION **4**
Purpose and Scope 4
Product Design 4
Definitions, Acronyms, and Abbreviations 5
Reference 5
CHAPTER 2 – HARDWARE DETAILS **6**
LED Indicators 6
I/O Ports 7
Back Label 8
Package Label 8
Package Content 8
CHAPTER 3 – USER MANUAL **9**
3.1 Connect MerryIoT Hub 9
3.2 MerryIoT Hub Setting 9
STEP 1 : Firmware Upgrade 11
STEP 2 : SET LORA 11
STEP 3 : SET WAN 17

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Chapter 1 – Introduction

Purpose and Scope

The purpose of this document is to describe the main functions, supported features, and system architecture of the WLRRTES-106V2 MerryIoT Hub based on the latest LoRaWAN® specification.

Product Design

The purpose of this document is to describe the main functions, supported features, and system architecture of the WLRRTES-106V2 MerryIoT Hub based on the latest LoRaWAN® specification.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Definitions, Acronyms, and Abbreviations

Item	Description
LPWAN	Low-Power Wide-Area Network
LoRaWAN®	LoRaWAN® is a Low Power Wide Area Network (LPWAN) specification intended for wireless battery-operated Things in a regional, national, or global network.
ABP	Activation by Personalization
OTAA	Over-The-Air Activation
TBD	To Be Defined

Reference

Document	Author
LoRaWAN® Specification v1.0.3	LoRa Alliance®
RP002-1.0.1 LoRaWAN® Regional Parameters	LoRa Alliance®

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Chapter 2 – Hardware Details

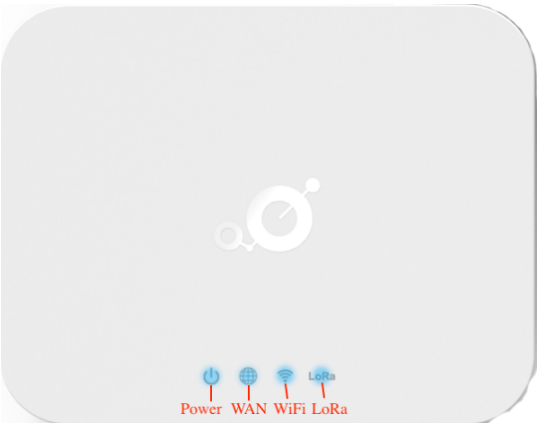

LED Indicators

- LED sequence: Power(System), WAN, Wi-Fi, LoRa®
- Solid LED is for static status, blanking means the system is upgrading or active devices linked to the corresponding port.

	Solid On	Blinking	Off
Power System (Blue)	Power ON	Booting (ignore bootloader)	Power Off
WAN (Blue)	Ethernet Plugged and got IP Address	Connecting	Unplug
Wi-Fi (Blue)	WiFi Station Mode and got IP Address	Connecting	Wi-Fi Disabled
LoRa® (Blue)	LoRa® is working	Connecting	LoRa does not work

Table 1 LED Behaviors

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

I/O Ports

Port	Count	Description
RJ45	1	WAN port of the device
Reset	1	Reset to default (5 seconds to reset settings to factory default)
Micro USB	1	Power input via USB adaptor(5VDC/2A)

Figure 1 – IO Ports

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Back Label

The marking information is located at the bottom of the apparatus.

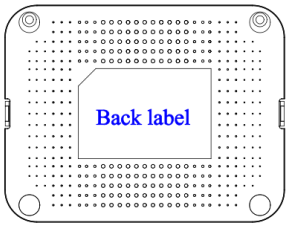

Back label

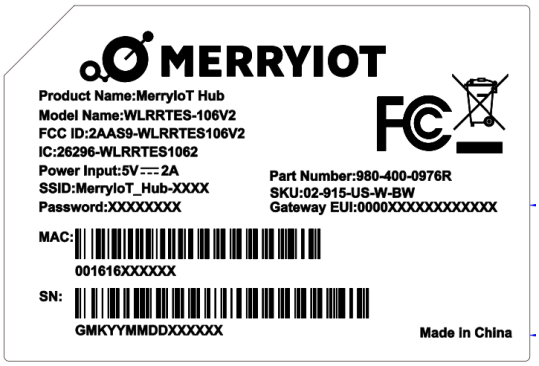

Figure 2 – Back Label

Package Label

No.	Item	Description
1	Product BOX	Brown Box
2	Labeling	Model/ MAC/ Serial Number/ Type Approval

Package Content

No.	Description	Quantity
1	The product	1
2	Power adapter (100-240VAC 50/60Hz to 5VDC/2A)	1
3	Ethernet Cable 1 meter (UTP)	1

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Chapter 3 – User Manual

3.1 Connect MerryIoT Hub

You can connect to the gateway via a Wi-Fi interface, in which the SSID and password are printed on the back label by default.

Figure 3 – Back Label

The rule of gateway SSID is MerryIoT_Hub-XXXX where the last digits are the last 4 digits of the MAC address

The PC will fetch the IP address of range 192.168.4.x except 192.168.4.1 assigned by the AP.

3.2 MerryIoT Hub Setting

Open the web browser(ex: Chrome) after connecting to the gateway via IP address “192.168.4.1”

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

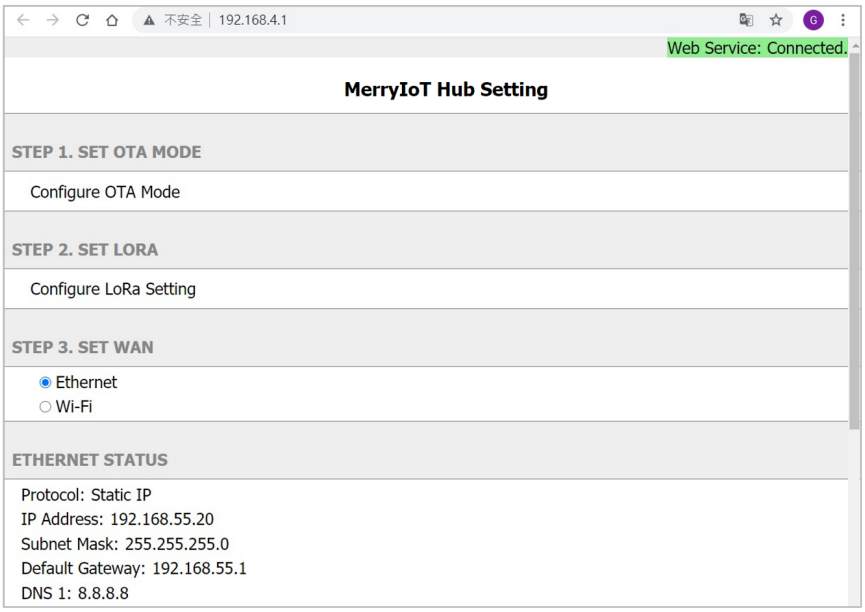

Figure 4 – WEB UI-1

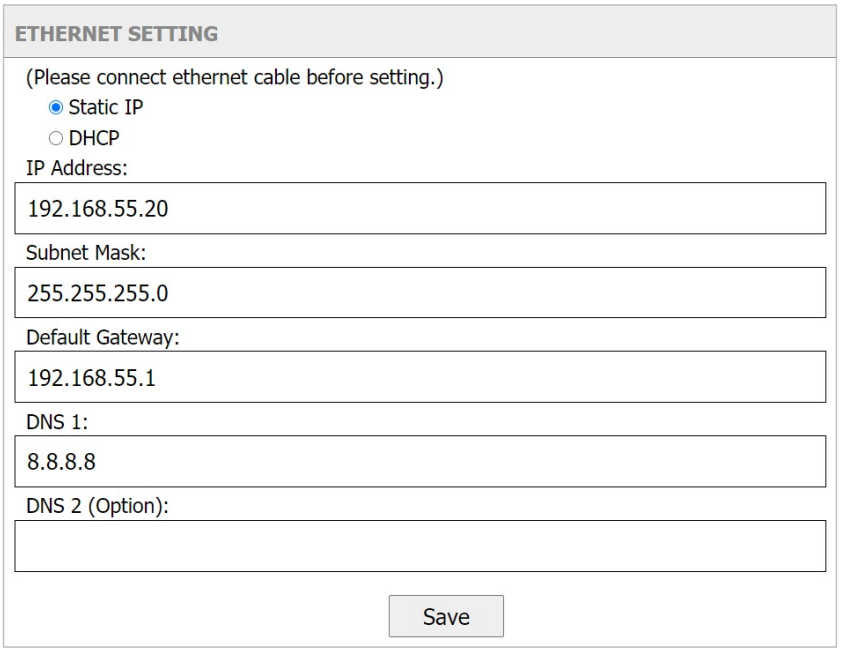

Figure 5 – WEB UI-2

Now you can configure the gateway through the WEB GUI.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

STEP 1 : Firmware Upgrade

The gateway support firmware upgrade through the OTA method.

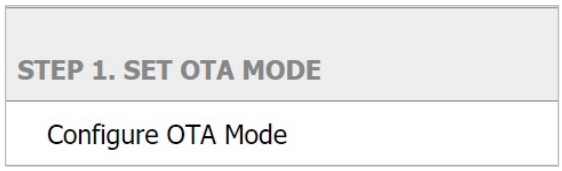

Figure 6 – Configure OTA Mode

Click the “Configure OTA Mode”.

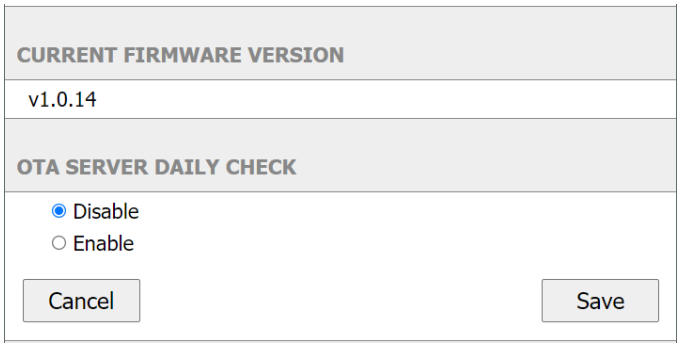

Figure 7 – Configure OTA Mode

CURRENT FIRMWARE VERSION – display the current firmware version.

OTA SERVER DAILY CHECK – Enable or Disable the firmware upgrade through OTA mode. The gateway will check the OTA server every 24 hours interval. It will upgrade automatically if there is the latest firmware on the OTA server.

ℹ	The OTA server has to be configured by the Python tool. Please contact BROWAN for any support.

Click the “Enable” and “Save” buttons to enable the OTA or “Disable” function.

Figure 8 – Enable OTA

STEP 2 : SET LORA

Click “Configure LoRa Setting” to configure the LoRa function/parameters.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

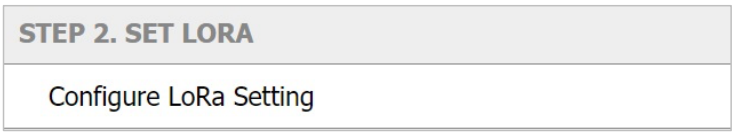

Figure 9 – Configure LoRa Setting

There are two modes for the LoRa configuration.[Basic Station and Packet Forwarder]

Figure 10 – LoRa Mode

STEP 2.1 Basic Station mode

Select the “LoRa Basics Station” mode. The CUPS server and LNS server have to be configured when the gateway is in the Basic Station mode.

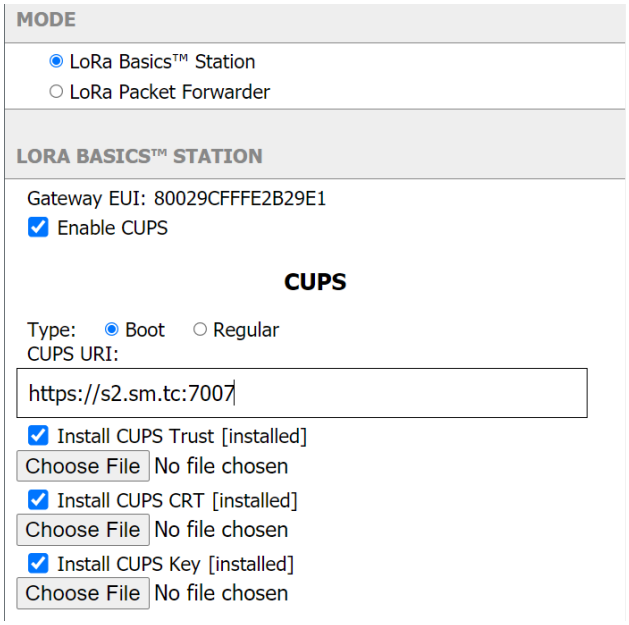

Figure 11 –Basic Station mode

Enable CUPS – The CUPS server is a configuration and update server. Enable or Disable the CUPS server according to the network architecture.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Enable the CUPS server if it is necessary for the network.

Type – The certificate type of the CUPS.[Boot/Regular]

ℹ	The gateway will search “Regular” type of certificate for the priority if you select the “Boot” type. It will search “Boot” type of certificate if the gateway can not find the “Regular” type of certificate.

CUPS URI – The CUPS server address. Enable and install the CUPS trust/CRT/Key if the CUPS server needs a certificate.

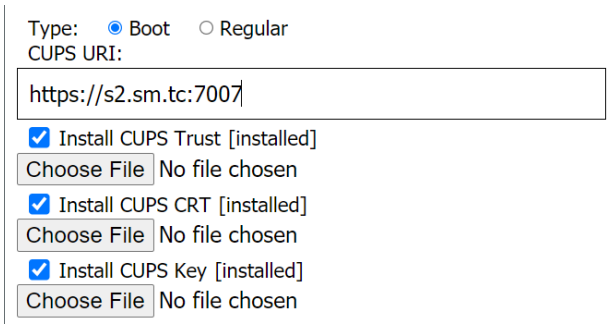

Figure 12 – Install CUPS certificates

LNS Server – The LNS server is the LoRaWAN® Network Server. LNS establishes a data connection between a LoRa Basics™ Station and a LoRaWAN® network server.

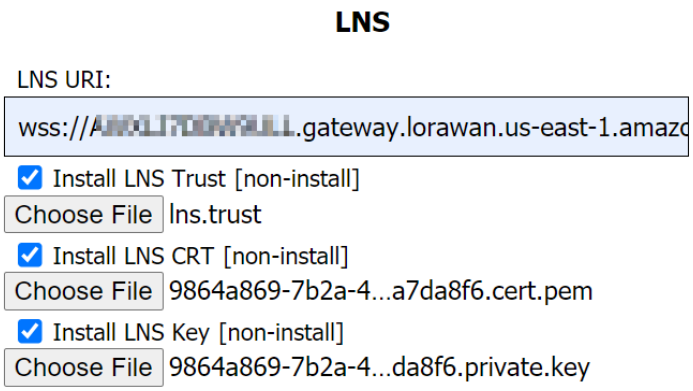

Figure 13 – LNS server/certificates

LNS URI – The LNS server address. Enable and install the LNS server trust/CRT/Key if the certificate is necessary for the LNS server.

STEP 2.2 LoRa Packet Forwarder mode

Select the “LoRa Packet Forwarder” mode.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

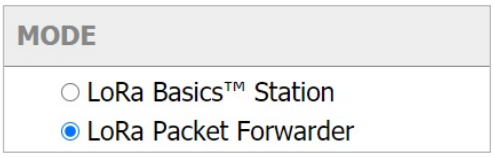

Figure 14 – LoRa Packet Forwarder mode

Configure the **Gateway Info/Radio setting/Channel Assignment/LBT Settings** for the packet forwarder mode.

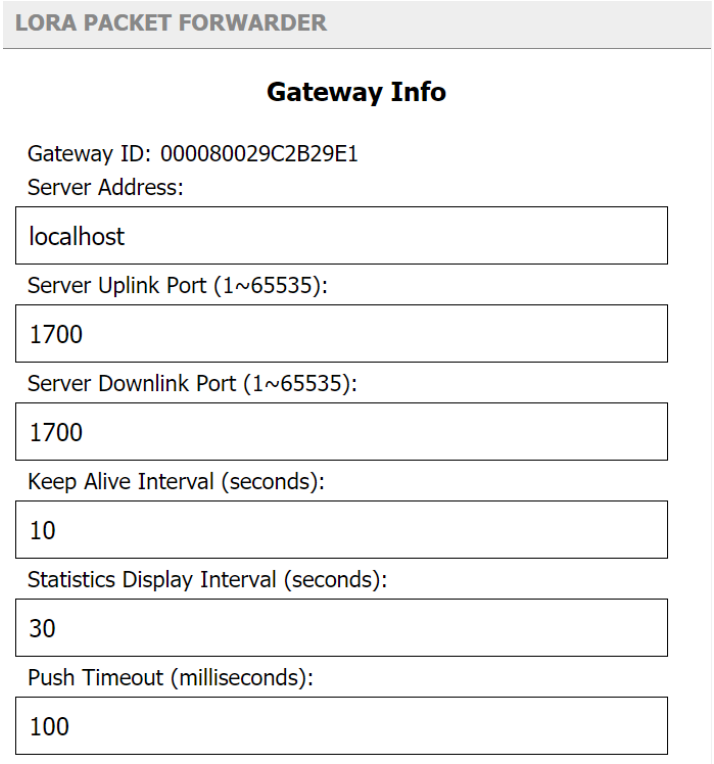

Figure 15 – Gateway settings

Radio Settings – configure the central frequency in Hz.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Radio 0 Settings

Central Frequency (Hz):

902700000

Radio 1 Settings

Central Frequency (Hz):

903400000

Figure 16 – Radio settings

Channel Assignment – configure the center frequency offset of each channel.

Channel Assignment

☑ Enable Channel 0
Radio Interface: ◉ radio 0 ○ radio 1
Center Frequency Offset (Hz):

-400000

☑ Enable Channel 1
Radio Interface: ◉ radio 0 ○ radio 1
Center Frequency Offset (Hz):

-200000

☑ Enable Channel 2
Radio Interface: ◉ radio 0 ○ radio 1
Center Frequency Offset (Hz):

0

☑ Enable Channel 3
Radio Interface: ◉ radio 0 ○ radio 1
Center Frequency Offset (Hz):

200000

Figure 17 – Channel Assignment-1

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

☑ Enable Channel 4
Radio Interface: ○ radio 0 ◉ radio 1
Center Frequency Offset (Hz):
-300000

☑ Enable Channel 5
Radio Interface: ○ radio 0 ◉ radio 1
Center Frequency Offset (Hz):
-100000

☑ Enable Channel 6
Radio Interface: ○ radio 0 ◉ radio 1
Center Frequency Offset (Hz):
100000

☑ Enable Channel 7
Radio Interface: ○ radio 0 ◉ radio 1
Center Frequency Offset (Hz):
300000

☑ Enable Lora Standard Channel
Radio Interface: ◉ radio 0 ○ radio 1
Center Frequency Offset (Hz):
300000

Channel Bandwidth (Hz):
○ 250K ◉ 500K
Channel Spread Factor:
○ SF7 ◉ SF8 ○ SF9 ○ SF10

Figure 18 – Channel Assignment-2

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Check “Enable LBT” to enable the LBT setting or uncheck it to disable it.

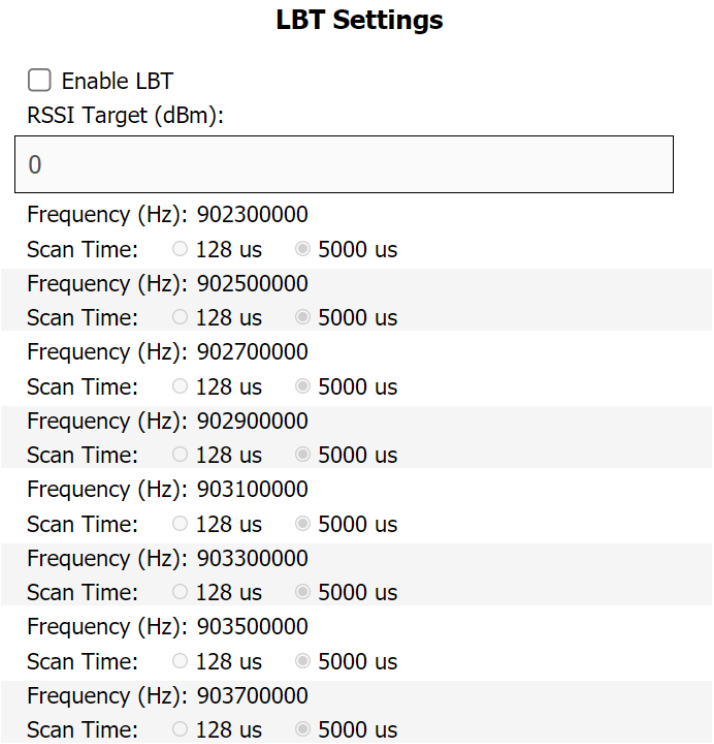

Figure 19 – LBT Settings

Click **“Save”** to accept or **“Cancel”** to abort.

STEP 3 : SET WAN

The gateway supports either “Ethernet” or “Wi-Fi” connection as the internet backhaul.

Figure 20 – WAN connection

STEP 3.1 Ethernet Setting

Configure the IP address of WAN.[Static IP/DHCP client]

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

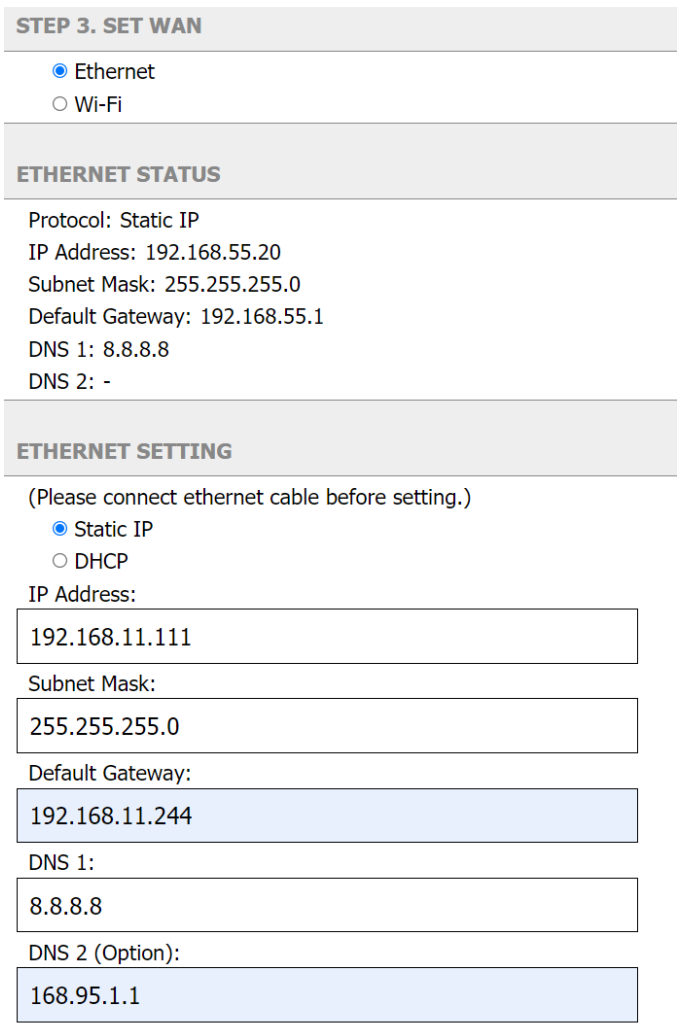

Figure 21 – WAN connection

ETHERNET STATUS – The information of IP address/Subnet Mask/Gateway/DNS.

ETHERNET SETTING - Configure the IP address of WAN.[Static IP/DHCP client]

Static IP – Setup the IP address/Subnet Mask/Default Gateway/DNS of the static IP.

i	Contact the network administrator for the static IP address information.

DHCP – The IP address/Subnet Mask/Default Gateway/DNS will be assigned by the DHCP server.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

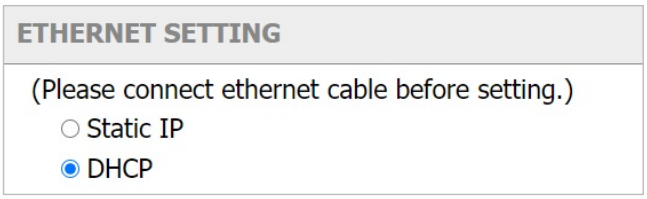

Figure 22 – DHCP client

STEP 3.2 Wi-Fi

Select “Wi-Fi” to be the internet backhaul connection.

ℹ	The gateway WiFi interface is the Access Point by default which SSID is “MerryIoT_Hub-XXXX” printed on the back label. The administrator can only access the WEB UI through the Access Point mode to configure the gateway. The gateway will be the WiFi client and will not be able to access the WEB UI after enabling the WiFi interface as the internet backhaul connection.

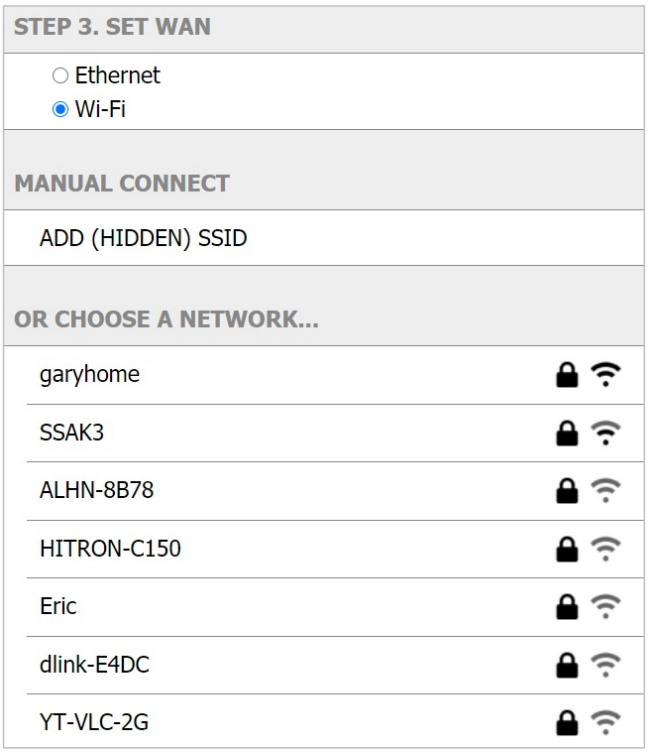

Figure 23 – Wi-Fi connection

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

MANUAL CONNECT – Specify the remote AP SSID and enter the password if necessary.

Click **"Join"** to accept or **"Cancel"** to abort.

Figure 24 – Wi-Fi manual connection

The gateway will scan the nearby access point automatically. Just click the SSID for the WiFi connection.

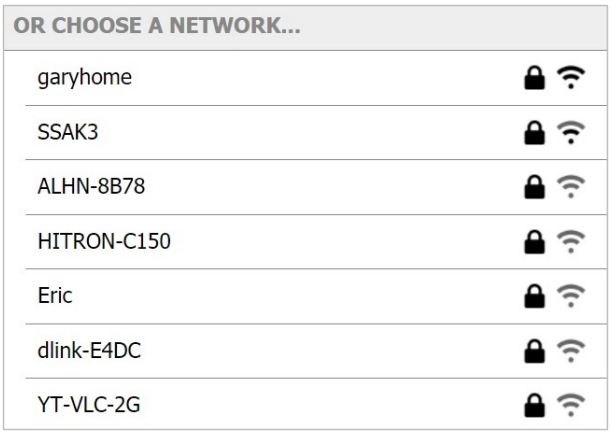

Figure 25 – Wi-Fi manual connection

Enter a WiFi password if it is necessary for the connection.

Figure 26 – Wi-Fi password

Click **"Join"** to accept or **"Cancel"** to abort.

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:
Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Country Code selection feature to be disabled for products marketed to the US/CANADA

Operation of this device is restricted to indoor use only

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.

Industry Canada statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference
(2) This device must accept any interference, including interference that may cause undesired operation of the device

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) L'appareil ne doit pas produire de brouillage;

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement:
This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:
Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de 20cm entre le radiateur et votre corps.

已設定格式: 美式英文

2021 © Browan Communications Inc., All Rights Reserved. This document is for planning purposes only and is not intended to modify or supplement any specifications or warranties relating to the products of Browan Communications. Browan may make changes to specifications and descriptions at any time, without notice.