Operation

Using a Bluetooth Device (Continued)

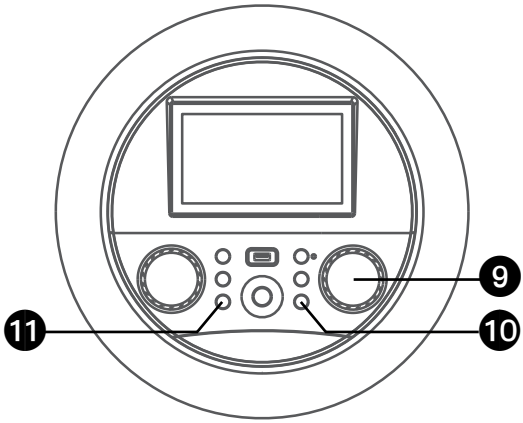

9 Adjust the **MIC VOLUME/ECHO** control as desired. Increasing this control will increase the volume of both microphones.
Press then rotate the **MIC VOLUME/ECHO** control as desired to add an echo effect to your voice. Rotate towards MAX to increase the echo.

10 Press the ⮌ **(RETURN)** button to go back to the previous screen.

11 Press the 🏠 **(HOME)** button to go to the home screen from any mode or screen. Press and hold the 🏠 **(HOME)** button to go to menu.

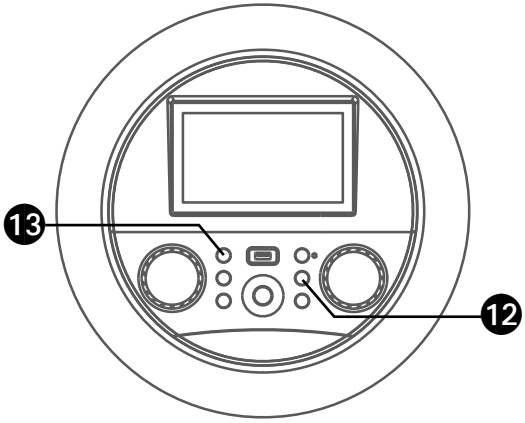

RECORD YOUR VOCAL PERFORMANCE:

12 To record your singing as well as the music, press the ● **(RECORD)** button. Recording wil begin and the recording indicator will show on-screen and the function indicator will start flashing red.
When done recording, press the ● **(RECORD)** button again; the function indicator will stop flashing.

Notes:

- You cannot start recording until the USB drive is inserted.
- Insert the USB flash drive into the USB slot on the unit with the face towards the top of the unit.

13 Press the ⏻ **(ON/STANDBY)** button to turn off the unit. The function indicator will turn off.

Operation

Using the LINE IN Jack

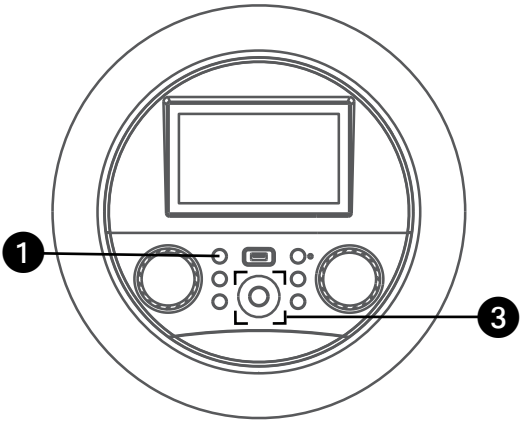

1 Connect the unit as described previously. Press the **⏻ (ON/STANDBY)** button to turn the unit on. The function indicator will light up.

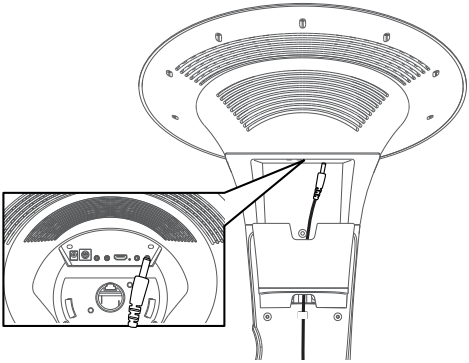

2 Connect the external device by using an appropriate cable (3.5mm audio cable not included) to the **LINE IN Jack** on the rear of this unit as previous described. Connecting an external unit will allow the audio to be played through your Singing Machine.

Notes:

- It is highly recommended to set the volume on the auxiliary unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible on this unit when using an external device.

3 Select **LINE IN** icon using the touch screen or ◀/▶/▲/▼ navigation and **▶II (PLAY/PAUSE/ENTER)** buttons to enter the line in mode. The function indicator will light green.

Operation

Using the LINE IN Jack (Continued)

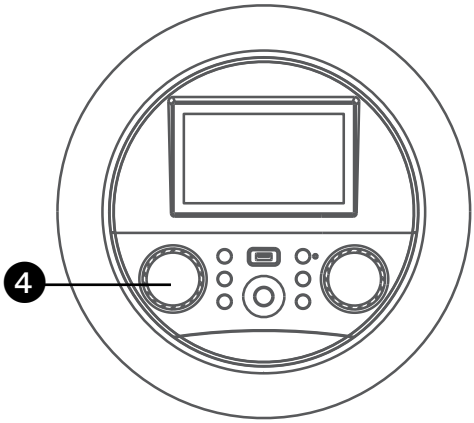

4 Adjust the **MUSIC VOLUME** control as desired.

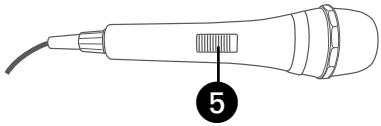

5 Connect microphone(s) and slide the **ON/OFF** switch on the microphone to the ON position.

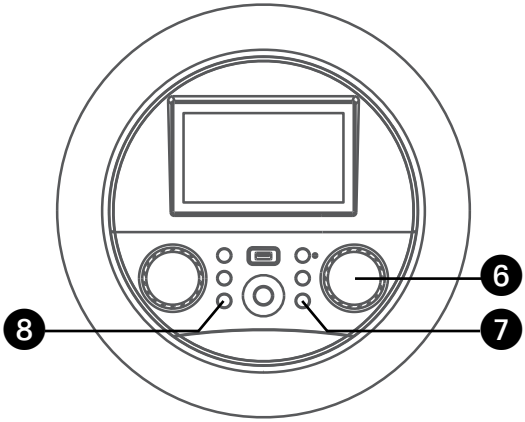

6 Adjust the **MIC VOLUME/ECHO** control as desired. Increasing this control will increase the volume of both microphones.
Press then rotate the **MIC VOLUME/ECHO** control as desired to add an echo effect to your voice. Rotate towards MAX to increase the echo.

7 Press the ⮌ **(RETURN)** button to go back to the previous screen.

8 Press the 🏠 **(HOME)** button to go to the home screen from any mode or screen. Press and hold the 🏠 **(HOME)** button to go to menu.

Operation

Using the LINE IN Jack (Continued)

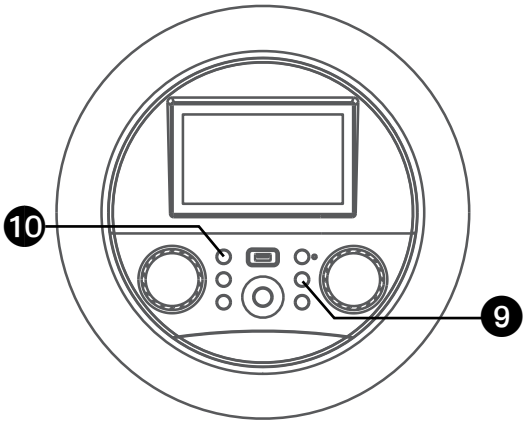

RECORD YOUR VOCAL PERFORMANCE:

9 To record your singing as well as the music, press the ● **(RECORD)** button. Recording will begin and the recording indicator will show on-screen and the function indicator will start flashing red.
When done recording, press the ● **(RECORD)** button again; the function indicator will stop flashing.

Notes:

- You cannot start recording until the USB drive is inserted.
- Insert the USB flash drive into the USB slot on the unit with the face towards the top of the unit.

10 Press the ⏻ **(ON/STANDBY)** button to turn off the unit. The function indicator will turn off.

Operation

Playing Songs from the Recorded Files

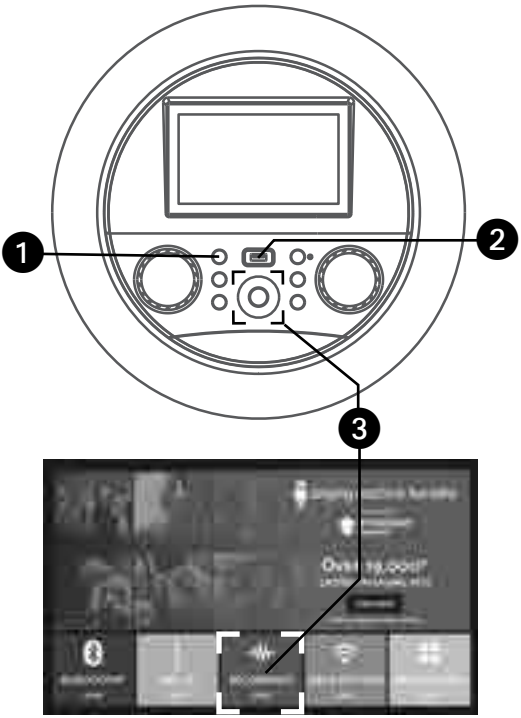

1 Connect the unit as described previously. Press the **⏻ (ON/STANDBY)** button to turn the unit on. The function indicator will light up.

2 Insert a USB flash drive into the USB port on the unit.

3 Select **RECORDINGS** icon using the touch screen or ◀/▶/▲/▼ Navigation and **▶II (PLAY/PAUSE/ENTER)** buttons to enter. The function indicator will light orange.

4 Select a recorded audio file from the USB drive's song list using the touch screen or ▲/▼ Navigation buttons.
Then press the **▶II /ENTER** button on the control panel to start the recorded audio file playback. Press the **▶II /ENTER** button during playback to pause the file.

Note: To delete a file, select and hold it on the touch screen.

Operation

Playing Songs from the Recorded Files (Continued)

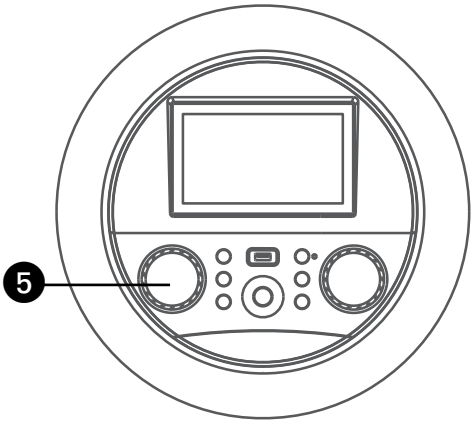

5 Adjust the **MUSIC VOLUME** control as desired.

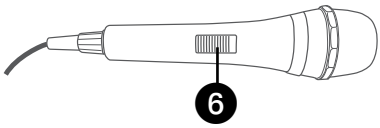

6 Connect microphone(s) and slide the **ON/OFF** switch on the microphone to the ON position.

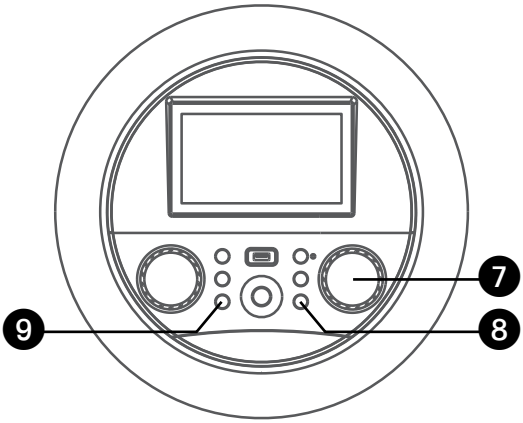

7 Adjust the **MIC VOLUME/ECHO** control as desired. Increasing this control will increase the volume of both microphones.
Press then rotate the **MIC VOLUME/ECHO** control as desired to add an echo effect to your voice. Rotate towards MAX to increase the echo.

8 Press the ⮌ **(RETURN)** button to go back to the previous screen.

9 Press the 🏠 **(HOME)** button to go to the home screen from any mode or screen. Press and hold the 🏠 **(HOME)** button to go to menu.

Operation

Playing Songs from the Recorded Files (Continued)

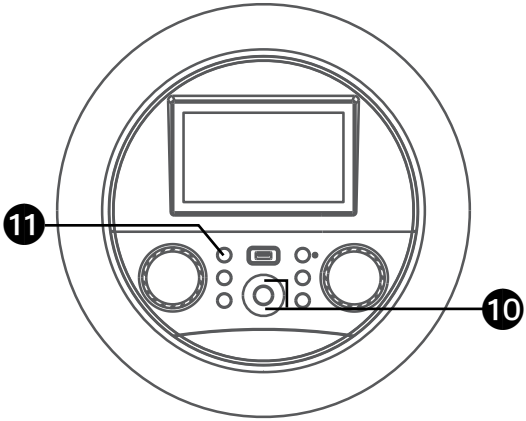

10 SKIP: Advance or go back one track by pressing the ▲ or ▼ (navigation) button.

11 Press the ⏻ **(ON/STANDBY)** button to turn off the unit. The function indicator will turn off.

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; press the ⏻ **ON/STANDBY** button to turn power on.
- Confirm that the AC adapter is connected securely to the rear of the unit.
- Connect the unit to a different outlet.
- The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply restart the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in another location.

No Sound – General

- Music Volume is set to minimum; raise volume.
- If using an external device, raise the volume.

No sound from the microphone

- Make sure the microphone is firmly connected to the MIC 1 or MIC 2 jack.
- Make sure the mic's **ON/OFF** switch is set to the ON position.
- Make sure the **MIC VOLUME/ECHO** control is not set too low.

File(s) on USB jack not playing

- The file is corrupted; replace the file.
- The file is not in a format this unit will play.
- The connected USB device is not supported by the product.

The Bluetooth device cannot be paired or connected with the unit

- Ensure any other Bluetooth devices are turned off to avoid accidental pairing.
- You have not activated the Bluetooth function of your device; see page E16 or refer to the Bluetooth device user's manual.
- The system is not in pairing mode; press and hold the button to restart pairing.

The Music is not available on the unit after successfully connecting the Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set too low or muted; raise as desired.

The unit will not record

- No USB drive inserted or the USB drive is full. Move all recordings to your computer to make room.

Failed to connect to the Wifi network

- The unit is not within the WiFi signal range.
- Check that your WiFi frequency is 2.4GHz.
- Ensure you have entered the correct password.

Specifications

AUDIO

Output Power ..... 60 Watts (RMS)

BLUETOOTH

Bluetooth Version V5.0

Working Distance ..... Up to 30 feet/10 meters measured in open space

USB

Format FAT32

Maximum Compatibility 32GB

Wi-Fi frequency 2.4GHz

GENERAL

Power 100-240V, 50-60Hz

Output ..... DC16.1V 3.5A Positive Center

Dimensions - Main Unit ..... 18.7 x 18.7 x 36.7 inches (47.5 x 47.5 x 93.2cm)

Speaker tower ..... 9.1 x 9.1 x 26.8 inches (23 x 23 x 68cm)

Weight - Main Unit 8.6Lbs (3.9kgs)

Speaker tower 7.7Lbs (3.5kgs)

Microphone ..... -78 dB 600 Ohms impedance with 6.3 mm Dynamic Microphone

Line In ..... 3.5mm Stereo Jack

Line Out ..... 3.5mm Stereo Jack

Internal memory ..... 1GB RAM, 8GB flash

Specifications are subject to change without notice.

HDMI® HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks and logos by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Mises en Garde

Mises en Garde

RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR

MISE EN GARDE: AFIN DE RÉDUIRE LE RISQUE D'ÉLECTROCUTION, NE PAS RETIRER LE COUVERCLE (OU LE DOS DU BOÎTIER). AUCUNE PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'UTILISATEUR NE SE TROUVE À L'INTÉRIEUR. POUR TOUTE RÉPARATION, CONTACTER UN TECHNICIEN COMPÉTENT.

TENSION DANGEREUSE: Le symbole de l'éclair dans un triangle équilatéral a pour but d'avertir l'utilisateur du danger présenté par des pièces non isolées à l'intérieur de l'appareil, dont la tension est suffisante pour provoquer des décharges électriques dangereuses.

ATTENTION: Le point d'exclamation à l'intérieur d'un triangle équilatéral a pour but d'avertir l'utilisateur de la présence de consignes importantes sur le fonctionnement et l'entretien (réparation) de l'appareil dans la documentation accompagnant ce produit.

AVERTISSEMENT D'ÉGOUTTEMENT: Ce produit ne doit pas être exposé à l'égouttement ni aux éclaboussures et aucun objet rempli de liquide, tel qu'un vase, ne doit être placé sur le produit.

AVERTISSEMENT D'AÉRATION: L'aération normale du produit ne doit pas être entravée pour l'usage prévu.

MISE EN GARDE : AFIN D'ÉVITER TOUT RISQUE D'ÉLECTROCUTION, JUMELER LA LARGE BROCHE DE LA FICHE À LA FENTE LA PLUS LARGE ET L'INSÉRER COMPLÈTEMENT.

AVERTISSEMENT: AFIN D'ENRAYER TOUT RISQUE D'ÉLECTROCUTION OU D'INCENDIE, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

MISE EN GARDE DE LA FCC: Cet appareil peut générer ou utiliser des fréquences radio. Les modifications ou changements peuvent causer des interférences nuisibles, à moins que ces modifications ne soient approuvées expressément dans ce mode d'emploi. L'utilisateur pourrait perdre l'autorité de faire fonctionner cet équipement en cas de modification non autorisée.

Cet appareil répond aux exigences de l'alinéa 15 des règlementations FCC. Son utilisation est soumise aux deux conditions suivantes : 1) Cet appareil ne peut pas causer d'interférence nuisible et 2), Cet appareil doit accepter toute interférence reçue, incluant les interférences qui pourraient affecter son fonctionnement

REMARQUE: Suite aux tests effectués, il est établi que cet appareil numérique de Classe B répond aux exigences de l'alinéa 15 des réglementations FCC. Ces normes sont élaborées pour vous protéger contre toute interférence nuisible en installation résidentielle. Cet appareil génère, utilise et peut émettre des fréquences radio. Par conséquent, s'il n'est pas installé et utilisé en suivant les instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, aucune garantie n'est donnée concernant la possibilité d'interférence avec une installation spécifique. Si une interférence se produisait en réception radio et/ou de télédiffusion, lors de l'activation et la désactivation de l'appareil, nous vous recommandons

- Réorientez ou déplacez l'antenne de réception.
- Éloignez l'appareil du récepteur.
- Branchez l'appareil à une prise de courant différente de celle utilisée par le récepteur.
- En cas de problème, contactez le vendeur ou un technicien spécialisé en réception radio/TV.

Le régime nominal est indiqué dans la partie l'arrière de l'appareil.

Avertissement: Les modifications ou changements qui ne sont pas expressément approuvés par la partie responsable de la conformité peuvent entraîner l'annulation du droit donné à l'utilisateur de se servir de cet appareil.

INDUSTRIE CANADA REMARQUE:
Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne doit pas provoquer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

CAN ICES-3(B)/NMB-3(B)

Renseignements Importants de Sécurité

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez toutes les mises en garde.
4. Suivez toutes les consignes.
5. N'utilisez pas cet appareil à proximité de l'eau.
6. Nettoyez l'appareil uniquement avec un chiffon sec.
7. Ne bloquez pas les ouvertures d'aération. Installez conformément selon les consignes du fabricant.
8. N'installez pas à proximité de sources de chaleur telles que les radiateurs, registres d'air chaud, cuisinières, ou autres appareils (notamment des amplificateurs) produisant de la chaleur.
9. Ne nuisez pas à la fonction de sécurité de la fiche polarisée ou de mise à la terre. Une fiche polarisée est dotée de deux broches dont l'une est plus large que l'autre. Une fiche de mise à la terre est dotée de deux broches et d'une troisième broche de mise à la terre. La broche la plus large ou la troisième broche est conçue pour votre sécurité. Lorsque la broche fournie ne convient pas à la prise, consultez un électricien afin de remplacer la prise désuète.
10. Protégez le cordon d'alimentation afin que personne ne marche dessus ou le pince, particulièrement au niveau des broches, de la prise et du point où ils sortent de l'appareil.
11. Utilisez seulement les accessoires spécifiés par le fabricant.
12. Utilisez seulement avec un chariot, une sellette, un trépied, un support ou une table. Lorsqu'un chariot est utilisé, prenez garde de ne pas déplacer la combinaison chariot/appareil pour éviter toute blessure causée par un renversement.

AVERTISSEMENT RELATIF AU CHARIOT PORTATIF
(Symbol fourni par RETAC)

13. Débranchez cet appareil durant un orage ou lorsqu'il n'est pas utilisé pendant de longues périodes.
14. Confiez toutes les réparations à un technicien compétent. La réparation s'avère nécessaire lorsque l'appareil a été endommagé, par exemple, si le cordon d'alimentation ou la fiche a été endommagé, du liquide a été renversé ou des objets sont tombés dans l'appareil, ou si l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou a été échappé.
15. AVERTISSEMENT : Pour réduire le risque d'électrocution, évitez d'exposer l'appareil à la pluie ou à l'humidité. Ne déposez pas d'objets remplis d'eau, tels qu'un vase, sur l'appareil.
16. La fiche de secteur c.a. est utilisée pour débrancher l'appareil et doit être facilement accessible et utilisable durant l'usage prévu. Afin de couper complètement l'alimentation de l'appareil, la fiche de secteur doit être complètement débranchée de la prise c.a.
17. MISE EN GARDE : Afin de réduire le risque d'incendie ou d'explosion, n'exposez pas les piles à une source de chaleur excessive telle que le soleil, le feu ou autre.

Visit Our Website: www.singingmachine.com
Visite Nuestra Pagina de Internet: www.singingmachine.com
Visitez notre site Web : www.singingmachine.com

Copyright © 2021 All Rights Reserved.
Derechos de autor © 2021 Todos los derechos reservados.
Droit d'auteur© 2021 - Tous droits réservés.

The Singing Machine Company, Inc.
4060 E Jurupa Street, Unit B
Ontario, CA 91761-1413 USA

U.S. Representative
Company Name : The Singing Machine Company, Inc.
Address : 6301 NW 5th Way, Suite 2900, Fort Lauderdale, FL33309, USA
Telephone : 954 -596-1000
Website : www.singingmachine.com

PRINTED IN CHINA
IMPRESO EN CHINA
Imprimé en Chine
1080-2102-ESF01-US