RC MAX REBOUNCE

BOUNCING STUNTS

- FLIP
- VERTICAL SPIN
- 360° SPIN
- SOMERSAULT
- SIDE SPIN

2.4 GHz FOR MULTI-RACER ACTION

ECHO TECH

RC MAX REBOUNCE

ECHO TECH

2.4 GHz FOR MULTI-RACER ACTION

BOUNCING STUNTS

- FLIP
- VERTICAL SPIN
- 360° SPIN
- SOMERSAULT
- SIDE SPIN

RADIO CONTROLLED STUNT VEHICLE

11768 - Window Box
13.5w 7.5h 8.5d

ECHO TECH

2.4 GHz FOR MULTI-RACER ACTION

RC MAX REBOUNCE

RADIO CONTROLLED STUNT VEHICLE

BOUNCING STUNTS!

AGES 8+

ECHO TECH

2.4 GHz FOR MULTI-RACER ACTION

RC MAX REBOUNCE

RADIO CONTROLLED STUNT VEHICLE

BOUNCING STUNTS!

FLIP

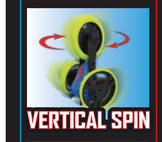

VERTICAL SPIN

SIDE SPIN

360° SPIN

FLIP

VERTICAL SPIN

RC MAX REBOUNCE

RADIO CONTROLLED STUNT VEHICLE

BOUNCING STUNTS!

SIDE SPIN

SOMERSAULT

Flip

To flip the Max Rebounce,
pull Both Joysticks down to Drive backward.
Then push Both Joysticks up.The momentum of the Max Rebounce will flip itself.

360º Spin

For 360º spin, just push the left joystick up and the right joystick down at the same time. To spin in the opposite direction, push the left joystick down and the right joystick up at the same time

Side Spin

To perform the Side Spin, first ,do 360° spin. And push up both Joysticks upward or downward about a second, then release it. Second, push right Joysticks down and hold it to accelerate.

Vertical Spin

To perform Vertical Spinning, Push up both Joysticks downward then upward a second to see it stand up. At this moment , push the left joystick up and the right joystick down to spinning .

Somersault

Hold the left Joysticks up and Right Joysticks down to perform the 360° spin.
Tap the right Joystick upwards repeatedly to advance to a Somersault Stunt

Long Press. Short Press. Release. These stunts require practice to perform.

Battery Installation

The Max Rebounce requires 5 "AA" 1.5V (not included) alkaline batteries for the vehicle and 2 "AA" 1.5V (not included) alkaline batteries for the transmitter.

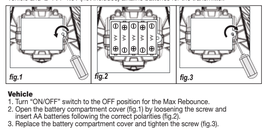

fig.1 fig.2 fig.3

Vehicle

1. Turn "ON/OFF" switch to the OFF position for the Max Rebounce.
2. Open the battery compartment cover (fig.1) by loosening the screw and insert AA batteries following the correct polarities (fig.2).
3. Replace the battery compartment cover and tighten the screw (fig.3).

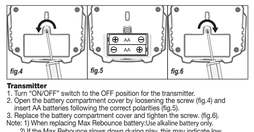

fig.4 fig.5 fig.6

Transmitter

1. Turn "ON/OFF" switch to the OFF position for the transmitter.
2. Open the battery compartment cover by loosening the screw (fig.4) and insert AA batteries following the correct polarities (fig.5).
3. Replace the battery compartment cover and tighten the screw. (fig.6).

Note: 1) When replacing Max Rebounce battery,Use alkaline battery only.
2) If the Max Rebounce slows down during play, this may indicate low battery power, therefore it would be necessary to replace new batteries.

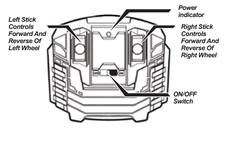

Battery Warnings:

Important! Only adults should replace batteries.
Non-rechargeable batteries are not to be recharged.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the toy before being charged.
Different types of batteries or new and used batteries are not to be mixed.
Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.
Alkaline batteries are recommended.
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
Please keep this information for future reference.
Remove batteries from the product before extended storage.

Precautions and Care

FCC Statement

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacture is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following
measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ECHO TECH

CONTENTS AND SPECIFICATIONS MAY VARY FROM THOSE ILLUSTRATED.
PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.

11768

PUTOU INDUSTRIAL AREA,
HUZHEN TOWN, BOLUO,
HUIZHOU,CHINA

ALL RIGHTS RESERVED

MADE IN CHINA

www.echo-technologies.com

Trademark licensed from Focus Brand
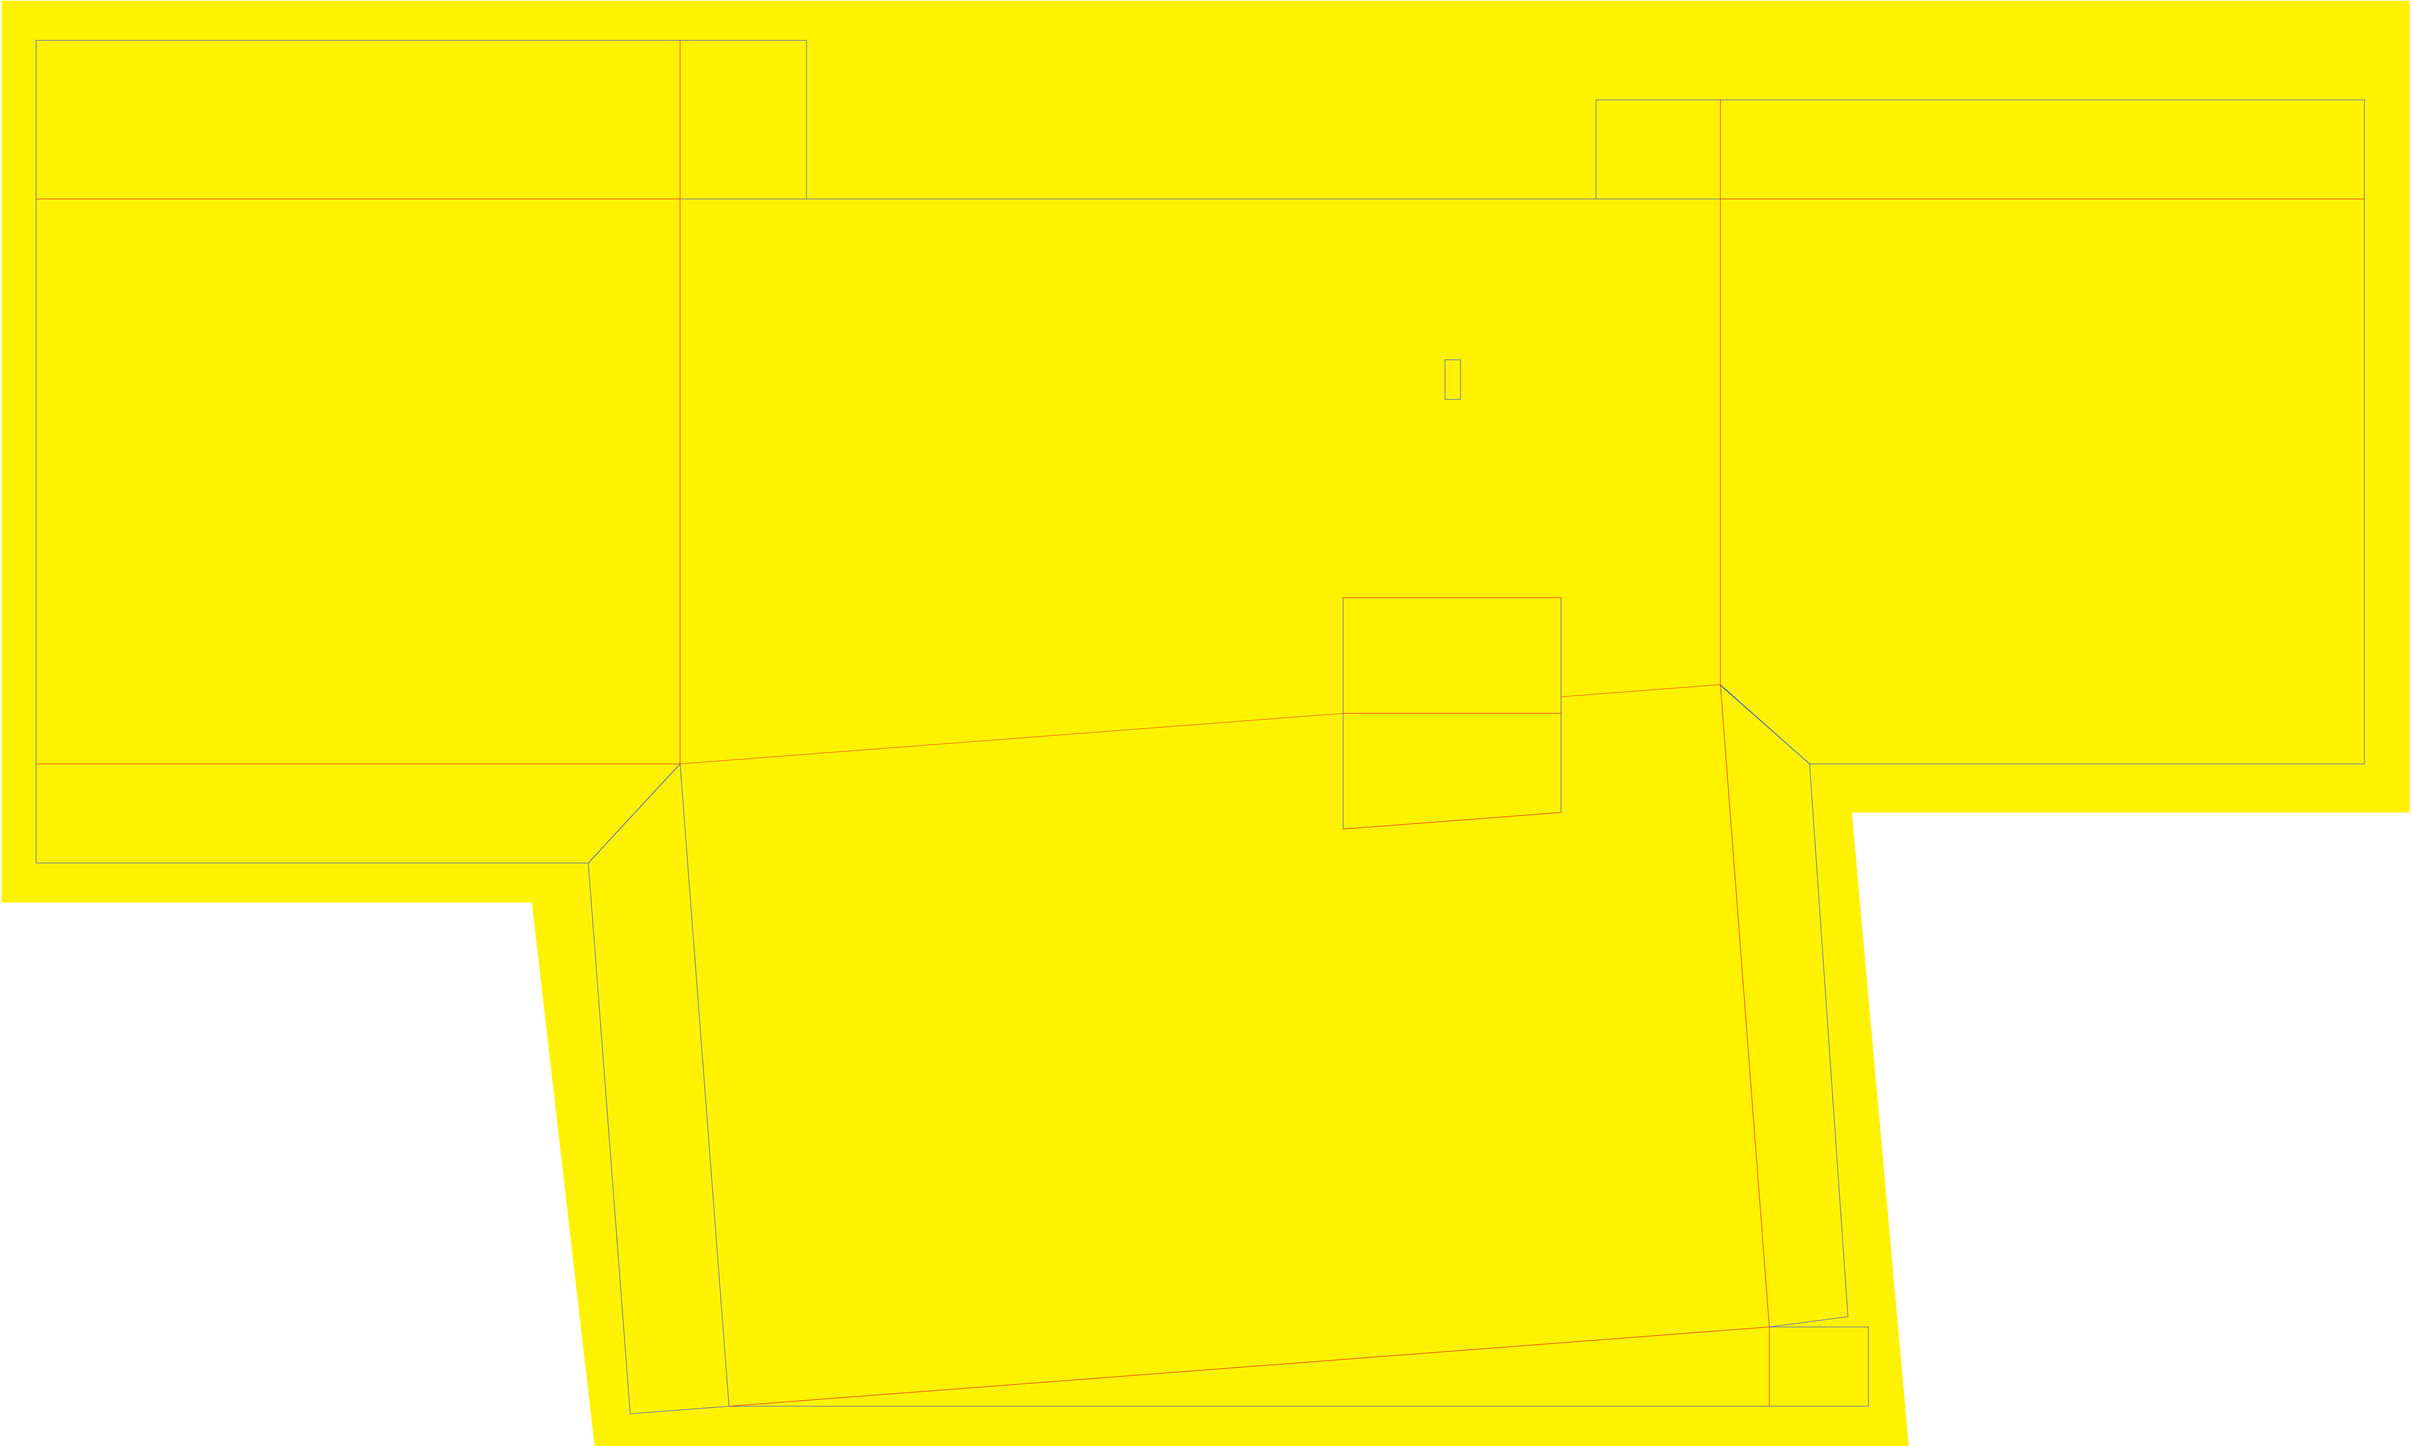
26753 11768 0