TSST

www.tsstglobal.com

Rev.00

Product intronduction - TS006BA

This wireless equipment has a possibility of mixing electric waves and cannot provide the services on life and safety

Thank you for purchasing TSST's Portable Bluetooth Speaker. This product supports Bluetooth 2.1 and easy to hand carry, to provide high quality sound by simplified control. From your Bluetooth devices, you can play your music library to the product without connecting wires also by AUX cable. This product is targeting home-use (class B) electromagnetic wave instrument and can be used in any place.

Specifications

Name of Product	Portable Bluetooth Speaker
Model	TS006BA
Input Power	5V⎓1.0A(Max), MicroUSB
Size(without Cover)	124 X 68 X 25 mm (W X D X H)
Internal Battery	3.7V DC / 750 mAh Li-ion (play 10 hours)
AMP Power	3W x 2ch
Connection	Micro USB (charging) / AUX Input (3.5mm)
Bluetooth	Bluetooth V2.1 + EDR
Used Frequency	2,402 ~ 2,480 MHz
Proper Temperature	0 ~ 45 ℃

The life time of battery may decrease slowly by repeating charging and discharging cycles. Play time is based on 1/2 volume.

Compositon of product

Contents

- Speaker
- User Manual
- Micro USB Cable for charging
  - The USB Cable is not for telecommunication.
  - AUX cable and power adaptor are not provided.

Front

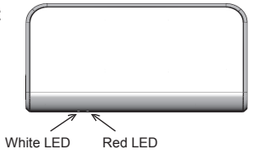

Left



Right

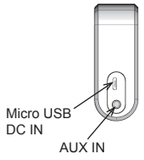

Before you begin

This Product can provide you a music enjoyment by wireless stream audio contents from your mobile devices such as smartphone, MP3 player tablet or PC. You can roam around the house, office or outdoor to listen great music since the product has a rechargeable battery inside. Also, you can directly connect the devices using AUX line out. The device shall support Bluetooth higher than ver.2.1.

Connecting Power and Charging

To charge battery, connect supplied USB cable to USB port of PC or DC adaptor with USB Port and the other end to Micro USB Port of the right hand side of the Product.
From the connection, the internal battery will start to be charged.

The internal battery may not be fully charged when you first open the Product. Please full charge the battery before use. Please use safety approved power adaptor.

Operation and indication

- Power On : Press power button.
  - With audio signal, white LED starts blinking slowly.
- Power Off : Double click the power button.
  - With audio signal, white LED is turned off.
- Volume Control : Control volume on your Bluetooth devices, as there's no volume control on this product.
- Enter Bluetooth Pairing Mode : When the Product is powered on, press and hold the power button for 3 sec.
  - With audio signal, white LED starts blinking rapidly.
- Bluetooth Pairing : Activate the Bluetooth wireless mode on your device and let the device enter search mode. Choose "Handy" from the list on your device where you can complete the pairing operation.
  - White LED turns solid with audio signal.
- Un-pairing Bluetooth : Power off the product or deactivate Bluetooth wireless mode on your device.
- Bluetooth re-connecting : When powered on, the Product is automatically paired to the most recently connected Bluetooth device.
- AUX source play back : Connect your auxiliary source to the AUX-In jack on the right side of the Product with 3.5mm AUX cable. If you have both the auxiliary player and the connected Bluetooth device playing, the Product will play the audio signal from Bluetooth device. To hear audio from AUX cable, pause or stop your Bluetooth device. During re-charging, AUX source can playback regardless of the Product power status.
- LED Indicating status
  - Charging / End : Red LED on / Red LED off
  - Battery low : Red LED blinks 10 times
  - No pairing : White LED blinks slowly
  - Wait pairing : White LED blinks rapidly
  - Paired : White LED on

The product label is located on the inside of flip cover on the rear of product.

Safety instructions

As with general electronic product, precautions should be observed during handling and use.

- Read this instruction carefully and keep it. Heed all warnings and follow the instruction.
- Do not use the Product near water.
- Clean only with dry cloth.
- Do not block front or rear grilles.
- Do not install near any heat sources such as stoves.
- Protect the power (USB) cable from pressing by heavy substances or pulled by excessive power.
- Only use on horizontal and flat place.
- Unplug the Product during lightning storms or when unused for long periods of time.
- Contact a designated AS center when the power (USB) cable damaged, spilling liquid on Product, exposing Product to rain for long time, serious damage on Product by dropping it.
- Keep away magnetic recording devices from the Product as there may be a small amount of magnetic flux leakage.
- Only use under 50℃ of environment to prevent any damage to built-in battery.
- Do not dispose of in the household waste, as the product contains a built-in battery and should be treated and disposed according to regulations on waste disposal.
- Sudden movement from cold to hot environment may cause moisture condensing on the Product and degrade system performance and decrease product life span.
- Protect product from direct sun light.
- Do not use solvents to clean the Product and keep away from dusty environment.
- Do not attempt to disassemble the Product.
- AC adaptor is not supplied with the Product. Damages caused by improper power adaptors is not compensated.
- Always leave sufficient space around the Product for ventilation. Do not place Product in or on a bed, in a bag that may prevent air flow through vent openings.
- Don't place lighted candles, cigarettes, etc. on the Product.
- Be care that heavy objects do not fall into the Product.
- To completely disconnect the power input, the USB cable should be disconnected from the Product.
- Use of the Product in moderate climates. Use under extreme temperature may degrade system performance and product life span.

Troubleshooting

Q: The Product is not turned on.
A: Make sure built-in battery is fully charged.
Check that the USB cable is not damaged and USB port of adaptor or PC is normal.

Q: The Product is not charged.
A: Make sure the USB cable, plug is not damaged.
Check the USB cable is connected to PC or adaptor USB port properly.

Q: No sound or sound is very low.
A: Make sure the Bluetooth wireless connection is correct and playback has been successfully started.
Make sure the volume on your Bluetooth device is turned up.

Q: Paired device can not reconnect to the Product.
A: A re-connection may fail due to the pairing information has been deleted from your Bluetooth device.
Delete "Handy" from the list on your Bluetooth device.
Repeat the pairing procedures again.

Note in some device you may be prompted to enter a passkey. The passkey is "0000". This can be different for different devices.

If there is system error, Press and hold power button more than 5sec (Enter to Device reset mode).

TSST

TSST Global Inc.