ERAARK™
SMART FISH TANK PRO
USER MANUAL

Please read this User Manual carefully before using the product and keep it properly.

英文01

TABLE OF CONTENTS

A Message to Our Valued Customers 1
User Safety Guide 1
Contents of Packaging 4
Product Description 5
How to Use 6,7
Maintenance and Cleaning 8
FAQ 9,10
Basic Specifications 11
Harmful Substances 11

英文02

A MESSAGE TO OUR VALUED CUSTOMERS

- Thank you for choosing ERAARK Smart Fish Tank Pro. We are THAT that every detail is made the better for you and your pets with technology.
- Please read this manual carefully before using and keep the product. By setting up and using this product, you agree to the terms and conditions of this manual. Failure to follow the instructions may result in injury or damage to property and void the warranty. We are not responsible for any accidents or losses that result from improper use or failure to follow the instructions.
- ERAARK reserves the rights of interpretation and revision.
- This product is for indoor use only. Do not place it in direct sunlight and above. It does not support Wi-Fi.
- The device supports 2.4G and always, as well as Android 8.0 and above.

USER SAFETY GUIDE

- **Please follow the safety guides carefully to avoid product malfunction or other unforeseen hazards.**
- Do not place the product near heat sources or in direct sunlight.
- Keep it away from water. Water ingress may cause a different power adapter may result in damage to the product and pose a risk of electric shock.
- When installing, performing maintenance, or cleaning the device, please make sure to first turn off the power and unplug the power cord. Do not touch the power cord with wet hands to avoid electric shock. Do not use the power if cracks, or wear, cut the flexible power cord to fasten the power.
- Do not use the product if the power cord or plug is damaged, or if the product has been dropped or damaged, use a trained to clean the unit.
- Do not place the product on an unstable surface or where it may be subject to prevent it from or damage on the surface.
- To prevent overheating or deformation, do not cover the vent, and other objects on top of the fan or on the vent.
- When plugging in or unplugging the power cord, make sure your hands are dry and grip only the plug and not the cord to avoid electric shock or damage to the cord. Do not pull the cord.
- Do not place the power adapter in a place where it may be exposed to heat or moisture. Do not use the power adapter, plug or socket if it is damaged or loose.
- Please ensure the power adapter and the fish tank are of the matched collection.
- Do not use the product in a place where children or pets can easily reach it.
- Do not attempt to remove or slide the seal cover if a Gen Filter(Fish water). This may result in the tank leaking or damage.
- If you encounter any problems while using the product, please contact us immediately.

英文03

CONTENTS OF PACKAGING

Please carefully check and verify, ensure that you have all the necessary parts.

英文04

PRODUCT DESCRIPTION

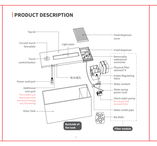

英文05

HOW TO USE

1. Use magnetic tool
Remove the Gen Filter (Fish Water) by using the magnetic tool provided in the tool kit.

Scan QR code to watch an instructional video for more information about the product.

2. Lighting and Button
a. Light switch
Lit up for 5 seconds when touched, then automatically turns off. Long press for 3 seconds to turn on/off the light.

Lit up to turn the lights on.

Press down to turn off the lights.

英文06

HOW TO USE

1. Circular touch Sensation
Touch the circular touch sensation area to turn on the light. Touch the circular touch sensation area again to turn off the light.

2. Touch control button
Touch the control button to turn on/off the light. Long press for 3 seconds to turn on/off.

b. Using the App
1. Download ERAARK App from App store or Google App Market. Search the app for "" or scan the QR code to download the App. Follow the App's User Manual and follow the instructions to add your device to the App and complete the initial setup.

2. Under the white light mode, you can open/closing light mode in the App. Under the white light mode, you can adjust the brightness of opening the lamp to switch to light.
Under the white light mode, you can also adjust the changes of natural light according to time and seasons.

3. Through the App, you can adjust the brightness of the lighting, set scheduled tasks, watch real-time, and view the status of the fish tank.
- This product supports Bluetooth connection. The App can only control the device via a Bluetooth connection within a reasonable range.

Scan QR code to download the App

英文07

MAINTENANCE AND CLEANING

1. You will need to thoroughly wash the glass tank before filling it for the first time. Remove any residue from the tank using a mild soap and water solution, then rinse thoroughly with clean water to ensure no residue remains.
2. Regularly clean the tank and its components to maintain optimal performance.
3. Clean the Gen Filter (Fish Water) every 3 months or when recommended changing the water in the tank once a week, and start changing more than a third of the tank's full capacity each time.
4. Regularly check and clean impeller, cleaning substitute, or water sleeve (in Magnetic Drive) when cleaning the glass tank.
5. Cleaning the glass tank: Before cleaning the glass tank, unplug the QR code to avoid an instructional video for more information about the product.
- Filtering Gen Filter (Fish Water) Material: Replace every 6 months.

1. How to clean

Scan QR code to watch an instructional video for more information about the product.

- When installing the water pump power cord interface, remember that the interlocking of the power cord interface and the water pump power cord interface must be aligned. Otherwise, it will be impossible to connect and cause the corresponding fish to shorten the service time.

英文8

FAQ

1. The balance is not working?
- Please ensure the balance scales are the touch control button. If there is, wipe it dry and try again.
- Using the App, you can set a reminder for the current balance. When the reminder is on, touch the button on the device will not respond while being pressed. You can check if the child is on or off by using the App.

2. How to use tracking light mode?
In the App, go to the main page for your device. After choosing white light mode, you can turn the tracking light mode on or off. Once tracking light mode is turned on, the device will automatically adjust the time and brightness of light in the pet-based on the time and the seasons of the location.
- Please ensure the App has access to your location information and that your phone's location is set to "Allow" operations. In the device settings page of App, enter the device location page to update the device location. After updating the device location, the configuration of the tracking light mode will be automatically updated.

英文9

FAQ

1. The water turned murky on the second or third day after adding in fish.
- This is normal and will gradually improve as the tank matures.

2. The reason the water in the tank turns murky on the second or third day is that the filtration system has not been established yet. When there is no fish, there will be no dirty things in the tank, so the water is clear. When there are fish, microbes are introduced in tank, and these affect the quality of the water. At this point, the filtration system has not yet started taking effect. This is a necessary step when establishing a new tank.

3. Leave an image 10 of the water in the tank on the third day of empty water or introduce anything harmful to quickly establish the filtration system in the tank.

4. Take image number of one, one should check to see if the filter sponge is in need of cleaning soon a week, and replace or clean the filter sponge according to its dirty degree.

5. Use the cleaning tool to suck the water. Cleaning tool, and fill to, be thrown whether to change water.

英文10

BASIC SPECIFICATION

Product Name	ERAARK Smart Fish Tank Pro
Product Code	3000
Product Size	400mm*400mm*500mm
Material Usage	Small Sized aquarium PMMA, Can recommend not exceed 20 fish in the tank in size limits, and the body length of each fish should not exceed 20mm. Medium Sized aquarium PMMA, Can recommend not exceed 40 fish in the tank in size limits, and the body length of each fish should not exceed 20mm. Large Sized aquarium PMMA, Can recommend not exceed 60 fish in the tank in size limits, and the body length of each fish should not exceed 20mm.
Power Voltage	100-240V~50/60Hz
Rated Power	18W
Manufacturer	Shenzhen Eraark Technology Co., Ltd. Add:Room 101, Building 2, Wangfuzhuang Industrial Zone, Longhua District, Shenzhen, China

HARMFUL SUBSTANCES

Hazardous Substances						
Name of Component	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr6+)	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ether (PBDE)
Electrical Circuit Board	X	O	O	O	O	O
Plastic	O	O	O	O	O	O
Metal	O	O	O	O	O	O
Accessories	X	O	O	O	O	O

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device must not be co-located or operating in conjunction with any other antenna or transmitter. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

2. warning

Caution:
Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.
Do not ingest battery, Chemical burn hazard. This product contains a coin/button cell battery. If the battery is swallowed, it can cause internal burns and lead to death. Keep new and used batteries out of the reach of children and pets. If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
Do not dismantle, crush, puncture, short circuit, heat or incinerate the battery. Failure to do so may pose a risk of explosion or release of flammable or toxic chemicals.

英文11

英文12