Catalogue

Catalogue 1
1 Introduction 3
1.1 Introduction 3
1.2 Notification 3
1.3 Safety instructions 3
1.4 Abbreviations/Terminology 4
2 Equipment Description 5
2.1 Equipment operation and preparation 5
2.2 Device Status and Reminders 5
3 Quick Guide 7
3.1 Key functions 7
3.2 Turn on and Turn off 7
3.3 Opening and closing the screen 7
3.4 touch screen 8
3.5 Home Page 9
3.6 Visit Application Procedures 11
3.7 USB Connection 11
3.8 Typing words 12
3.9 Operation Technique 14
4 Basic Setting 15
4.1 Wireless and Internet 15
4.2 Bluetooth 16
4.3 More 18
4.12 Language and Input Method 30
4.14 Date and Time 32
5 Multi-Media 35
5.1 Music 35
5.2 Photo Gallery 37
5.3 Camera 38
6 Communication Function 39
6.1 Contact List 39
7 Internet 40
7.1 Email 40
8 Other Application Procedures 42
8.1 Clock 42
8.2 Calculator 42
8.3 File Manager 43
9.4 Recorder 45
9 Installation of Procedures 47
9.1 Installation 47

9.2 Uninstall 47
10 Troubles Shooting 48

1 Introduction

1.1 Introduction

Thank you for purchasing our product. EA1510 is a 15.6-inch high-quality tablet computer. Its CPU is RK3288, based on the Android 8.1 operating system, using 2GB RAM+16GB ROM, and a 5MP AF camera.

The product has multiple functions such as WiFi, Bluetooth, POE, FM, etc. Realize convenient use of the internet, with built-in various sensors to provide you with new operations and entertainment. In addition, it also has a camera function, allowing it to enter a new era of interconnectivity.

The product has multiple functions such as WiFi, Bluetooth, POE, FM, etc. Realize convenient use of the internet, with built-in various sensors to provide you with new operations and entertainment. In addition, it also has a camera function, allowing it to enter a new era of interconnectivity.

1.2 Notification

Precautions

- Please always keep it dry. To avoid equipment short circuits, corrosion, etc., please prevent water and moisture from entering the equipment and charger, and do not operate the equipment or charger with wet hands.
- To avoid equipment and charger malfunctions, please prevent the equipment, battery, and charger from being subjected to severe impacts or vibrations.
- To avoid device and charger malfunctions, please prevent equipment, batteries, and chargers from overheating or becoming too cold.
- Do not impact, throw, poke, or drop, squeeze, or bend the product.
- Do not dismantle the equipment and accessories without authorization, otherwise the equipment and accessories will not be covered by our company's warranty.

1.3 Safety instructions

Before use, please read this chapter and convey this information to your child. For more details, please refer to the safety instructions and announcements.

- When driving a vehicle, do not operate the device to ensure safe driving.

- In the medical area, please comply with relevant rules and regulations. Please turn off the device when approaching the medical area.
- To avoid equipment malfunction, please turn off the high-precision electronic device near it.
- Please do not disassemble the device and accessories by yourself. Only authorized after-sales agents can disassemble
- It is strictly prohibited to use this equipment near high temperature and flammable gases (gas stations).
- Please keep the device and its accessories out of reach of children to avoid their use without parental supervision.
- Please comply with relevant rules and regulations, and respect the privacy and legal rights of others during use.
- When using a USB cable, please strictly follow the relevant instructions in the manual to ensure the safety of the device and PC.
- Do not use this device in the bathroom or other humid environments. Please protect the device from liquid cleaning or moisture.

1.4 Abbreviations/Terminology

缩写/术语	全称	备注
MID	Mobile Internet Device	移动互联终端
WIFI	Wireless Fidelity	基于 IEEE 802.11b 标准无线局域网
T F	TransFlash	超微型存储卡

2 Equipment Description

2.1 Equipment operation and preparation

charging

1. Please use the power adapter provided with the device to charge it

2.2 Device Status and Reminders

Icon

When some reminder messages appear in the reminder window, click on the list and slide the screen to open the reminder list. Select the desired menu and confirm the information. Then you can close the reminder window by clicking on the list that slides up. Please refer to the following status icons:

	mail		Airplane mode
	USB connected		USB debug
	Return		Download
	recently used application		Home
	Volume+		WIFI
	Volume-		

Prompt bar

When a new email is received, a prompt icon will be displayed. Open WIFI and click on the prompt to read the detailed information.

Open the prompt bar

When the reminder bar displays a new reminder icon, hold down the bar and slide your

finger down, then open the reminder board.

3 Quick Guide

3.1 Key functions

Key function description:

Power button	turn on
Volume+	Volume Increase
Volume-	Volume decrease
HOME Key	Click this button in any interface to return to the Home screen
Back Key	Clicking the back button on any interface will return to the previous menu level
Set key	display recent browsing history

3.2 Turn on and Turn off

Turn on

Connect the adapter to power on or support a 30WPOE network cable connection, press the power button to start the device, enter the boot screen, and then the system will enter the screen.

Turn off

Press the eject power button to shut down.

3.3 Opening and closing the screen

After powering on, the screen appears to be constantly on and will not lock.

Picture 3.1

3.4 touch screen

Operation

There are the following methods to view the device's main screen, menu, and applications.

Click

When you want to use the on-screen keyboard to input or select an application in the Home screen, just touch it with your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizoncial movement by finger.

Pull

Before you pull, you need to hold the it with strenghth until you pull it into the position you want.

Rotate

For most pictures, you only need to retate the MID sidewise to change the screen direction from horizoncial to vertical. For instance, when you are typing wods, and watching movies.

3.5 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

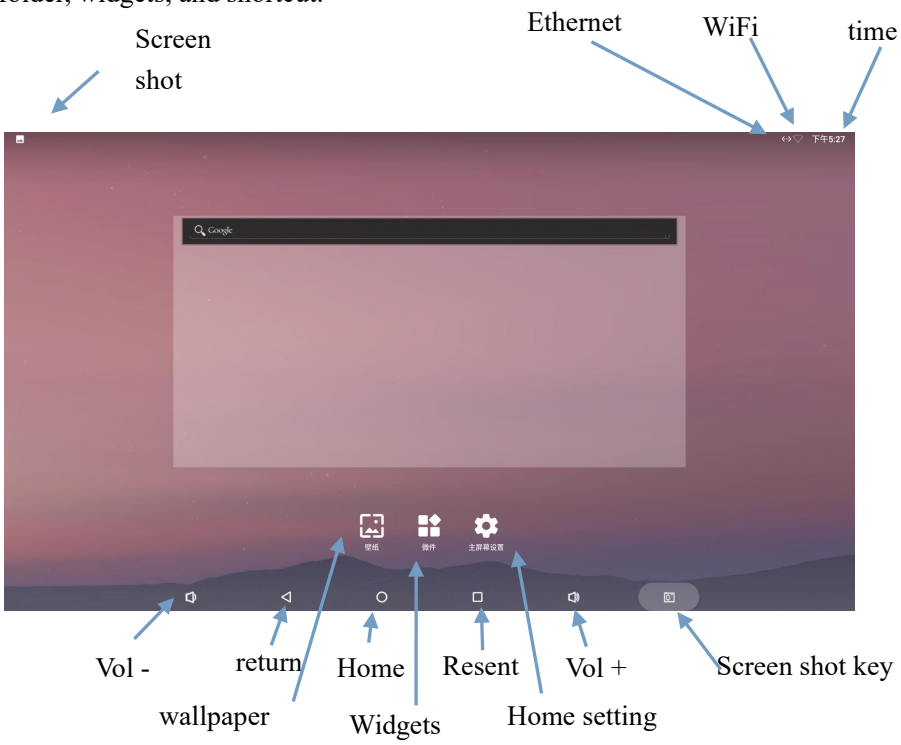

Picture 3.2

The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 3.3.

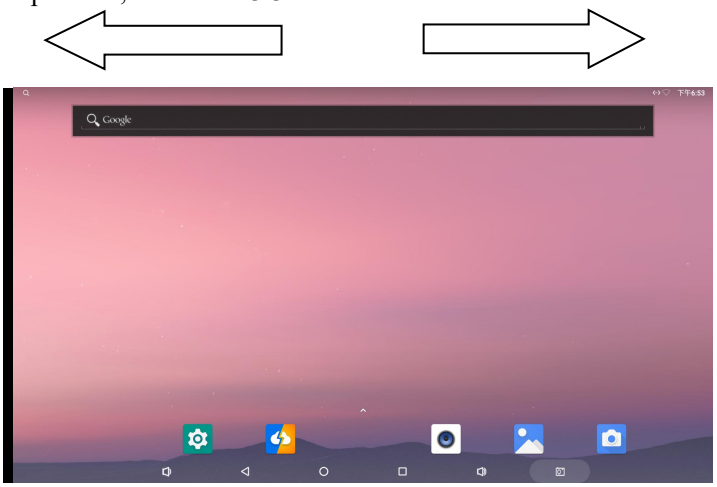

Picture 3.3

The shortcut icons management in desktop application.

Create folder icon in desktop

1. Drag the icons need to be put together on one icon(can also overlay several icons)as Picture 3.4.
2. Then click the overlayed icons, the applications can be folded, as Picture 3.5.

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similiar with Apple IOS system), the icons position can be changed through long press.

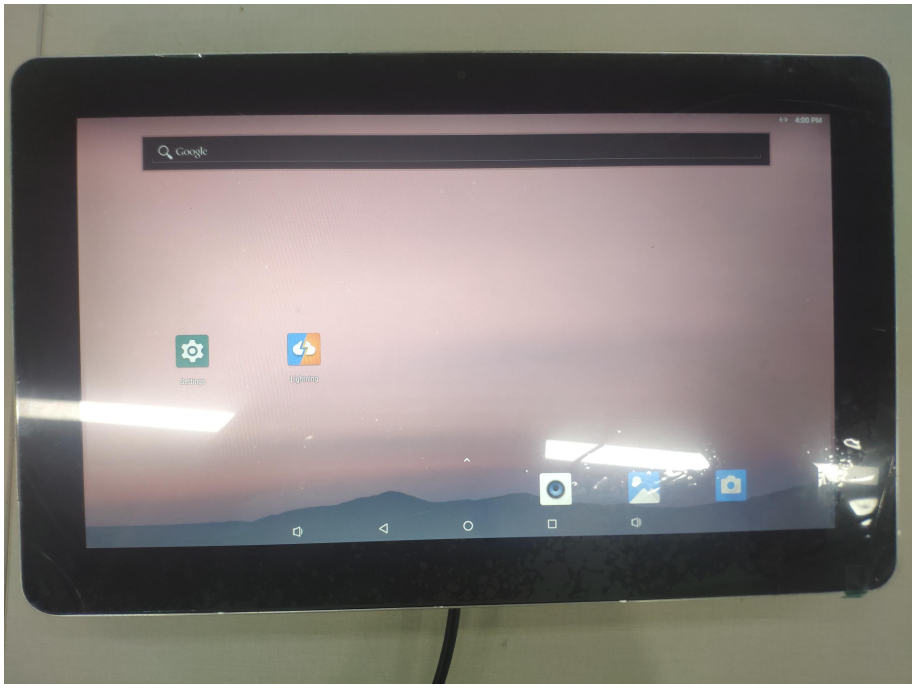

Picture 3.4

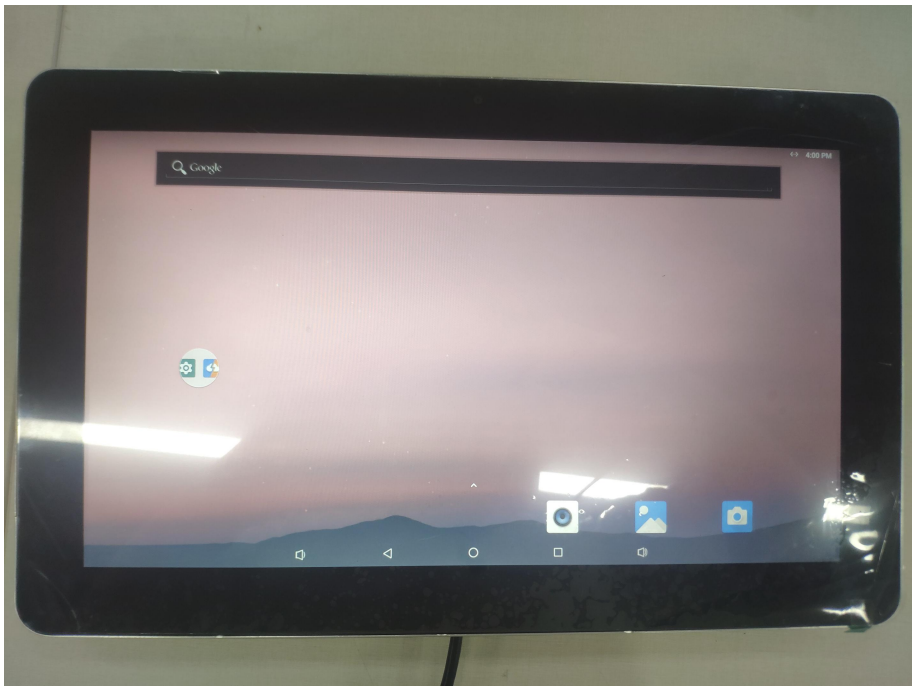

Picture 3.5

Remove the icons in desktop

1. Long press the icons need to be remove, then on the right above of the screen, it will appear icons.
2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

3.6 Visit Application Procedures

Click in right top of Picture 3.3, enter into main interface as Picture 3.6, choose the application procedure you want to visit.

Picture 3.6

3.7 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Press “ USB charging this device”
2. Select “ Transfer files”

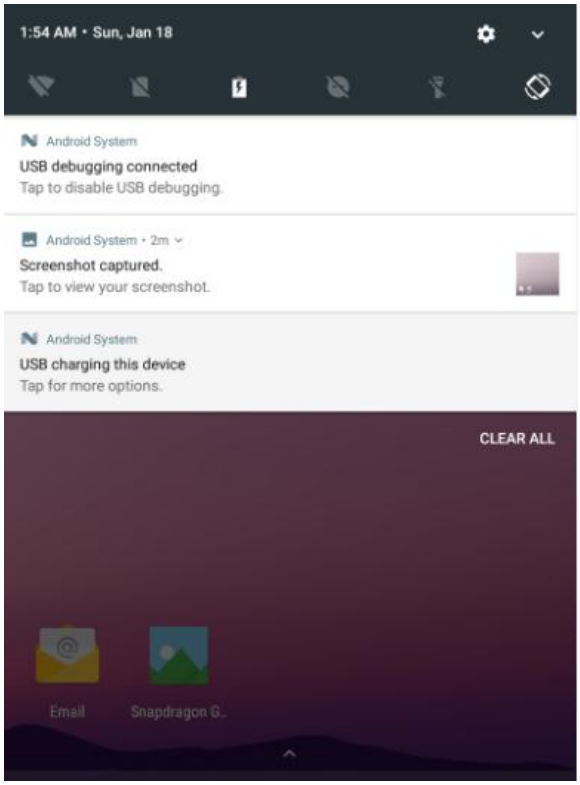

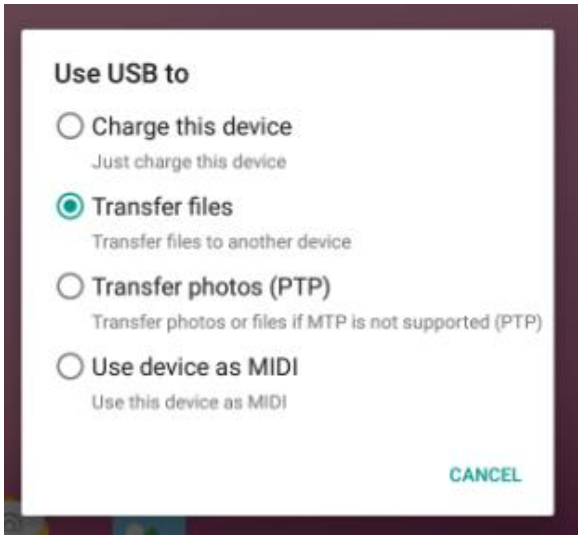

Picture 3.7

Copy the document into memory card

1. Connect the MID to computer with USB cable.
2. As MID storage configuration, it is connected with computer successfully.
3. Open the “My computer” in your computer, check the items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click “shutdown the USB storage configuration” to uninstall.

Notice: When the MID is connected with USB cable, and you open the USB storage configuration, you can’t view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

3.8 Typing words

Use the screen keyboard

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

1. Android keyboard

2. Google Pinyin

Choose the typing method you want

1. Click Setting pocedure application.
2. Click Language and Keyboard.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

Use and switch of input method

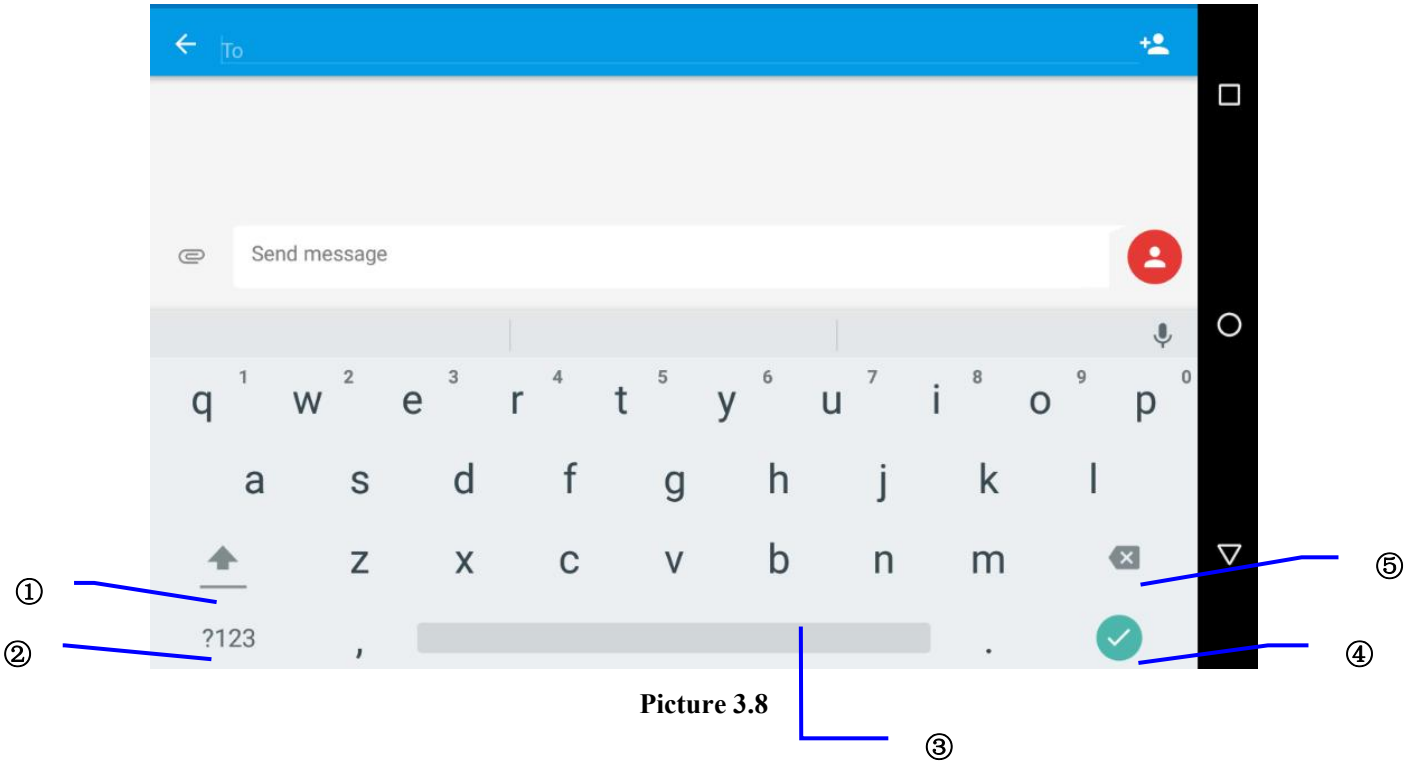

Picture 3.8

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left og the cursor.

3.9 Operation Technique

Enter widgets interface

In the application interface,click widgets on the above of screen, or slide the screen, it will swtich into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: If the target position has no space, the widget won't be add in the main screen.

4 Basic Setting

4.1 Wireless and Internet

1. Connect Wi-Fi

1) In the main menu or interface, choose **setting** application procedure.

2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 4.3

3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

Picture 4.3

2. **Add Network**

1) Click ADD NETWORK icon in right top, as Picture 4.4

Picture 4.4

2) Input network SSID, the wireless network name, click save.

3) Click user name already saved, click connect to use network, as Picture 4.5

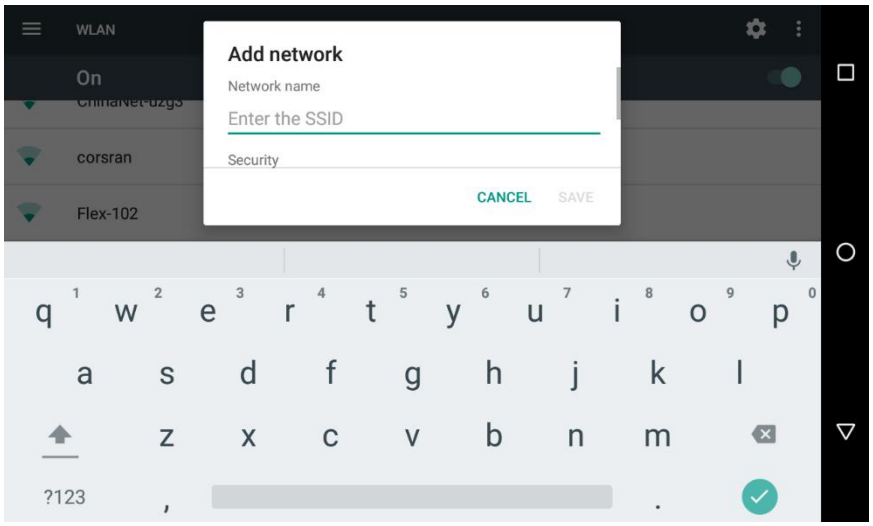

Picture 4.5

3. **Network Notice**

   If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 4.3

4. **Keep WI-FI on during sleep..**

   1. Click icon in right top of Picture 4.6, select **advanced**.
   2. Click **Keep WI-FI on during sleep,** as Picture **4.7**

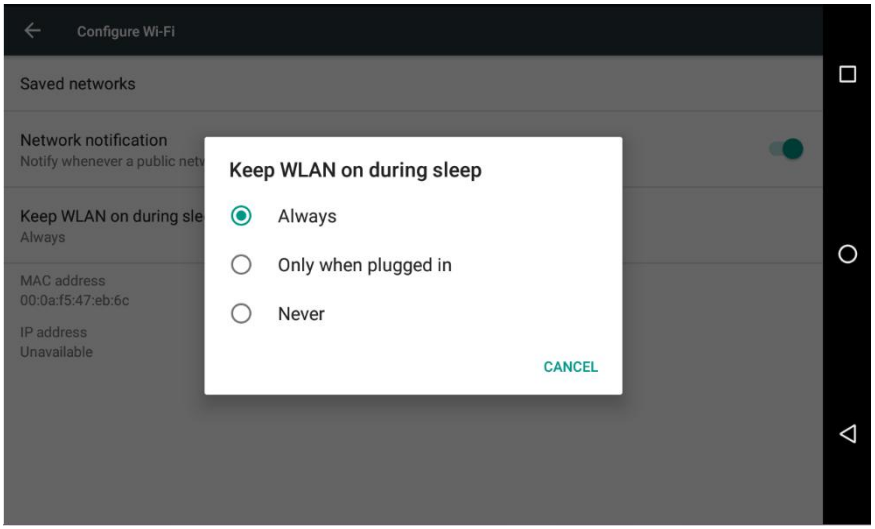

Picture 4.7

4.2 Bluetooth

Bluetooth function operation

1. Click setting application in main menu interface

2. Click bluetooth and open it.

3. If somebody open bluetooth in your surroudings, click search device in right above, then MID will automatically search the bluetooth device nearby. As picture **4.8**

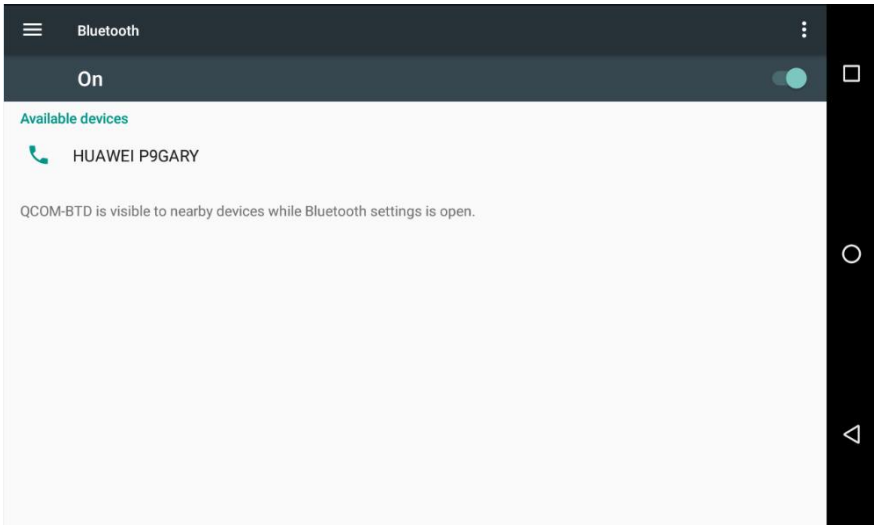

Picture 4.8

4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.

5. After match successfully, choose the operation you want to, click to enter into Picture 4.9.

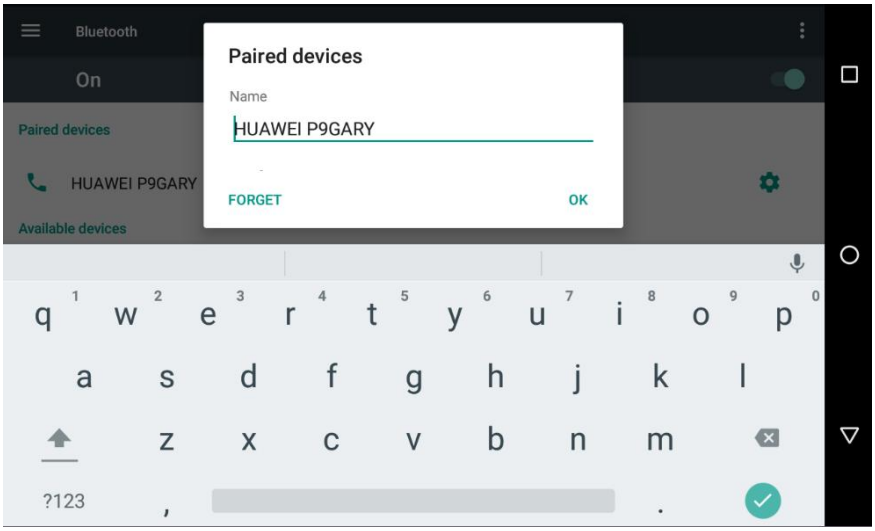

Picture 4.9

Bluetooth setting

1. **Rename tablet**

Click icon in right top of Picture 4.6, as Picture 4.10, select rename tablet, you can rename it as you want

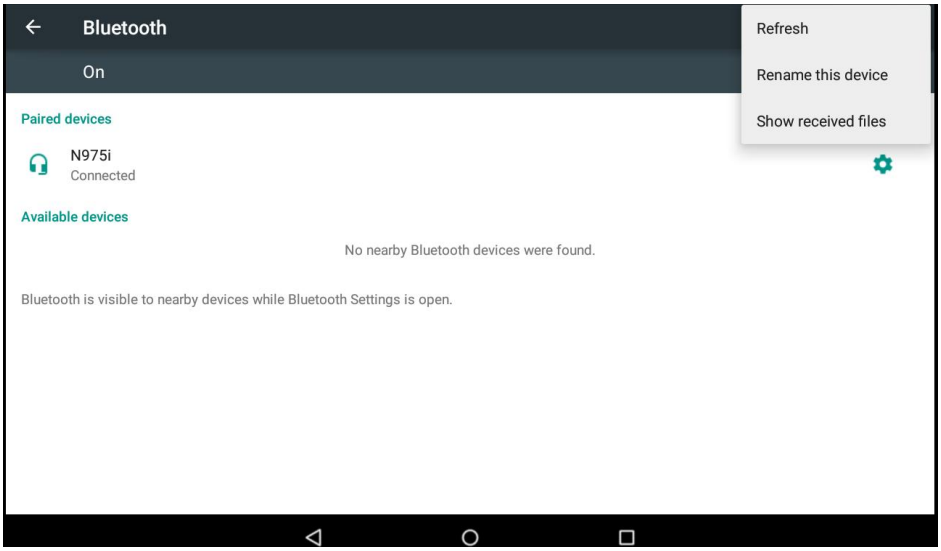

Picture 4.10

2.Display the file you received

Choose display the file you received in Picture 4.10, you can view download and upload files.

4.3 More

4.3-1 Airplane Mode

Airplane Mode can turn off WIFI and GSM card function quickly, when airplane mode is turned on, WIFI and GSM can't get any signal, then airplane mode is turned off, WIFI and GSM module will recover to previous state.

4.3-2 VPN

Open VPN, click **add VPN network**, as Picture 4.13. Input **name** and server address, then save.

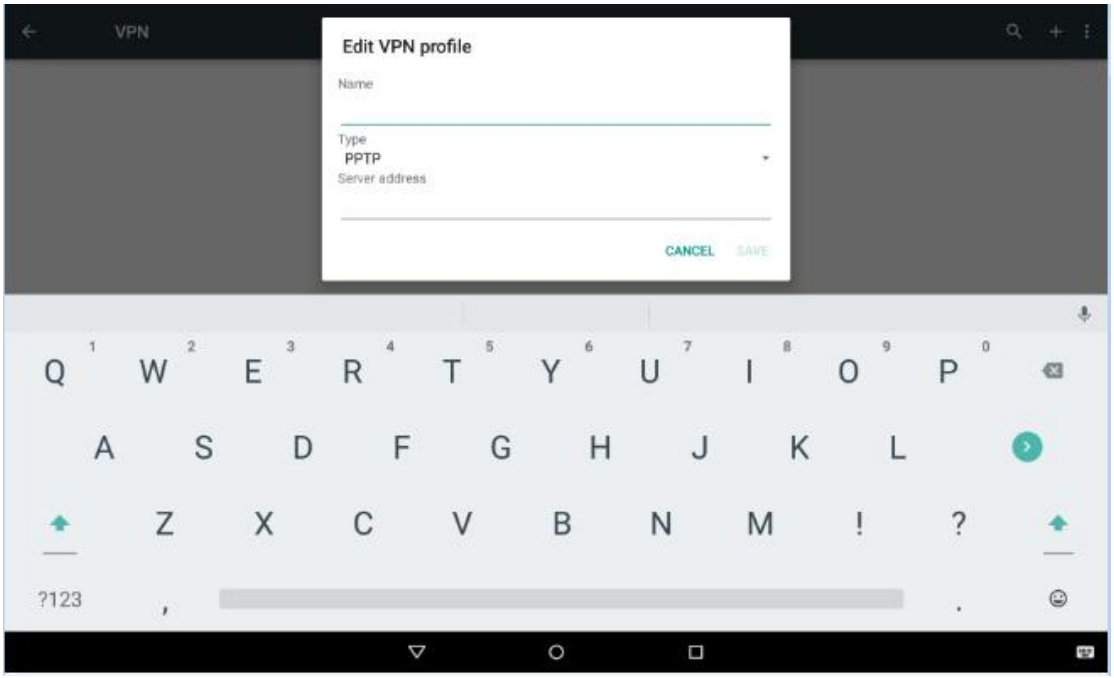

Picture 4.13

Click VPN, as Picture 4.14, input VPN user name and password, click connect.

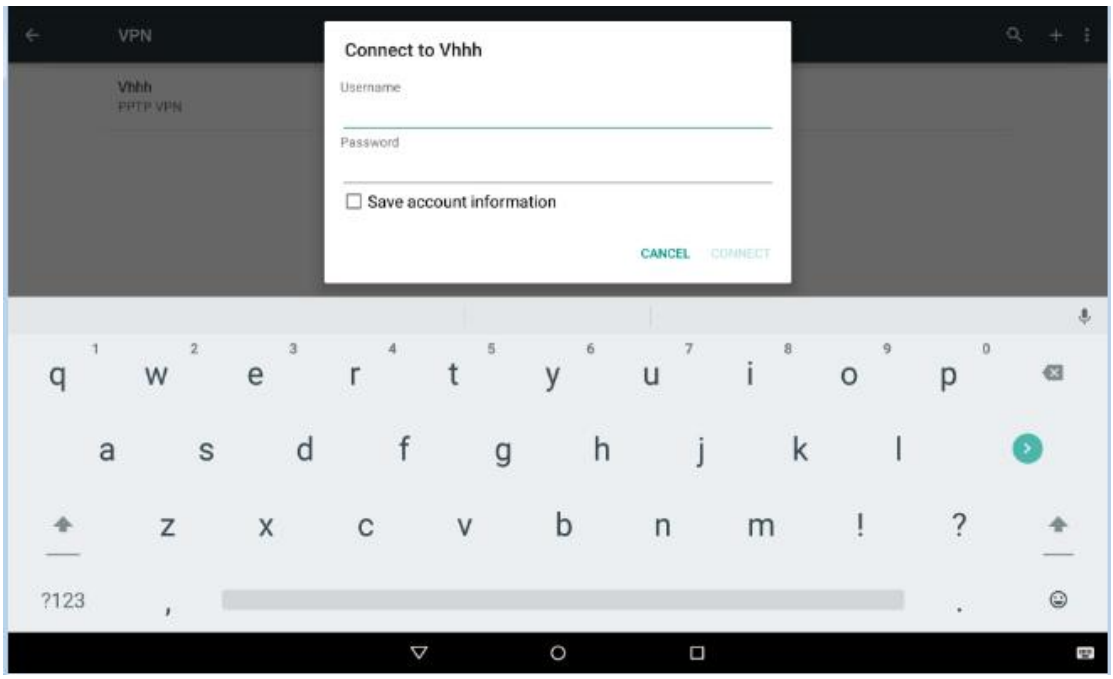

Picture 4.14

4.3-3 Network sharing and portable hotspots

Portable WI-FI hotspots

1. Click setting application in main menu.
2. Click more when wifi is well connected, open network share and portable hotspot

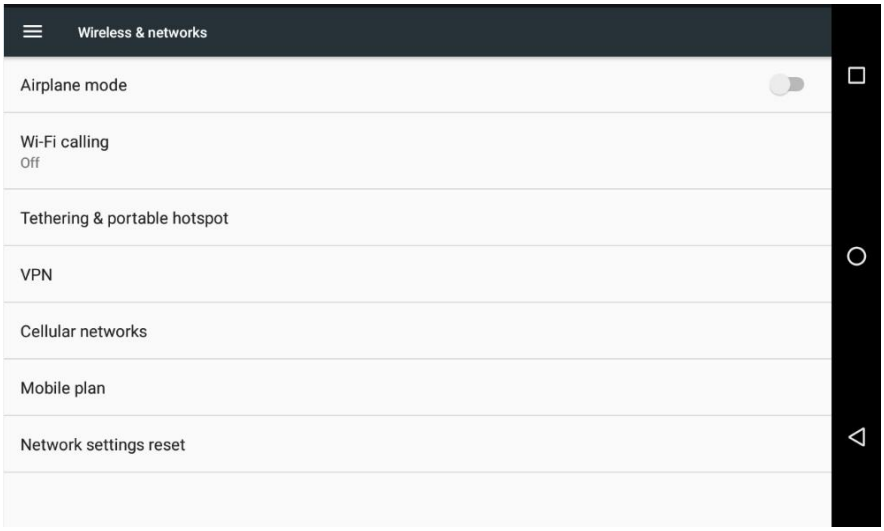

Picture 4.15

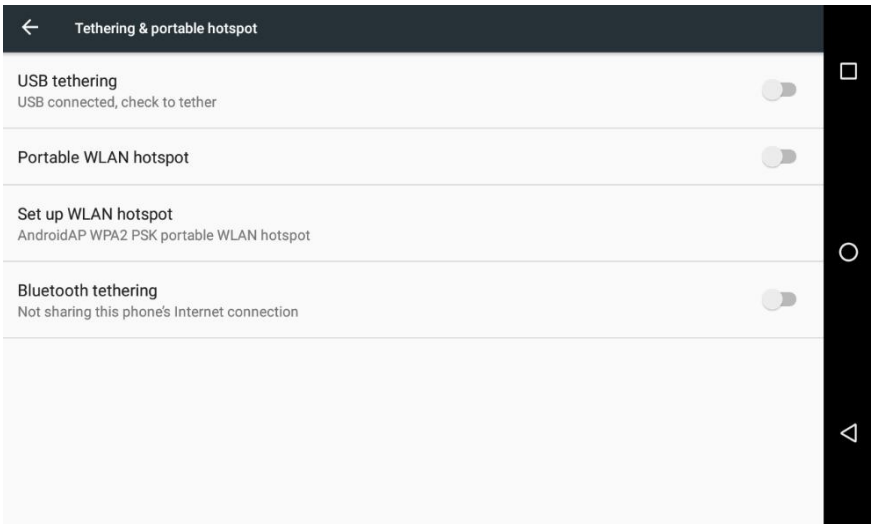

Picture 4.16

3. Click **keep WI-FI hotspots on**, choose open time.
4. Return to previous menu, open portable WLAN hotspots, click Set up WI-FI hotspots.

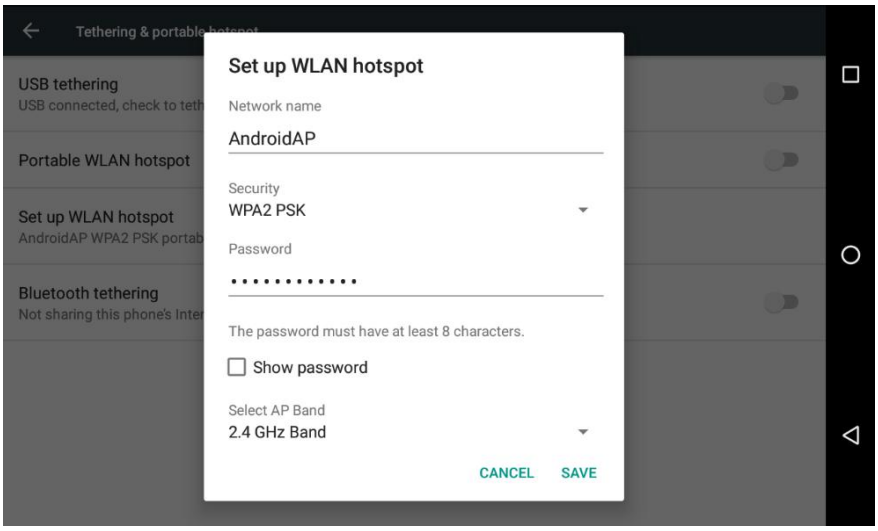

Picture 4.17

5. Set passwords you want to, password should be more than 8 numbers.

4.3-5 GPRS data prior mode

After Open GPRS data prior mode, systems will priority chooses your network.

4.4 Sound & notification

1. Open settings, click contextual model, as Picture 4.19,

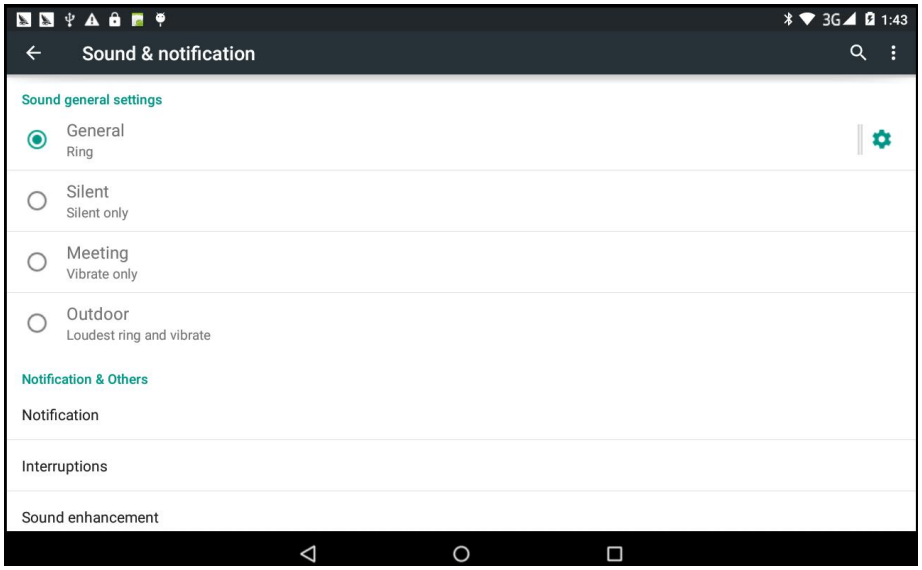

Picture 4.19

2. Click **standard** to enter into Picture 4.20

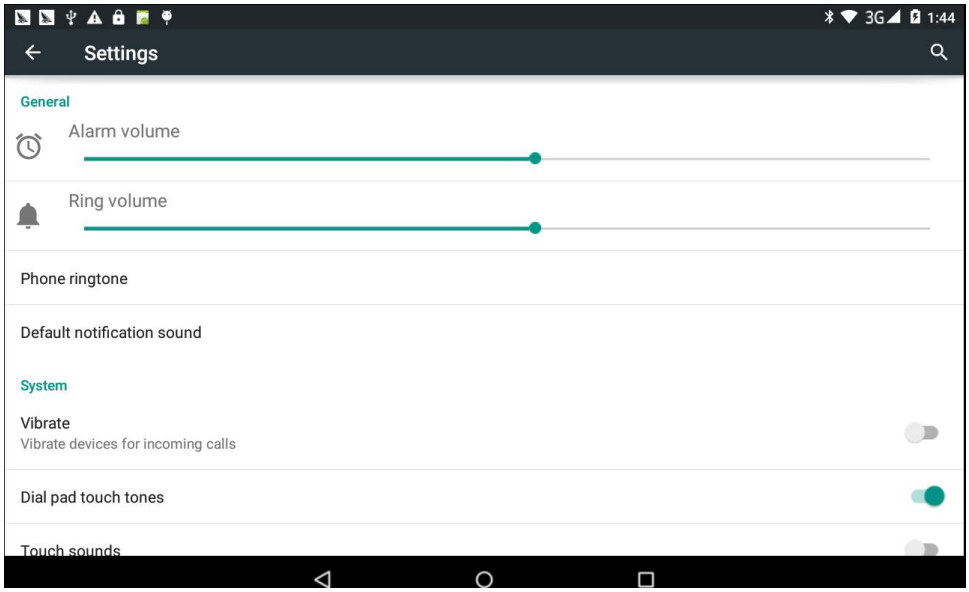

Picture 4.20

1. **Vibrate**

In picture 4.20, click **vibrate,** MID will vibrate when someone calls you.

2. **Volume**

In picture 4.27, click volume, you can set ringtone, notice, and alarm volume, as Picture 4.21

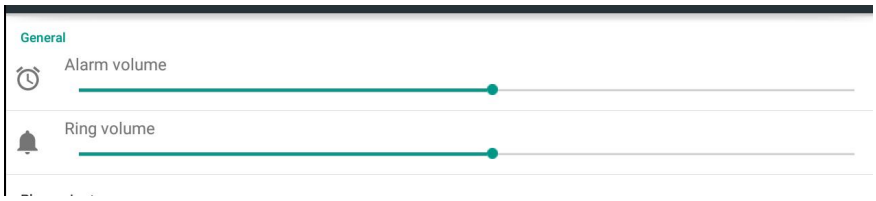

Picture 4.21

4.5 Display

4.5-1 Adjust the screen brightness

1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portlito to adjust the brightness volume.As Picture 4.23

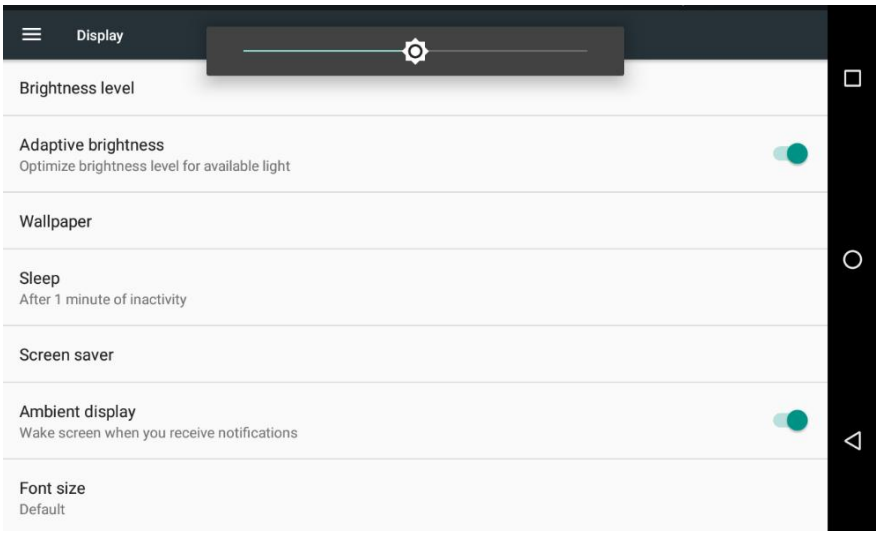

Picture 4.23

4. Click OK after brightness is adjusted.

4.5-2 Wallpapers

1. Click **setting** application**.**
2. Click **display,** click **wallpaper.**
3. You can choose different wallpapers as you like—live wallpapers---gallery(user defined)r, **as Picture 4.24**

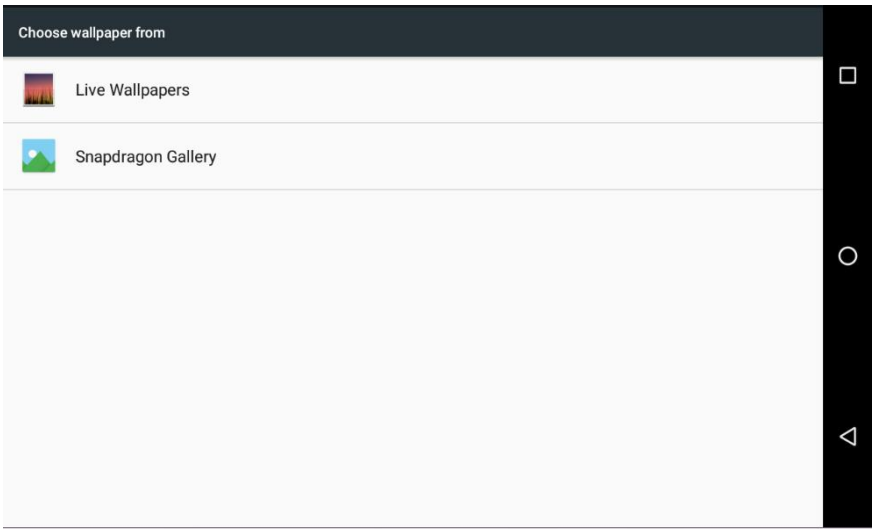

Picture 4.24

4.5-3 Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate MID screen by G-sensor.

4.5-4 Sleep

3. Click setting appliation.

4. Click display.
5. Click sleep.
6. Set the sleep time as you want, **as Picture 4.25**

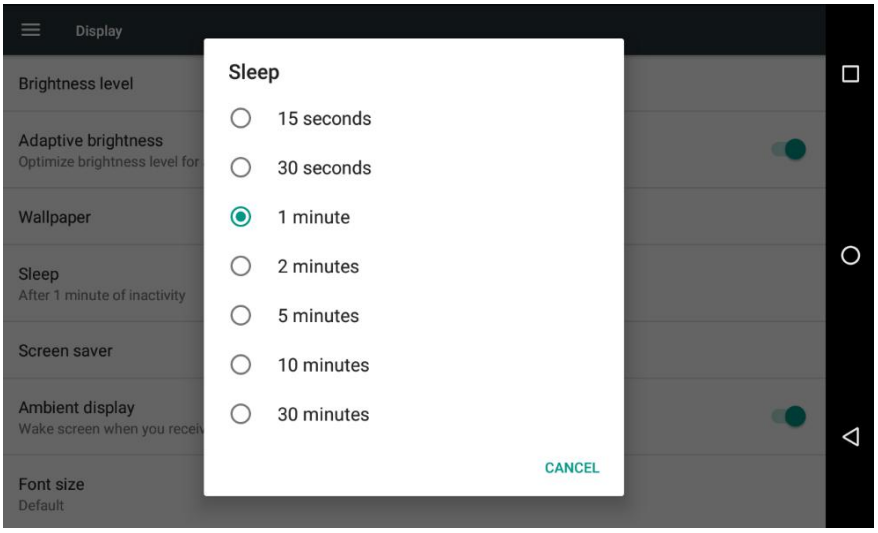

Picture 4.25

4.5-5 Font size

Click **font size** to adjust the font size, **as Picture 4.26**

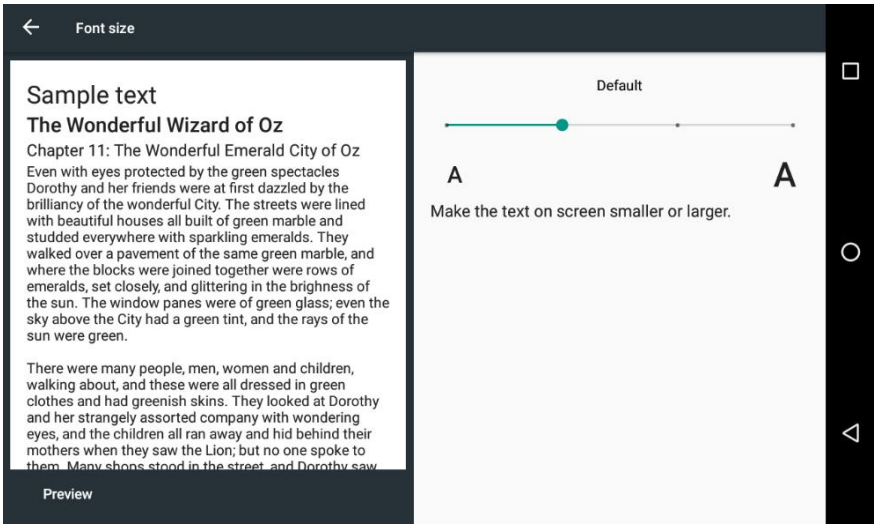

Picture 4.26

4.6 Storage

Open setting function, click memory, click **preferred install location,** you can choose isntall new application to choose preferred install location.

Check SD card and MID storage space.

3. Enter into setting application.

4. Click storage, check storage space.

1. Internal storage

(1) System storage

System storage is the spcae MID leave for system file, as Picture 4.27. it can't be viewed.

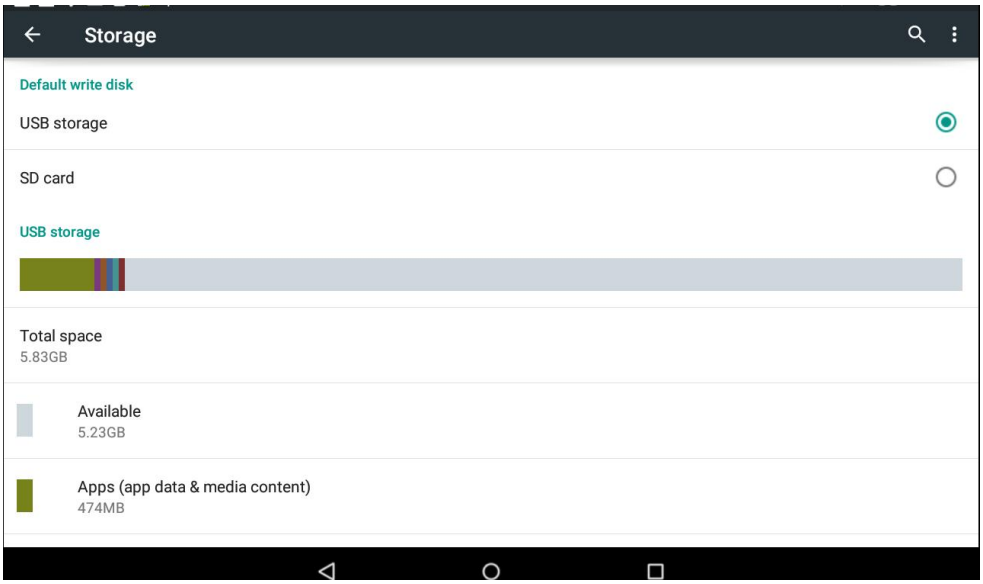

Picture 4.27

(2)Internal storage

Internal storage is MID local NAND storage, as Picture 4.39, if you need to check the storage content, you can check it in main menu.

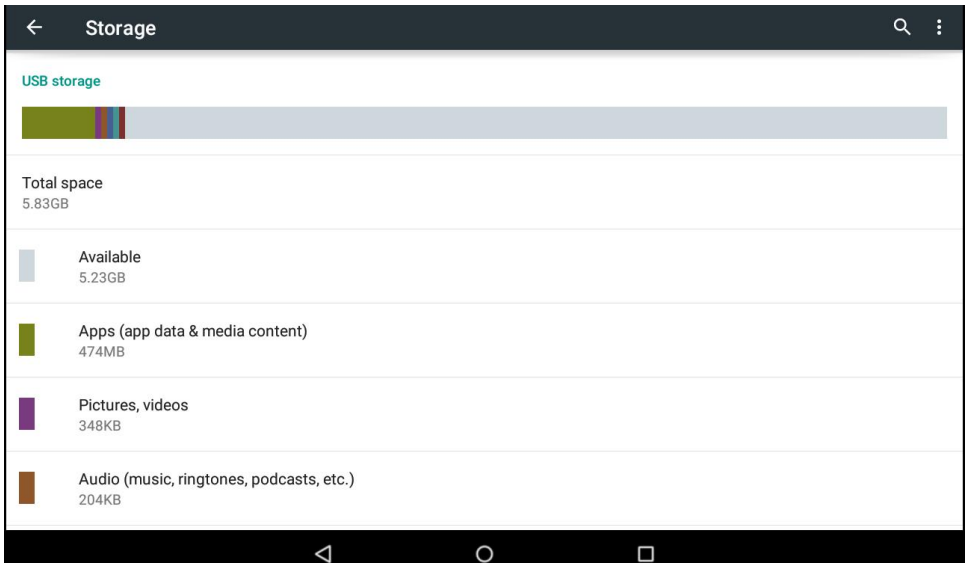

Picture 4.28

2. **SD card**

You can check storage space, SD card available space, unmount SD card and erease SD card, as Picture 4.29

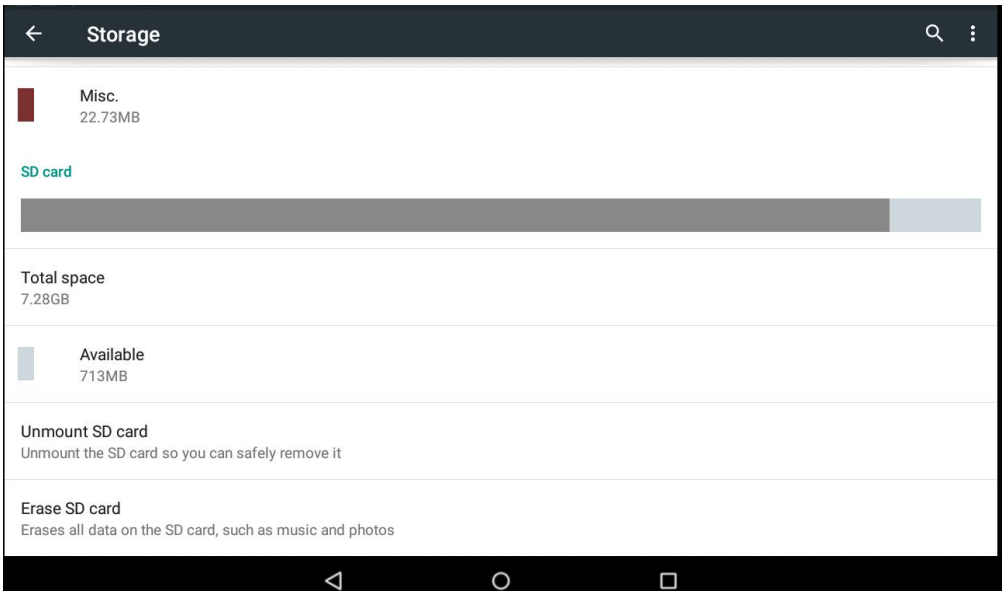

Picture 4.29

Safely remove SD card

1. Click setting application.
2. Click memory.
3. Click uninstall SD card.
4. Now you can remove SD card safely.

Note: Removing SD card safely can protect SD card and increase its lifetime.

4.7 Application program

1. Click setting application in Apps.
2. Select application, after enter, you can manage and delete installed application and check system used storage space and left space. (As Picture 4.31)

Picture 4.31

4.9 Account and Sync

1. Select setting application
2. Open account and sync, as Picture 4.33

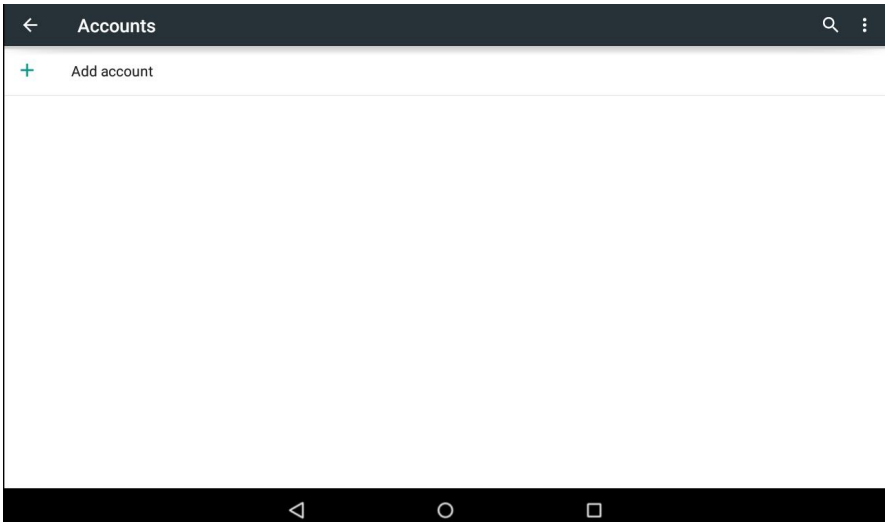

Picture 4.33

3. Click **add an account, as Picture 4.34**

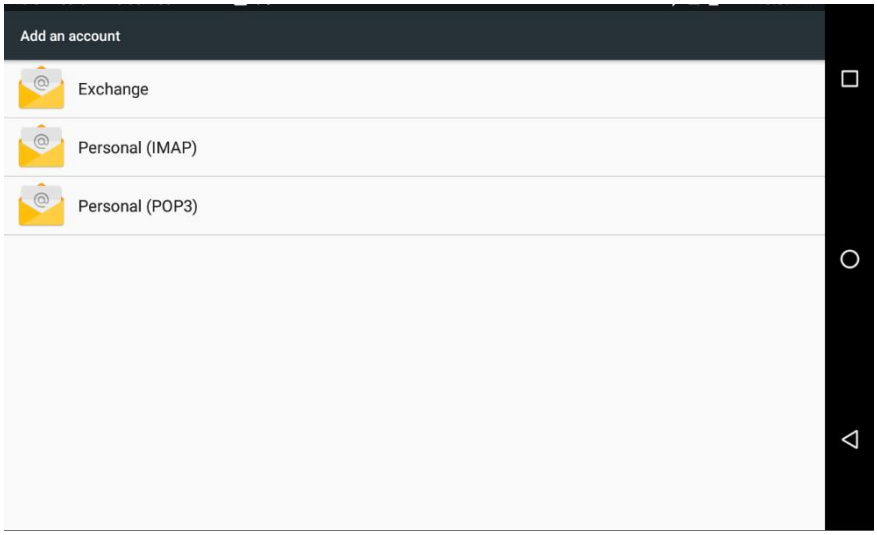

Picture 4.34

4. After successfully load, it will open the sync function, as Picture 4.35

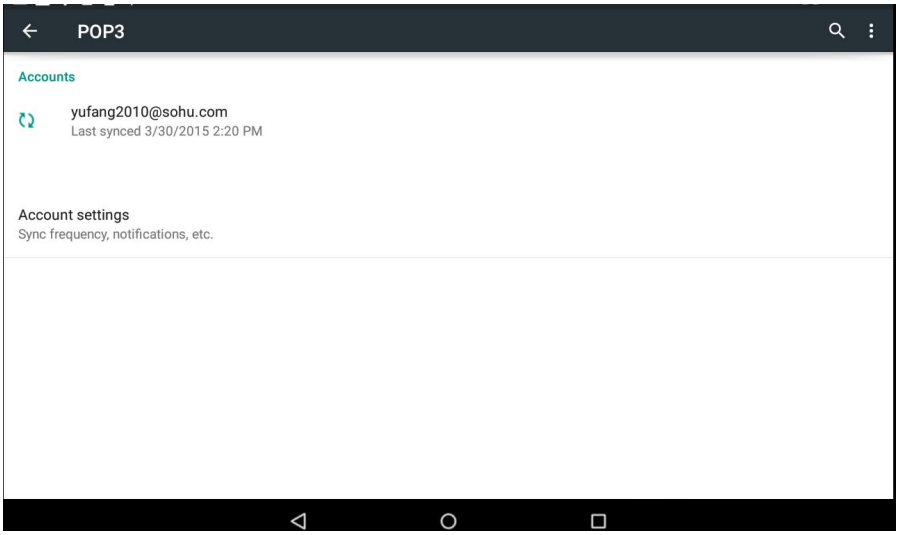

Picture 4.35

4.10 Location service

Click **setting**, select **Mode**, as Picture 4.36

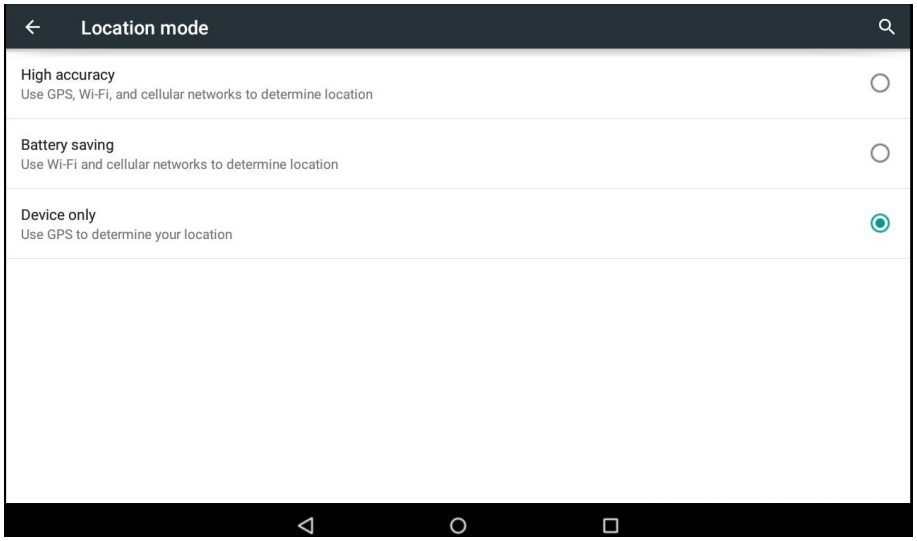

Picture 4.36

4.11 Safety setting

Set locked screen

Lock the touch screen by unlock icon or password to protect your MID.

Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

Set unlocked picture

1. Click setting application in main interface.
2. Click **safe**.
3. Click **locked the screen**.
4. Choose **picture** in text setting area.
5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. As Picture 4.10, move your finger from the screen when finish. The system will record yous new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

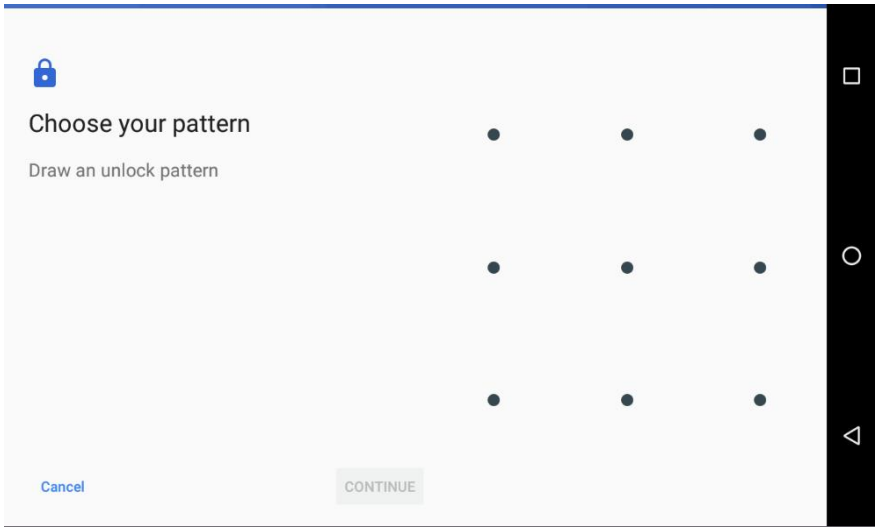

Picture 4.37

Set unlock PIN code

1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked.**
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Ener new PIN code again and click **confirm**.

Set unlock password

1. Click **setting application** in main interface.
2. Click safe.

3. Click screen locked.
4. Set password in text seting area.
5. Set new password(letters and numbers) and then click continue.
6. Enter the password again and the click **confirm.**

Unknown source

1. In main interface, click setting.
2. Click safety.
3. Click unknown source,as Picture 4.38

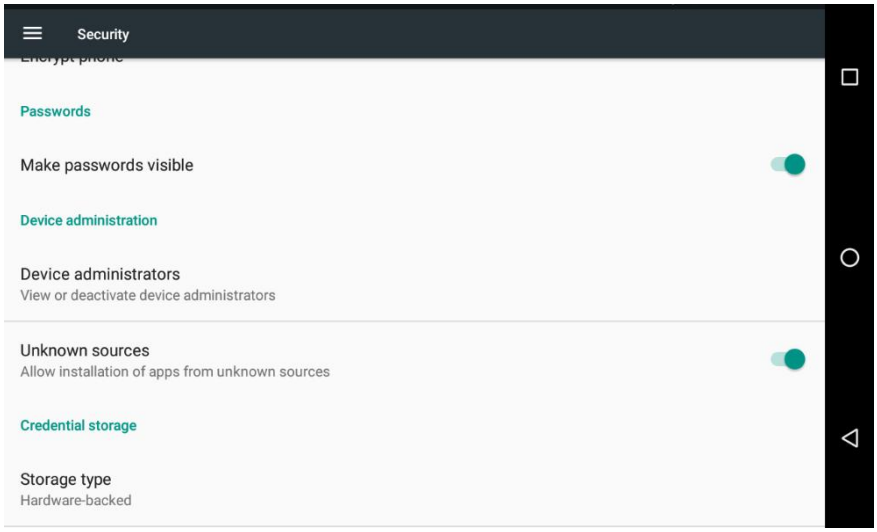

Picture 4.38

Note: Manual installing APK files needs to turn on unknown source.

4.12 Language and Input Method

Click setting, select language and input method, choose language to switch language, as

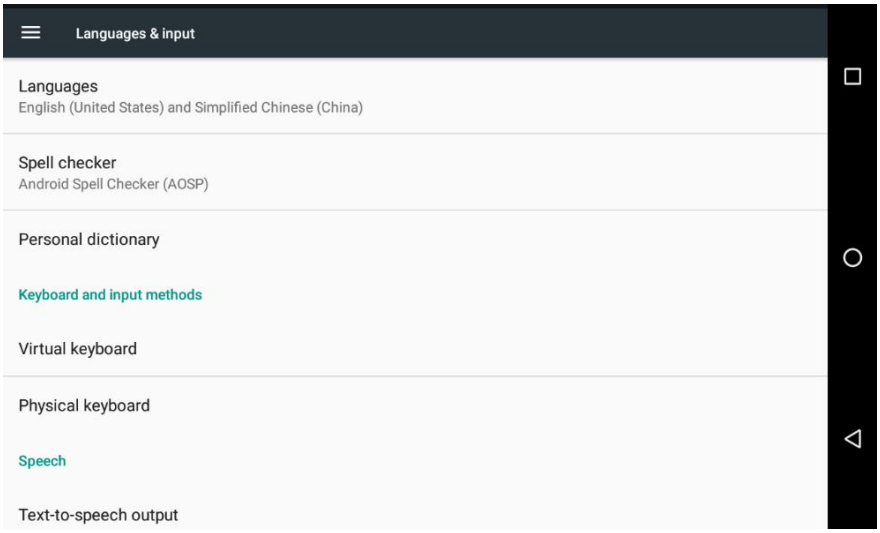

Picture 4.39

Click **setting**, choose **language and input,** choose **Android keyboard setting,** click input language, as Picture 4.40

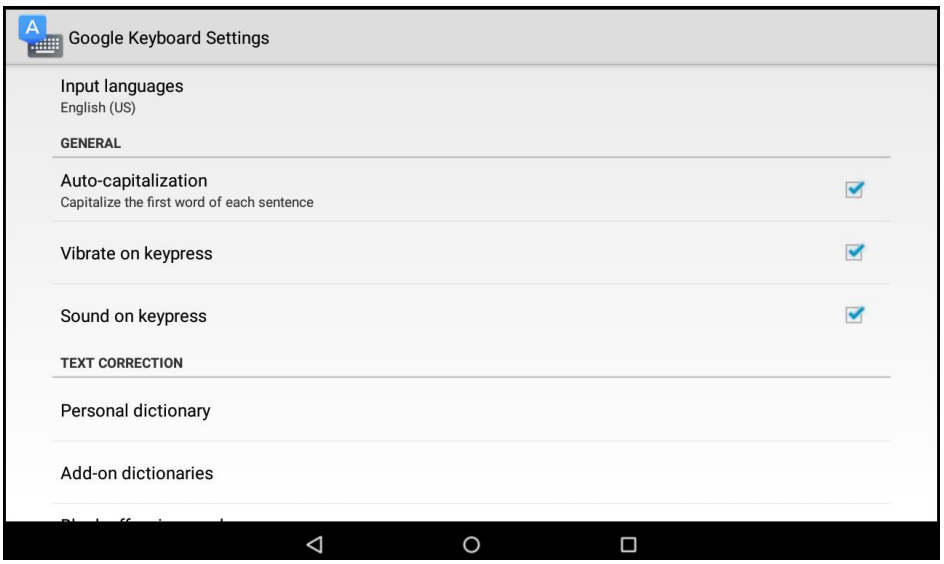

Picture 4.40

Choose the language you want to change in the language list, as Picture 4.41

Picture 4.41

4.13 Backup and Reset

If you need to recovery factory reset, please click reset, as Picture 4.42, if you need to formulate NAND, please click reset tablet.

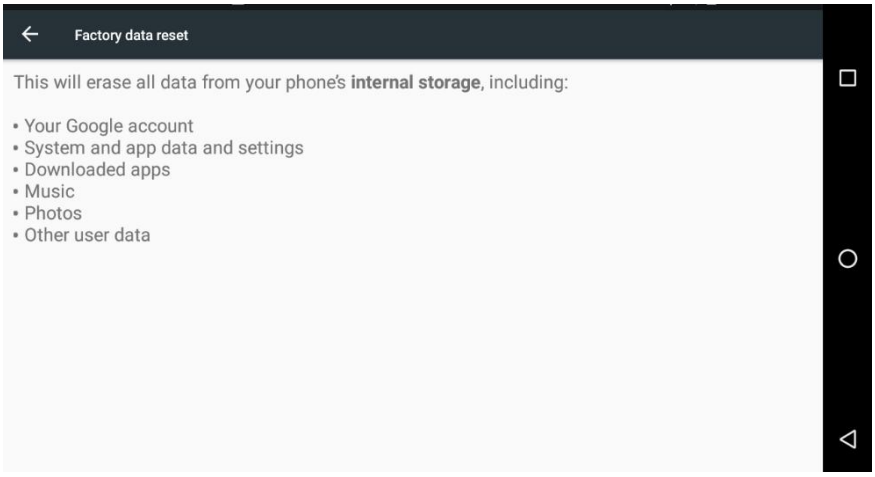

Picture 4.42

4.14 Date and Time

According to the preset, system will voluntorily apply the date, zone, and time provided by internet.

Manual set date, time and zone

1. Click Setting application procedure.
2. Slide down the screen, then click **date and time.**
3. Turn off "auto setting of date and time".
4. Turn off "auto setting zone'.
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click **Date setting**, then click upper or down buton to adjust date, month, and year, click **setting** when you finish selection.
7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you se 24-hour format). Click **Setting** to finish.
8. Click **24-hour format**, switch between 12-hour or 24-hour formay, the time format you choose will be used on the alarm clock.
9. Click date format setting, then choose the time format you want to show on MID.

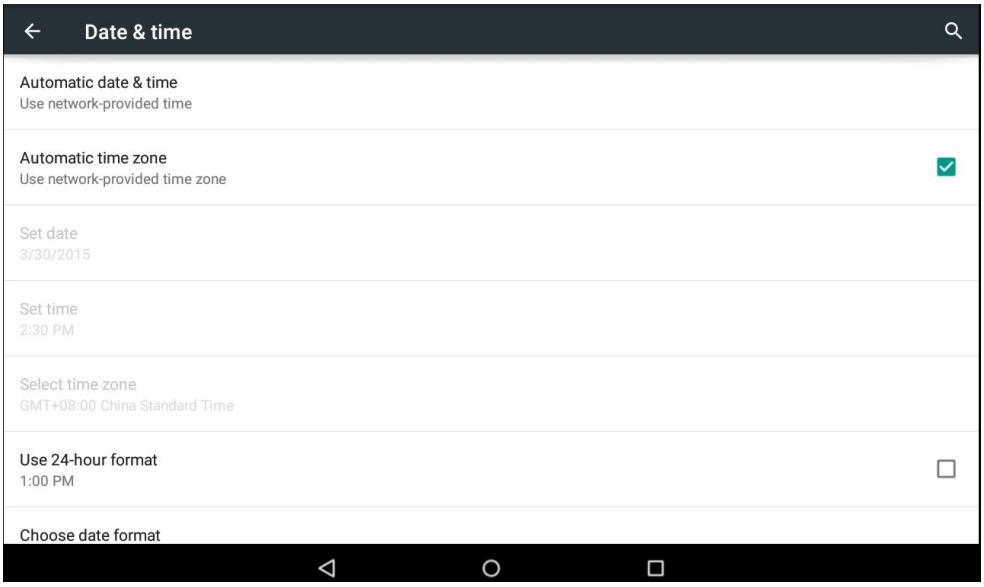

Picture 4.43

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

4.15 Scheduled power on and off

1. Click **Setting** application procedure
2. Click **scheduled power on and off.**
3. Operate as below Picture 4.61

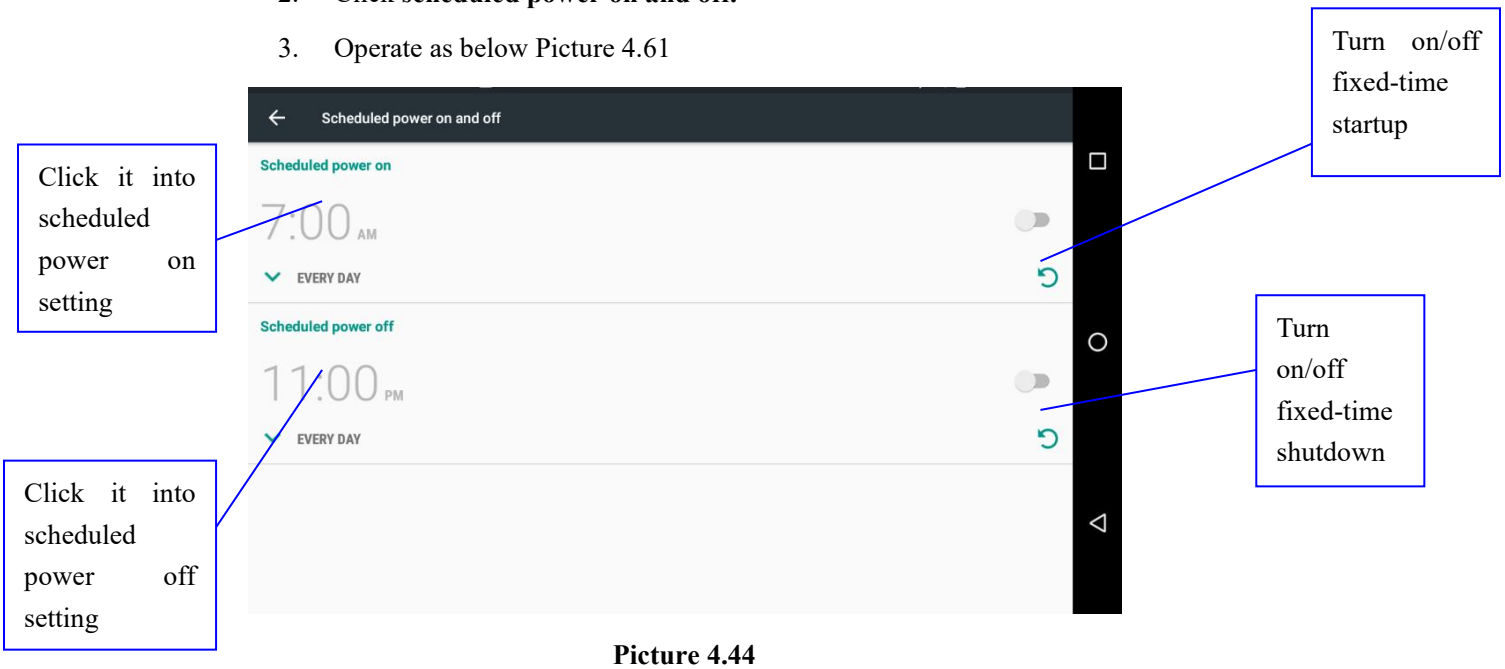

Picture 4.44

4.16 Assisstance Function

4.16-1. Large size

Click it to make system font large size

4.16-2. Touch and hold delay

Click touch and hold delay to increae time, as Picture 4.45

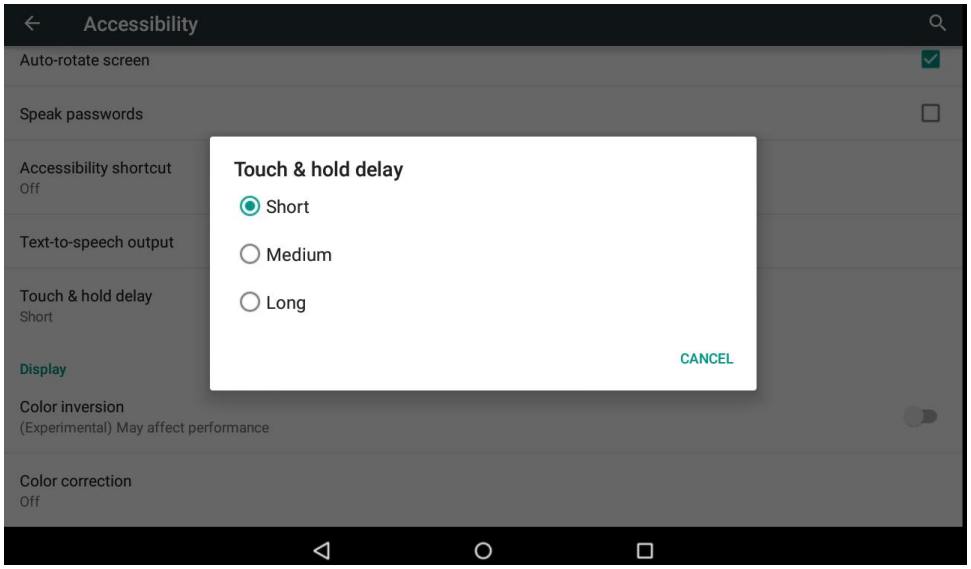

Picture 4.45

4.16-4 Install webpage script

It will allow you install webpage scrip when you open system,, but it will increase the risk when you are browsing webpage.

4.17 Engineer Selection

4.17-1 USB adjustment

After opening USB adjustment, you can use some software to read MID software, but when USB adjustment is turned on, USB storage needs to manual adjust.

4.17-2 Keep awaken state

If you open keep awaken state, it wll never auto sleep when your MID is charging.

4.17-3 Pointer Location

If you open pointer location, it will display touch vertical and horizontal direction.

4.17-4 Show touches

If you open display touch screen operation, it will display touch opeation on the screen. It is suggested to use with same direction as pointer location.

4.17-5 Show screen update

If you open screen refresh, it will display related area when the area is refreshing.

4.17-6 Show CPU usage

After open CUP usage, in the right top of MID will show CPU usage situation.as Picture 4.46

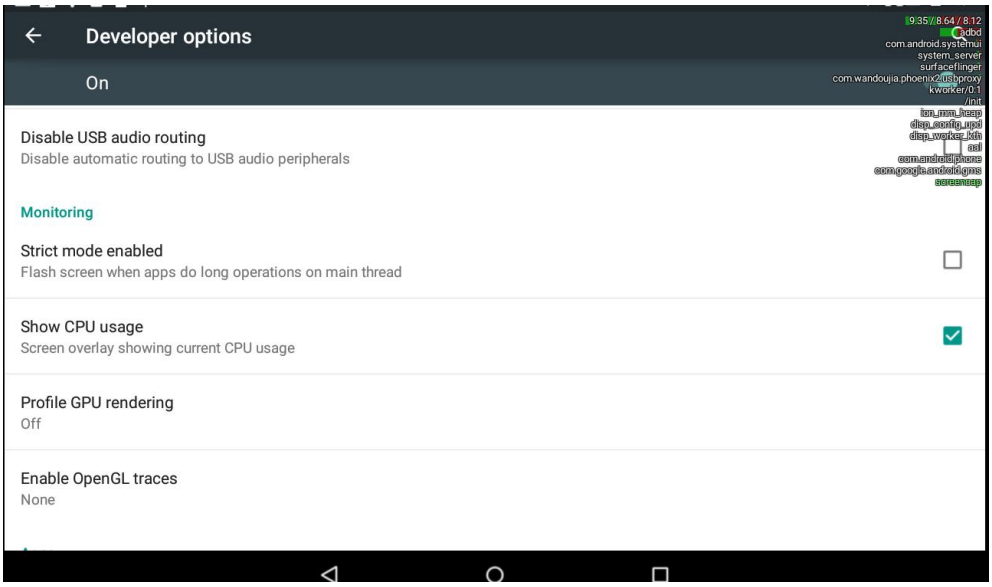

Picture 4.46

4.18 About Tablet

Check MID state

1. Check **Setting** application.
2. Click **about tablet**, check **state message, model, Android version, version No** and so on.
3. Click **state message,** check **battery state, battery volumne, IP address.**

5 Multi-Media

5.1 Music

Enter into music player: in menu or desktop click music

icon to enter into music player, click the music you want to play, as Picture 5.1:

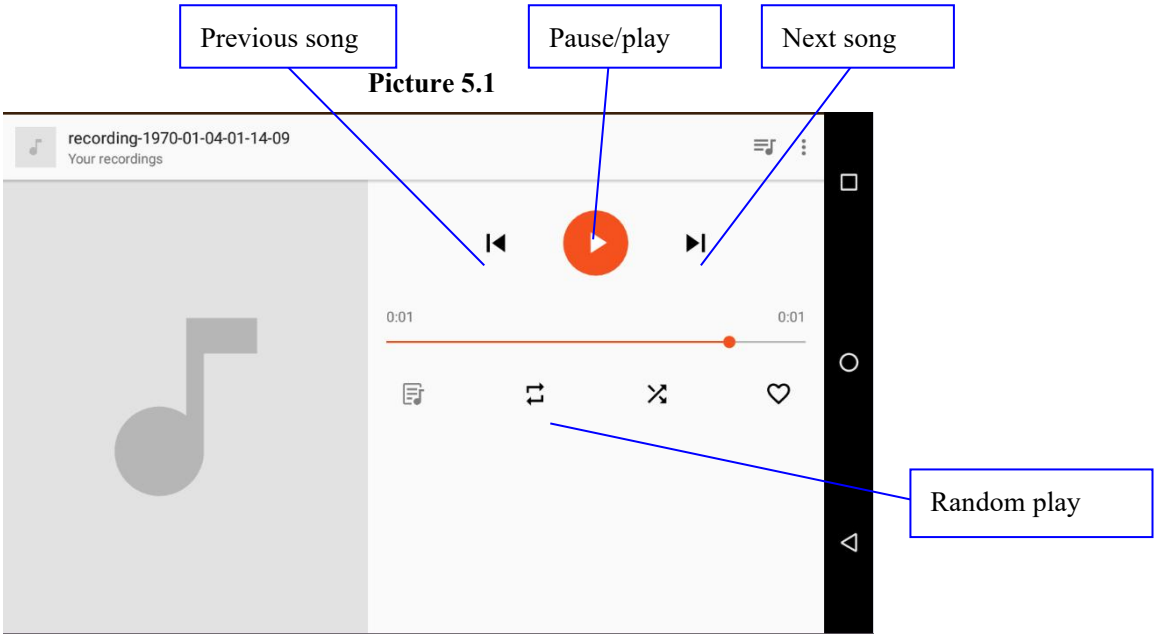

Picture 5.1

Picture 5.2

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.2

5.2 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separete the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

- **Slide Show**
  1. Open a picture, use virtual key to click menu key, display menu selection.
  2. Click **slide show**, it will auto loop play(or choose button in picture folder)
- **Crop**
  1. Click **menu** key to display menu selection.
  2. Then click crop, click and drag related area to adjust the cropper.
  3. Click cropper and drag it inside and outside to adjust the image.
  4. After adjust the size you want, click **crop**.
  5. If you wish to give up to crop, click **cancel** to return to picture browse.
- **Edit**
  1. Click **menu** key, display the menu selection.
  2. Click **edit**.
  3. Adjust teh brightness, style, color, antialias setting in selection.
  4. Click **save**.
  5. If you want to give up edit, click **return** key, click **not** to return to picture

browse.

5.3 Camera

In the main interface or desktop, click camera application procedure , enter into camera

- Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera,** as Picture 5.4

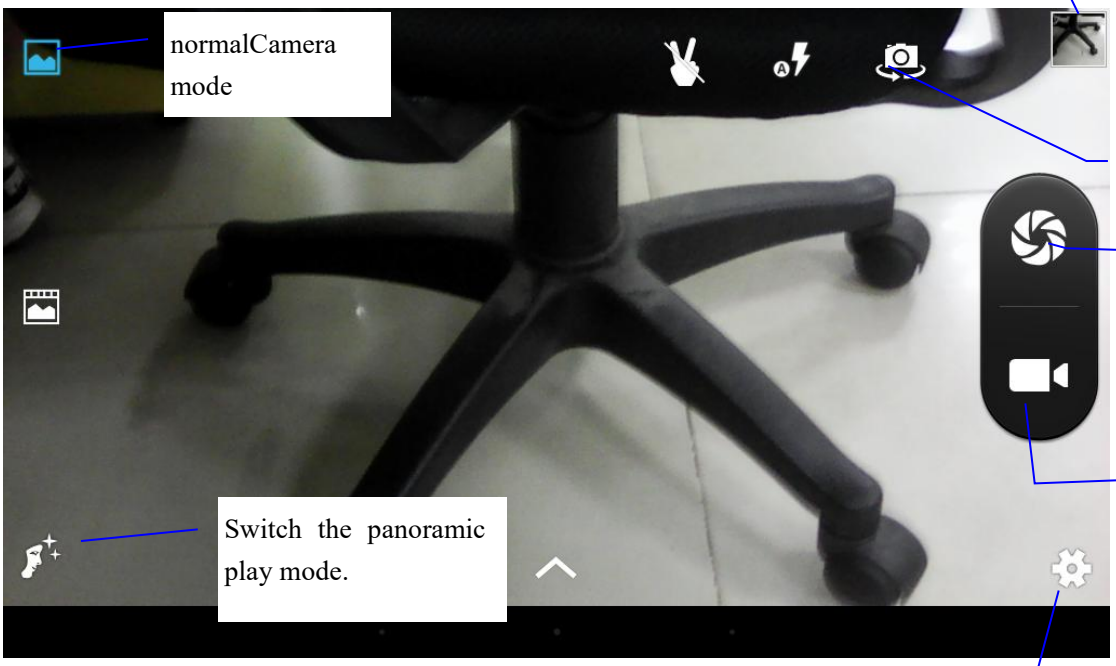

Picture 5.4

6 Communication Function

6.1 Contact List

Click Contact list in the main interface, enter into the contact list as Picture 6.3

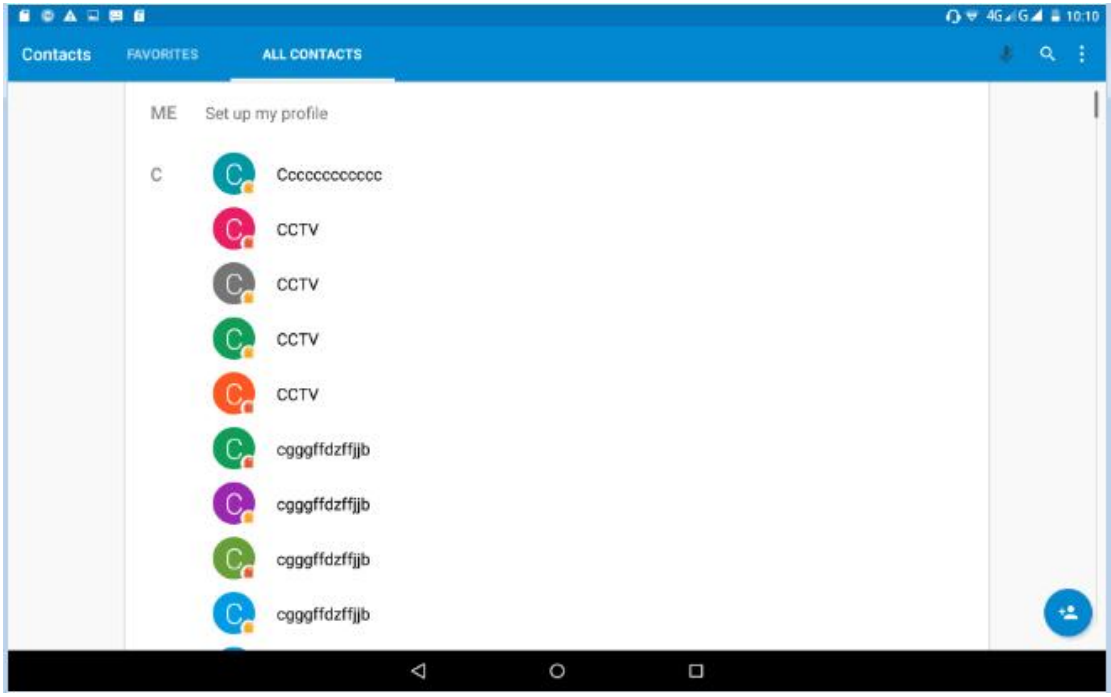

Picture 6.3

- Search contact: click button, enter into search function
- Add contact: click button, enter into add contact interface.

7 Internet

7.1 Email

Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163),as Picture 7.2

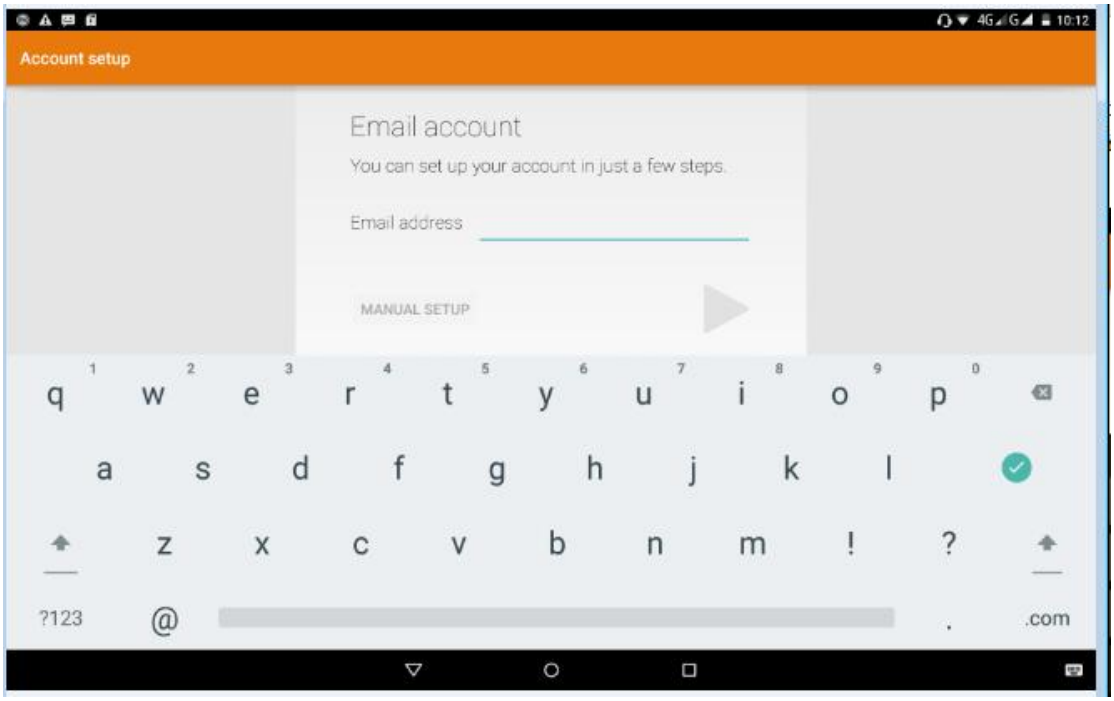

Picture 7.1

a. Email Setting

1. After you click the sending email icon , you can see the email setting guide, which can help you to set.
2. Input your email address and password.
3. Click “Next step” button, choose your email type is POP3 or IMAP.
4. Click “Next Step” button to check whether the email box servicer can receive or send emails
5. Input the email account and display the email subiject, and click **finish.**
6. If the email box is available, you will enter into your mail box automatically.

b. Delete the email account

You can delete setted POP3 or IMAP email account from your MID.

Click。

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirm to remove.

c. **Send E-mail**

1. Click to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menus will popup.
4. Click **Edit** to enter into new email editing interface.
5. Input the receiver's email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu popup.
8. Click "Attach file" (photo,music, video,contacts).
9. Click "send" to send the email out.

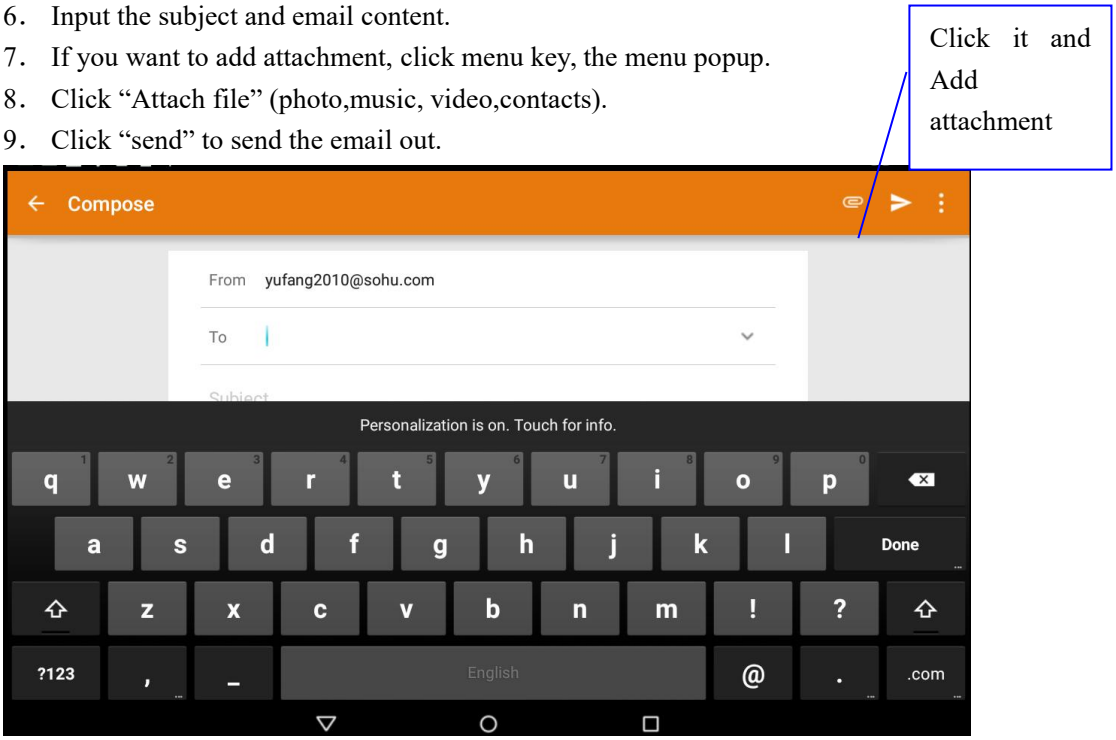

Picture 7.3

8 Other Application Procedures

8.1 Clock

Click **Clock** procedure, enter into below interface as Picture 9.1.

There are clock, picture, music and homepage buttons.

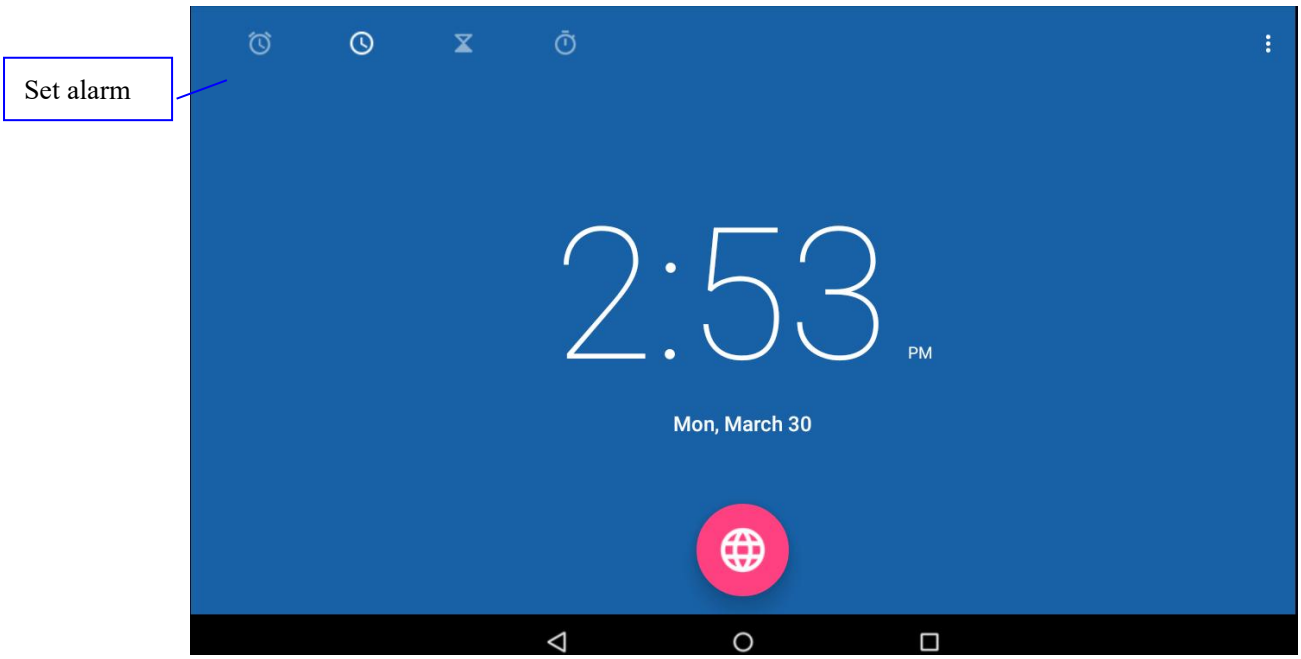

Picture 8.1

8.2 Calculator

1. Click.

2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calulator to calculate.

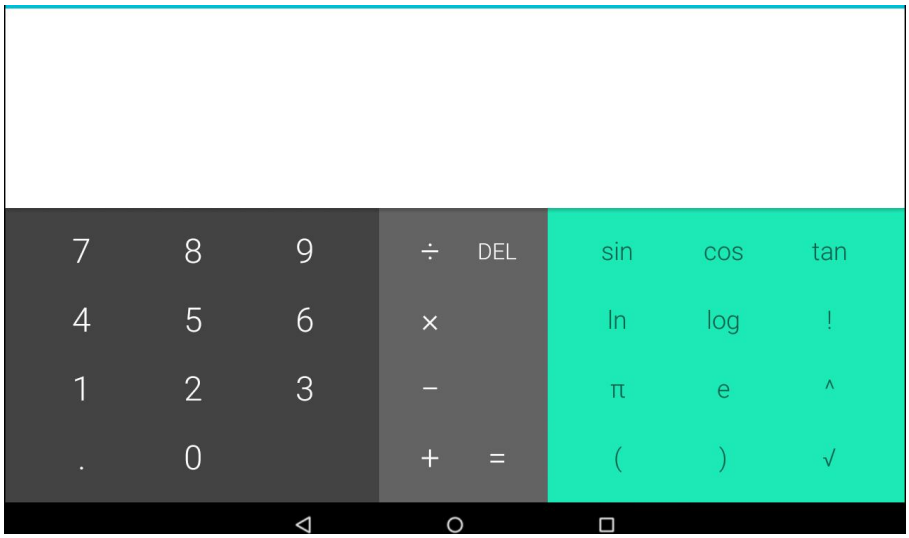

Pictuer8.2

8.3 File Manager

File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

In the main menu or desktop, click the document manager icon 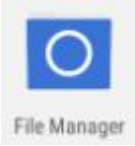

to enter into documents manager.

Picture8.3

a、Copy, cut, delete, rename the files and folder: choose the file or folder, long pressthe file or

folder to enter into the interface as Picture 9.4, you can operate the file or folder.

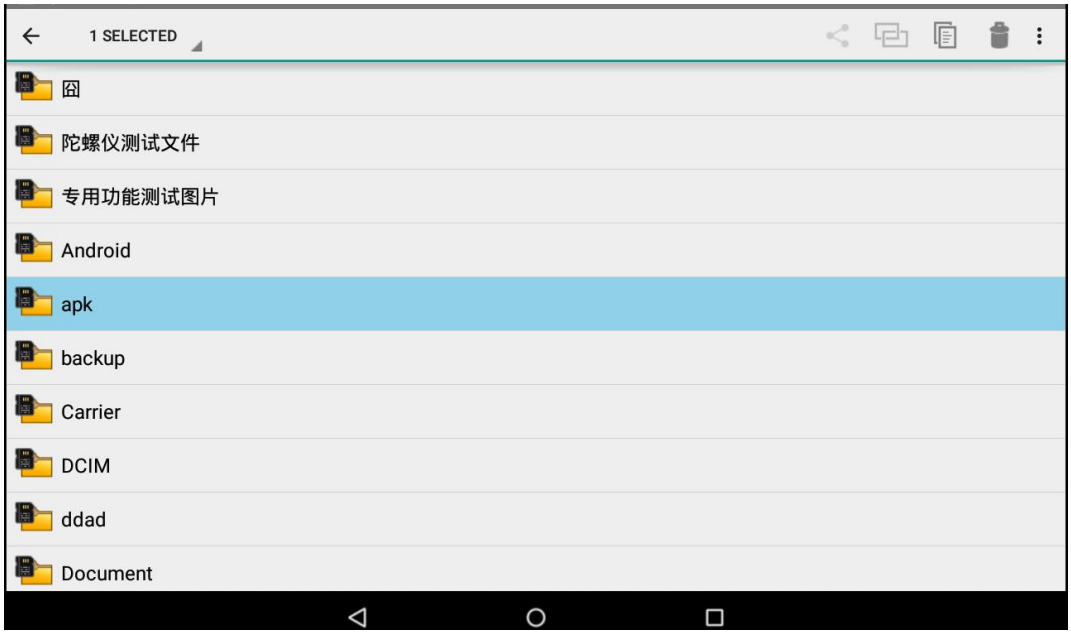

Picture8.4

b、Paste the copy or cut file: choose the file you want to paste, choose right top icon to enter into Picture 9.5, choose right top icon to enter into Picture 9.6

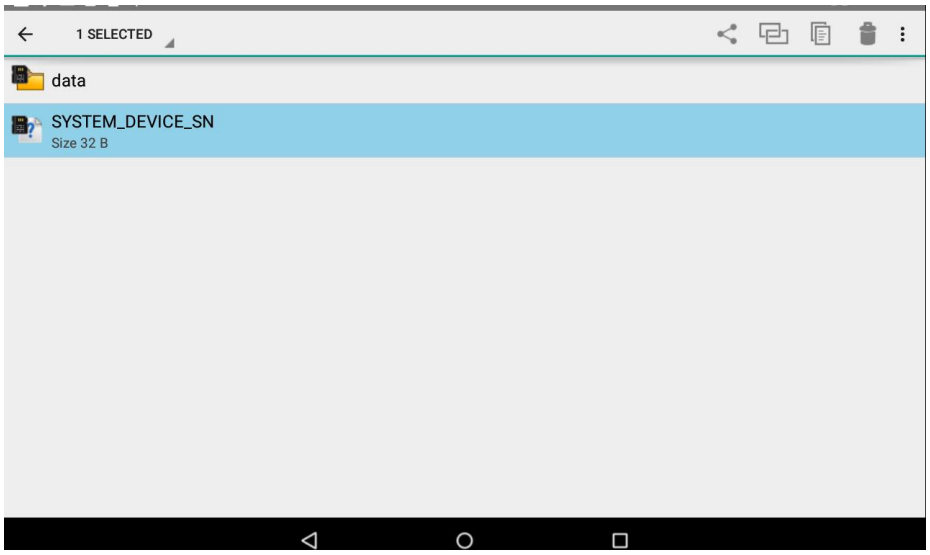

Picture8.5

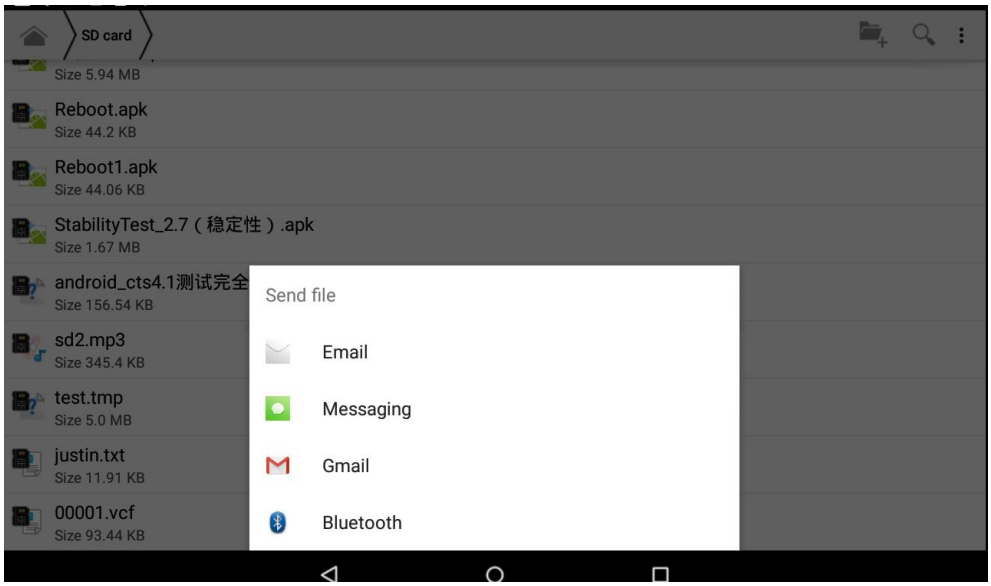

Picture 8.6

C. Share file:choose any file, long press it, it will popup “share”, choose the share way you want in the list

d、Install apk file：Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

e、Build new folder: Choose the menu you want to build the file, click icon in right top, choose new folder, you can build new folder as reminder.

9.4 Recorder

In the main interface or desktop, click recorder icon

to enter into record interface, click record key to start record. Click Stop key to stop recording. Click Play key to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.

Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

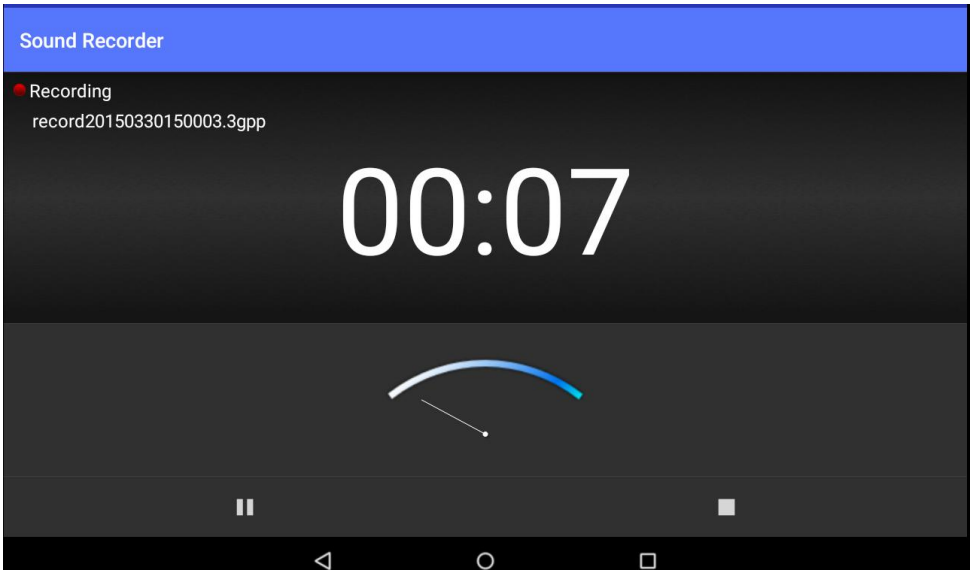
Sound Recorder
Recording
record20150330150003.3gpp
00:07

Picture8.8

9 Installation of Procedures

9.1 Installation

Install the third party application procedure

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup **install, click install apk.**
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.

9.2 Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures insralled in the system.
3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

Skill: The procedure manager installed by system has many convinent methods to uninstal after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

10 Troubles Shooting

1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. MID can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

3. MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

4. Email can't be set or Registeration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consitent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key(**next to power port) to reset the system.

6. The webpage can't be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesi red operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital d evice, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable prote ction against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction s, may cause harmful interference to radio communications. However, there is no guarantee that in terference will not occur in a particular installation. If this equipment does cause harmful interfere nce to radio or television reception, which can be determined by tuming the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is conn ected.
- Consult the dealer or an experienced radio/ TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement （Body＞20cm）

This equipment complied with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm betw een the radiator & your body.」