说明书页面顺序

80mm

2000mm

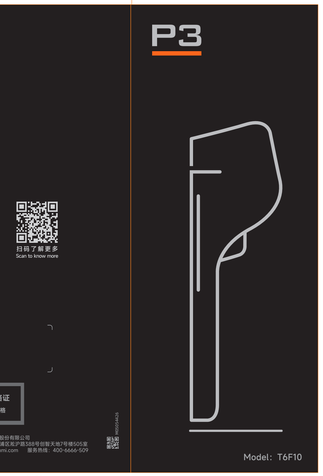

封面

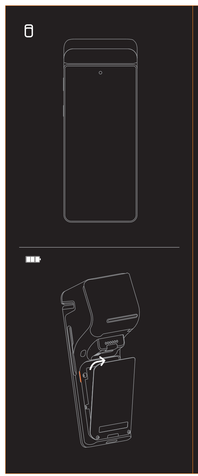

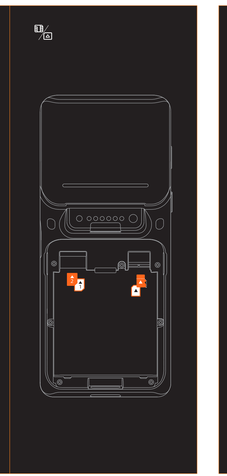

封面

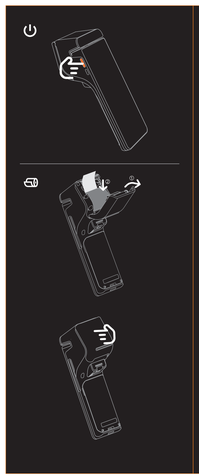

封底

显示屏
用于显示屏幕体验或及价格信息展示等。

电池
打开后盖，按照箭头指示方向装取电池。

插卡
PSAM卡、Micro SD卡、Nano SIM卡
打开电池盖，插入电池，按照示方向插入卡。
（支持2G/3G/4G）

开机 / 按电源键开机
按住，长按数秒，长按2-3秒开机。
重启设定方：按住2-3秒，选择关机或重启；
死机状态下，长按11秒，自动重启。

打印机
按照提示方向，打开纸盒盖，将打印纸正确放入纸仓，并拉出部分打印纸至切口处，盖好纸仓盖，打印纸安装完成。用于开机状态下打印单据。

IC 读卡器
用于插入银行芯片卡。

NFC 读卡器
用于感应闪付卡

磁卡读卡器
用于刷银行卡磁条信息。

扫码
支持条码/二维码/CD条碼扫码

安全警告
- 请用它连电插头插入与配件电源适配器上标识输入相对应的交流电插座中。
- 此为A型产品，在连接球等，此产品可能会造成无线电干扰。在这种情况下，可采取措施减少对于干扰发生的可行的措施。
- 本设备仅适合安装在室内使用。
- 请勿在易爆场所使用。
- 切勿将设备放置在热源附近。
- 关于电池的更换：
  ① 请勿自行拆卸电池更换会有爆炸危险！
  ② 更换后应检查电应安装稳入良好，以免，切勿把切割入火中！

重要安全说明
- 请勿在易燃易爆的环境使用，否则有被爆炸电击的危险。
- 当在高海拔环境下使用，这种低压环境可能导致下，请立即切断电源；否则工作异常，请勿检修！

建议
- 不要在潮湿中，热环境中使用，例如潮湿大雾或水滴的表面；
- 不要摔，强摇或晃动；
- 用湿软清洁布定期保养维护，请勿使用腐蚀性物品等清洗；
- 在未配头件的情况下，不要在易存设备的区域使用；
- 仅适用于海拔5000米以下的区域安全使用。

声明
本公司不对以下行为负责：
- 不按本指南说明操作所有可能对设备造成的损坏；
- 对于因选用或其他非本公司提供之最初产品或以元件产品造成的损坏或故障（如：电源工业电线缆，无的或元件品质或质量）
- 本产品的操作系统及预装在内的系统更新，如果用户擅了原工厂的ROM系统或安装非官方或第三方或第三方系统文件，可能会导致系统不稳定，以及带来安全风险。

免责申明
由于产品的更新，或文档质量标准等因素可能导致产品不同，请以实物为准，此文档最新版本以公司，请留下联系信息时间填写下，请登录直接到官网。

系统预装软件说明
- 应用市场：应用商店
- 功能模块：SDK管理 App Store：SunmiStore
  - Function Keys Customization：BaseService - Customization Service
  - Wallpaper: Boot Animation
  - Developer Guidance (Testing Assistant)：User Guide - Startup Guide
  - Remote Assistance：SUNMI OTA

How to check the above software details: select "Settings-Applications" and select the corresponding software name to view information.
To uninstall software, select "Settings-Application Management-Application-Uninstall" or long-press on the icon and drag it to the "Recycle Bin".

RF Exposure Statement (SAR)
This device has been tested and meets EU, FCC and IC RSS-102 requirements for radio frequency (RF) exposure.
Please visit www.sunmi.com.
The highest reported SAR level for usage near the body (5mm) is 1.0W/kg and limb (limb) is 1.30W/kg that meet the FCC SAR requirement (Body: 1.6 W/kg@1g ;Limb: 4.0 W/kg@10g).

EU regulatory conformance
Company: LLC
Hereby, Shanghai Sunmi Technology Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU.The full text of the EU declaration of conformity is available at the following internet address: https://developer.sunmi.com/docs/readme-US/maxgrjh480
INFORMATION ABOUT THE SOFTWARE
The description of accessories and components, including software, which allow the radio equipment to operate as intended, can be obtained in the full text of the EU declaration of conformity at the following internet address:
https://developer.sunmi.com/docs/readme-US/maxgrjh480.
RESTRICTIONS OF USE
5150-5350MHz only be used by indoor.

Suggestions
Do not use the device under extreme cold or hot environment, such as conditions near fire or lit cigarettes;
Do not throw, drop, or bend the device;
Try to use the device in a clean and dust-free condition to avoid small items falling into the terminal;
Do not use the device near medical equipment without permission: This device is only suitable for safe use in areas with an altitude of 5000m and below.

Statements
The company is not responsible for the following actions:
Damage caused by use and maintenance without the conditions described in this guide;
The company will not be responsible for any damages or problems caused by the alternatives or consumables (not the original products or genuine products provided by the company). Without consent of the company, it is not authorized to make product modifications or changes;
The operating system of this product supports official system upgrades. If a user flashes a third-party ROM system or modifies the system files, using cracking methods, it may cause system instability as well as poor security risks and threats.

Disclaimer
Due to product updates, some details of this document may not match the product, please refer to the actual product, and the right to the interpret this document belongs to the company. The right to modify this guide without prior notice is reserved.

Pre-installed Software List
- SUNMI App Store：SunmiStore
  - Function Keys Customization：BaseService - Customization Service
  - Wallpaper: Boot Animation
  - Developer Guidance (Testing Assistant)：User Guide - Startup Guide
  - Remote Assistance：SUNMI OTA

How to check the above software details: select "Settings-Applications" and select the corresponding software name to view information.
To uninstall software, select "Settings-Application Management-Application-Uninstall" or long-press on the icon and drag it to the "Recycle Bin".

RF Exposure Statement (SAR)
This device has been tested and meets EU, FCC and IC RSS-102 requirements for radio frequency (RF) exposure.
Please visit www.sunmi.com.
The highest reported SAR level for usage near the body (5mm) is 1.0W/kg and limb (limb) is 1.30W/kg that meet the FCC SAR requirement (Body: 1.6 W/kg@1g ;Limb: 4.0 W/kg@10g).

EU regulatory conformance
Company: LLC
Hereby, Shanghai Sunmi Technology Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU.The full text of the EU declaration of conformity is available at the following internet address: https://developer.sunmi.com/docs/readme-US/maxgrjh480
INFORMATION ABOUT THE SOFTWARE
The description of accessories and components, including software, which allow the radio equipment to operate as intended, can be obtained in the full text of the EU declaration of conformity at the following internet address:
https://developer.sunmi.com/docs/readme-US/maxgrjh480.
RESTRICTIONS OF USE
5150-5350MHz only be used by indoor.

mful interference in a residential installation.This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

CE	RED	Notein-at EU member
UK	UKCA	Ateleuperation of 5150-5350
CA	ISED	MHz restricted to indoor use
US	FCC	only.
JP	RCJ	

CE Representative: SUNMI France SAS
18bis, avenue Thiers,69006 Lyon,France
The "crossed" means that it is forbidden to dispose the product of with your household waste. At the end of the product life cycle, waste equipment should be taken to designated collection points, returned to the distributor when purchasing a new product, or contact your local authority representative for detailed information on WEEE recycling.

Mode/Band	Operation Frequency	Power (dBm)
GSM900	880-915 MHz	33.50
DCS1800	1710-1785 MHz	30.00
WCDMA Band 1	1920-1980 MHz	23.50
WCDMA Band 5	824-849 MHz	24.00
WCDMA Band 8	880-915 MHz	24.00
LTE Band 1	1920-1980 MHz	23.00
LTE Band 3	1710-1785 MHz	23.00
LTE Band 5	824-849 MHz	24.00
LTE Band 7	2500-2570 MHz	23.00
LTE Band 8	880-915 MHz	21.00
LTE Band 20	832-862 MHz	23.00
LTE Band 28	703-803 MHz	21.00
LTE Band 38	2570-2620 MHz	21.50
LTE Band 38	2570-2620 MHz	21.50
LTE Band 40	2300-2400 MHz	21.50
LTE Band 41	2496-2690 MHz	21.50
BT	2402-2480MHz	11.59
BLE	2402-2480MHz	-0.07
2.4G WIFI	2412-2472MHz	17.70
5.2G WIFI	5150-5250MHz	17.58
5.3G WIFI	5250-5350MHz	18.78
5.5G WIFI	5470-5725MHz	17.02
5.8G WIFI	5725-5850MHz	19.19
NFC	13.56 MHz	26.408 dBμA/m @3M

Manufacturer: Shanghai Sunmi Technology Co., Ltd
Address:Room 505,No.388,Songhu Road,Yang Pu District,Shanghai, China

Display
Used for multimedia functions or price display, etc.

Battery
Open the battery cover, install or remove the battery in the direction indicated by the arrow.

Card Slots
PSAM card slot, Micro SD card slot, Nano SM card slot
Open the battery cover to remove the battery, insert the card in the direction indicated by the arrow.

Power Button
Short Press: turn on the screen or lock the screen;
Long Press press for 2-3 seconds to boot up the device when it is off;
Press for 2-3 seconds to power off or restart the device when it is on.
Press for 11 seconds to power off the device when it crashes.

Printer
Open the printer cover and put the paper roll correctly into the printer in the direction indicated by the arrow. Keep the paper end out of the printer, and close the cover. The printer is ready for receipt printing when the device is on.

IC Card Reader
Bank cards with chips can be inserted and read through this.

NFC Card Reader
NFC cards can be tapped and read through this.

Magnetic card reader
Used to swipe bank card magnetic stripe information.

Scanner
Photo taking and quick 1D/2D code scanning supported.

Safety Warning
Please insert the AC plug into the AC socket corresponding to the input marked on the power adapter;
This is a class A product. In a residential environment, this product may cause radio interference. In this case, it may be necessary for the user to take practical measures to address the interference.
- Do not operate the device in non-safe areas.
- Use original batteries only.
- Do not replace the battery when explosive gas may be present.
- Do not charge the device in dangerous places.
  Battery Replacement:
  ① There is a risk of explosion if the battery is replaced by an incorrect type!
  ② The old battery shall be given to the maintenance personnel for disposal. Do not throw it into fire!

Caution
Avoid use and installation or usage during thunderstorms to prevent the risk of being struck by lightning;
Please disconnect the power immediately once you find any abnormal odors, overheating, or smoke.
Please do not touch the sharp cutter.

Technical specifications
CE certification information (SAR)
This device was tested for typical body-worn operations with the back of the handset kept 5mm away. To maintain compliance with RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided.
If you are using pacemaker, hearing aid, cochlear implant or other device, please use the phone according to the doctor's advice.
PRODUCT SAFETY WARNING
Use responsibly. Read all instructions and safety information before use to avoid injury.The limit operating ambient temperature of the equipment declared by the manufacturer is 10~50°C
Battery safety
Use the battery only at ambient temperatures ranging from 40°C.
① CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type of battery recommended by the manufacturer. Dispose of used batteries according to battery manufacturer's instructions.
② CAUTION: Risk of explosion if battery is replaced by an incorrect type. . Dispose of used batteries according to the instructions.
③ CAUTION:Battery charging temperature upper limit is 40°C.
Adapter safety
When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with a temperature that ranges from 0°C-40°C.
For altitude 2km below use only
Wi-Fi Safety
Turn Wi-Fi off in areas where Wi-Fi use is prohibited or when it may cause interference or danger, such as in airplanes and the flying.

ISED Canada compliance statements
This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:(1) L'appareil ne doit pas produire de brouillage, et (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
The device for operation in the band 5150-5350 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
Les dispositifs fonctionnant dans la bande 5150-5350 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

FCC compliance statement
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against har-

Shanghai Sunmi Technology Co., Ltd.
Room 505,
No.388 Songhu Road, Yangpu District, Shanghai, China

Display
Verwendung für beispielsweise multimediale Funktionen oder die Anzeige von Preisen.

Akku
Öffnen Sie die Akkufachabdeckung und nehmen Sie den Akku heraus oder legen Sie ihn wie durch die Pfeile angegeben ein.

Kartenschacht
PSAM、microSD und Nano-SIM-Kartenschacht
Öffnen Sie die Akkufachabdeckung und entfernen Sie den Akku.
Setzen Sie anschließend die Karte wie durch die Pfeile angegeben ein.

Ein/Aus-Taste
Kurzes Drücken: Einschalten oder Sperren des Bildschirms;
Lang drücken: 2 bis 3 Sekunden lang drücken, um das ausgeschaltete Gerät einzuschalten;
2 bis 3 Sekunden lang drücken, um die eingeschaltete Gerät auszuschalten oder neu zu starten.
11 Sekunden lang drücken, um das Gerät auszuschalten, wenn es hängt.

Drucker
Öffnen Sie die Druckerabdeckung und setzen Sie die Papierrolle ordnungsgemäß wie durch die Pfeile angegeben in Drucker ein. Führen Sie das Papierende aus dem Drucker heraus und schließen Sie dann die Druckerabdeckung wieder. Wenn das Gerät eingeschaltet ist, ist der Drucker einsatzbereit.

IC-Kartenleser
Zum Lesen von Chip-Bankkarten.

NFC-Kartenleser
Zum Lesen von NFC-Karten.

Magnetkartenleser
Wird zum Durchziehen der Magnetstreifeninformationen einer Bankkarte verwendet.

Scanner
Unterstützt die Übernahme von Fotos und das Scannen von 1D/2D-Codes.

Allgemeine Sicherheitshinweise
Bitte stecken Sie den Netzstecker in eine Netzsteckdose, die die entsprechenden auf dem Netzadapter angegebenen Eingangsspezifikationen entspricht.
- Dieses Produkt ist ein Produkt der Klasse A. In Wohnumgebungen kann dieses Produkt Funkstörungen verursachen. In diesem Fall kann es notwendig werden, dass der Benutzer Gegenmaßnahmen ergreift, um diesen Störungen entgegenzuwirken.
- Betreiben Sie dieses Gerät nicht in explosionsgefährdeten Bereichen.
- Verwenden Sie nur die Originalakkus.
- Wechseln Sie den Akku bei möglicher Anwesenheit von explosivem Gasen nicht.
- Laden Sie das Gerät nicht in gefährlichen Bereichen.
  Akkuersetzung:
  ① Es besteht Explosionsgefahr, wenn der Akku durch einen nicht äquivalenten Akkutyp ersetzt wird!
  ② Der Akkuku ist zur Entsorgung beim Wartungspersonal abzugeben. Werfen Sie ihn nicht ins Feuer!

Suggestions
Do not use the device under extreme cold or hot environment, such as conditions near fire or lit cigarettes;
Do not throw, drop, or bend the device;
Try to use the device in a clean and dust-free condition to avoid small items falling into the terminal;
Do not use the device near medical equipment without permission: This device is only suitable for safe use in areas with an altitude of 5000m and below.

Statements
The company is not responsible for the following actions:
Damage caused by use and maintenance without the conditions described in this guide;
The company will not be responsible for any damages or problems caused by the alternatives or consumables (not the original products or genuine products provided by the company). Without consent of the company, it is not authorized to make product modifications or changes;
The operating system of this product supports official system upgrades. If a user flashes a third-party ROM system or modifies the system files, using cracking methods, it may cause system instability as well as poor security risks and threats.

Disclaimer
Due to product updates, some details of this document may not match the product, please refer to the actual product, and the right to the interpret this document belongs to the company. The right to modify this guide without prior notice is reserved.

Pre-installed Software List
- SUNMI App Store：SunmiStore
  - Function Keys Customization：BaseService - Customization Service
  - Wallpaper: Boot Animation
  - Developer Guidance (Testing Assistant)：User Guide - Startup Guide
  - Remote Assistance：SUNMI OTA

How to check the above software details: select "Settings-Applications" and select the corresponding software name to view information.
To uninstall software, select "Settings-Application Management-Application-Uninstall" or long-press on the icon and drag it to the "Recycle Bin".

RF Exposure Statement (SAR)
This device has been tested and meets EU, FCC and IC RSS-102 requirements for radio frequency (RF) exposure.
Please visit www.sunmi.com.
The highest reported SAR level for usage near the body (5mm) is 1.0W/kg and limb (limb) is 1.30W/kg that meet the FCC SAR requirement (Body: 1.6 W/kg@1g ;Limb: 4.0 W/kg@10g).

EU regulatory conformance
Company: LLC
Hereby, Shanghai Sunmi Technology Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU.The full text of the EU declaration of conformity is available at the following internet address: https://developer.sunmi.com/docs/readme-US/maxgrjh480
INFORMATION ABOUT THE SOFTWARE
The description of accessories and components, including software, which allow the radio equipment to operate as intended, can be obtained in the full text of the EU declaration of conformity at the following internet address:
https://developer.sunmi.com/docs/readme-US/maxgrjh480.
RESTRICTIONS OF USE
5150-5350MHz only be used by indoor.

Hersteller: Shanghai Sunmi Technology Co., Ltd
Room 505, No.388 Songhu Road, Yangpu District, Shanghai, China

عرض
يستخدم لعروض وظائف الوسائط المتعددة أو الرسم على سبيل المثال.

البطارية
افتح غطاء البطارية وقم بإدخال البطارية أو إخراجها في الاتجاه المشار إليه بالسهم.

فتحات البطاقات
PSAM، microSD، Nano SIM
افتح غطاء البطارية وقم بإزالة البطارية.
أدخل البطاقة في الاتجاه المشار إليه بالسهم.

الزر الرئيسي
الضغط القصير: لتشغيل الشاشة أو قفل الشاشة.
الضغط مطولًا: الضغط لمدة 2 إلى 3 ثوانٍ لتشغيل الجهاز عندما يكون مغلقًا.
الضغط لمدة 2 إلى 3 ثوانٍ: لإيقاف تشغيل الجهاز أو إعادة تشغيله عندما يكون قيد التشغيل.
الضغط لمدة 11 ثانية: لإيقاف تشغيل الجهاز عند تعطله.

الطابعة
افتح غطاء الطابعة وضع لفة الورق بشكل صحيح في الطابعة وفقًا للاتجاه المشار إليه بالسهم. اجعل طرف الورق خارج طابعة الورق، وأغلق الغطاء. وبالنسبة للأجهزة التي تدعم الطباعة، يكون الجهاز جاهزًا لطباعة الإيصالات عند تشغيل الجهاز.

قارئ بطاقات IC
مكان لإدخال البطاقات البنكية ذات الشرائح من خلالها وقراءتها وإدخالها.

قارئ بطاقات NFC
مكان يقوم بطاقات NFC من خلالها القراءة والإدخال.

قارئ البطاقة المغناطيسية
يستخدم لتمرير معلومات الشريط المغناطيسي للبطاقة المصرفية.

الماسح الضوئي
يدعم التقاط الصور وفك رموز الرموز الخطية/الثنائية الأبعاد.

إرشادات السلامة
يرجى إدخال قابس التيار الكهربائي في مقبس التيار الكهربائي المتوافق مع المدخلات المحددة على محول الطاقة.
هذا منتج من الفئة A. في بيئة منزلية، يمكن أن يتسبب هذا المنتج في موجات الراديو في إحداث تداخل راديوي. في هذه الحالة، قد يكون من الضروري اتخاذ تدابير عملية لمعالجة التداخل المستهدف الناشئ عن هذا التداخل.
لا تشغل هذا الجهاز في مناطق غير آمنة.
استخدم البطاريات الأصلية فقط.
لا تقم بإزالة البطارية عندما يكون هناك غاز متفجر.
لا تشحن الجهاز في أماكن خطرة.
استبدال البطارية:
① هناك خطر انفجار إذا تم استبدال البطارية بنوع غير متوافق. يرجى تغيير البطارية بنوع من نفس النوع أو ما يعادله فقط.
② يجب تسليم البطارية القديمة إلى موظفي الصيانة للتخلص منها. لا تلقِ بها في النار!

تنبيه
تجنب استخدام الجهاز أو تركيبه أو استخدامه أثناء العواصف الرعدية لتجنب خطر الصعق بالبرق.
يرجى فصل التيار الكهربائي على الفور إذا لاحظت أي روائح غير طبيعية، أو ارتفاع في درجة الحرارة، أو دخان.
يرجى عدم لمس الشفرة الحادة.

Pantalla
Utilizada para funciones multimedia , para mostrar precios, etc.

Batería
Abra la tapa de la batería, coloque o retire la batería en la dirección indicada por la flecha.

Ranura para tarjeta
Ranura para tarjeta PSAM, ranura para tarjeta Micro SD, ranura para tarjeta Nano SIM
Abra la tapa de la batería, retirela e inserte la tarjeta en la dirección indicada por la flecha.

Botón de alimentación
Pulsación corta: encienda o bloquea la pantalla;
Pulsación larga: mantenga pulsado durante 2 - 3 segundos para arrancar el dispositivo cuando esté apagado.
Mantenga pulsado durante 2 - 3 segundos para apagar o reiniciar el dispositivo cuando esté encendido.
Manténgalo pulsado durante 11 segundos para apagar el dispositivo cuando se bloquee.

Impresora
Abra la tapa de la impresora y coloque el rollo de papel correctamente en su interior, en la dirección indicada por la flecha. Mantenga el extremo del papel fuera de la impresora y cierre la tapa. La impresora está lista para la impresión de recibos cuando el dispositivo esté encendido.

Lector de tarjetas IC
En él pueden insertarse y leerse tarjetas bancarias.

Lector de tarjetas NFC
Con él se pueden pasar/ver y leer tarjetas NFC.

Lector de tarjetas magnéticas
Se utiliza para deslizar la información de la banda magnética de la tarjeta bancaria.

Escáner
Admite la toma de fotografías y el escaneo rápido 1D/2D.

Advertencia de seguridad
Introduzca el conector de CA en el enchufe de CA correspondiente a la entrada marcada en el adaptador de alimentación.
- Este es un producto de clase A. Dentro de un entorno residencial, este producto puede ocasionar interferencias de radio. En este caso, podría ser necesario que el usuario tome medidas prácticas para solucionar las interferencias.
- No opere en funcionamiento en ubicaciones en áreas no seguras.
- Utilice solo las baterías originales.
- No sustituya la batería cuando pueda haber gas explosivo presente.
- No cargue el dispositivo en lugares peligrosos.
  Sustitución de la batería:
  ① ¡Existe riesgo de explosión si la batería es sustituida por otra de un tipo incorrecto!
  ② La batería sustituida debe entregarse al personal de mantenimiento para que se deseche correctamente. ¡No la lance al fuego!
  Precaución
- Evite la instalación o el uso durante tormentas eléctricas para evitar el riesgo de ser alcanzado por un rayo.

Fabricante：Shanghai Sunmi Technology Co., Ltd.
Room 505, No.388 Songhu Road, Yangpu District, Shanghai, China

- Desconecte inmediatamente la alimentación si nota olores, sobrecalentamiento o humo anormales.
- No toque el cortador afilado.

Recomendaciones
No utilice el dispositivo en entornos excesivamente fríos o calientes, como cerca de fuegos o cigarrillos encendidos;
No tire, deje caer ni doble el dispositivo;
Intente usar el dispositivo en condiciones limpias y sin polvo para evitar que se introduzcan pequeñas partículas en el terminal;
No utilice el dispositivo cerca de equipo médico sin autorización previa;
Este dispositivo solo es adecuado para su uso en áreas a una altitud de 5000 o menos.

Declaraciones
La empresa no se hace responsable de las siguientes acciones:
Los daños causados por el uso o mantenimiento sin seguir las condiciones descritas en esta guía;
La empresa no se hará responsable de ningún daño o problema causado por alternativas o consumibles (que no sean los productos originales proporcionados por la empresa). Sin la autorización de la empresa, no está permitido realizar modificaciones o cambios en el producto;
El sistema operativo de este producto admite actualizaciones oficiales del sistema. Si el usuario flashea un sistema ROM de un tercero o modifica los archivos del sistema utilizando métodos de crack-eo, puede ocasionar la inestabilidad del sistema y plantear riesgos y amenazas a la seguridad.

Aviso legal
Debido a las actualizaciones del producto, algunos detalles de este documento pueden no coincidir con el producto, tome como referencia el producto real, la empresa se reserva el derecho a interpretar este documento. Se reserva el derecho a modificar esta guía sin previo aviso.

Lista de software preinstalado
- SUNMI App Store：Iniciador
  - Personalización de botones de función：Servicio Base - Servicio de personalización Fondo de pantalla, Animación de encendido
  - Guía para el desarrollador (Asistente de comprobación)：Guía del usuario - Guía de inicio - Asistencia remota - SUNMI OTA

Para comprobar los detalles del software anterior: seleccione «Ajuste-es/Aplicaciones» y seleccione el software correspondiente para ver la información.
Para desinstalar el software, seleccione «Ajuste-Aplicaciones-Administrar aplicaciones-Desinstalar» o mantenga pulsado el icono y arrástrela a la «Papelera de reciclaje».

ديسبلاي
مولتيميديا وتستخدم لعرض الأسعار وما إلى ذلك.

بطارية
افتح غطاء البطارية، وقم بإدخال البطارية أو إخراجها في الاتجاه المشار إليه بالسهم.

فتحات البطاقة
PSAM، Micro SD، Nano SIM
افتح غطاء البطارية، وقم بإدخال البطارية أو إخراجها في الاتجاه المشار إليه بالسهم.

زر الطاقة
الضغط القصير: قفل الشاشة أو تشغيل الشاشة.
الضغط المطول: الضغط لمدة 2 إلى 3 ثوانٍ لتشغيل الجهاز عندما يكون مغلقًا.
الضغط لمدة 2 إلى 3 ثوانٍ: لإيقاف تشغيل الجهاز أو إعادة تشغيله عندما يكون قيد التشغيل.
الضغط لمدة 11 ثانية: لإيقاف تشغيل الجهاز عند تعطله.

طابعة
افتح غطاء الطابعة وضع لفة الورق بشكل صحيح في الطابعة وفقًا للاتجاه المشار إليه بالسهم. اجعل طرف الورق خارج طابعة الورق، وأغلق الغطاء. وبالنسبة للأجهزة التي تدعم الطباعة، يكون الجهاز جاهزًا لطباعة الإيصالات عند تشغيل الجهاز.

قارئ IC
مكان لإدخال البطاقات البنكية ذات الشرائح من خلالها وقراءتها وإدخالها.

قارئ NFC
مكان يقوم بطاقات NFC من خلالها القراءة والإدخال.

قارئ البطاقة المغناطيسية
يستخدم لتمرير معلومات الشريط المغناطيسي للبطاقة المصرفية.

ماسح ضوئي
يدعم التقاط الصور وفك رموز الرموز الخطية/الثنائية الأبعاد.

نصائح
يرجى تجنب استخدام الجهاز أو تركيبه أو استخدامه أثناء العواصف الرعدية لتجنب خطر الصعق بالبرق.
يرجى فصل التيار الكهربائي على الفور إذا لاحظت أي روائح غير طبيعية، أو ارتفاع في درجة الحرارة، أو دخان.
يرجى عدم لمس الشفرة الحادة.

مواصفات
CE certification information (SAR)
This device was tested for typical body-worn operations with the back of the handset kept 5mm away. To maintain compliance with RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided.
If you are using pacemaker, hearing aid, cochlear implant or other device, please use the phone according to the doctor's advice.
PRODUCT SAFETY WARNING
Use responsibly. Read all instructions and safety information before use to avoid injury.The limit operating ambient temperature of the equipment declared by the manufacturer is 10~50°C
Battery safety
Use the battery only at ambient temperatures ranging from 40°C.
① CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type of battery recommended by the manufacturer. Dispose of used batteries according to battery manufacturer's instructions.
② CAUTION: Risk of explosion if battery is replaced by an incorrect type. . Dispose of used batteries according to the instructions.
③ CAUTION:Battery charging temperature upper limit is 40°C.
Adapter safety
When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with a temperature that ranges from 0°C-40°C.
For altitude 2km below use only
Wi-Fi Safety
Turn Wi-Fi off in areas where Wi-Fi use is prohibited or when it may cause interference or danger, such as in airplanes and the flying.

ISED Canada compliance statements
This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:(1) L'appareil ne doit pas produire de brouillage, et (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
The device for operation in the band 5150-5350 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
Les dispositifs fonctionnant dans la bande 5150-5350 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

FCC compliance statement
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against har-

Shanghai Sunmi Technology Co., Ltd.
Room 505,
No.388 Songhu Road, Yangpu District, Shanghai, China

维现事项
每次重启关机后，如果出现卡顿，请确认是否是电量低导致可以使用。
- 请勿在潮湿、热环境中使用，例如雨雾或水滴的表面；
- 请勿摔、强摇或晃动；
- 请用干净无尘的布定期保养维护，请勿使用腐蚀性物品等清洗；
- 在未配头件的情况下，不要在易存设备的区域使用；
- 仅适用于海拔5000米以下的区域安全使用。

声明
当出现以下产品情况时，公司不对其产品的安全性、可靠性、性能、质量、功能、外观、结构、工艺、软件、硬件、包装、配件、说明书、服务、售后、物流、售前、售中、售后、法律、法规、政策、市场、竞争、舆论、其他等方面的问题或纠纷负责：
- 不按本指南说明操作所有可能对设备造成的损坏；
- 对于因选用或其他非本公司提供之最初产品或以元件产品造成的损坏或故障（如：电源工业电线缆，或的元件品质或质量）
- 本产品的操作系统及预装在内的系统更新，如果用户擅了原工厂的ROM系统或安装非官方或第三方或第三方系统文件，可能会导致系统不稳定，以及带来安全风险。

免责申明
由于产品的更新，或文档质量标准等因素可能导致产品不同，请以实物为准，此文档最新版本以公司，请留下联系信息时间填写下，请登录直接到官网。

系统预装软件说明
- 应用市场：应用商店
- 功能模块：SDK管理 App Store：SunmiStore
  - 按键自定义：BaseService - 自定义服务（桌面、开机动画）
  - 开发人员指南(测试助手)：使用指南 - 快速指南
  - 远程协助：SUNMI OTA

查看预装软件信息方法：选择「设定 > 应用程序」，选择相应应用程序名称以查看信息。
卸载应用程序：选择「设定 > 应用程序 > 管理应用程序 > 卸载」，或将应用程序图标拖到「回收站」。

免责申明
由于产品的更新，或文档质量标准等因素可能导致产品不同，请以实物为准，此文档最新版本以公司，请留下联系信息时间填写下，请登录直接到官网。

系统预装软件说明
- 应用市场：应用商店
- 功能模块：SDK管理 App Store：SunmiStore
  - 按键自定义：BaseService - 自定义服务（桌面、开机动画）
  - 开发人员指南(测试助手)：使用指南 - 快速指南
  - 远程协助：SUNMI OTA

查看预装软件信息方法：选择「设定 > 应用程序」，选择相应应用程序名称以查看信息。
卸载应用程序：选择「设定 > 应用程序 > 管理应用程序 > 卸载」，或将应用程序图标拖到「回收站」。

声明
当出现以下产品情况时，公司不对其产品的安全性、可靠性、性能、质量、功能、外观、结构、工艺、软件、硬件、包装、配件、说明书、服务、售后、物流、售前、售中、售后、法律、法规、政策、市场、竞争、舆论、其他等方面的问题或纠纷负责：
- 不按本指南说明操作所有可能对设备造成的损坏；
- 对于因选用或其他非本公司提供之最初产品或以元件产品造成的损坏或故障（如：电源工业电线缆，或的元件品质或质量）
- 本产品的操作系统及预装在内的系统更新，如果用户擅了原工厂的ROM系统或安装非官方或第三方或第三方系统文件，可能会导致系统不稳定，以及带来安全风险。

免责申明
由于产品的更新，或文档质量标准等因素可能导致产品不同，请以实物为准，此文档最新版本以公司，请留下联系信息时间填写下，请登录直接到官网。

系统预装软件说明
- 应用市场：应用商店
- 功能模块：SDK管理 App Store：SunmiStore
  - 按键自定义：BaseService - 自定义服务（桌面、开机动画）
  - 开发人员指南(测试助手)：使用指南 - 快速指南
  - 远程协助：SUNMI OTA

查看预装软件信息方法：选择「设定 > 应用程序」，选择相应应用程序名称以查看信息。
卸载应用程序：选择「设定 > 应用程序 > 管理应用程序 > 卸载」，或将应用程序图标拖到「回收站」。

显示屏幕
用于显示多媒体功能及价格信息展示等。

电池
打开电池盖，按照箭头指示方向装取电池。

插卡
PSAM卡、Micro SD卡、Nano SM卡
打开电池盖，插入电池，按照示方向插入卡。
（支持：2G/3G/4G）

开机 / 按电源键开机
按住，长按数秒，长按2-3秒开机。
重启设定方：按住2-3秒，选择关机或重启；
死机状态下，长按11秒，自动重启。

打印机
按照提示方向，打开纸盒盖，将打印纸正确放入纸仓，并拉出部分打印纸至切口处，盖好纸仓盖，打印纸安装完成。用于开机状态下打印单据。

**IC

技术要求:

1.材质:100g书纸

2.工艺：印刷+模切+骑马钉（两钉）

3.尺寸:200*80mm，公差：±2mm

4.商米物料编码：M05054426