WOW-SOUND

SPEAKER

QUICK START
PRODUCT MANUAL

WORLD OF WATERSPORTS

BC

CONTROL INSTRUCTIONS

Turn on - Press the Power Button

Turn off - Hold Down the Power Button

Pause/Play – Tap the power button while the speaker is on

Volume Up – Press the “+” button once for an incremental increase or press and hold to quickly increase.

Volume Down – Press the “-” button once for an incremental increase or press and hold to quickly increase.

Skip To Next Song – Double tap the “+” button

Go Back To Previous Song – Double tap the “-” button

LED Light - Press the small button under the LED light strip to turn on / off and to switch brightness settings

Reset Bluetooth Connection - Press the “+” and “-” buttons together for 5 seconds until you hear 2 beeps

Charging - Lift the rubber cover under the LED light and connect the AC adaptor included in the package.

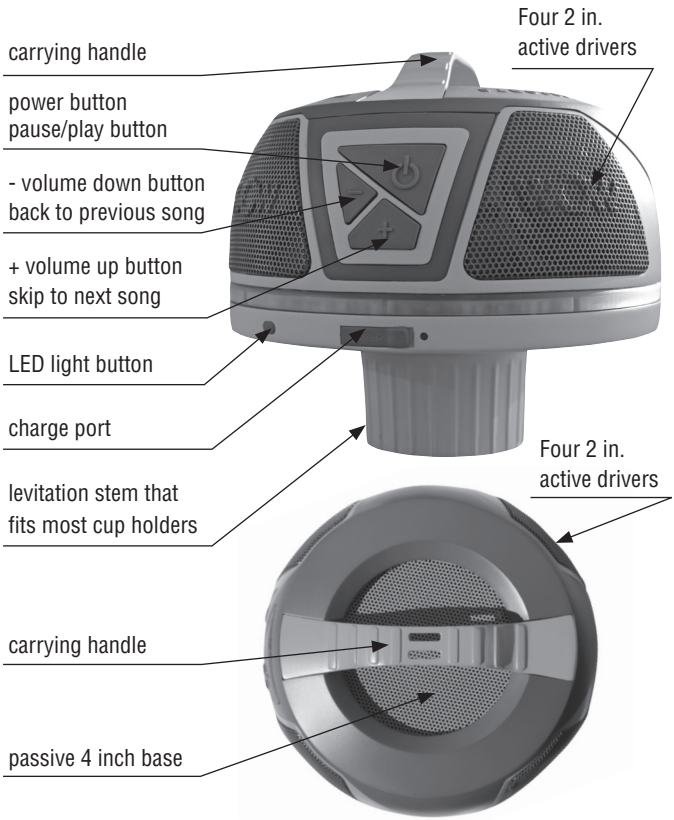

SPECIFICATIONS

Power Supply – 13.5V 2A
Battery Life – 50+ hours (varies by volume level, content, and use of LED light)
Frequency Response – 65Hz – 20kHz
Drivers – 4 x 2 in Mid-range drivers & 1 x 4 in Passive Radiator
Waterproof Rating – IP67
Product Weight – 1.6kg or 3.5lbs (approximately)
Product Dimensions – Φ92mm x 175Hmm or 7.55 in x 6.9 in
Charging Requirements – 100 – 240VAC power adaptor (included); charges fully within 4 hours
Bluetooth Wireless Range: 20m (66 ft.)
Bluetooth Version – 4.2
Operating Temperature Range - 0 to 50° C or 32 to 122° F
Charging Temperature Range - 0 to 45° C or 32 to 113° F

DEVICE CARE

1. Avoid chemical cleaners, solvents, sunscreen, and insect repellents that can damage plastic components and finishes
2. Thoroughly rinse the device with fresh water after exposure to chlorine, salt water, sunscreen, cosmetics, alchohol, or other harsh chemicals. Prolonged damage to these substances can damage the case.

WOW-SOUND SPEAKER FLOAT

- Lets the speaker float up out of the water for greater sound
- Great to use in rough or busy lake waters or busy pools
- Side grommet for tying off to your favorite float

The WOW-SOUND SPEAKER can also float on it's own!

FLOATING PHONE HOLDER

- Great for waterproof protection while using your phone around water.
- FLOATS ON WATER SURFACE, do not worry about missing your device under the water any more.
- Provides waterproof protection for your smartphone while maintaining full touch screen functionality
- Crystal Clear Window on both sides, perfect for taking pictures or videos
- Universal: It fits all large Smartphones up to 6 inches & your cash, documents, credit cards, etc, very good for indoor/ outdoor activities, beach, swimming, boating, kayaking, watersports, travels
- Easy-to-use with a snap and lock seal system for FULL FLOATING WATERPROOF PROTECTION
- Includes comfortable neck strap for hands-free transport

CHARGING THE STEREO

To prevent corrosion, thoroughly dry the power port and the surrounding area before charging.

You should fully charge the battery before you use the stereo for the first time. Charging a fully depleted battery takes about 4 hours.

1. Open the silicon cover underneath the portion of the LED light under the control panel.

2. Plug the power cable included with the speaker into the power port.

3. Plug the AC power adaptor into a standard wall outlet.

A. When charging the small round LED light next to the power port will be orange.
B. When fully charged the light will turn green.

4. Once finished charging remove the power cable.

5. Close the silicon cover completely.
NOTE: The silicon cover must be closed securely to achieve the IP67 water rating

For more information about the features discussed in the manual, please refer to our website at **www.wowwatersports.com**

CONNECTING DEVICES

Connecting your WOW-SOUND speaker to compatible devices. You can play media from a compatible Bluetooth device using the Bluetooth wireless connection.

1. Enable Bluetooth on your compatible Bluetooth device.

2. Bring the compatible Bluetooth device within 20 m (66 ft.) of the speaker.

3. On the speaker press the power button. The small round LED light next to the power port will blink slowly.

4. Once the speaker is discoverable in pairing mode the small round LED light will start blinking faster.

5. On your compatible Bluetooth device select WOW-SOUND from the list of discoverable devices.

a. If your compatible Bluetooth device does not connect to the stereo, repeat the above steps and try again

6. Start playing music from your Bluetooth device.

COMMON PAIRING TROUBLE SHOOTING ISSUES:

1. If your WOW-SOUND speaker is not discoverable on your device, press the "+" and "-" buttons together for 5 seconds until you hear 2 beeps. This will disconnect any previous pairings and reset you're speaker for a new pairing. You may need to turn Bluetooth off from your device and then turn it back on as well.

2. Once reset, please follow steps 1-6 above.

3. If you are still having problems, try turning your speaker off and then on again and repeat steps 1-6 above.

TRUE WIRELESS WOW STEREO SOUND MODE

1. TrueWireless WOW Stereo Sound Mode. When Connecting 2 WOW Sound Speakers one speaker becomes the left and one becomes the right so you have true WOW stereo sound.

Follow the instructions below to activate.

2. Make sure both speakers are turned off and not connected to any bluetooth device.

3. Turn on the first speaker (master) and connect it to your bluetooth device

4. Turn on the second speaker (servant) but do NOT connect it to your bluetooth device

5. On the first speaker press the "+" and "-" buttons at the same time. This enables the True Wireless feature.

6. On the second speaker press the “+” and “-” buttons at the same time. This connects the servant to the master.

7. You will hear “True Wireless Connected” which means they are connected

8. Turn on your music

9. If the servant speaker disonnects you can reconnect it by hitting the “+” and “-” buttons at the same time as long as the master is still in the True Wireless mode.

10. Note 1: At this time the Bluetooth chipset only has the capability for the 2 speakers to be about 5 meters or 15 feet apart but the farther apart they are the less stable the connection is.

11. Note 2: Your device can still be 30 meters away from the first speaker as long as there are no obstructions

www.facebook.com/towables

REGISTERING YOUR WOW-SOUND SPEAKER

Help us better support you by filling out our registration form found in your speaker packaging or online at www.wowwatersports.com
Please keep the original sales receipt or a photocopy in a safe place

WOW Sports LLC.
Designed and Engineered in the USA
MADE IN CHINA
Email Address:
customerservice@wowwatersports.com
www.wowwatersports.com
Phone: 1-844-969-9063

WOW-SOUND SPEAKER

W A R R A N T Y :

World of Watersports warrants, to the original purchaser only, that their high performance products, when used for normal recreational purposes, are free from defects in material and workmanship for a period of 1 year from the date of purchase. Any implied warranties are also limited in duration to the 1 year period from the original date of purchase. Our warranty excludes products for rental, for hire, and other uses not considered normal recreational purposes. World of Watersports will not be held liable for incidental or consequential damages.