Wireless Kit

4 channel kit
8 channel kit

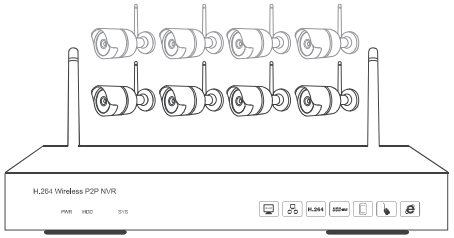

QUICK INSTALLATION GUIDE

▷ Hardware description

1 Statement

Sincerely thanks for purchasing our products, pls contact us if any problem or requirement.
This manual is for network video recorder.
This user manual may contain incorrect place in technology, place not matching with product function or operation, or printing mistake.
We will update our user manual according to our updating in product, and will periodically improve or updating the product and programming. The updating content will add in the new user manual, we won't inform.
If the product's description in user manual is inconsistent with the real products, pls based on the real products.

2 Safety cautions

1. Pls don't put a container with liquid on DVR(like Vase) .
2. DVR should put at a ventilation place, and prevent clogged the ventilation hole.
3. Check the power voltage, in case of damage by wrong voltage.
4. DVR should work at the technical standard range of temperature and humidity.
5. Place DVR on level, pls avoid installing at a sharp pounding place.
6. Moisture dust in PCB will cause short circuit, for long-term use of the DVR, you can periodically remove dust in PCB by brush.
7. It will cause burst if replace battery in wrong way, we don't suggest user to replace by himself; if need replace, only use the same type or equivalent type battery, pls don't try to open or maintain the battery.
8. DVR installation need according to specification, you can take the national or local standard as reference.

3 Open-package inspection

After receive product, pls open giftbox, remove NVR and put it on suitable place, check accessories. If any damage or lack, kindly pls contact to the distributor.

4 Installation diagram

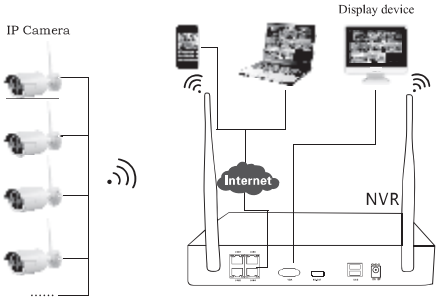

5 Antenna location

correct method　　fault method

The signal coverage of Antenna is similar to a round circule. Antenna located in center of the round circule, signal of surrounding is much stronger, but much weaker if antenna endpoints backoff direction. according to the signal divergency characteristics of antenna, and in order to guarantee the video quality, IPC antenna should try to keep in parallel or tangent with NVR antenna.

6 HDD Install

Notice that the HDD had been used need supplier recommend, and need make sure already cut off the power.

Install Steps:

1. Remove the screw of the dvr
2. Connect the HDD cable and power line
3. Assmble the screw, and fix the HDD in the bottom of NVR
4. Close the cover and fix it



7 Rear Panel Description

For example,4Ch





8 Turn on/off

Confirm that AC voltage accessible matches with DVR .Ensure that the DVR power outlet connect with a good middle ground grounding. After switching power, the device started, 【POWER】 light is on. Turn into system, if the panel status light flashing, it's normal conditions.

9 NVR, IPC parameter list

NVR parameter				
Operating System	Embedded linux OS			
AV(audio/video)input	Network Video		4CH	8CH
AV (audio/video) output	HDMI input	1ch，resolution：1024x768，1366x768，1440x900,1920x1080p		
	VGA output	1ch，resolution：1024x768，1366x768，1440x900,1920x1080p		
AV CODEC	Video Resolution	720P/960P/1080P		
Specification	synch-playback	4CH	8CH	
Video Control	Video/Capture mode	Maual、Time、Motion、Alarm		
	Playback mode	Real time、Routine、Event		
	Backup	USB backup		
HDD	Type	1*SATA interface		
	Max Capacity	4 TB at most for each		
External Interface	Network Interface	1/4 adaptable RJ45 10M/100M, 1/2 WIFI interface		
	USB Interface	1/2 USB 2.0		
Network Control	Protocol	UPnP（play&plug）、SMTP（email survice）、PPPoE（dial-up）、DHCP（Automatically obtain an IP address）, etc…		
Others	Power		DC 12V 2A	
	Consumption(excluding HDD)		≤5W	
	Working Temperature		-10℃—55℃	
	Working Humidity		10%—90%	
	Size		257×210×45mm	
	Weight（excluding HDD）		≤1Kg	

IPC Specification			
Specification	1.0MP	1.3MP	2.0MP
Operating System	Embedded Linux		
Image sensor	1/4" Progressive Scan Sensor	1/3" Progressive Scan Sensor	1/2.8" Progressive Scan Sensor
S/N Ratio	> 39.1 dB		
Resolution	1280 x 720 16 : 9 High Defination	1280 x 960 4 : 3 High Defination	1920 x 1080 16 : 9 High Defination
Minimum illumination	Color: 0.1 Lux B/W: 0.01 Lux		
OSD	Date Time & Title		
white balance	Auto		
Day & Night	Auto / Color / BW		
3D-DNR	Auto		
Mirror/Flip	On / Off		
Privacy Regional Shelter	4 Zone Selectable		
Stream	Dual-stream 1280x720@25fps 640x360@25fps	Dual-stream 1280x960@15fps 640x360@15fps	Tri streams 1920x1080@30fps 640x480@30fps 320x240@30fps
Anti-thunder Level	Standard IEC61000-4-5		
Power	DC12V – 1A		
Consumption	≤6W		
Interface	RJ45 / WIFI 802.11b/g/n	RJ45 / WIFI 802.11b/g/n	RJ45 / WIFI 802.11b /g/n (2.4G/5.8G)
Working temperature /humidity	-10℃ to +50℃ / 30% to 80% RH		
Storage temperature /humidity	-20℃ to +60℃ / 20% to 90% RH		
Size	205(L)×70(W)×55(H)mm		
Weight	500g		

▷ Software operation

1 Add camera by matching code

Steps: right click the mouse on the main interface, and then click video management ,go into video management interface
Two ways for Wireless NVR to add IPC, "Code Add "and "Auto Add".
Adding camera by matching code, the camera transmits video images through wireless and NVR,IP is 172.20.14.X ;
Auto adding the camera, the camera transmits video images through the cable and NVR ;
Note: The camera has been matched by factory, no need to add other cameras. If you need to match one code, Firstly, take one network cable and connect to any NVR lan port and power on the device to make sure there is still have any channel can add one camera.

2 Video playback

Step: Right click mouse in main menu — Video playback — choose channel No. — choose record mode — in Search time,input beginning time and end time — click search,recording will come out,drag time bar — click playback to start
Tips: Playback icon introduction: playback 1 frame previous playback 1 frame next play pause fast forward x2,x4,x8

3 Video backup

Step: Right click mouse in main menu — Video backup — choose channel No. — choose record mode — in Search time,input beginning time and end time — click search,recording will come out — choose the video which need to backup — click video backup
Tips: Support 32G U disk backup max,recording will be packed every one hour

4 Video detection

Step 1: Right click mouse in main menu→ System setup→ Record setup→ choose motion→ choose all→ click Copy to→click OK to save setting.
Step 2: Choose Video detection→ set sensitivity as required→ choose motion→ set Alarm, Buzzar or Email as required→ click Copy to →click OK to save setting.

5 Generate Esee ID

Precondition to generate Esee ID is that make sure video recorder is connected with network,and IP address is available Right click mouse in main menu— System setup — Network setup

If user is familar with LAN,then no need to choose DHCP which help to get IP address automatically.Manually input IP address and DNS address,video recorder will generate ID by network, once generate,it will appear in menu

If user is not familiar with LAN,or video recorder is in independent network,can choose DHCP to get available IP address

After video recorder get IP address,it will generate Esee ID automatically

6 Access in LAN

Access by computer in same router or use same switch with video recorder

Step 1: Right click mouse in main menu — System setup — Network setup — check video recorder IP address

Step 2: Access by computer in same LAN,input video recorder IP address and port(If port is 80, no need to input) in IE browser or any other browser.Then it will access LAN log in webpage, input user name and password,click log in

Step 3: Once access successfully,can get video

Tips: Please make sure video recorder and computer in same network segement

7 Access in WAN

Access by computer not in same router with video recorder

Step 1: Right click mouse in main menu — System setup — Network setup —check video recorder IP address

Step 2:Open the IE browser,enter the www.e-seenet.com in the address bar. Then it will access log in webpage,input ID,user name and password,click log in

Step 3: Once access successfully,can get video

Tips: Video quality and fluency depend on video recorder side upload speed and computer side download speed,each channel need above 30KB

8 Android mobile application download and installation

（Two ways to download）

No.1: Right click mouse in main menu → Setup Wizard → Show three QR code → Android User scan QR code for android application by mobile directly, enter download page, click download to mobile to install

No.2: please scan the QR code in manual to download APP

APP download

9 IPhone application download and installation

Step 1: Go to App Store

Step 2: Search IP PRO

Step 3: Input Apple ID to verify

Step 4: Click download

10 Esee mobile application(IP PRO)-Add device

Step 1: Register

Step 2: Enter device interface

Step 3: Add device

Step 4: Added successfully. Click channel No.to get video

Step 5: Remote playback

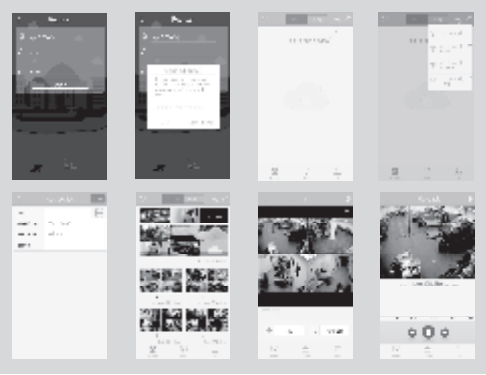

Packing list

S/N	Item	Quantity
1	WIFI NVR	1pcs
2	Screw bag（4 screws for HDD）	1pcs
3	USB mouse	1pcs
4	1 meter network cable（for IPC code match）	1pcs
5	DC 12V2A power supply (for NVR)	1pcs
6	NVR user manual、Installation Instructor	1pcs
7	WIFI IP Camera	4/8 pcs
8	DC 12V/1A power supply（for IPC）	4/8 pcs
9	Screw bag（for IPC）	4/8 pcs

Notes:

1. Device will not in guarantee if caused by below reason:

A.Accident;negligence;disaster;mis-operation.

B. Do not conform to the environment and conditions,such as power improper, working temperature too hight or too low, lightning stroke.ect.

C.Ever be maintained by other center which not belong to the real factory.

D.Goods already sold more than 12 months.

APP download
scan here

FCC Caution：

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.