客户品牌：IQ	备注： 第一版，
产品型号：QWHS1	
设计项目：说明书（英文与法文）	
文件名称：WS1_IQ_IQWHS1_英法说明书_折页_01	
说明书尺寸：80mm X 80mm　　（展开尺寸 640mm X 80mm） 工艺说明：157g铜板纸，四色正反面印刷，折页（折扇形）	
制作版本：01	

640.0 mm

80.0 mm

80.0 mm

iQ Wave

Home Speaker

with Magsafe Wireless Charging

Bluetooth V5.1

IQWHS1

USER MANUAL

gentec-intl.com

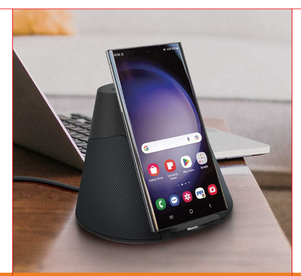

What's in the box

- iQ Wave Home Speaker
- USB Wall Charger
- USB Cable
- User Manual

Appearance

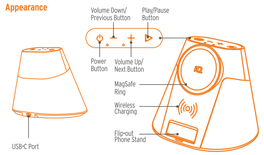

Connecting to Power Source

1. Plug in the USB wall charger to a suitable power source in your home.
2. Insert the wider USB-A end of the power cable into the matching port on the USB wall charger.
3. Connect the slimmer Type-C end of the power cable to the matching port located on the lower back side of the IQ Wave Home Speaker.

Note: The included power supply must be connected at all times to use this device.

It is recommended to always use the supplied USB wall charger and Type-C cable to power the IQ Wave Home Speaker. If you choose to use a different power supply the product may not function as intended. Minimum 20W of power is needed to power this product.

Power On/Off

Power On: Press and hold the Power Button ⏻ for 2 seconds to power on the speaker, the LED indicator lights will turn will flash red and white 3 times.

Power Off: Press and hold the Power Button ⏻ for 2 seconds to power off the speaker, the Bluetooth indicator light will turn off.

Connect with Bluetooth

1. Turn on the speaker, the Bluetooth indicator light will start flashing
2. On your device, search for the Bluetooth connection menu.
3. Select **IQWHS1** from the list. When connected correctly, the Bluetooth indicator light on the speaker will go solid.

Only one Bluetooth device can be connected at the same time.
If you want to connect another device to the speaker, then you must first disconnect the current one.

Disconnecting the Speaker

When it's connected via Bluetooth, double press the Power Button ⏻ to disconnect.

Reconnecting the Speaker

Some Bluetooth devices support automatic reconnection, with those devices the speaker will automatically reconnect. When it's not connected, double press the Power Button ⏻ to connect to the last disconnected device.

Siri/Google Assistant

- Press and hold the Play/Pause Button ▷ for 2 seconds to activate Siri/Google Assistant.

Phone Calls

- Short press the Play/Pause Button ▷ to answer an incoming call and to end an ongoing call.
- Press and hold the Play/Pause Button ▷ for 2 seconds to Reject an incoming call.

Volume

When listening to music:

- Short press the Volume Up/Next Button + to increase volume
- Short press the Volume Down/Previous Button — to decrease volume

Music

- Short Press the Play/Pause Button ▷ to play and pause music
- When listening to music:
  - Press and hold the Volume Up/Next Button + to go to the next song
  - Press and hold the Volume Down/Previous Button — to go to the previous song

Reset Function

If you are having trouble connecting to the speaker you can press the Power Button ⏻ for 8 seconds to automatically reset. Then proceed with the initial Bluetooth pairing steps to repair your device to the speaker.

Automatic Turn Off Function

The speaker will automatically turn off in 30 minutes when Bluetooth is not connected and no music is playing.

iQ

Customer Service:

For more information or service contact our Customer Service Department.

E-mail
service@gentec-intl.com
Phone
905-513-7733

Distributed in Canada by Gentec International

gentec-intl.com

正面

iQ Wave

Haut-Parleur de Maison

Ô Chargement Sans Fil Magsafe

Bluetooth V5.1

IQWHS1

MANUEL DE L'UTILISATEUR

gentec-intl.com

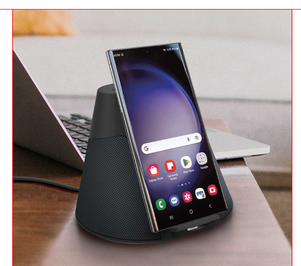

Contenu de la boite

- Haut-parleur de maison iQ Wave
- Chargeur mural USB
- Câble USB
- Manuel de l'utilisateur

Apparence

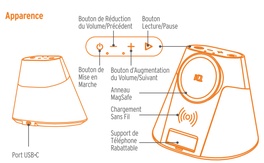

Connexion ô la Source d'Alimentation

1. Branchez le chargeur mural USB à une source d'alimentation appropriée dans votre maison.
2. Insérez l'extrémité plus large USB-A du câble d'alimentation dans le port correspondant du chargeur mural USB.
3. Connectez l'extrémité Type-C plus étroite du câble d'alimentation au port correspondant situé sur la partie inférieure arrière du haut-parleur de maison IQ Wave.

Remarque : Le bloc d'alimentation inclus doit être connecté en tout temps pour utiliser cet appareil.
Il est recommandé de toujours utiliser le chargeur mural USB et le câble Type-C fournis pour alimenter le haut-parleur de maison IQ Wave. Si vous choisissez d'utiliser une alimentation autre que celle fournie, le produit risque de ne pas fonctionner correctement. Une puissance minimale de 20W est nécessaire pour alimenter ce produit.

Mise en Marche/Arrêt

Mise en marche : Appuyez sur le bouton de Mise en Marche ⏻ et maintenez-le enfoncé pendant 2 secondes pour mettre le haut-parleur en marche, les témoins lumineux DEL s'allument et clignotent 3 fois en rouge et en blanc.

Arrêt : Appuyez sur le bouton de Mise en Marche ⏻ et maintenez-le enfoncé pendant 2 secondes pour éteindre le haut-parleur, le témoin lumineux Bluetooth s'éteint.

Connexion avec Bluetooth

1. Mettez le haut-parleur en marche, le voyant Bluetooth commence à clignoter.
2. Sur votre appareil, recherchez le menu de connexion Bluetooth.
3. Sélectionnez **IQWHS1** dans la liste. Lorsque la connexion est établie correctement, le voyant Bluetooth sur le haut-parleur s'allume.

Un seul appareil Bluetooth peut être connecté en à la fois.
Si vous souhaitez connecter un autre appareil au haut-parleur, vous devez d'abord déconnecter l'appareil actuel.

Déconnexion du Haut-Parleur

Lorsqu'il est connecté via Bluetooth, appuyez deux fois sur le bouton de Mise en Marche ⏻ pour le déconnecter.

Reconnexion du Haut-Parleur

Certains appareils Bluetooth sont compatibles avec la reconnexion automatique ; avec ces appareils, le haut-parleur se reconnecte automatiquement.
Lorsqu'il n'est pas connecté, appuyez deux fois sur le bouton de Mise en Marche ⏻ pour vous connecter au dernier appareil déconnecté.

Siri/Google Assistant

- Appuyez sur le bouton Lecture/Pause ▷ pendant 2 secondes pour activer Siri/Google Assistant.

Appels Tÿÿphoniques

- Appuyez brièvement sur le bouton Lecture/Pause ▷ pour répondre à un appel entrant et pour mettre fin à un appel en cours.
- Appuyez sur le bouton Lecture/Pause ▷ pendant 2 secondes pour rejeter un appel entrant.

Volume

Lorsque vous écoutez de la musique :

- Appuyez brièvement sur le bouton d'Augmentation du Volume/Suivant + pour augmenter le volume .
- Appuyez brièvement sur le bouton de Réduction du Volume/Précédent — pour diminuer le volume

Musique

- Appuyez brièvement sur le bouton Lecture/Pause ▷ pour démarrer et interrompre la musique.
- Lorsque vous écoutez de la musique :
  - Appuyez et maintenez enfoncé le bouton d'Augmentation du Volume/Suivant + pour passer à la chanson suivante
  - Appuyez et maintenez enfoncé le bouton de Réduction du Volume/Précédent — pour aller à la chanson précédente

Fonction de Rÿinitialisation

Si vous avez des difficultés à vous connecter au haut-parleur, vous pouvez appuyer sur le bouton de Mise en Marche ⏻ pendant 8 secondes pour réinitialiser automatiquement votre appareil. Procédez ensuite aux étapes initiales de jumelage Bluetooth, pour réparer votre appareil et le connecter au haut-parleur.

Fonction d'Arrêt Automatique

Le haut-parleur s'éteint automatiquement au bout de 30 minutes, lorsque le Bluetooth n'est pas connecté et qu'il n'y a pas de musique en cours de lecture.

iQ

Service ô la Clientüle :

Pour plus d'informations ou de services, contactez notre service à la clientèle.

Courriel
service@gentec-intl.com
Téléphone
905-513-7733

Distribué au Canada par Gentec International

gentec-intl.com

背面

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.