EN

OVERVIEW OF THE SPEAKER

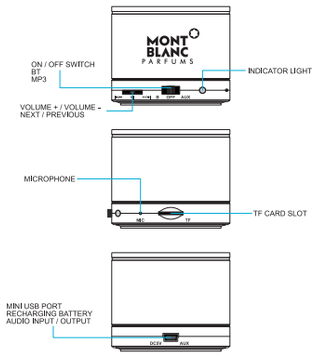

EN

RECHARGING THE BATTERY

Please charge your speaker using the cable included in the box before using it for the first time or when the battery is drained.



(USB charging cable supplied)

1. Plug the micro USB connector into the speaker's USB port and connect it to a USB port on your computer to charge the battery.
2. Using another charger could cause an electric shock or damage the speaker.
3. The indicator light turns red when the battery is charging.
4. The battery takes between 2 hours 30 minutes and 3 hours to recharge.

EN

CONNECTION

1. Make sure the loudspeaker is switched « OFF ».

2. To enable BT, turn the ON / OFF switch to position B so that the indicator light flashes blue 6 times.
   Hold the Play / Pause button down until the indicator light flashes blue continuously. BT is then disabled.

3. Follow the instructions for use on your mobile phone to enable Bluetooth. This can normally be done by going to the « Settings », « Connection » or « BT » menu and selecting the option to search for BT devices.
4. The phone will detect the MBZPA156 speaker and ask you if you want to connect your phone to the loudspeaker.
   Select « Yes » or « Confirm » to enable this action.
5. Enter the password or PIN code 0000, then select « Yes » or « Confirm ». (Important note: If the connection is successful, the indicator light will flash blue). If the connection has failed, the blue light will stay on permanently.

EN

HOW TO USE

- TF / BT mode, press the « next » button to play the next song, hold it down to increase the volume.
  Doesn't work in AUX mode.

- TF / BT mode, press the « previous » button to play the song before, hold it down to reduce the volume.
  Doesn't work in AUX mode.

- TF mode, press the Play / Pause button to Play / Pause.
  BT mode, press the Play / Pause button to Play / Pause / Answer / End Call / Cancel call / Connect.
  BT mode, double-click to redial the last number, hold down for 2 seconds to reject call.
  TF / AUX mode, hold the button down to enable TF mode in AUX mode and vice versa.

EN

INDICATOR LIGHT

- Flashing blue light = TF card mode/ MP3 enabled.
- Solid blue light = TF card / MP3 on pause or AUX mode enabled.
- Flashing blue light = BT mode enabled.
- Continuously flashing blue light = BT connection.
- Solid red light = Charging.
- Red light turns off = Charged.
- Flashing red light = Low power.

OTHER SPECIFICATIONS

- Insert the TF card to listen to music.
  An integrated MP3 format decoder allows you to listen to music stored on a TF card.
- AUX port.
  Switch to AUX mode to listen to music from a PC, ipod/iphone or MP3 / MP4 player.
- Hands-free BT.
  Switch to BT mode for wireless communication.
- BT stereo.
  BT stereo speakers that support A2DP / ARCP so you can enjoy stereo sound without connecting to a HI-F.

EN

FCC ID : 2ALCHMBZPA156

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.