490 mm

70 mm | 70 mm | 70 mm | 70 mm | 70 mm | 70 mm | 70 mm

122.5 mm

HOPESTAR -H60

便携式无线音箱

无线扬声器说明书

HOPESTAR 无线扬声器 - H60

技术规格:

无线标准：5.3
传输距离：10米
输出功率：10W*2
播放时间：4 - 6小时
频率效应：80Hz-20Khz
扬声器 :66mm 4Ω，10W*2
输入电源：5V ⎓ 1A
最大电流消耗：1A
电池类型：18650 锂离子电池3000 mAh
音频信号输入接口：标准Φ3.5mm耳机插孔(立体声)

特点:

1. 无线连接
2. 记忆功能，断点续播
3. 支持U盘/ TF卡/ AUX播放模式
4. 内置锂离子电池
5. 支持MP3/ WAV/ WMA/ FLAC/ APE音乐格式解码
6. 使用高保真的扬声器，发出声音更自然和细腻
7. 6级防水
8. 1+1 设备串连功能
9.支持收音机功能

HOPESTAR 无线扬声器 - H60

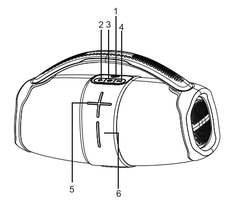

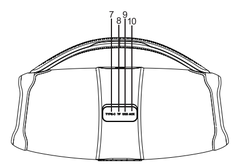

H60按键指示剖面图

HOPESTAR 无线扬声器 - H60

按键说明:

1.开机按键
长按开关机 约3秒/次
2.暂停/播放键
单击：播放/暂停　　长按：退出/回连**无线**连接
无线 模式下双击为回拨电话；单击:接听/挂断
来电情况下长按2秒为拒接电话
在收音机模式下 单击：静音 长按：收台
3. 灯按键
单击：转换灯光模式　　长按：开/关灯
4. 串联键
单击：串联/退出串联　　长按：转换模式
5. +键
单击：音量加　　长按：下一曲
6. -键
单击：音量减　　长按：上一曲
7.Type-C 插孔
1、充电线接口， 插入Type-C充电线时， 默认为设备充电
2、使用收音机功能时，需插入充电线，作为收音天线，
收音机功能才能正常使用
8.TF插孔
插入TF卡时， 默认为TF卡播放模式
9.USB插孔
插入U盘时， 默认为USB播放模式
10. AUX 插孔
标准Φ3.5mm耳机插孔，插入时，默认为AUX播放模式

HOPESTAR 无线扬声器 - H60

使用说明:

1.无线配对
1.1. 使用无线配对前，首先打开音频电源，它已经是默认的无线模式。
1.2. 打开无线设备， 搜索HOPESTAR-H60，连接配对，连接成功后，开始播放音乐体验。
2. 适用于各种手机配件无线技术，无线适配器，无线播放器。
3. 语音提示
3.1. 开/关机有语音提示音;
3.2. 音量加到最大音量有语音提示，最小音量无语音提示。
3.3检测到3.4V低电提示3次后关机;
4. 模式切换
4.1. 开机默认进入无线模式，
模式切换顺序：无线模式-FM模式-TF卡模式-U盘模式-AUX模式
4.2. 模式：后插优先。
5. 播放指示灯
无线搜索状态：白灯快闪，约0.5秒/次；
无线配对状态：白灯常亮
播放状态：白灯灯慢闪 约1秒/次；
6.充电指示灯
充电为3颗流水灯从左至右闪烁
电量30%第1颗常亮2.3..颗闪烁
电量40%第1-2颗常亮3颗闪烁
电量100%第1-2-3颗常亮
7. 音量
开机默认音箱70%音量。

HOPESTAR 无线扬声器 - H60

8. 充电使用：
本机内置过充保护电路，可长时间连接电脑或充电器，约四小时即可完成充电。 每个电池的播放时间会因使用不同大小的音量而有所不同。
9. 无工作状态， 15分钟后自动关机。

故障排除:

1. 自动关机： 电池电量不足时会自动开启电池保护，请充电4小时后使用。
2. 无法播放音乐： 音乐文件存储路径不能被播放器识别，
音乐文件请存储在可移动设备的根目录下。
3. 连接电脑无声： 电脑界面连接错误，请选择正确的音频输出端口
4. 按键无反应或功能错乱：关机后重试。
5. 当机器出现异常情况时，可用细长圆棒，按压AUX孔内的复位开关复位

HOPESTAR 无线扬声器 - H60

产品保修

用户名：_____

联系电话：_____

购买日期：_____

产品编号：_____

维护故障：_____

_____

_____

HOPESTAR -H60

Portable Wireless Speaker

WIRELESS SPEAKER INSTRUCTIONS

HOPESTAR Wireless speaker - H60

Technical Specifications:

Wireless standard: 5.3
Transmission distance: 10 meters
Output power:10W*2
Playing time: 4 - 6 hours
Frequency effect: 66mm 4Ω 10W*2
Input power: 5V ⎓ 1A
Maximum current consumption: 1A
Battery type: 18650 lithium ion battery3000 mAh
Audio signal input interface: standard Φ3.5mm headphone jack (stereo)

Features:

1. Wireless connection
2. Memory function, breakpoint resuming
3. Support U disk / Tf card / AUX playback mode
4. Built-in lithium ion battery
5. Support MP3/ WAV/ WMA/ FLAC/ APE music format decoding
6. Using high-fidelity speakers, the sound is more natural and delicate
7. Level 6 waterproof
8. 1+1 device serial connection function
9. Support radio function

Wireless speaker - H60

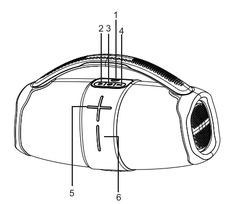

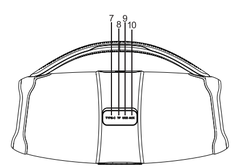

H60 button indication section view

HOPESTAR Wireless speaker - H60

Button instruction:

1. Power on button
Long press the switch for about 3 seconds/time
2. Pause/play key
Click: Play/Pause
Long press: Exit/reconnect Wireless connection
Double click in Wireless mode to call back; Click: answer/end
In case of a call, long press for 2 seconds to reject the call
In radio mode, click: mute Long press: receive
3. Lamp button
Click: Convert light mode
Long press: Turn lights on/off
4. Serial key
Click: Tandem/Exit Tandem
Long Press: Convert Mode
5.+key
Click: Volume up
Long press: next song
6. - key
Click: Volume Down
Long press: Previous song
7. Type-C jack
1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default
2. When using the radio function, you need to plug in the charging line as the radio antenna,The radio function can be used normally
8. TF jack
When the TF card is inserted, the default is the TF card playing mode
9. USB connector
When the USB stick is inserted, it defaults to USB playback mode
10. AUX jack
Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in

HOPESTAR Wireless speaker - H60

Directions for use:

1. Wireless pairing
1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model.
1.2. Turn on the wireless device, search for HOPESTAR-H60, connect and pair, connect After success, start playing music experience.
2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.
3. Voice prompt
3.1. There is a voice prompt when turning on/off;
3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt.
3.3 Shut down after detecting 3.4V low power prompt 3 times;
4. Mode switching
4.1. It enters wireless mode by default when power on.
Mode switching sequence: wireless mode - FM mode - TF card mode - U disk mode - AUX mode
4.2. Mode: Post-insertion priority.
5. Play indicator:
Wireless search status: white light flashes quickly, about 0.5 seconds/time;
Wireless pairing status: white light is always on
Playing status: the white light flashes slowly about 1 second/time;
6. Charging indicator
When charging, 3 water lamps flash from left to right
Power 30%, the first one is normally on 2.3. The second one flashes
Battery 40%, the first two are normally on, and the third one is flashing
The 1-2-3 are always on when the power is 100%
7. Volume
Turn on the default speaker volume at 70%.

HOPESTAR Wireless speaker - H55

8. Charging and using:
This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours Charging is complete.
The play time of each battery will vary depending on the volume used rather different.
9. If there is no working state, it will automatically shut down after 15 minutes.

Troubleshooting:

1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use.
2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device.
3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port
4. There is no response to the keys or the function is disordered: try again after shutting down.
5. When the machine is abnormal, use a slender round bar to press the reset button in the AUX hole switch reset

Wireless speaker - H55

Product warranty

Username: _____

Contact number: _____

Date of purchase: _____

Product number: _____

Maintenance failure: _____

_____

_____

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.