FRONT WHEN FOLDED

Wireless Speaker
User Manual

WHAT'S IN THE BOX

Bluetooth® Speaker (1)
Micro USB to USB charging cable (1)
3.5mm audio cable (1)
User manual (1)

www.cat.com
www.caterpillar.com

© 2018 Caterpillar. All Rights Reserved. CAT, CATERPILLAR, BUILT FOR IT, their respective logos, "Caterpillar Yellow," the "Power Edge" trade dress as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission. Aries Manufacturing a Division of Boss Tech Products, Inc., a licensee of Caterpillar Inc.,

ARIES MANUFACTURING A DIVISION OF BOSS TECH PRODUCTS INC.,
LICENSEE FOR MOBILE ACCESSORIES FOR CATERPILLAR INC.
WWW.CATMOBILEACCESSORIES.COM • 1-888-550-2837
1580 S. MILWAUKEE AVE., SUITE 103, LIBERTYVILLE, IL 60048

BUTTON FUNCTION

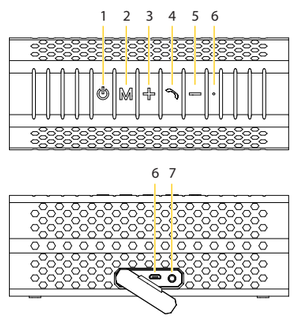

1. Press & hold to **power on/off**
2. Mode
3. Volume up/next song
4. Phone Key
   Press once to **play/pause** song
   For incoming call:
   Press once to **answer/disconnect**
5. Volume down/previous song
6. Microphone
7. 3.5mm aux port and **reset** *(inside aux port)*
8. Micro USB charging port

SPECIFICATIONS

Device Name: CAT-BT-SPK
Bluetooth Version: Bluetooth 4.0
Bluetooth Range: 33 feet (10 meters)
Bluetooth Profile: HPF V1.5,HSP V1.2, A2DP V1.2, AVRCP
Rated Power: 18W
Frequency Response: 100Hz-16KHz
SNR: 82 dB
THD: <10% THD (1KHz-6dB Input)
Battery: Built-in 7.4V 2000mAh Lithium
Input: Micro USB 5V 2A
Charge Time: Approximately 4 hours
Playtime: Approximately 10 hours
Operating Temperature: 32-113˚F (0-45˚C)
Storage Temperature: 14-140˚F (-10-60˚C)

LED INDICATOR LIGHT

Charging: LED will be red when charging. When device has finished charging, the light will go out.
Pair Mode: The blue and red lights will alternate flashing when in pairing mode. Once pairing is complete, you will see a steady blue light.
Play: Slowly flashing blue light.
Pause: Steady blue light.
Calls: Slowly flashing blue light during call.

CONNECTING WITH BLUETOOTH®

1. Power on the speaker by holding down the **power soft key** until the speaker chimes. Once powered on, the speaker is ready to pair. *(You should see the LED light flashing red and blue.)*
2. Open the Bluetooth settings of your phone and select "**CAT-BT-SPK**" from the device list. Once selected, your phone will attempt to connect to the speaker.
3. When a successful connection is made, the speaker will chime and the indicator light will turn a steady blue.

If connection fails, try restarting both your phone and the speaker, then repeat steps 1-3.

FUNCTION DESCRIPTION

POWER ON/OFF
Press & hold the ⏻ button. When the speaker turns on or off, you will hear it chime.

LOW BATTERY
When the battery reaches low power, the speaker will start to "ding" every 10 seconds. If you do not connect the speaker to charge, the speaker will power off.

AUX MODE
Connect your device to the speaker with the 3.5mm audio/aux cable. Operate the music from your device. Press the **M** button to pause/play. The volume can be adjusted on the speaker using the +/- buttons. Press the **M** button twice to switch to Bluetooth mode.

FUNCTION DESCRIPTION *(continued)*

Note: in aux mode, you cannot control next song/ previous song from the speaker.

BLUETOOTH® MODE
After your device is successfully paired, you are ready to play music. Press and release **+/-** buttons to ***adjust volume***. Press & hold **+/-** buttons to ***toggle through songs***. Press & release ↘ button to ***play or pause***.

HANDS-FREE CALLING
When successfully paired with your device, the speaker will chime when you receive a call. Press the ↘ button to ***answer the call***. Press ↘ again to ***end the call***. Press and hold the ↘ button to ***reject a call***.

TROUBLESHOOTING

I can't hear any music.
Make sure the volume is turned up on both your device and the speaker. If you still don't hear anything, try pairing the speaker again.

I can't answer phone calls.
Not all phones support hands-free calling. Please refer to your cellular device manual.

I'm having trouble pairing my Bluetooth® device.
Make sure your device supports Bluetooth and Bluetooth is enabled. If the speaker doesn't show up in your list of nearby Bluetooth devices, try restarting the speaker.
Note: You cannot pair your device to the speaker if it is already paired to another Bluetooth device.

TROUBLESHOOTING *(continued)*

The speaker is cutting out/distorted.
Low battery and large obstructions between speaker and device will affect the Bluetooth distance capabilities and connection. For best results, make sure to keep your speaker charged and within 10 unobstructed meters of device.

Still having problems? Give us a call.
Toll free: 888-550-2837
Hours: Monday-Friday, 8am-5pm CST

ATTENTION

- Always store and use this speaker in a normal temperature environment.
- Do not expose speaker to rain or moisture.
- Do not attempt to disassemble, repair, or modify this product.
- Speaker contains a built-in lithium battery - please use proper methods when disposing.
- Always avoid contact with open flame. If ignited, lithium batteries produce toxic fumes.
- In the event of a malfunction, turn off the power and unplug the speaker from any device or charging cable to prevent damage to the speaker or other components.

Haut-Parleurs Sans Fil
Manuel de L'utilisateur

QU'Y A-T-IL DANS LA BOITE

Bluetooth® Haut-Parleur (1)
Micro USB câble USB de chargement (1)
Auxiliaires de 3,5 mm (1)
Manuel de l'utilisateur (1)

FONCTION DE BOUTON

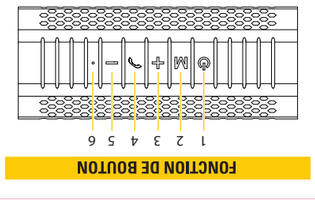

1. Appuyer et maintenir pour **allumer/éteindre**
2. Mode
3. Augmenter le volume/ chanson suivante
4. Appuyer une fois pour **lire/mettre en pause** la chanson
   Pour un appel entrant:
   Appuyer une fois pour **répondre/raccrocher**
5. Baisser le volume/chanson précédente
6. Microphone
7. Port auxiliaire de 3,5mm/ Réinitialiser *(auxiliaire intérieur)*
8. Port de charge Micro USB

SPECIFICATIONS

Nom de l'appareil: CAT-BT-SPK
Bluetooth nomme: Bluetooth 4.0
Bluetooth portée: 10 m
Bluetooth profil: HPF V1.5,HSP V1.2, A2DP V1.2, AVRCP
Puissance nominale: 18W
Gamme de fréquences: 100Hz-16KHz
Rapport signal sur bruit: 82 dB
Degré de distorsion: <10% THD (1KHz-6dB port)
Batterie: 7.4V intégré 2000mAh lithium
Port: Micro USB 5V 2A
Temps de charge: Environ 4 heures
Lecture de musique en continu: Environ 10 heures
Température de fonctionnement: 0-45˚C
Température de stockage: -10-60˚C

VOYANT INDICATEUR DEL

Charge: la DEL sera rouge lors de la charge. Lorsque l'appareil a fini de charger, la lumière s'éteint.
Mode de coupage: Les voyants bleu et rouge clignotent alternativement en mode coupage. Une fois le coupage terminé, vous verrez une lumière bleue constante.
Lire: Lumière bleue clignotant lentement.
Pause: Lumière bleue fixe.
Appels: La lumière bleue clignote lentement pendant l'appel.

CONNECTER PAR BLUETOOTH

1. Allumez le haut-parleur en maintenant la touche de fonction enfoncée jusqu'à ce que le haut-parleur émette un son. Une fois allumé, le haut-parleur est prêt à être couplé. *(Vous devriez voir le voyant DEL clignoter en rouge et bleu.)*
2. Ouvrez les paramètres Bluetooth de votre téléphone et sélectionnez "**CAT-BT-SPK**" dans la liste des appareils. Une fois sélectionné, votre téléphone tentera de se connecter au haut-parleur.
3. Lorsqu'une connexion réussie est établie, le haut-parleur émet un son et le voyant lumineux devient bleu fixe.

Si la connexion échoue, essayez de redémarrer votre téléphone et le haut-parleur, puis répétez les étapes 1-3.

DESCRIPTION DE LA FONCTION

Marche/arrêt
Appuyez et maintenez le ⏻ bouton. Lorsque le haut-parleur s'allume ou s'éteint, il émettra un son appel.

Mode
Une fois couplé avec votre appareil, le haut-parleur émettra un son lorsque vous recevez un appel.
Appuyez sur le bouton ↘ pour répondre à l'appel.
Appuyez de nouveau sur ↘ pour terminer l'appel.
Appuyez et maintenez le bouton ↘ pour rejeter un appel.

Appels mains libres
Une fois couplé avec votre appareil, le haut-parleur peut mettre en pause/lire. Le volume peut être réglé sur le haut-parleur à l'aide des touches +/-. Appuyez deux fois sur le bouton **M** pour passer en mode Bluetooth.

Mode aux
Connectez votre appareil au haut-parleur avec le câble audio/auxiliaire 3,5 mm. Faites marcher la musique de votre appareil. Appuyez sur le bouton **M** pour mettre en pause/lire. Le volume peut être réglé sur le haut-parleur à l'aide des touches +/-. Appuyez deux fois sur le bouton **M** pour passer en mode Bluetooth.

Batterie faible
Lorsque la batterie atteint une faible puissance, le haut-parleur fera un "ding" toutes les 10 secondes. Si vous ne chargez pas l'enceinte, puis l'enceinte s'éteindra.

Mode de coupage: Les voyants bleu et rouge clignotent alternativement en mode coupage. Une fois le coupage terminé, vous verrez une lumière bleue constante.

Lire: Lumière bleue clignotant lentement.

Pause: Lumière bleue fixe.

Appels: La lumière bleue clignote lentement pendant l'appel.

Remarque: en mode Aux, vous ne pouvez pas contrôler la chanson suivante/la chanson précédente de l'enceinte.

Mode Bluetooth®
Une fois couplé avec votre appareil, vous êtes prêt à écouter de la musique. Appuyez et relâchez les touches **+/-** pour régler le volume. Appuyez et maintenez les boutons **+/-** pour parcourir les chansons. Appuyez et relâchez le bouton ↘ pour lire ou mettre en pause.

Appels mains libres
Une fois couplé avec votre appareil, le haut-parleur peut mettre en pause/lire. Le volume peut être réglé sur le haut-parleur à l'aide des touches +/-. Appuyez deux fois sur le bouton **M** pour passer en mode Bluetooth. *Si c'est le cas, assurez-vous que le Bluetooth est activé. Si le haut-parleur n'apparaît pas dans la liste des périphériques Bluetooth à proximité, essayez de redémarrer le haut-parleur. Remarque: il se peut que vous ne puissiez pas coupler votre appareil au haut-parleur si un autre appareil est déjà connecté.*

Le haut-parleur s'éteint/est distordu.
Une batterie faible et de gros obstacles entre le haut-parleur et l'appareil affecteront les capacités et la connexion de la distance Bluetooth. Pour de meilleurs résultats, assurez-vous de garder votre haut-parleur chargé dans une distance de 10 mètres non obstrués de l'appareil.

Problèmes?
www.catmobileaccessories.com

DÉPANNAGE

Je n'entends pas de musique
Assurez-vous que le volume est activé à la fois sur votre appareil et sur le haut-parleur. Si vous n'entendez toujours rien, réessayez de coupler le haut-parleur.

Mode aux
Connectez votre appareil au haut-parleur avec le câble audio/auxiliaire 3,5 mm. Faites marcher la musique de votre appareil. Appuyez sur le bouton **M** pour mettre en pause/lire. Le volume peut être réglé sur le haut-parleur à l'aide des touches +/-. Appuyez deux fois sur le bouton **M** pour passer en mode Bluetooth.

Je ne peux pas répondre aux appels.
Tous les téléphones ne sont pas compatibles avec les appels mains libres. Veuillez vous référer au manuel de votre appareil.

J'ai de la difficulté à coupler mon appareil Bluetooth®.
Assurez-vous que votre appareil est compatible avec le Bluetooth. Si c'est le cas, assurez-vous que le Bluetooth est activé. Si l'appareil n'apparaît pas dans la liste des périphériques Bluetooth à proximité, essayez de redémarrer le haut-parleur. Remarque: il se peut que vous ne puissiez pas coupler votre appareil au haut-parleur si un autre appareil est déjà connecté.

Le haut-parleur s'éteint/est distordu.
Une batterie faible et de gros obstacles entre le haut-parleur et l'appareil affecteront les capacités et la connexion de la distance Bluetooth. Pour de meilleurs résultats, assurez-vous de garder votre haut-parleur chargé dans une distance de 10 mètres non obstrués de l'appareil.

Problèmes?
www.catmobileaccessories.com

ATTENTION

- Toujours stocker et utiliser ce haut-parleur dans un environnement à température normale.
- N'exposez pas l'enceinte à la pluie ou à l'humidité.
- N'essayez pas de démonter, de réparer ou de modifier ce produit.
- Le haut-parleur contient une batterie au lithium intégrée - veuillez utiliser des moyens appropriées pour la jeter.
- Toujours éviter le contact avec une flamme nue. Si elles sont allumées, les batteries au lithium produisent des vapeurs toxiques.
- En cas de dysfonctionnement, éteignez l'alimentation et débranchez le haut-parleur de tout périphérique ou câble de chargement pour éviter d'endommager le haut-parleur ou d'autres composants.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user’s authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.