audio icons FH1

IMPORTANT INFORMATION

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radi-ate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For more information and support, please visit ***AudioIcons.com***

audio icons

FH1

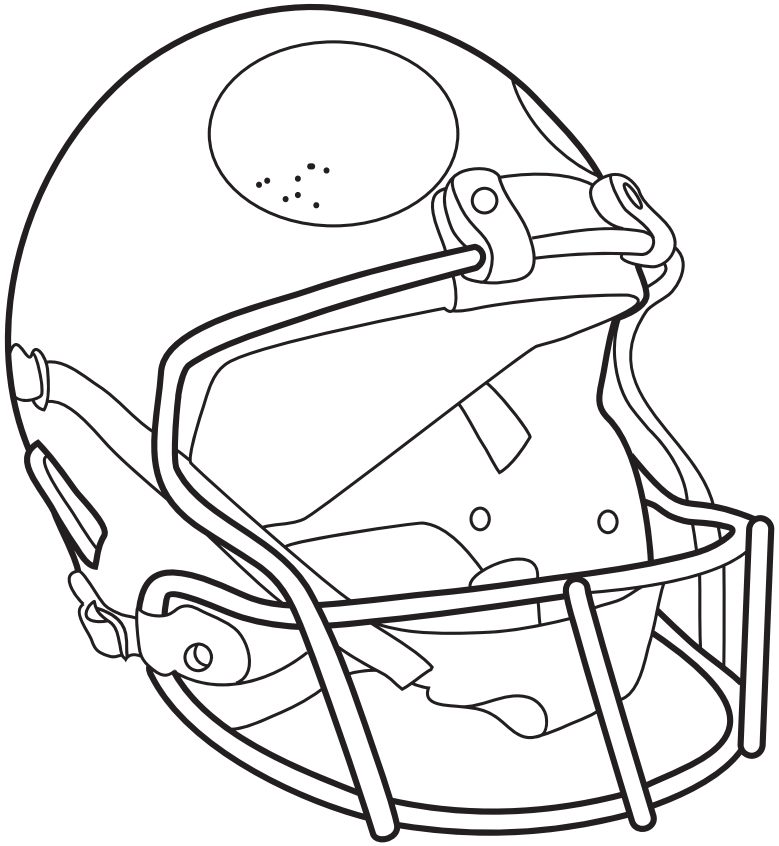

Operating Instructions

FH1 - Model 1.0

Instructions version 1.0

audio icons **FH1**

How to Operate

CHARGING the FH1

It is a good idea to fully charge your new FH1 before using it. Here's how:

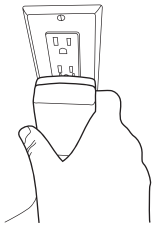

1

Plug the home charger into an outlet.

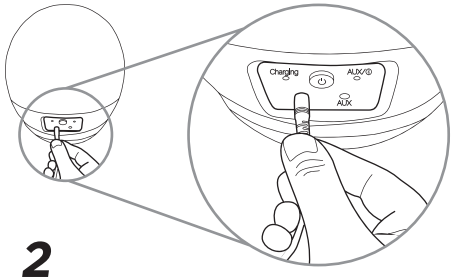

2

Plug the connector side into the port marked "**DC 12V**" located on the control panel on the back of the FH1.

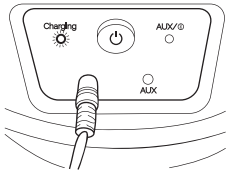

3

The "**Charging**" light will turn red indicating the FH1 is charging. A full charge can take up to 3 hours. A full charge is indicated by the "**Charging**" light turning green. Once the FH1 is charged you may unplug the charger connector.

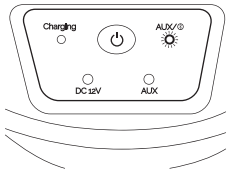

4

When the "**Aux**" light starts flashing it is time to charge the FH1. Follow the instructions above for charging.

IMPORTANT:
Do not use your FH1 while charging it

For more information and support, please visit ***AudioIcons.com***

USING the FH1

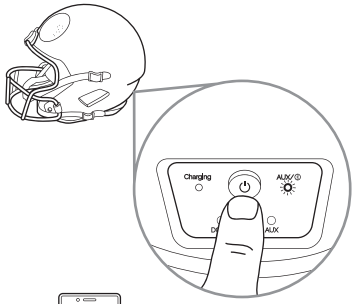

1

Turn on the FH1 by pressing the **On/Off button** (⏻) located on the control panel on the back of the FH1. You will hear "**Power On**" and the "**AUX**" light will flash blue and stay lit.



2

Turn on your phone or other wireless device Bluetooth and set to **discover** or **scan** mode.

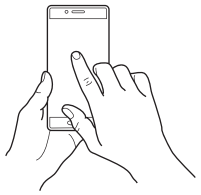

3

When your device detects "**Audio Icons FH1**" please select.

4

In a few moments you will hear "**Pairing Completed**" followed by a tone.

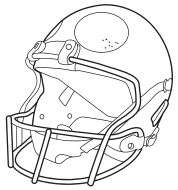

5

You are now connected* and ready to use your FH1. There is no need to pair again – it will be ready to use the next time you turn it on. Be sure your device Bluetooth is turned on each time.

6

If using a smartphone, we recommend turning down your notification volume so your play is not interrupted by notification tones.

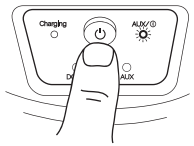

7

To turn off the FH1 simply press the **On/Off button** (⏻) on the FH1 control panel. You will hear "**Power Off**" and the "**AUX**" light will flash and then turn off.

***NOTE**: If you forget to charge the FH1, it will stop working even though the ON/OFF button is depressed.*

****You can also connect a device** by plugging an audio cable into your device's headphone jack and the other end into the FH1's AUX port.*