1 Power Button

2 MicroSD Lock/Unlock Button

3 Power Indicator – On

4 Battery Level Indicator

5 Charging Indicator

6 Wifi Status Indicator

7 Number of Wifi Users

8 MicroSD Copying Progress

9 MicroSD Lock/Unlock Indicator

10 Wifi Antenna Connector (Optional)

11 Micro USB Input (Charging Device)

12 MicroSD Port

13 USB Power Output (For Charging Other Devices)

POWER ON/OFF ⏻

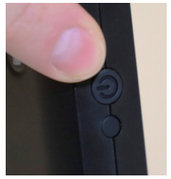

Hold power button for **2 seconds**

Wifi powers on **25 seconds** after device is turned on

To power Wifi on/off, hold SD lock button for **2 seconds**

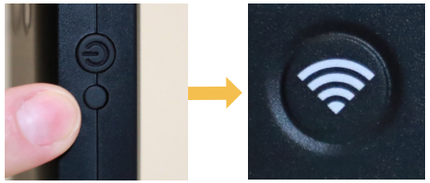

CONNECT TO WIFI

Ensure that Wifi is on

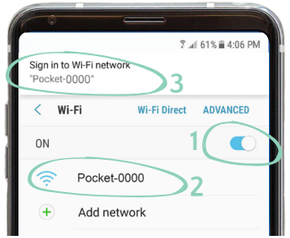

Note: Default Wifi name and homepage url are shown. Change in admin settings.

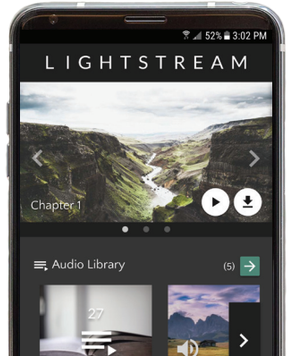

1 Wifi User

7+ Wifi Users

Model: RWOLSPv1
Input: DC 5V / 1.9A
Output: DC 5V / 500mA
Capacity: 5200mAh / 19.24Wh

MADE IN CHINA

Warning: Batteries should not be exposed to excessive heat such as sunshine or fire.

CHARGE BATTERY

Tap power button for battery level

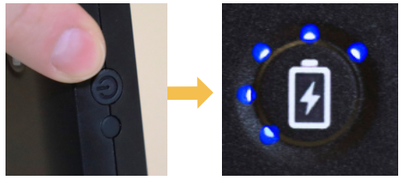

To Charge a Phone: Plug the phone into the USB port and tap the power button.

Full Charge	Low Battery
7 Lights =	1 Light =

Charge Time = About **5 hours**
Runtime = **10 hours**

MICRO SD COPYING

Lights flash to show progress

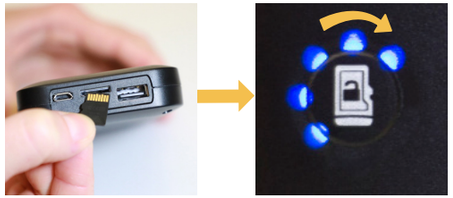

Green SD Light = Safe to remove SD card

All media copied sucessfully	Not enough space. Only some media copied.

To **lock or unlock SD card**, quickly press SD lock button.

Button can be disabled in admin settings.

MANAGE MEDIA & SETTINGS

Ensure that Wifi is on

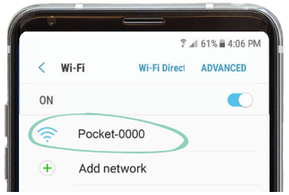

In web browser, navigate to
(By Default):

url: ConnectWifi.com/admin

Username: admin **Password:** admin

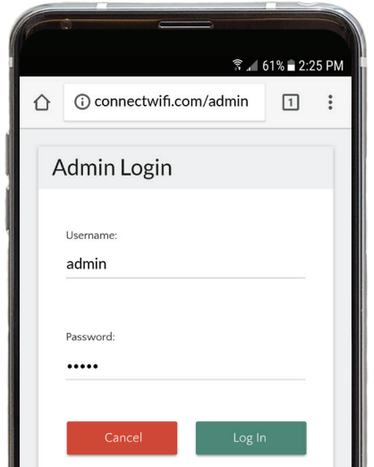

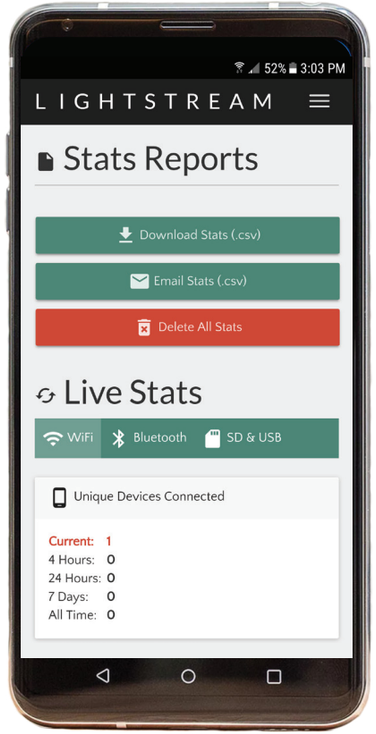

LIGHTSTREAM
POCKET

QUICK START

RENEWWORLD**OUTREACH**
RENEWOUTREACH.ORG