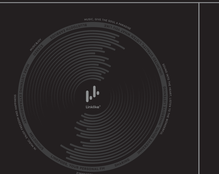

LINKLIKE TURE WIRELESS EARBUDS

Contents / Inhalt

EN

Specifications 01
Overview 02
Instructions 03
Description of the Electric Quantity and Display 07
Earbuds Indicator Instructions 08
Attentions 09
Battery Warnings 10

DE

Produktinformation 12
Übersicht 13
Bedienungsanleitung 14
Beschreibung der elektrischen Menge und Anzeige 20
Übersicht LED-Anzeige der Ohrhörer 21
Hinweise 22
Warnung zur Batterie 23

LKFREE0127A

Linklike®

Manufacturer: Linklike (Shenzhen) Technology Co., Ltd.
G2B2, Xintiana, B/A C, Zhantao Technology BLDG, Muzhi Avenue, Meishi St, Longhua DIST, Shenzhen, China
• Web: www.linklike-audio.com • E-mail: support@linklike-audio.com

Linklike is a trademark registered in the USA and other countries. All rights reserved.

Made in China

Specifications

EN

Product Name	LINKLIKE TURE WIRELESS EARBUDS
Model	LINKLIKE LinkPods
Wireless Name	LinkPods
Wireless Version	5.3
Wireless Transmission Distance	≤10m (Unobstructed and undisturbed open environment)
Charging Port	USB-C
Rated Charging Voltage and Current	5V ⎓ 0.5A
Lithium Battery Capacity of Charging Case	400mAh/1.48Wh
Charging Case Full Charged Time	≤2 hrs
Lithium Battery Capacity of Earbuds	27mAh/0.099Wh
Earbuds Full Charged Time	≤1 hr
Limiting Charging Voltage of Lithium Battery Capacity	4.2V
Operating Temperature	0°C~45°C
Storage Temperature	-10°C~45°C
Power Dissipation Per Chip	< 5mW
Delay Time of Chip	< 16ms
Loudspeaker Caliber	12mm
Package List	Earbuds ×2, Charging Case ×1, USB Cable ×1, User Manual ×1

The parameters above are derived from the laboratory of Linklike. The actual parameters would be different because of products or other factors. The image shown here is indicative only.

Overview

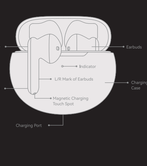

Instructions

Power On

1. The earbuds will power on when the charging case is opened.

2. The earbuds will power on when the control area is touched for 3s in power off state.

Power Off

1. The earbuds will power off when it is placed into the charging case and the case is closed.
2. The earbuds will power off when the control area is touched for 3s (any earbud).
3. The earbuds will power off if they haven't connected any device in 5 minutes.
4. The earbuds will power off if it is out of the connection range in 5 minutes.
5. The earbuds will power off when the battery runs out.

Pairing

1. In the first use, open the charging case, the earbuds will enter the pairing state automatically.
2. Turn on the Bluetooth function of your device, find the "LinkPods" from the Bluetooth Search List and click to connect. When you hear the successful prompt tone or the white light flashing for 1.5s, it means the connection is successful.

Pairing Left And Right Earbuds

1. The earbuds will pair with each other when it turned on. The connection is successful when the white lights on both ears flash rapidly and then goes off.
2. If the earbuds do not pair with each other within 30s, please place them into the charging case and close it, then try again.

Reset Factory Settings

Disconnect the earbuds and when it is power on, press the touch area for 5 times and hold it on the 5th time, until the white and red light flash alternately for 2 seconds.

Automatic Connection Restoration

1. After power on, the earbuds will automatically connect back to the last successfully paired device. If there is no such device for connection restoration, the earbuds will enter the pairing mode.
2. When the earbuds is out of connection range, it will enter reconnect mode within 1 minute to find the connected device, and within 1-3 minutes, it will enter pairing mode and power off after 3 minutes in the disconnected state.

Wearing

Please place the earbuds "L" and "R" accordingly into your left and right ear, and keep the logo "L" and "R" upright. Slightly rotate the earbuds until they fit tightly into your ears.

Note: please wipe and clean the earbuds at fixed intervals to keep them clean, or the body oil will cause the earbuds slide easily, unstable to wear and may cause some function problems when the charging port is dirty. Bad charging and battery problem.

Music/phone Call

Functions	Operation Methods
Pause/Play	Single press the left/right earbud to play/pause music.
Previous Music	Double press the left earbud to the forward track.
Next Music	Double press the right earbud to the back track.
Volume Down	Long press the left earbud to lower the volume.
Volume Up	Long press the right earbud to raise the volume.
Accepting Call	Double press the left/right earbud to accept a call.
Hanging Up Call	Press&Hold the left/right earbud for 1.5s to hang up a call.
Reject Call	Press&Hold the earbud for 1.5s to reject a call.
Voice Assistant	Triple press to activate/turn off the voice assistant (The phone needs to support voice assistant function.)

Volume Synchronization Specification

If your phone is not iOS, please turn on the volume sync function in Settings-Bluetooth-Earbuds Settings after you connected the earbuds, or turn on the Bluetooth Absolute Volume in Settings-Developer Options. Otherwise, it may affect the sound quality and volume adjustment function.

Description of the Electric Quantity and Display

1. Please make both the earbuds and Charging Case full charged before your first use.
2. The electric quantity of the Charging Case may be judged by the color and status of its indicator as shown in the following figure:

Mode	Electric Quantity	Indicator of the Charging Case
Charging	Full Charged Status	Indicator is steady on in white for 5s
	70%-100%	Indicator takes a slow blink in white for 2s
	30%-70%	Indicator takes a slow blink in yellow for 2s
	0%-30%	Indicator takes a slow blink in red for 2s

3. According to different system of phone, you can check the battery level of earbuds in the far left screen, Bluetooth connection interface or notification bar of the phone.
4. Use the USB-C charging cable to charge, the earbuds will be charged when it is placed into the charging case with the case closed.

Earbuds Indicator Instructions

Function	Indicating Status Of The Indicators
Power on	The white indicators are steady on for 1.5s
Power off	The red indicators are steady on for 1.5s
Pairing Mode	The indicators take dive flash in white
Successful Pairing	The white indicators are steady on for 1.5s
Low Battery	The red indicators blink 2 times quickly at an interval of 30s
Successfully Reset Factory Setting	The white indicator flash alternatively for 2s
Full Charged	The white indicators steady on for 2s

Attentions

Important Notes: Please keep it for future reference

1. This product must not be placed with corrosive elements.
2. Please do not use this product in hot or humid environments and do not allow it to be heated, over a source of ignition or a fire to avoid explosion.
3. No component outside for self-maintenance by users is applied in this product, so please do not disassemble it or refit it by yourself.
4. If this product is to idle for a long time, please store the earbuds into the Charging Case and ensure a dry storage environment, and make the Charging Case being charged at least once each month.
5. Please do not charge this product in temperatures below zero, as this will damage the battery.
6. Please do not use this product in thunderstorms as this may cause the earbuds to work improperly and increase the risk of electric shock.
7. Please adjust the system volume to a moderate level, for an excessive volume would incur a higher risk of hearing damage.
8. Please don't use this product in circumstances that special attentions are required (i.e. when in traffic or engaged in skilled works).
9. When using the charger for power supply, please purchase or use a charger that has obtained certification and meets the standard requirements.
10. In order not to facilitate the normal use of this product, please use a USB-C charging adapter that meets national standards.
11. Please keep the product accessories and packaging parts out of the reach of children and pets to avoid accidents and choking hazards.

Battery Warnings

This product is equipped with a built-in lithium battery, and please pay attention to the following:

1. Please charge the product in time when the battery is low. To protect the battery when not in use for a long time, please turn on the product every 3 months until the battery power runs out and then fully charge the product. It is recommended to use and store it in a suitable environment.
2. It is forbidden to disassemble, hit, squeeze or throw it into fire. If severe swelling occurs, stop to use it and handle it to professional maintenance.
3. There is a risk of explosion if the battery is improperly replaced, and it can only be replaced with a battery of the same or equivalent type by a professional.
4. The battery (battery pack or assembled battery) shall not be exposed to overheated environments such as sunlight or fire.
5. Products containing lithium batteries should be handled separately from household waste. If the product is disposed of, it is necessary to remove the battery and insulate the positive and negative ends and put it into the designated recycling locations or hand it over to the environmental protection recycling department for disposal, and cannot discard it at will.
6. Steps for disassembling the battery: ① Disassemble this product and take out the PCB and battery pack; ② Unscrew the screws in sequence with a screwdriver; ③ Separate the battery PCB and shell. The battery may be taken out by cutting off the connecting line between battery and PCB. (Special warning: Do not cut off all the cables between the battery and the circuit board at the same time.)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Produktinformation

DE

Produktname	LINKLIKE TURE WIRELESS OHRHÖRER
Modell	LINKLIKE LinkPods
Gerätename	LinkPods
Drahtlose Version	5.3
Reichweite Der Drahtlosen Übertragung	≤10m (In Fällen einer offenen Umgebung ohne Hindernisse oder Interferenzen)
Anschluss zum Aufladen	USB-C
Ladespannung	5V ⎓ 0.5A
Kapazität der Lithium-Batterie in der Ladebüchse	400mAh/1.48Wh
Zeit für vollständige Ladung	≤1.5h
Kapazität der Lithium-Batterie des Kopfhörers	27mAh/0.099Wh
Zeit bis zum vollständigen Aufladen des Kopfhörers	≤1.5h
Begrenzung der Ladespannung der Lithium-Batteriekapazität	4.2V
Betriebstemperatur	0°C~45°C
Lagertemperatur	-10°C~45°C
Chip-Verlustleistung	< 5mW
Chip-Verzögerungszeit	< 16ms
Lautsprechermäßer	12mm
Produktliste	Ohrhörer ×2, Ladebüchse ×1, USB-Kabel ×1, Kurzanleitung ×1

Die obigen Parameter stammen aus dem Labor von Linklike. Der tatsächliche Parameter würde sich aufgrund von Produkten und anderen Faktoren unterscheiden. Das Foto ist für referenz, basierten Sie sich auf das produkt.

Übersicht



Bedienungsanleitung

Einschalten

1. Nehmen Sie die obere Abdeckung der Ladebüchse geöffnet und schalten sich die Ohrhörer automatisch ein (die Ladebüchse muss eine bestimmte Menge an elektrischer Energie speichern).

2. Wenn die Geräte ausgeschaltet wurde, kann es durch langes Berühren des Touch-Bedienfläche für 3 Sekunden eingeschaltet werden.

Auszuhalten

1. Legen Sie den Ohrhörer in die Ladebüchse, und der Ohrhörer wird automatisch ausgeschalten, wenn die Abdeckung geschlossen wird (die Ladebüchse muss eine bestimmte Menge an elektrischer Energie speichern).
2. Automatische Abschaltung, wenn eine der beiden Seiten des Berührungsfeldes 3 Sekunden lang berührt wurde.
3. Automatische Abschaltung, wenn der Pairing-Status 5 Minuten lang ohne Verbindung anhält.
4. Automatische Abschaltung, wenn nach 5 Minuten außerhalb des Verbindungsbereichs keine Verbindung besteht.
5. Automatische Abschaltung, wenn der Akku leer ist.

Bluetooth-Funkverbindung

1. Wenn Sie das Ohrhörer zum ersten Mal benutzen, öffnen Sie die obere Abdeckung des Ladeeffekts. Das Ohrhörer schaltet sich automatisch ein und geht in den Kopplungsstatus ein.
2. Gehen Sie die Bluetooth-Funktion Ihres Geräts ein, suchen Sie in der Bluetooth-Suchliste nach "LinkPods und klicken Sie auf Verbinden. Die Verbindung ist erfolgreich, wenn Sie einen erfolgreichen Kopplungston hören oder wenn die weiße Anzeigeleuchtet Leuchte 1.5 Sekunden lang von Blinkgenen blinken auf konstantes Leuchten übergeht.

Linken und rechten Ohrhörer koppeln

1. Nach dem Einschalten werden die Linke und der rechte Ohrhörer automatisch gekoppelt. Wenn das weiße Anzeigeleuchtend Licht in beiden Ohren schnellblinkt und dann erlischt, ist die Kopplung erfolgreich.
2. Wenn die Linke oder der rechte Ohrhörer nicht innerhalb von 30 Sekunden gekoppelt werden können, legen Sie sie einfach zurück in die Ladebüchse, schließen Sie die Abdeckung und öffnen Sie sie erneut, um den Abgleich zu wiederholen.

Werkseinstellungen Zurücksetzen

Wenn das Ohrhörer eingeschaltet, aber nicht mit dem Gerät verbunden ist, klicken Sie 5 Mal hintereinander auf die Touch-Taste, eine Fünfte Mal, wenn die Lampe blinkten, lös die Ohrhörer Anzeige weiß (orange) rot (blinken schnell) abwechselnd mit 2 Sekunden und dann erlöschen, dann ist die Paarung erfolgreich gelöscht.

Automatische Wieder-Verbindung

1. Der Ohrhörer wird automatisch mit den letzten Gerät verbunden, mit dem eine Verbindung erfolgreich hergestellt wurde. Wenn es kein solches Gerät gibt, mit dem die Verbindung erfolgreichgestellt werden kann, wechselt der Ohrhörer in den Anzeigemodus.
2. Bei einer Bluetooth-Verbindung wird der Ohrhörer automatisch wieder mit dem Mobilgerät verbunden, wenn sich beide Geräte weniger als eine Minute lang außerhalb des Verbindungsbereichs befinden.

Ohrhörer zu tragen

Bitte setzen Sie die Ohrhörer "L" und "R" entsprechend in Ihr linkes und rechtes Ohr ein, und halten Sie das Logo "L" und "R" aufrecht. Drehen Sie die Ohrhörer leicht, bis sie fest in Ihren Ohren sitzen.

Hinweis: Bitte wischen und reinigen Sie die Ohrhörer regelmäßig, um sie sauber zu halten, denn das Fett sorgt dafür, dass die Ohrhörer leicht verrutschen und instabil zu tragen sind, und auch Schmutz oder Pickel auf dem Ladeanschluss hinterlassen, so dass sie nicht aufgeladen oder ausgeschaltet werden können.

Musik Ohrruhen

Funktionen	Bedienungsmethoden
Pause/Wiedergabe	Drücken Sie einfach/gemeinsam einfach auf die Touch-Bedienfläche, um die Musik zu pausieren/wiederzugeben.
Vorherigen Lied	Tippen Sie doppelt auf das linke Touch-Bedienfläche, um zum vorherigen Titel zu wechseln.
Nächstes Lied	Tippen Sie doppelt auf die rechte Touch-Bedienfläche, um zum nächsten Titel zu wechseln.
Lautstärke runter	Drücken Sie lange auf den Touch-Bedienfläche auf der linken Seite, um die Lautstärke herabzusetzen.
Lauter	Drücken Sie lange auf den Touch-Bedienfläche auf der rechten Seite, um die Lautstärke heraufzusetzen.
Anrufen eines Anrufs	Tippen Sie zweimal auf die Berührungsfläche auf beiden Seiten des Bluetooth-Ohrhörers, um den Anruf anzunehmen.
Auflegen eines Anrufs	Drücken Sie 1.5 Sekunden lang auf eine der beiden Seiten des Bluetooth-Ohrhörers, um den Bluetooth-Ohrhörer zu trennen.
Ablehnen eines Anrufs	Drücken Sie 1.5 Sekunden lang auf eine der beiden Seiten des Bluetooth-Ohrhörers, um den Bluetooth-Ohrhörer zu trennen.
Sprachassistent	Tippen Sie dreimal hintereinander auf die Touch-Bedienfläche, um den Sprachassistenten aufzurufen oder zu schließen. (Das Telefon muss die Sprachassistentenfunktion unterstützen.)

Lautstärkesynchronisation

Wenn Sie ein Nicht-iOS-Gerätes haben, schalten Sie bitte die Funktion zur Lautstärkesynchronisierung unter Einstellungen-Bluetooth-Headset-Einstellungen ein, nachdem Sie die Ohrhörer angeschlossen haben. Oder aktivieren Sie die Funktion Bluetooth Absolute Lautstärke unter Einstellungen > Entwicklersoptionen. Andernfalls können die Klangqualität und die Funktion zur Lautstärkeregelung beeinträchtigt werden.

Beschreibung der elektrischen Menge und Anzeige

1. Bitte lassen Sie sowohl den Ohrhörer als auch dass Ladebüchse den ersten Gebrauch vollständig auf.
2. Die Stromenge in der Ladebüchsen kann anhand der Farbe und des Status der Anzeige wie in der folgenden Abbildung dargestellt beurteilt werden.

Mode	Elektrische Menge	Überstatt LED-Anzeige der Ladebüchse
Charging	Voll geladener Status	5 Sekunden weißes Licht, bevor die LED-Anzeige erlischt.
	70%-100%	Langsam blinkenden weißen Licht einmal alle 2 Sekunden
	30%-70%	Langsam blinkenden gelben Licht einmal alle 2 Sekunden
	0%-30%	Langsam blinkenden roten Licht einmal alle 2 Sekunden

3. Also Ladestand anzeigen: Wenn die Ohrhörer mit ihrem Bluetooth-Gerät verbunden sind, kann der Akkustand auf dem vorherigen Bildschirm Ihres Telefons, auf dem Bildschirm für die Bluetooth-Verbindung oder in der Benachrichtigungsleiste Ihres Telefons angezeigt werden. Gültigkeit von verwendetem Gerät und Betriebssystem)
4. Die Ladebüchse muss zum Aufladen mit dem USB-C-Ladekabel verbunden werden, und die Ohrhörer werden automatisch aufgeladen, wenn sie in die Ladebüchse gelegt und der Deckel geschlossen wird.

Übersicht LED-Anzeige der Ohrhörer

Funktion	LED-Anzeige Status der Brillisatoren
Einschalten	Doppelte Ohrsignal blinken 1.5 Sekunden lang mit weißen Licht
Ausschalten	Doppelte Ohrsignal blinken 1.5 Sekunden lang mit Rotes Licht
Pairing-Modus	Binaurales Modi: Beide Anzeigen blinken langsam in weiß. Monaurales Modi: Eine Anzeige blinkt langsam weiß
Erfolgreiches Pairing	1.5 Sekunden weißes Licht, bevor die LED-Anzeige erlischt
Erfolgreiches Pairing	Langsam blinkenden weißen Licht einmal alle 2 Sekunden
Niedriger Akku	Langsam blinkenden rotes Licht einmal alle 2 Sekunden
Erfolgreiches Zurücksetzen der Ohrhörer	Die Anzeige blinkt 2 Sekunden lang abwechselnd rot und weiß
Vollständig Aufgeladen	Die Anzeige leuchtet 2 Sekunden lang konstant in weiß, bevor sie erlischt

Hinweise

Wichtige Hinweise: Bitte bewahren Sie es für späteren Nachlagen auf.

1. Dieses Produkt darf nicht mit ätzenden Reinigungsmittel gereinigt werden.
2. Bitte verwenden Sie dieses Produkt nicht in heißer oder feuchten Umgebung, und es darf nicht erhitzt, in der Nähe oder ins Feuer gebracht werden, um eine Explosion zu vermeiden.
3. Dieses Produkt enthält keine Komponenten, die für die Selbstwartung durch den Benutzer geeignet sind, daher sollten Sie es nicht selbst zerlegen oder wieder zusammensetzen.
4. Wenn dieses Produkt längere Zeit nicht benutzt wird, bewahren Sie das Kopfhörer bitte in der Ladebüchse auf und sorgen Sie für eine trockene Lagerungsumgebung, und halten Sie die Ladebüchse mindestens einmal im Monat auf.
5. Bitte halten Sie dieses Produkt nicht bei Temperaturen unter Null Grad auf, da sonst die Batterie beschädigt werden könnte.
6. Bitte verwenden Sie dieses Produkt nicht bei Gewitter, da somit der Kopfhörer nicht richtig funktioniert und ein höheres Risiko eines elektrischen Schlages besteht.
7. Bitte stellen Sie die Systemlautstärke auf ein moderates Niveau ein, da eine zu hohe Lautstärke das Risiko von Hörschäden erhöht.
8. Bitte verwenden Sie dieses Produkt nicht unter Umständen, die besondere Aufmerksamkeit erfordern (z.B. im Straßenverkehr oder bei handwerklichen Arbeiten).
9. Falls Sie das Gerät mit einem Ladegerät betreiben, verwenden Sie bitte nur Ladegeräte, die das Zertifikat besitzen und die Standardanforderungen erfüllen.
10. Um die ordnungsgemäße Funktion dieses Produkts zu erleichtern, verwenden Sie bitte die USB-C-Ladestecker, die den nationalen Standards entsprechen.
11. Bitte Bewahren Sie das Zubehör und die Verpackungsteilen dieses Produkts an einem Ort, der für Kinder oder Haustiere unzugänglich ist, um Unfälle oder Erstickungsgefahr zu vermeiden.

Warnung zur Batterie

Dieses Produkt ist mit einer eingebauten Lithium-Batterie ausgestattet. Bitte beachten Sie die folgenden Punkte:

1. Laden Sie das Produkt bitte rechtzeitig auf, wenn die Batterie schwach ist; wenn es längr Zeit nicht benutzt wird, schalten Sie das Produkt bitte alle 3 Monate ein, bis die Energie erschöpft ist, und laden Sie es dann vollständig auf, um eine Beschädigung der Batterie zu vermeiden, es wird empfohlen, das Produkt bei einer geeigneten Umgebungstemperatur zu benutzen und zu lagern.
2. Es ist verboten, das Gerät zu zerlegen, zu schlagen, zu quetschen oder ins Feuer zu werfen. Wenn eine starke Schwellung auftritt, stellen Sie den Gebrauch sofort ein und lassen Sie es einer professionellen Wartung.
3. Es besteht Explosionsgefahr, wenn die Batterie unsachgemäß ausgetauscht wird, und es darf nur von einem Fachmann durch eine Batterie desselben oder eines gleichwertigen Typs ersetzt werden.
4. Die Batterie (Akkupack oder zusammengesetzte Batterie) darf nicht überhitzten Umgebungen wie Sonnenlicht oder Feuer ausgesetzt werden.
5. Bei Produkten, die Lithiumbatterien enthalten, entsorgen Sie diese bitte getrennt vom Hausmüll. Wenn das Produkt entsorgt wird, nehmen Sie die Batterie heraus, isolieren Sie Plus- und Minuspol und geben Sie sie an der dafür vorgesehenen Recyclingstelle ab oder übergeben Sie sie der Umweltschutz- und Recyclingabteilung zur Entsorgung, werfen Sie sie nicht weg.
6. Schritte zum Zerlegen der Batterie: ① Zerlegen Sie dieses Produkt und nehmen Sie die Leiterplatte und die Batterie heraus; ② Lösen Sie die Schrauben der Reihe nach mit einem Schraubendreher; ③ Trennen Sie die Batterie, die Leiterplatte und das Gehäuse. Die Akku kann durch Abschneiden der Verbindungsleitung zwischen Akku und Platine angenommen werden. (Besondere Warnung: Schneiden Sie nicht alle Kabel zwischen der Batterie und der Leiterplatte gleichzeitig ab.)

LABEL

LINKLIKE TURE WIRELESS EARBUDS
Model: LINKLIKE LinkPods
FCC ID: 2AR3ELINKPODS

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

•Reorient or relocate the receiving antenna.

•Increase the separation between the equipment and receiver.

•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.