RAZ Mobility

QUICK START **GUIDE**

Welcome to the world of

Lucia

Mobile phone for individuals who are blind, visually impaired or hard of hearing, and for seniors.

www.razmobility.com

LUCIA MOBILE PHONE

Additional Support

Please visit www.luciaphone.com/support for additional information, including:

- A downloadable PDF version of the LUCIA Quick Start Guide
- A downloadable PDF version of the LUCIA User Guide
- Tutorial videos
- Frequently Asked Questions

Customer Support

If you have any questions, you may also contact Customer Support:

- Web chat: www.razmobility.com/support
- Email: customersupport@razmobility.com
- Phone: 1-800-729-0083

Included with your LUCIA phone:

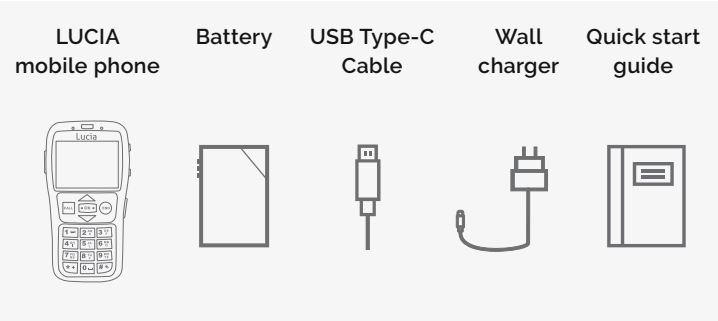

BEFORE YOU START

Insert the battery and SIM card. Please follow instructions on page 8.
You must fully charge your device before using it for the first time.
Plug your LUCIA phone into a wall outlet using the wall charger and USB Type-C cable included with your phone.
You can use the phone while it charges.
Turn the phone on. To turn the phone on, push up the slider and hold it in that position for at least 3 seconds. Your phone will vibrate, letting you know that it is starting the activation process.
After it vibrates, release the slider. Within a few seconds, LUCIA will begin to speak.

CHARGING LUCIA

Plug the cable into the phone to charge the battery. The charger is supplied in two pieces: a wall charger and a USB Type-C cable. Insert the larger of the two ends into the USB port of the wall charger. You're now ready to plug in and charge your phone.

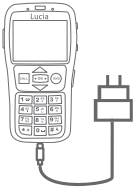

GENERAL DESCRIPTION

Let the LUCIA Mobile Phone read to you with its built-in voice guide. On-screen information is spoken aloud. Scroll through your contact list and hear the names read out or open a text message and LUCIA will read it to you. Writing text messages is just as easy. As you type, each letter and completed words are read aloud. The LUCIA mobile phone has a simple menu and tactile, color-coded buttons. You'll also like the number keypad with the large and well-spaced tactile buttons, ensuring you'll hit the right button every time.

- Speaks the date, time, wireless provider, signal strength and remaining battery charge
- Choose from available languages and voices
- Announces the names stored in Contacts for incoming calls
- Adjust the speech speed between 80% and 200% in increments of 10%
- Allows to find what you're looking for quickly with its simple menu system
- SOS button
- Sound Boost
- Compatible for use with hearing aids (HAC)
- Unlocked for compatible GSM networks

ORIENTATION - FRONT

This section will assume that you have the phone laid flat on a table with the buttons closest to you.

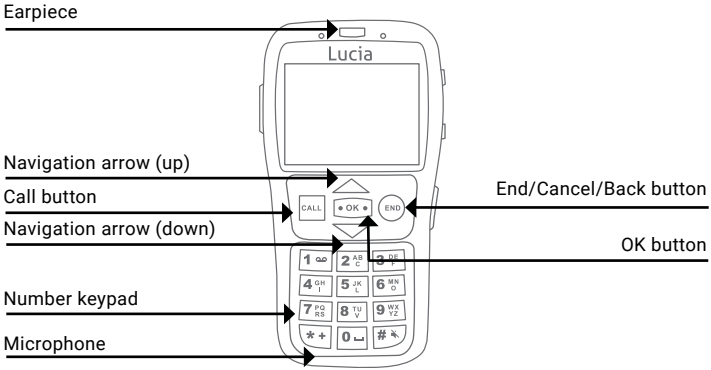

The front face of the phone has five buttons underneath the screen. On the left is the square CALL button (green) and on the right is the round END/Cancel button (red). Between these buttons are the up/down navigation buttons. Between the navigation arrows is the smaller, rectangular OK button (blue).
Directly above the screen, in the center, is the earpiece. The number keypad is in the lower part of the phone. It is laid out in the standard four rows of three buttons with the first row, from left to right, containing one, two and three. The second row has four, five and six. The third row contains seven, eight and nine. The last row has the star, zero and pound (the phone refers to the pound button as a “number sign”).

ORIENTATION - EDGES

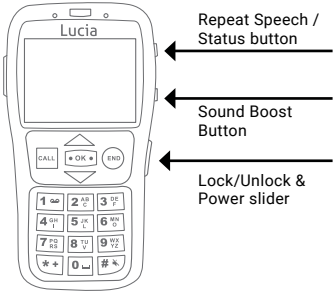

Right Edge
There are three buttons on this edge. From top to bottom they are as follows: the Repeat Speech button, Sound Boost button, and Lock/Unlock & Power slider. The Repeat Speech button also serves as the phone Status button and as the Voice Guide ON/OFF button.

Left Edge

On the left edge, near the top of the phone is the volume rocker button. Push the top of the button to increase volume, and the bottom to lower it.

This rocker button adjusts the volume of the speech when not in a call and the earpiece volume when in a call.

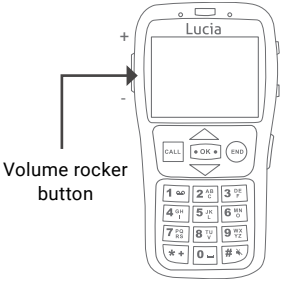

ORIENTATION - TOP, BOTTOM & BACK

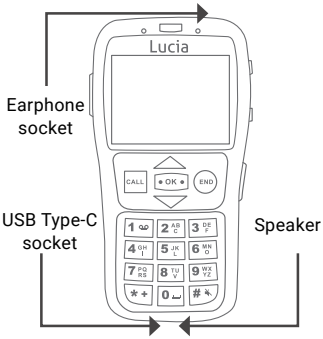

Top Edge

On the top edge, near the right end of the phone there is a small round hole which is the earphone socket. It is a standard socket for a 3.5 mm plug.

Bottom Edge

On the bottom edge, on the left there is the USB Type-C port used for charging. On the right are small openings for the speaker.

Back

The back is a solid, one-piece cover with a recessed SOS button in the top center. The back also serves as the battery cover and is attached by clip on the inside. It can be opened by accessing a small recess on the right side of the bottom edge.

DISPLAY SCREEN

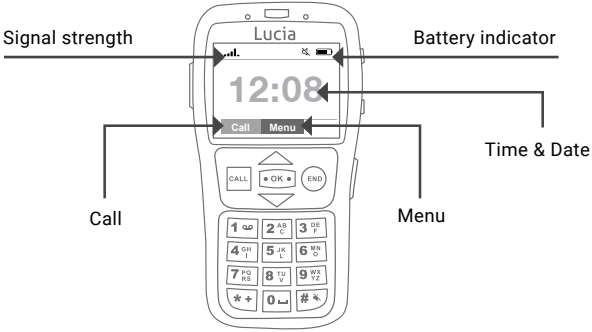

- The home screen has several icons arranged around the screen. On the top left is the signal strength indicator. In the center is the Voice Guide/text-to-speech indicator. If crossed out, the Voice Guide is turned off and LUCIA will not speak. On the right is the battery indicator. The icon shows a battery. When the battery is full, the icon will also show as full. As the remaining charge in the battery decreases, the battery icon will be displayed as only partially full.
- In the default setting, the time is displayed in the center of the screen.
- Assuming the keypad is unlocked (see Turning the Phone on and off), along the bottom of the screen you will find the words “Menu” and “Call” in blue and green, respectively. To access the “Menu”, press the blue OK button in the center. To use “Call”, press the green CALL button to place a call after dialing a number or selecting a phone number from Contacts.
- To hear the phone status, including date and time, battery level and carrier, simply press the Repeat Speech button on the right edge of the phone (when on the home screen).

GETTING STARTED

Fitting the SIM Card and Battery

Below are instructions on how to remove the battery and insert or remove a SIM card. Note that LUCIA is an unlocked GSM mobile phone that works on any GSM network.

Removing the Battery Cover

Turn off the phone before you remove the battery. Turn it over so the screen faces down, with the buttons closest to you. The LUCIA phone battery cover is a one-piece cover across the back of the phone. There is a recess in the bottom left corner. Begin lifting the cover from this corner to safely release the other clip.

Removing the Battery

To remove the battery, simply start lifting it from the bottom.

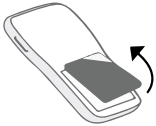

Inserting/Removing the SIM Card

If you need to remove or install a SIM card, simply follow these directions: the SIM tray is located in the bottom left corner of the battery compartment underneath the battery. The SIM card lies with the metal contacts face down and the cut-off corner at the top left. The SIM tray is covered by a metal bridge. Remove the SIM card from its holder, orientate the SIM so that the metal contacts are facing down, and the cut-off corner is at the top left. Slide the SIM card into the SIM tray under the bridge as indicated. The LUCIA phone uses standard SIM cards.



Removing the Battery Cover

Turn off the phone before you remove the battery. Turn it over so the screen faces down, with the buttons closest to you. The LUCIA phone battery cover is a one-piece cover across the back of the phone. There is a recess in the bottom left corner. Begin lifting the cover from this corner to safely release the other clip.

Removing the Battery

To remove the battery, simply start lifting it from the bottom.

Inserting/Removing the SIM Card

If you need to remove or install a SIM card, simply follow these directions: the SIM tray is located in the bottom left corner of the battery compartment underneath the battery. The SIM card lies with the metal contacts face down and the cut-off corner at the top left. The SIM tray is covered by a metal bridge. Remove the SIM card from its holder, orientate the SIM so that the metal contacts are facing down, and the cut-off corner is at the top left. Slide the SIM card into the SIM tray under the bridge as indicated. The LUCIA phone uses standard SIM cards. To the right of the SIM card is a storage card slot. In case a storage card is inserted in your phone, the card will store additional voices for the phone and must not be removed as this will stop your phone from working properly.

Inserting/Replacing Batteries

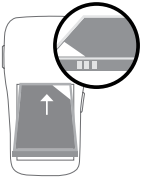

The battery will only fit into the compartment one way. Please do not force it as this may damage your phone. The battery has gold contacts on one of its edges, line these up with the contacts in the top right of the battery compartment and insert the battery first onto the contacts then lay the battery flat into the compartment.

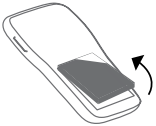

Additionally, there is a black triangle in the top right corner of the battery compartment and a white one on the battery, indicating the correct battery position.

Fitting the Battery Cover

Place the battery cover on to the back of the phone and press around the edges until the clip, positioned around the edges of the phone, lock.

TURNING THE PHONE ON AND OFF

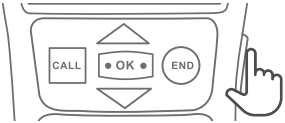

To turn the phone on, push up the slider and hold it in that position for at least 3 seconds. Your phone will vibrate, letting you know that the phone is starting the activation process. After it vibrates, release the slider. Within a few seconds, LUCIA will begin to speak.

The first time you turn on your phone, you will be prompted to select the language and voice, and to set the date and time. Use the arrows to select the desired language. LUCIA will repeat it back to you. To confirm your selection, press OK. Use the arrows to select the current year. LUCIA will repeat it back to you. Press OK to move onto the month. Use the arrows to select the current month and press OK, then select the day and press OK. LUCIA will then read back the full date you have set before asking you to enter the time. Follow the same process to set the time. You can adjust the time and date at any time.

When the phone isn't used for a period of time, the keypad lock is automatically activated. You can unlock the keypad by sliding up the lock/unlock slider located on the right edge of the phone. You can also lock the phone by sliding up the lock/unlock slider.

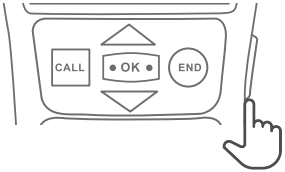

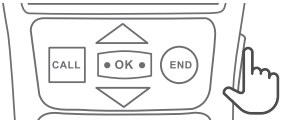

To turn off the phone, ensure the keypad lock is not active and that you are on the home screen. Push up the slider and hold it for at least 3 seconds until you hear a prompt informing you that the phone is turning off.

MAKING A CALL & ANSWERING A CALL

When on the home screen, you can make a call simply by typing in the number using the keypad and pressing the green, square CALL button followed by the blue OK button or the CALL button again. Press the round, red END button to delete any incorrect button presses. You do not need to wait for LUCIA to read out each number.

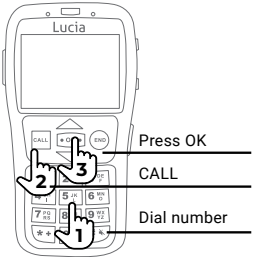

Press the repeat speech button on the right edge of the phone at any time to hear the numbers you have typed. The number you are dialing will also be repeated once you press the CALL button.

To call a contact, either press the down navigation arrow while on the home screen or press OK to enter the main menu and navigate down to contacts. When you enter your contact list, your first contact will be read aloud to you. Your contacts are listed alphabetically. Use the navigation arrows to highlight the contact you wish to call. Then, select the contact's number you wish to dial (work, home or mobile) and press the CALL button. Or, press the OK button - you will then be asked to confirm that you want to call the contact. Press OK to confirm or the round END button to go back.
To hang-up a call, simply press the round END button.
To answer a call, simply press the square CALL button.

CALL LOG

Your call log allows you to access your dialed numbers, received calls and missed calls. Navigate to the Call Log from the home screen by pressing the OK button. Use the navigation arrows to select Call Log and press the OK button to confirm.

There are three submenus in Call Log. These are Dialed Numbers, Received Calls and Missed Calls. You can view each submenu by using the navigation arrows to highlight the submenu you wish to view and pressing the OK button to confirm. Each submenu will list the calls by name if they are in your contact list or by number if not. It will also detail the number of calls after the name or number is announced.

Use the navigation arrows to move through the list. Press the square CALL button to call the entry or press the OK button to hear more details of that call. The phone number, call date and time will then be read out. Press the square CALL button to dial or the round END button to go back to the list of calls.

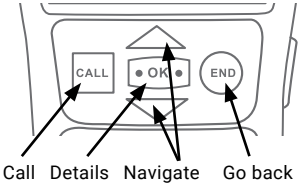

ADDING A CONTACT

Add new contacts from the Contacts submenu by selecting Add Contact and pressing the blue OK button. You will now be asked to enter the contact's name. Enter the name using the keypad. The number keypad uses the standard text entry method for number keypads. Simply press the relevant button the correct number of times without pausing to enter the corresponding letter. Press the pound key to switch between capitals, lower case and numbers.

Once you have entered the name, press the blue OK button to continue entering the contact's details. You will then be asked to enter the contact's number. Press OK again to save the contact. Then, select the identifier for the contact's phone number – work, home or mobile. Press the blue OK button to confirm or the red END/Cancel button to go back and change any details, using the red END/Cancel button to

delete any errors. LUCIA will then confirm that contact's number has been successfully saved. New contacts will be automatically assigned the default ringtone.
You can also add a number to your Contacts from the Call Log or from Messages. When in a call log list, highlight the number you wish to save in your contacts, and then press the ZERO button. LUCIA will then ask you to enter a name. Complete this step by following the same process as when adding a contact manually.
To add a number from your messages, go to the Inbox in the Messages submenu and press OK. Highlight the number you wish to save to your contacts, and press OK, and then select "Save number". The remaining steps to add the number to contacts are the same as from the Call Log.

SETTINGS

To access "Settings" from the home screen, press the OK button, and use the navigation arrows to highlight "Settings". Press OK. Use the navigation arrows to highlight the setting item you wish to access and press OK.
Date and Time: The date and time settings option can be found in "Date and Time", under the category "General" in "Settings". Enter the year, month and day by using the navigation arrows, scrolling up or down until you reach the desired year, month and day. After verifying your selection, press the OK button. You can enter the time by following the same process.
Language: The "Language" settings option can be found under the category "General" in "Settings". There are several language and voice options from which you can choose. Use the navigation arrows to highlight the language and press the OK button to select. This will change the menu and voice guide to the selected language.
After that, you need to choose the voice you would like to apply from the available voice names by using the up or down navigation arrows. Press OK to save your selection. There will be a delay of approximately five seconds after which LUCIA will confirm your selection.
Voice Guide: The "Voice Guide" settings option can be found under the

category “Sound” in Settings. Use the up or down navigation arrows to highlight Sound and press OK. Highlight Voice Guide, highlight desired voice name. Press OK to confirm.
There will be a delay of approximately five seconds after which LUCIA will confirm your selection.
Voice Speed: The “Voice Speed” option can be found under the category “Sound” in “Settings”. Use the up or down navigation arrows to increase or decrease the speed of the speech and press OK to confirm. Adjust the speed between 80% and 200% in increments of 10%.
Color Scheme: The “Color Scheme” settings option can be found under the “Display” category in “Settings”. Highlight “Color Scheme” and press OK to confirm. Change how menus appear on the screen. They can appear in various color combinations. Use the navigation arrows to select the preferred color combination and press the OK button to save.
Brightness: The “Brightness” settings option can be found under the category “Display” in “Settings”. The screen brightness can be adjusted between 0 and 100. Use the up and down navigation arrows to change the brightness in 5% increments and press the OK button to save.
Ringtones: The “Ringtones” settings option can be found under the category “Sound” in “Settings”. There is a choice of different ringtones. Whenever you add a new contact it will automatically use the default ringtone.
SOS: For peace of mind, you can set up emergency contact numbers that will automatically be called when you press the SOS button on the back of the phone for three seconds or more. You can set up a maximum of five numbers for the SOS feature. The phone will try to call each number in turn starting with SOS 1 until one of the numbers is answered. LUCIA will start vibrating, the SOS button and keypad will start flashing and LUCIA will announce by voice and on the screen that SOS calling is in progress. The person you are calling will hear a message saying that this is an emergency call prompting them to press any digit on their phone to accept the call. This process helps to ignore calls that are not answered by a human such as calls answered by answering machines.
Once the emergency call is accepted, the LUCIA speakerphone will be activated allowing the LUCIA user to use the phone in hands-free mode.

To cancel the SOS calling process, press the END button.
Please note: The SOS call function will only work if you have an active wireless service. In an emergency, however, you will always be able to call emergency services, whether or not you have a positive balance, using the usual 911 number in the United States, Canada and Mexico (112 in most European countries).
You can also set 911 as your last SOS number to ensure you are able to reach help in case calls to other numbers from your SOS aren't answered.
WARNING: The SOS feature is not an alternative to dialing 911.
If you require emergency assistance from police, ambulance or fire departments, dial 911 (112 in most European countries). We make no warranties or guarantees as to whether and how the SOS feature will function. Neither Antarus SA nor any of its officers, agents or distributors can be held liable for any claim, damage or loss resulting from the malfunction of the SOS feature.
Vibrate: The Vibrate settings option can be found under the category "Sound" in "Settings". To alert you that you have an incoming call, you can turn the vibrate function on so that you feel it vibrate when you receive a call. There are three choices: Always, Never and Silent Mode.

SOUND BOOST

WARNING: Be very careful when using the Sound Boost option. This option is intended for users who are hard of hearing and can cause hearing damage for people who do not have existing problems.
Sound Boost amplifies the audio volume of the LUCIA phone in the ear speaker and earphones (if connected to audio jack).
Activating Sound Boost: Press and hold the Sound Boost button on the right edge of the phone during a phone call to activate Sound Boost, which will amplify the audio. The amplification will remain active until the end of the call and will be switched off automatically after the end of the call. Alternatively, Sound Boost can be deactivated by pressing the Sound Boost button again.

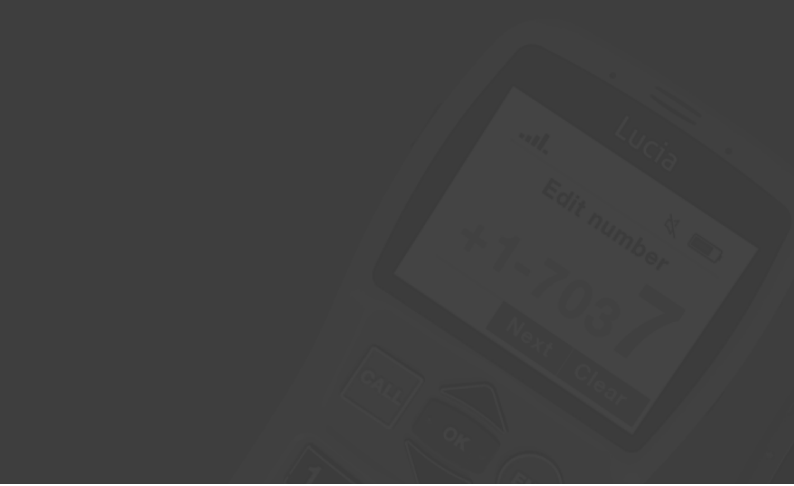

Customer Support:
www.razmobility.com/support
customersupport@razmobility.com

1-800-729-0083

RAZ

Manufactured by: Antarus SA, Switzerland
www.razmobility.com

CE RoHS FC

FCC ID: 2ARJFLUCIA2

IC: 24486-LUCIA2

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Copyright © 2018 Antarus SA All Rights Reserved

RAZ Mobility

GUIA DE INICIO **RÁPIDO**

Bienvenido al mundo de

Lucia

Teléfono móvil para personas ciegas, personas con discapacidad visual o dificultades auditivas y personas mayores.

www.razmobility.com

LUCIA TELÉFONO MÓVIL

Soporte adicional

Visita a www.luciaphone.com/support para información adicional, que incluye:

- Una versión PDF descargable de la LUCIA Guía de Inicio Rápido
- Una versión PDF descargable de la LUCIA Guía para Usuarios
- Videos tutoriales
- Preguntas más frecuentes

Atención al Cliente

Si tienes cualquieras preguntas, también puedes contactar a Atención al Cliente:

- Chat web: www.razmobility.com/support
- Correo electrónico: customersupport@razmobility.com
- Teléfono: 1-800-729-0083

Artículos incluidos con el teléfono móvil LUCIA

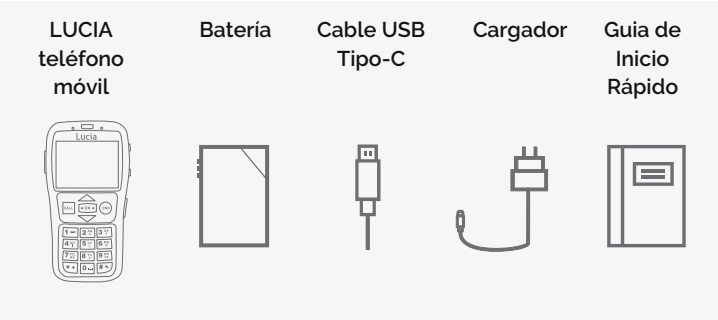

ⓘ ANTES DE EMPEZAR

Inserta la batería y la tarjeta SIM. Por favor sigue las instrucciones en la página 8. Debes cargar completamente su dispositivo antes de usarlo por la primera vez. Enchufa tu teléfono LUCIA a la red electrónica usando el cargador y el cable USB Tipo-C incluido con tu teléfono. Puedes usar el teléfono mientras se carga. Encender el teléfono. Para encender el teléfono, desliza el botón hacia arriba y mantenlo en esta posición al menos 3 segundos. El teléfono vibrara para indicar que se está activando. Después que vibra puedes soltar el botón. Empezara a hablar LUCIA unos segundos después.

CARGAR A LUCIA

Enchufa el cable al teléfono para cargar la batería.
El cargador consiste en dos piezas: un cargador de pared y el cable USB Tipo-C. Introduce la punta más ancha de las dos en el enchufe USB del cargador. Ahora estás listo para enchufar y cargar tu teléfono.

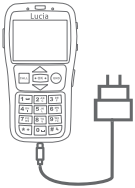

DESCRIPCION GENERAL

El Teléfono Móvil LUCIA leerá a ti gracias a su función de voz incorporada. La información que aparece en tu pantalla se le en voz alta. Navega por la lista de tus contactos, y el sistema leerá los nombres o abre un mensaje de texto y LUCIA te lo leerá. Escribir un mensaje es igual de sencillo. A pulsarla, el sistema leerá cada letra y palabras completas en voz alta. El teléfono móvil LUCIA tiene un menú fácil de usar y con botones táctiles y codificados por color. También te gustará el teclado numérico, con botones táctiles grandes y bien

espaciados para que pulses el botón correcto en cada intento.

- Lee en voz alta la fecha, la hora, el nombre del operador telefónico, el nivel de cobertura y la carga restante de la batería
- Escoge entre idiomas disponibles y voces
- Anuncia los nombres de llamantes guardados en tus Contactos
- Ajusta la velocidad con la que habla el sistema de entre 80% y 200% en incrementos de 10%
- Permite encontrar lo que buscas fácilmente con su sistema de menú sencillo
- Botón para urgencias (SOS)
- Aumentación Sónico
- Es compatible con audífonos (HAC de los Estados Unidos)
- Desbloqueado para las redes compatibles GSM

ORIENTACION – DE FRENTE

En esta sección, se entiende que tienes el teléfono colocado sobre la mesa con los botones cerca de ti.

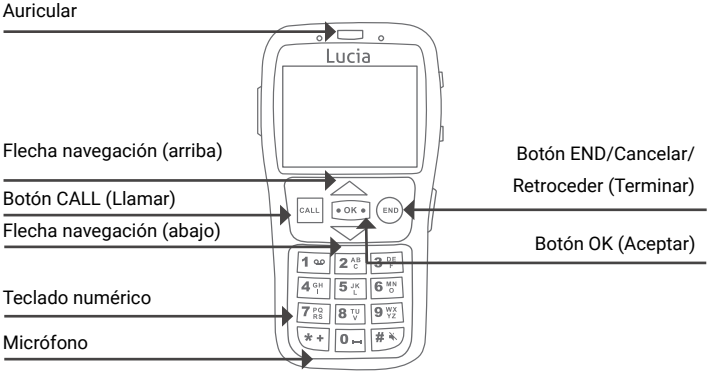

La frente del teléfono tiene cinco botones debajo de la pantalla. A mano izquierda encontrarás el botón cuadrado verde para realizar llamadas (CALL). A la derecha está el botón redondo y rojo para finalizar la llamada, cancelar o retroceder (END). Entre las flechas está el botón rectangular y azul para aceptar (OK).
El auricular se encuentra centrado encima de la pantalla. El teclado numérico se encuentra en la parte inferior del teléfono. Dispone de un diseño estándar, con cuatro filas y tres botones cada una. La primera fila contiene los números uno, dos y tres; la segunda fila el cuatro, el cinco y el seis; la tercera el siete, el ocho y el nueve; y la última fila la estrella, el cero y la almohadilla ("#").

ORIENTACION – BORDES

Borde Derecho
Hay tres botones en este lado del teléfono. De arriba a bajo son los siguientes: el botón para Repetir el habla; el botón para Aumentación Sónico; y el botón/deslizador de Bloqueo/ Desbloqueo y Encendido. Puedes usar el botón de repetir también para ver el estado del teléfono y para encender y apagar la función de voz.

Borde Izquierdo

En el borde izquierdo y casi arriba del todo encontrarás el botón basculante del volumen. Pulsa la parte de arriba para aumentar el volumen y la inferior para reducirlo. Este botón basculante ajusta el volumen de la voz cuando no estás en una llamada y el volumen del auricular cuando estás en una llamada.

ORIENTACION – SUPERIOR, INFERIOR, Y DORSO

Borde Superior

En el borde superior, a mano derecha del teléfono, encontrarás el enchufe para introducir los auriculares externos. Se trata de un enchufe estándar para un conector de 3,5 mm.

Borde Inferior

En el borde inferior hay un enchufe USB Tipo-C a mano izquierda para cargar el teléfono. A mano hay unas pequeñas aperturas para el altavoz.

Dorso

El dorso del teléfono consiste en una tapa de una sola pieza, con el botón de urgencia (SOS) empotrado en la parte superior. También sirve para proteger la batería, con enganches al costado. Se puede abrir usando la pequeña apertura a mano izquierda en el borde inferior.

PANTALLA

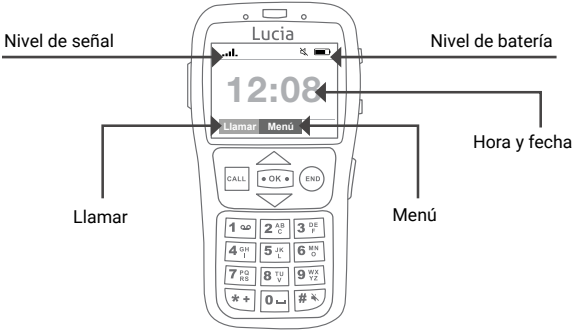

- La pantalla principal incluye varios iconos distribuidos por la pantalla. En la parte superior a mano izquierda se indica el nivel de la señal. Si el símbolo de texto a voz está tachado, la capacidad de conversión de texto a voz está desactivada y LUCIA no hablara. A mano derecha verás el indicador de la batería. El icono es una batería. Cuando la batería está completamente cargada, el icono también se verá lleno. Al disminuirse la carga, se vaciará el icono en la pantalla.
- En la configuración predeterminada, la hora se visualiza en el centro de la pantalla.
- Dando por hecho que el teclado está desbloqueado (consulta la sección Encender y Apagar el Teléfono), en la parte inferior de la pantalla verás las palabras “Menú” y “Llamar” en letras azules y verdes, respectivamente. La palabra “Menú” se asocia al pulsar el botón OK azul en el centro para entrar en algún menú disponible. En cambio, “Llamar” sirve para realizar una llamada después de marcar el número en cuestión o seleccionar un número de entre tus contactos.
- Para oír el estado del teléfono (incluyendo la hora y la fecha, el nivel de la batería y el operador), simplemente pulsa el botón para Repetir en el borde derecho del teléfono (cuando estás visualizando la pantalla principal).

⏻ PARA EMPEZAR

Introducir la Tarjeta SIM y la Batería

A continuación hay las instrucciones como extraer la batería e introducir o sacar la tarjeta SIM. Ten en cuenta que LUCIA es un teléfono móvil GSM desbloqueado que funciona en cualquier red GSM.

Abrir la Tapa de la Batería

Apaga el teléfono antes de extraer la batería. Dale la vuelta, con la pantalla hacia abajo y los botones hacia ti. La tapa para la batería en el teléfono móvil LUCIA es de una sola pieza y cubre el dorso entero del móvil. Encontrarás una pequeña apertura en la parte inferior a la izquierda. Empieza levantando la tapa desde esta esquina para soltar el otro enganche de forma segura.

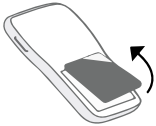

Extraer la Batería

Para extraer la batería, simplemente empieza levántala desde la parte inferior.

Introducir/Extraer la Tarjeta SIM



Si necesitas extraerla o introducir una tarjeta SIM, simplemente sigue estos pasos: Encontrarás la bandeja para la tarjeta en la esquina inferior izquierda debajo de la batería en su compartimento. La tarjeta SIM se encuentra con los contactos de metal boca abajo y que la esquina recortada esté en la parte superior izquierda. Además, la bandeja SIM tiene un puente protector de metal encima. Saca la tarjeta SIM de su soporte, orientarle tal que los contactos de metal están boca abajo y la esquina recortada esté en la parte superior izquierda. Introduce la tarjeta SIM en la bandeja como se indica. El teléfono LUCIA usa tarjetas MiniSIM.
A la derecha de la tarjeta SIM se encuentra

una bandeja para una micro tarjeta SD. En caso de que ya hay preinstalada una micro tarjeta SD, la micro tarjeta SD guardara voces adicionales para el teléfono y no se debe extraerla porque dejará de funcionar el teléfono correctamente.

Introducir/Extraer la Batería

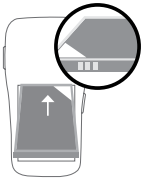

No presiones ni fuerces la batería al introducirla ya que podrás dañar el teléfono. Encontrarás puntos de contacto dorados en uno de los bordes de la batería. Alinéalos con los contactos en la parte derecha superior del compartimento del teléfono e introduce la batería por este lado primero. Después, coloca la batería para que quede plana dentro del compartimento.

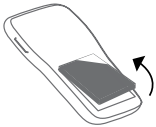

También hay un pequeño triángulo negro en la esquina derecha superior del compartimento y un triángulo blanco en la batería. Sirven para indicar la posición correcta de la batería.

Cerrar la Tapa

Coloca la tapa y pulsa todos los bordes hasta que todos los enganches ubicados por los bordes se bloquean.

ENCENDER Y APAGAR EL TELÉFONO

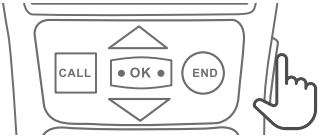

Para encender el teléfono, desliza el botón hacia arriba y mantenlo en esta posición al menos 3 segundos. El teléfono vibrara para indicar que se está activando. Después que vibra puedes soltar el botón. Empezara a hablar LUCIA unos segundos después.

La primera vez que enciendas el teléfono, te pedirá que indiques el idioma y la voz, y que configures la hora y la fecha. Utiliza las flechas para seleccionar el idioma deseado. LUCIA te lo repetirá. Para confirmarlo, pulsa OK. Utiliza las flechas para indicar el año actual. LUCIA te lo repetirá. Usa las flechas para seleccionar el mes y pulsa OK. Después, selecciona el día y pulsa OK. LUCIA te leerá la fecha completa que acabas de introducir. Ahora te pedirá que indiques la hora. Puedes ajustar la fecha y la hora en cualquier momento.

Si no usas el teléfono durante un período de tiempo predeterminado, se bloqueará el teclado automáticamente. Para desbloquearlo, mueve el botón deslizador de bloqueo/desbloqueo y de encendido (en el borde derecho del teléfono) hacia arriba. También puedes bloquear el teléfono deslizando hacia arriba el botón deslizador.

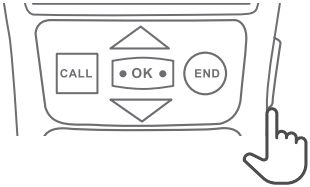

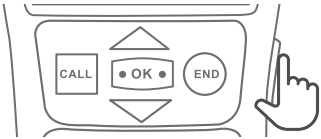

Para apagar el teléfono, asegúrate de que no esté bloqueado el teclado y que estás en la pantalla principal. Mueve el deslizador hacia arriba y mantenlo en esa posición al menos 3 segundos hasta oír un indicador que se está apagando el teléfono.

REALIZAR UNA LLAMADA Y CONTESTAR A UNA LLAMADA

Desde la pantalla principal, puedes hacer una llamada fácilmente. Solo tienes que teclear el número usando el teclado y luego pulsar el botón verde cuadrado CALL y después el botón azul OK o CALL una vez más. Pulsa la tecla roja redonda END para eliminar un número equivocado. No necesitas esperar a que LUCIA lea todos los números en voz alta.

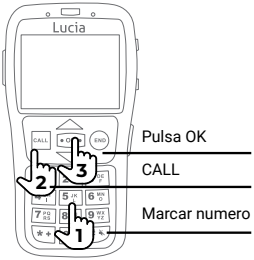

Pulsa el botón REPETIR en el borde derecho del teléfono en cualquier momento para oír los botones que has pulsado. También se repetirá el número una vez al pulsar el botón CALL.

Para llamar a un contacto, puedes pulsar la flecha inferior desde la pantalla principal o pulsar OK para entrar en el menú principal y luego seleccionar Contactos. Al entrar en la libreta de contactos, el sistema leerá el primer nombre que aparece. Los contactos están ordenados alfabéticamente. Usa las flechas para resaltar al contacto que quieres llamar. A continuación, selecciona el número específico (trabajo, residencia o móvil) y pulsa el botón CALL. O tecla el botón OK - entonces te preguntar a confirmar que quieres llamar a este contacto. Pulsa OK para confirmar o END para retroceder.Para colgar una llamada, simplemente pulsa el botón redondo END. Para contestar una llamada, simplemente pulsa el cuadrado botón verde CALL.

REGISTRO DE LLAMADAS

El registro de llamadas te permite acceder a los teléfonos que has marcado, y las llamadas recibidas y las perdidas. Ve al registro de llamadas desde la pantalla principal al pulsar el botón OK. Usa las flechas de navegación para seleccionar el Registro de llamadas y pulsa OK para confirmar tu decisión.

El Registro de llamadas contiene tres submenús: las Números marcados, Llamadas recibidas y Llamadas perdidas. Usa las flechas de navegación para resaltar el submenú que te interesa y pulsa OK para confirmar. Cada submenú detalla las llamadas por nombre si figuran en tu lista de contactos o por el número, de lo contrario. También detallará la cantidad de llamadas después de que se anuncie el nombre o número.

Usa las flechas para navegar por la lista. Pulsa el botón verde CALL para llamar ese número o pulsa el botón OK para oír más detalles sobre esa llamada. El número, la fecha y la hora será leído en voz alta. Pulsa el botón verde CALL para llamar ese número o pulsa el botón redondo END para volver a la lista.

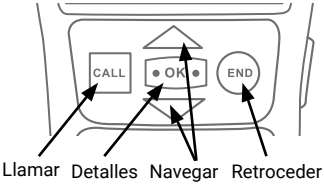

AÑADIR CONTACTO

Entra en el submenú de Contactos, selecciona Añadir Contacto (en la parte superior de la lista de contactos) y pulsa el botón OK. Ahora se te pedirá que introduzcas el nombre del contacto. Introduce el nombre mediante el teclado. El teclado numérico utiliza el método estándar para introducir texto. Simplemente pulsa el botón relevante el número de veces necesario para encontrar la letra correspondiente. Pulsa el botón de la almohadilla (#) para cambiar entre mayúsculas, minúsculas y números.

Después de introducir el nombre de tu contacto, pulsa el botón OK para añadir más detalles sobre el contacto. Se te pedirá que introduzcas el número de teléfono. Pulsa OK una vez más para guardar el contacto. A continuación, selecciona el tipo de teléfono (trabajo, residencia o móvil). Pulsa el botón OK para confirmar o el botón END para retroceder y cambiar los detalles o eliminar errores. LUCIA confirmará que se ha añadido al contacto correctamente.

El teléfono asignará el tono de llamada predeterminado a todos los contactos nuevos. También puedes añadir un teléfono a tu lista de contactos desde el Registro de Llamadas o los Mensajes. Al entrar en el Registro de llamadas, resalta el número que quieres añadir a tus contactos y pulsa la tecla CERO. LUCIA te pedirá que introduzcas el nombre. Sigue los pasos detallados arriba, introduciendo el nombre manualmente. Para añadir un nombre desde tus mensajes, ve al buzón en el submenú de Mensajes y pulsa OK. Resalta el número que quieres guardar en tus contactos y pulsa OK. Selecciona la opción “Guardar número”. Los siguientes pasos para añadir el número a tus contactos son iguales que antes para guardar números desde el Registro de Llamadas.

AJUSTES

Para acceder a Ajustes desde la pantalla principal, tecla el botón OK y usa las flechas para resaltar “Ajustes”. Tecla OK. Usa las flechas para resaltar el elemento de Ajustes que deseas acceder y tecla OK.
Hora y Fecha: Las opciones para ajustar la Fecha se pueden encontrar en Fecha y Hora, en la categoría General en Ajustes. Introduce el año, el mes, y el día usando las flechas, navegando arriba o abajo hasta que has llegado al año, mes, y día deseado. Después de hacer tu selección, tecla el botón OK. Se puede introducir la hora usando los mismos pasos.
Idioma: La opción para Idioma se puede encontrar en la categoría General en Ajustes. Hay varias opciones para idiomas y voz de cual escoger. Usa las flechas para resaltar el idioma y tecla el botón OK para seleccionarlo. Esto cambiara el menú y la función de voz al idioma escogido.Entonces, tienes que escoger a la voz que quieres usar entre las varias voces disponibles usando las flechas de navegación. Tecla OK para guardar tu selección. Habrá un retraso de aproximadamente cinco segundos después de cual LUCIA confirmará tu selección.
Función de Voz: La opción para los ajustes de la Función de Voz se puede encontrar en la categoría Sonido en Ajustes. Usa las flechas hacia arriba o abajo para resaltar Sonido y tecla OK. Resalta Función de Voz y resalta el nombre de la voz deseada. Tecla OK para

confirmar. Habrá un retraso de aproximadamente cinco segundos después de cual LUCIA confirmará tu selección.

Velocidad de Voz: La opción para los ajustes de la Función de Voz se puede encontrar en la categoría Sonido en Ajustes. Usa las flechas hacia arriba o abajo para aumentar o disminuir la velocidad de la voz y tecla OK para confirmar. Ajusta la voz entre 50% y 250% en intervalos de 10%.

Esquema de Colores: La opción de ajustes para la Esquema de Colores se puede encontrar en la categoría Pantalla en Ajustes. Resalta Esquema de Colores y tecla OK para confirmar. Cambia como los menús se ven en la pantalla. Pueden aparecer en varias combinaciones de colores. Usa las flechas para seleccionar el esquema preferida y tecla el botón OK para guardar.

Brillo: La opción para Brillo se puede encontrar en la categoría Pantalla en Ajustes. El ajuste del brillo de la pantalla se puede ajustar entre 0 a 100. Usa las flechas hacia arriba o abajo para cambiar el brillo en intervalos de 5% y tecla el botón OK para guardar.

Tonos: La opción para Tonos se puede encontrar en la categoría Sonido en Ajustes. Hay una selección de tonos diferentes. Cuando añades un contacto automáticamente se usará el tono predeterminado.

SOS (Urgencias): Para tu tranquilidad, puedes establecer números telefónicos para contacto en emergencias que se llamaran automáticamente cuando aprietas el botón SOS en el dorso del teléfono por tres segundos o más. Puedes establecer hasta un máximo de cinco números para la función SOS. El teléfono atentara llamar cada número en orden empezando con SOS 1 hasta que una de las llamadas se contesta. LUCIA comenzará a vibrar, el botón SOS y el tecleado parpadearán, y LUCIA anunciará en voz alta y en la pantalla que una llamada SOS está en progreso. La persona a quien estas llamando oirá un mensaje anunciando que esto es una llamada de urgencias pidiéndoles pulsar cualquiera tecla para aceptar la llamada. Este proceso ayuda ignorar llamadas no contestadas por una persona tal como llamadas contestadas por contestadores automáticos.Una vez la llamada de urgencias se acepta, el altavoz LUCIA se activará permitiendo al usuario LUCIA usar el teléfono de modo manos libres. Para cancelar el proceso de llamada SOS, pulsa

el botón END.
Ten en cuenta: La función SOS solo funcionara si tienes el servicio inalámbrico activado. Sin embargo, en una emergencia, siempre podrás llamar a los servicios de emergencia, teniendo o no un balance positivo, usando el número habitual 911 en los EEUU, Canadá y México (112 en la mayoría de los países europeos). También puedes elegir a 911 como tu último número SOS para asegurar que das con socorros en el caso de que las otras llamadas SOS no se contestan.
AVISO: La función SOS no es una alternativa a llamando a 911. Si requieres socorro de la policía, ambulancia, o bomberos, llama a 911 en los EEUU, Canadá y México (112 en la mayoría de los países europeos). No ofrecemos ninguna garantía si o cómo funcionara la función SOS. Ni Antarus SA o cualquier de sus funcionarios, agentes, o distribuidores pueden ser considerados responsables por cualquier reclamo, daño, o pérdida resultando del mal funcionamiento de la función SOS.
Vibrar: La opción para Vibrar se puede encontrar en la categoría Sonido en Ajustes. Para avisarte que tienes una llamada entrante, puedes activar la función de vibración para que lo sientes vibrar cuando recibes una llamada. ay tres opciones: Siempre, Nunca, y Modo Silencio.

AUMENTACIÓN SÓNICO

AVISO: Ten mucho cuidado usando la opción Aumentación Sónico. Esta opción es para usuarios con dificultades auditivas y puede causar daños auditivos a personas que no tienen un daño existente. El Aumentación Sónico amplifica el volumen de audio del teléfono LUCIA en el parlante y auriculares (si está conectado a la toma de audio).
Activando Aumentación Sónico: Al mantener pulsado el botón en el borde derecho del teléfono durante una llamada telefónica, se activará Aumentación Sónico y se obtendrá un audio amplificado. La amplificación permanecerá activa hasta el final de la llamada y se apagará automáticamente después del final de la llamada. Alternativamente, Aumentación Sónico se puede desactivar pulsando nuevamente el botón Sound Boost.

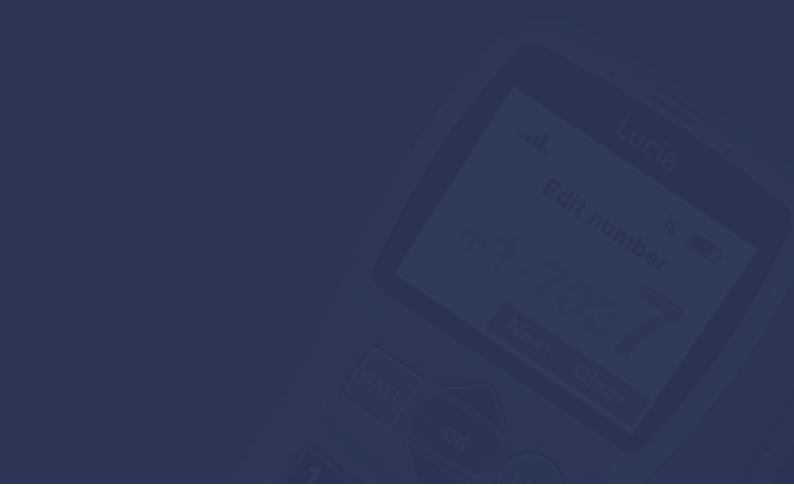

Atención al Cliente

www.razmobility.com/support

customersupport@razmobility.com

1-800-729-0083

RAZ

Fabricado por: Antarus SA Switzerland

www.razmobility.com

CE RoHS FC

FCC ID: 2ARJFLUCIA2

IC: 24486-LUCIA2

Este dispositivo cumple las disposiciones de la sección 15 de la normativa de la FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: 1) el dispositivo no puede causar interferencias perjudiciales y 2) el dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan dar lugar a un funcionamiento no deseado.

Copyright © 2018 Antarus SA All Rights Reserved