79867 12w7.25h8d V1.97 EU.ai

WINDOW 79867
12w7.25h8d US

STAND

To make the Max Rumbler stand, push both joysticks up to drive forward and gain speed. At full speed, tap both joysticks down to stand.

FLIP

To flip the Max Rumbler, push both joysticks up to drive forward. Release both joysticks and the momentum of the Max Rumbler will flip itself. The same can be done with both joysticks down.

360º SPIN

For 360º spin, just push the left joystick up and the right joystick down at the same time. To spin in the opposite direction, push the left joystick down and the right joystick up at the same time.

VERTICAL SPIN

To do this stunt, simply push the left joystick down. To spin in the opposite direction, push the right joystick down.

HYPER SPIN

To perform this amazing stunt, push the left joystick down and simultaneously push the right joystick up. Hold to gain speed and then push both joysticks up for Hyper Spin.

SOMERSAULT

To do this stunt, hold the left joystick down to perform a Vertical Spin. Then slowly tap the right joystick downwards repeatedly to advance to a Somersault stunt.

SIDE FLIP

Push both joysticks up to drive forward and accelerate. Then push the right joystick down and release the left joystick to flip to the right. To flip to the left, push the left joystick down while releasing the right joystick.

360° LOOP

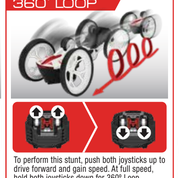

To perform this stunt, push both joysticks up to drive forward and gain speed. At full speed, hold both joysticks down for 360° Loop.

Long Press. Short Press. Release. **These stunts require practice to perform.**

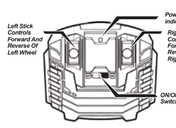

Battery Care Instruction:
Important! Only adults should replace batteries.
Non-rechargeable batteries are not to be recharged.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the toy before being charged.
Different types of batteries or new and used batteries are not to be mixed.
Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.
Alkaline batteries are recommended.
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
Please keep this information for future reference.
Remove batteries from the product before extended storage.

Precautions and Care

Battery Installation

The Max Rumbler requires 5 "AA" 1.5V (not included) alkaline batteries for the vehicle and 2 "AA" 1.5V (not included) alkaline batteries for the transmitter.



Vehicle
1. Turn "ON/OFF" switch to the OFF position for the Max Rumbler.
2. Open the battery compartment cover (fig.1) by loosening the screw and insert AA batteries following the correct polarities (fig.2).
3. Replace the battery compartment cover and tighten the screw (fig.3).



Transmitter
1. Turn "ON/OFF" switch to the OFF position for the transmitter.
2. Open the battery compartment cover by loosening the screw (fig.4) and insert AA batteries following the correct polarities (fig.5).
3. Replace the battery compartment cover and tighten the screw. (fig.6).

Note: 1) When replacing Max Rumbler battery:**Use alkaline battery only.**
2) If the Max Rumbler slows down during play, this may indicate low battery power, therefore it would be necessary to replace new batteries.

FCC Statement

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacture is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
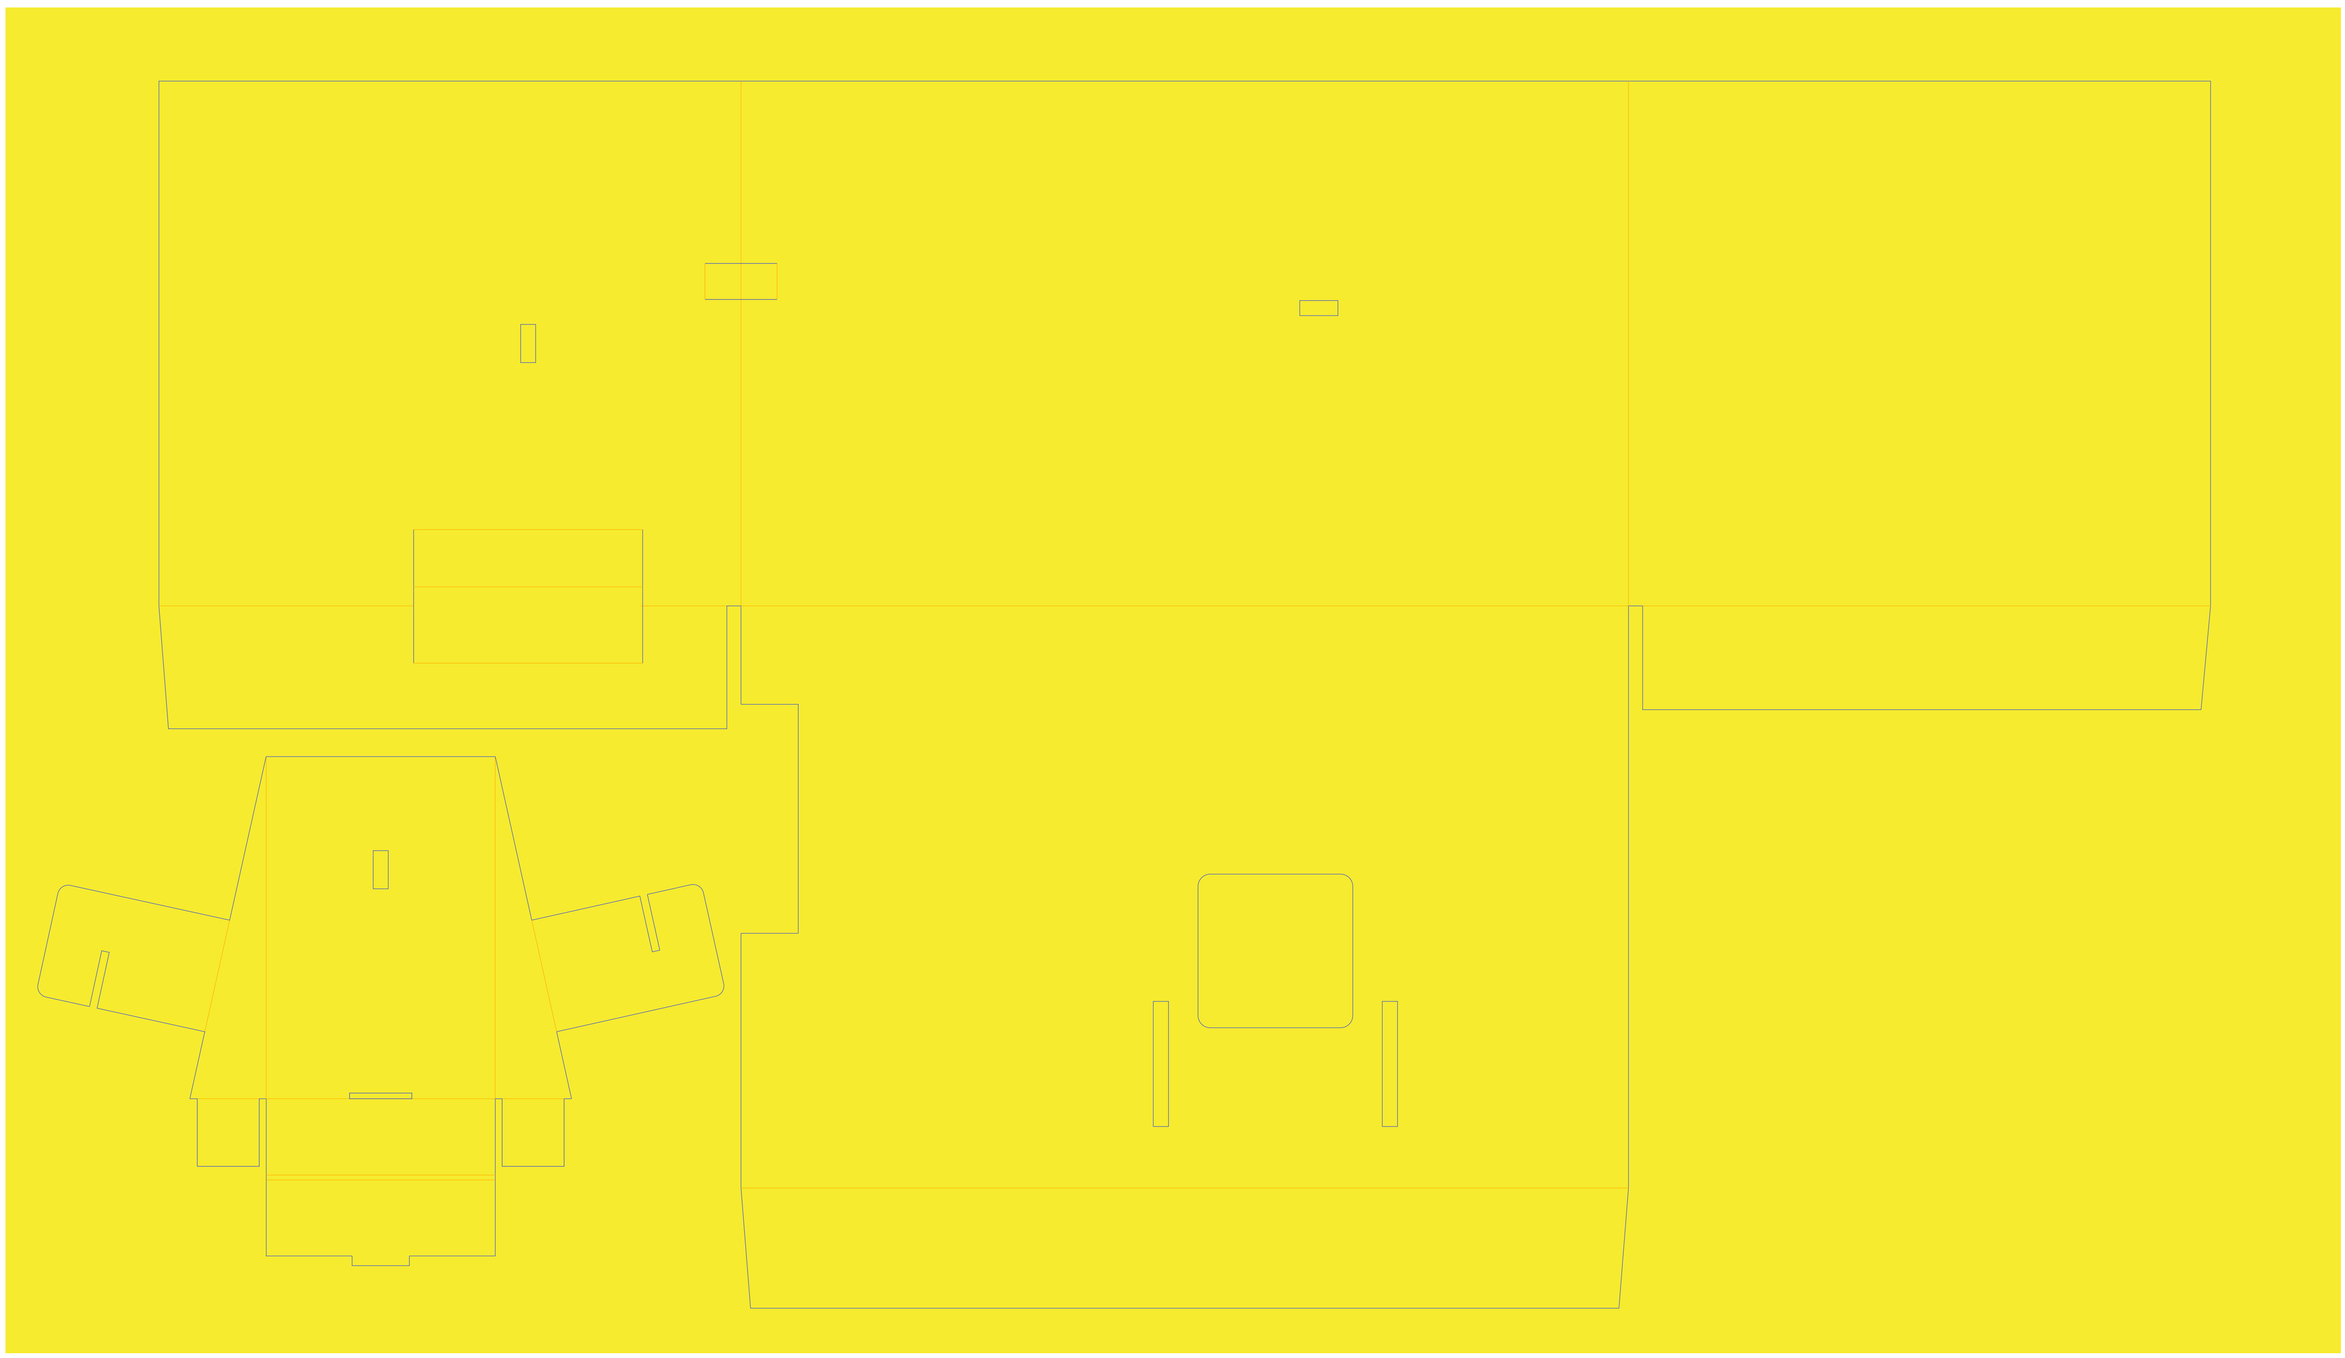
CONTENTS AND SPECIFICATIONS MAY VARY FROM THOSE ILLUSTRATED.
toy boy
79867
WING TA ROAD EAST,
CHENGHAI, SHANTOU, CHINA
ALL RIGHTS RESERVED
MADE IN CHINA
PATENT NO. ZL 2016 3 0053088.0
PATENT NO. 15523582.7M008
0 26753 79867 4