85mm

115mm

Packing Contents

Earbuds

Charging Case

Eartips

User Manual

USB Charge Cable

Technical Specification:

Earphone Type: TWS Earbuds
Bluetooth Version: V5.0
Bluetooth Chipset: RealTek 8763BFR
Bluetooth Profile: HSP, HFP, A2DP, AVRCP
Support decoder: SBC, AAC
Auto ON/OFF: Yes by magnetic switch
Auto Pairing: Yes, take out from case
Stereo: Talk & Music
Touch Sensor: Yes
Operating range: 10M
Frequency Range: 2.4GHz-2.48GHz
Pairing Code: 0000 (if device requests)
Frequency Response: 50Hz 20 KHz
Driver: Dynamic 6mm graphene driver
Speaker impedance: 32 Ω ±15%
Rated Power: 3mW
THD+N: =1%, @ 200Hz –3 KHz
Sensitivity: 96dB (±3dB) @ 1 KHz, 126mV
Battery: Li-Polymer 500mAh Charging Case + 75mAh X 2 earbuds
Battery cycle: >300 cycles
Talk time: Up to 8 hours* + 25 hours with charging case
Music playing time: up to 8 hours* + 25 hours with charging case
Standby time: up to 100 hours*
Mic. Sensitivity: -42dB ±3dB (0dB=1V/Pa @ 1 KHz)
Mic. THD+N: ≤2%
Ear earplugs: Hybrid Silicone Bullet Type L, M, S Size
Working Voltage: 3.7V
Charging Voltage: 5V for charging case
Charging Current: 900mA for Charging case, 50mAh for earbuds
Charging port: Micro-USB
Charging time: 1.5 hours fully charged the case
N.W.: 5.8g/earbud, 70g including charging case
Earbud Dimensions: 23*19*13mm
Charging Case Dimensions: 65*40*31mm (HWD)
Operation: -10 ℃-40 ℃, 90% Relative humidity

*Testing conducted by HiFuture in using preproduction Starman units and software paired with preproduction iPhone X units and software. The Volume was set to 80%. Battery life depends on device settings, usage, and many other factors.

FAQ

TheTidyBuds connect the phone normally, but there is sound in one earbud and not in another earbud?
Ans: Usually the other side is not successfully paired to the main earbud. Firstly, please go to your phone or your devices Bluetooth list to delete/forget the TidyBuds.
Then please put both earbuds into charge case, long tap both earbuds 7-8 seconds simultaneously till both earbuds indicator flash red three times. Wait 5-8 seconds, then take out both earbuds simultaneously, they pair successfully after 3-5 seconds till you see the right earbud indicator flash green and red alternately, and then connect TidyBuds to your phone or devices success.

HiFuture TidyBuds earbuds cannot pair with cell phone?
Ans: Please check whether TidyBuds in pairing mode or reconnection mode and check whether the Bluetooth function in your cell phone is on. Check your device's Bluetooth menu and delete/forget the earbuds and reconnect the earbuds again.

HiFure TidyBuds headset cannot be switched on?
Ans: Please check the battery status of your headset as well as the charging case's battery. Don't forget to remove the seal sticker from each earbud on the first use.

Can I change the battery for the headset?
Ans: No, this headset use a built-in non-detachable Li-Polymer battery, it cannot be removed.

HiFure TidyBuds headset has disconnected with your cell phone within 10 meters?
Ans: Please check if there is metal or other material within a relatively close range which may interfere with the Bluetooth connection. Bluetooth is a radio technology which is sensitive to objects between the headset and the connected device.

I cannot hear a sound from your computer or cell phone?
Ans: Please check whether the output channel of your computer is Bluetooth, that the Audio Device and Bluetooth function of your computer supports A2DP profile. And please check that the volume on your headset/computer/cell phone is turned up.

Why could not charge the charging case and earbuds?
Ans: Check if the terminal plugged tight or not and try to use another new charging cable. Check if the seal sticker on earbuds charging pins had been removed

Why the earbuds power off automatically?
Ans: After Powered ON without any connection with phone or devices for 5 minutes, the earbuds will AUTO OFF. Please re-connect earbuds.

Why the touch sensor doesn't work as the instructions?
Ans: We recommend to operate TidyBuds TWS under IOS8 & Android 4.3 or above e. And please check that the volume on your headset/computer/cell phone is turned up.

Safety Rules

1\Please follow the rules depicted in this manual closely to ensure your safety. Before using this TWS Stereo Headphone, we would strongly encourage you to read through this user manual.

2\Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.

3\Do not modify, repair or dismantle this TWS Stereo Headsets. Doing so may result in fires, electric shocks, complete breakdown of this TWS Stereo Headsets, etc. All of which, are not covered under warranty.

4\Do not use any diluents or volatile liquid to clean the TWS Stereo Headsets.

5\Do not use the TWS Stereo Headsets in a hazardous location.

Service and Support
If your device is not performing as it should, please take it to your local service providers or dealer for service.

©2019 SHENZHEN FUTURE ACCESS TECHNOLOGO CO., LTD. All rights reserved. HIFUTURE™ is a trademark of SHENZHEN FUTURE ACCESS TECHNOLOGO CO., LIMITED. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.

HiFuture

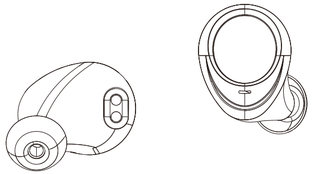

TidyBuds

TWS Earbuds

Quick Start Guide

1 POWER ON & Pairing

AUTO ON & PAIRING

A: Remove yellow stickers from both earbuds' pogo pins and put them back to charge case for 5 seconds, then take both earbuds out simultaneously, both earbuds will auto power on. After waiting 5-8 seconds, the right earbud indicator flash green and red alternately, indicating the earbuds have entered into pairing mode.

B: Turn on Bluetooth on your phone or otherdevices and click on "TidyBuds" to connect to your earbuds. The earbuds green indicator flash every 5 seconds when connected successfully. Your earbuds are now ready to use.

Remark:
In case charge case no power (take out from charge case no any indicator lighting), you have to manually power on both earbuds. Tap both earbuds simutaneously for 2 seconds, when indicator green light blink, loosen your hand immediately, then waiting 3-5 seconds, the right earbuds indicator flash green and red alternately, indicatong the earbuds have entered into pairing mode. Then go to your phoneBluetooth to click on TidyBuds to connect it.

2 Full operation guidelines

1.Touch control area
2.Microphone
3.Charging interface
4.Charging case battery indicator

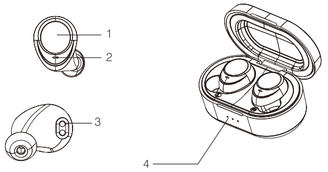

3 Start Listening

Ear-pad

A

B

4 Tap Control Instructions

Pause/Play/Answer
Previous/Next

Power ON	EARBUDS OFF	Take out from charging case or Long tap for 3 seconds manually
Pairing	EARBUDS OFF	Long tap for 5 seconds manually
Activator ON	STAND BY MODE	Long Tap 2 Sec. L Earbud to active Siri or Google Assistant
Activator OFF	STAND BY MODE	Long Tap 2 Sec. L Earbud to OFF Siri or Google Assistant
Answer Call	INCOMING CALL	Single tap L or R Earbud
End Call	ON CALL	Single tap L or R Earbud
Reject Call	INCOMING CALL	Long tap L or R Earbud for 2 seconds
Hold Call	ON CALL	Long tap L or R Earbud for 2 seconds
Play Music	CONNECTED & MUSIC ON	Single tap L or R Earbud
Pause Music	MUSIC PLAYING	Single tap L or R Earbud
Pre. Track	MUSIC PLAYING	Double tap L Earbud
Next Track	MUSIC PLAYING	Double tap R Earbud
Power OFF	EARBUDS ON	Put earbuds into charging case or Long tap for 8 seconds manually
AUTO OFF	EARBUDS ON	Disconnected over 5 minutes

5 Charging

Charging by the charging case

A. Charge the earbuds (headset)

The indicator light of headset is red when being charged, and will turn off automatically after being fully charged.
Put the headset(L)/(R)to the corresponding position in the bottom of the charging base, close the charging base tightly.

B. Charge the charging case

USB Power Output for Mobiles

The three indicators in front of the case will light up (Green) while been fully charged.

Use Micro USB cable to charge the case

Use Micro USB cable to connect with computer

Use Micro USB cable to connect with mobile phone charger

Warning:
Must first select a qualified charger from a regular manufacturer.(Charging Voltage: 5V Charging Current: 500mA to 1A for charging case)
A fully charged headset will have its power automatically left unused. It is recommended to charge the headset each three months.
Do not leave the headset in a too hot or too cold condition (least between -10℃ and 40℃)which may affect the headsets operations although it is fully charged.
Please take out of the headsets from the charging base and store it separately if not to use for a long time
Do not dispose of the headset into fire or water

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.