
USER MANUAL

XEITIN Waterless Aroma Diffuser with Wireless Audio Speaker

Mode: K72H

Set up · Operation · Care

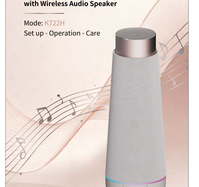

A. Getting Started

(1) Product Cautions 1-2
(2) Product Specification 3
(3) Parts Identification 4

B. Operation

(1) Button Function 5-8
(2) Bluetooth Connection 8
(3) Precautions 9
(4) Equipment Cleaning 9
(5) Basic Cleaning Steps 10

C. Maintenance

(1) Cleaning the Atomization Core 11
(2) Replacing the Atomization Core 12

D. Support

(2) Troubleshooting 13-16
(3) FAQ 17-19
(4) Safety Precautions 20-21
(5) FCC Warning 21

FILTER WICK REPLACEMENT GUIDE

It is recommended to replace it every 2–4 weeks or when the aroma weakens.



Filter wick clogging is normal after long-term use.

How to Fix it?

1. **Replace the filter wick:**
 2 spare filter wick accessory is included in the package. Please refer to the illustrated guide for detailed replacement steps.
2. **Clean the Filter wick:**
 Please follow the cleaning instructions shown on the back of this card.
 Important: Use only 95% or higher alcohol, such as ethanol or isopropyl alcohol.



Need More Help?
If you have questions after replacing or cleaning the filter wick, please contact our customer support service team to obtain a replacement bottle nozzle accessory.

support@xeitin.com

FILTER WICK CLEANING GUIDE

It is recommended to clean it every 2–4 weeks or when the aroma weakens.



- Filter wick clogging is normal after long-term use. Clean regularly to ensure stable fragrance output.
- Soak the filter wick in 95%+ ethanol or isopropyl alcohol. After completing the process, check whether the filter wick has returned to normal.

Product Cautions

READ AND SAVE THESE INSTRUCTIONS

Please read all instructions carefully before using this product.
IMPORTANT SAFETY INSTRUCTIONS
When using an electrical appliance, basic safety precautions should always be followed, including the following:

- Use this product only for its intended purpose as described in this manual.
- Place the diffuser on a firm, flat, dry, and stable surface before use.
- Make sure the oil bottle is installed upright and securely tightened to reduce the risk of oil leakage or damage to the diffuser.
- Use only pure essential oils or diffuser-compatible fragrance oils. Do not add water. Do not use very thick oils, carrier oils, massage oils, or diluted oil mixtures, as they may affect mist output or cause blockage.
- Do not overfill the oil bottle. Wipe off any spilled oil before operating the diffuser.
- Do not block the mist outlet, air inlet, speaker area, or ventilation openings during operation.
- Do not use attachments or accessories that are not recommended by the manufacturer.
- Do not place or store this product where it can fall or be pulled into a bathtub, sink, or other water container.
- Do not place or drop the product into water or any other liquid.
- Do not operate the product with wet hands.
 Turn off the product when not in use, before cleaning, before refilling oil, or before moving the diffuser.
- Do not operate this product if the charging cable, plug, or housing is damaged, or if the product has been dropped, damaged, or exposed to water.
- Use only a DC 5V/2A power adapter and the supplied charging cable or a compatible certified charging cable. Using an incorrect power source may damage the product or cause safety risks.
- Do not charge the product near water, high heat, open flames, or flammable materials.

Product Cautions

- Do not expose the diffuser or battery to fire, excessive heat, direct sunlight for long periods, or temperatures outside the specified operating range.
- Product operating and charging temperature range: 0°C–40°C.
- Do not attempt to open, modify, disassemble, or repair the unit. This product contains an internal rechargeable lithium-ion battery and has no user-serviceable parts.
- Servicing must be performed only by qualified personnel.
- Keep the product away from heated surfaces, high-temperature areas, and direct flame.
- Do not place the product on surfaces that may be damaged by oil, fragrance residue, water, alcohol, or cleaning solvents.
- Do not rinse, soak, or immerse the fabric cover or the main unit in water.
- Clean only according to the cleaning instructions provided in this manual.

This product is not a toy. Keep it out of reach of children and pets. Adult supervision is required when the product is used near children.

If you experience discomfort, irritation, headache, dizziness, or allergic reaction during use, stop using the diffuser immediately and ventilate the area.

BATTERY WARNING

- This product contains an internal, non-replaceable rechargeable lithium-ion battery.
- Do not disassemble, puncture, crush, short-circuit, or expose the battery to fire or high temperatures.
 Do not use the product if the battery appears swollen, leaking, overheating, or damaged.
 Do not dispose of the product with household waste. Please dispose of it according to local regulations for rechargeable lithium-ion batteries.

Product Specification

✳ Product Specifications

Itemm	Specification
Product Name:	WATERLESS AROMA DIFFUSER
Model:	K72H
Oil Capacity:	120 ml
Essential Oil Consumption:	Low: <0.037 g/h / Medium: >0.123 g/h / High: >0.322 g/h
Materials:	PP + PCM + Fabric + Metal
Rated Input Voltage :	DC 5V/2A
Over-Voltage Protection:	DC 6.3V: Automatic power-off protection / DC 24V: No component overheating or burnout
Rated Power:	5W
Battery Capacity:	4000 mAh Rechargeable Lithium Battery
Charging Time:	Approx. 4 hours

Note:
Actual oil consumption and battery life may vary depending on fragrance oil type, mist level, usage conditions, and ambient environment.

Parts Identification

✳ Product Diagram & Button Functions



A. Diffuser Body
B. Power Button
C. Ambient Light Button
D. Timer Button
E. Volume Up Button
F. Music Play / Pause Button
G. Volume Down Button
H. Charging Indicator Light
I. Type-C Charging Port
J. Mist Outlet
K. Atomizing Nozzle
L. Air Inlet
M. Oil Tube
N. Essential Oil Bottle
O. Type-C Charging Cable

Button Function

✳ Button Functions

- **Power Button**
 Long press to turn the diffuser on or off.
 Short press to switch the mist level: L1 / L2 / L3.
- **Ambient Light Button**
 Short press to switch the ambient light color: white, blue, purple, orange, or gradient.
- **Timer Button**
 Short press to select the timer setting: 1H / 2H / 4H / 8H.
- **Volume Up Button**
 Press to increase the Bluetooth speaker volume.
- **Music Play / Pause Button**
 Press to play or pause music after Bluetooth connection.
- **Volume Down Button**
 Press to decrease the Bluetooth speaker volume.
- **Indicator Light**
 Charging Indicator Light

 Charging: White breathing light
 Fully charged: Solid white light
 Battery below 20%: Solid red light
 Battery below 10%: Flashing red light
 Bluetooth Indicator Light

 Bluetooth connected: Solid white light
 Bluetooth not connected: Flashing white light

Important Note
Make sure the essential oil bottle is installed securely before use.
Do not add water to the oil bottle. Use only pure essential oils or diffuser-compatible fragrance oils.
Bluetooth is used for speaker connection and music playback. Mist level and timer settings are controlled by the touch buttons on the diffuser.

Button Function

✳ HOW TO USE

1



Remove the Nozzle Assembly
Gently pull out the nozzle assembly from the top of the diffuser.

2



Fill the Oil Bottle
1. Twist off the empty oil bottle from the nozzle assembly.
2. Fill the bottle with pure essential oil or diffuser-compatible fragrance oil.
3. Leave about 1 cm. Do not overfill the bottle.
4. After filling, tighten the oil bottle onto the nozzle assembly and insert it back into the diffuser vertically.
5. Turn on the diffuser and choose the intensity and timer function you need.



Important
To prevent oil leakage, do not tilt, shake, or turn the nozzle assembly upside down after the filled bottle is installed. Do not add water. Do not overfill the oil bottle.

Button Function

3



Power Button
Press and hold: Turn the diffuser on or off.
Short press: Cycle through 3 mist levels.

Mist Level	Spray / Pause	Recommended Use
L1 Low	5sec ON / Pause 295s	Overnight or Nighttime use
L2 Medium	5sec ON / Pause 120s	Bedroom, office, or living room
L3 High	5sec ON / Pause 60s	Larger spaces

Note:
The diffuser has a memory function. When turned on again, it will keep the previous mist level and timer settings.

4



Light Button
Press and hold: Turn the ambient light on or off.
Short press: Switch the ambient light color.
Available light colors:
White · Blue · Purple · Orange · Gradient

Note:
The ambient light is for decorative lighting only. It does not affect mist output.

5



Timer Button
Short press: Set the working timer.
1 Hour > 2 Hour > 4 Hour > 8 Hour > Cancel

After the selected timer ends, the diffuser will stop working automatically.

Note:
The timer indicator light will show the selected timer option.

Button Function Bluetooth Connection

6



Volume Buttons
After Bluetooth is connected, you can play music through the diffuser speaker.
- Press "+" to increase the volume.
- Press "-" to pause or resume music.
- Press "-" to decrease the volume.

You can also adjust the volume from your phone.

Charging Instructions
Use the included USB cable to charge the diffuser.

Battery / Charging Status	Indicator Light
Charging	White breathing light
Fully charged	Solid white light
Battery below 20%	Solid red light
Battery below 10%	Flashing red light

Please charge the diffuser when the red indicator light appears.

Note:
Do not charge the diffuser near water, heat sources, open flames, or flammable materials.

Bluetooth Speaker Connection Connect Your Phone

① Turn on the diffuser.
② Enable Bluetooth on your phone.
③ Search and connect to "K72H"
※ Once connected, the Bluetooth indicator stays solid white.
※ Open your music app and start playing.

Precautions

✳ PRECAUTIONS

- If the diffuser will not be used for a long time, remove the oil bottle, pour out the remaining fragrance oil, clean the nozzle and oil pathway, and store the diffuser in a dry place.
- Use only pure essential oils or diffuser-compatible fragrance oils.
- Do not add water.
- Do not use very thick oils, carrier oils, massage oils, or diluted oil mixtures, as they may reduce mist output or cause blockage.
- Do not tilt, shake, or move the diffuser while the oil bottle is installed.
- Do not block the mist outlet, air inlet, speaker area, or ventilation openings.
- The fragrance effect may vary depending on room size, ventilation, air circulation, temperature, humidity, and fragrance oil type.
- Clean the diffuser before switching to another fragrance oil.

✳ Equipment Cleaning

When Should You Clean the Diffuser?
Cleaning is recommended in the following situations:

1.Before changing to another fragrance oil.
2.When the mist output becomes weak.
3.When the scent becomes weaker after a period of use.
4.If the diffuser has not been used for a long time.
5.After using thick or highly concentrated fragrance oils.

Product Cleaning and Maintenance:

Regular cleaning is recommended every 2–4 weeks, depending on usage frequency and the type of fragrance oil used.

Clean the diffuser before changing to another fragrance oil.

Basic Cleaning Steps

✳ Basic Cleaning Steps

1. Turn off the diffuser.
2. Remove the oil bottle.
3. Pour out the remaining fragrance oil.
4. Add a small amount of 95%+ ethanol or isopropyl alcohol into the oil bottle.
5. Reinstall the oil bottle and nozzle assembly.
6. Run the diffuser for several minutes to let the alcohol pass through the nozzle and oil pathway.
7. Remove the oil bottle and allow the nozzle area to air dry.
8. Repeat the cleaning process if the scent is still weak or the nozzle is blocked.

Important:
Do not use water to clean the oil pathway.
Do not rinse, soak, or immerse the diffuser body or fabric cover in water.
Do not use kitchen detergent, soap water, or corrosive cleaning solvents to clean the nozzle or oil pathway.

Troubleshooting

✳ TROUBLESHOOTING

The Diffuser Does Not Turn On

Possible Causes:
Low battery, charging cable not connected properly, or the device is not fully charged.

Solutions:
1.Charge the diffuser with the included USB cable and a DC 5V/2A power adapter.
2.If the battery indicator is flashing red, charge the device before use.
3.Make sure the charging cable and adapter are connected properly.
4.If the device has not been used for a long time, charge it fully before turning it on.

No Mist Output

Possible Causes:
The oil bottle is not installed properly, the oil level is too low, or the nozzle/oil pathway may be blocked.

Solutions:
1.Make sure the oil bottle is installed securely.
2.Make sure there is enough fragrance oil in the bottle.
3.Check whether the nozzle or mist outlet is blocked.
4.Clean the nozzle and oil pathway with 90%+ ethanol or isopropyl alcohol if needed.
5.Do not add water or use very thick oils.

Diffuser Keeps Working Continuously

Possible Causes:
The timer function may not be set, or the selected timer has not ended yet. The diffuser may also continue working according to the selected mist level cycle.

Solutions:
1. Short press the timer button to select 1H, 2H, 4H, or 8H if you want the diffuser to stop automatically.
2. After the selected timer ends, the diffuser will stop working automatically.
3. To stop the diffuser manually, press and hold the power button to turn it off.
4. If the diffuser is still running, check whether the timer function has been canceled.

Troubleshooting

Note:
The diffuser does not spray continuously all the time. It works in spray-and-pause cycles according to the selected mist level.

L1: Spray 10s / Pause 240s
L2: Spray 20s / Pause 150s
L3: Spray 30s / Pause 60s

Weak Mist Output or Weak Scent

Possible Causes:
Fragrance oil residue may build up in the nozzle, mist outlet, or oil pathway after a period of use. Thick oils or highly concentrated oils may also reduce mist output.

Solutions:
1. Select a higher mist level.
2. Place the diffuser in a more open area.
3. Make sure the fragrance oil is not too thick.
4. Clean the nozzle and oil pathway with 90%+ ethanol or isopropyl alcohol.
5. Repeat the cleaning process 1–2 times if the mist output is still weak.

Scent Coverage Feels Limited

Possible Causes:
Fragrance coverage may be affected by room size, ventilation, ceiling height, air circulation, temperature, humidity, and fragrance oil concentration.

Solutions:
1. Use L2 or L3 mode for stronger scent diffusion.
2. Place the diffuser in a more open area instead of a corner.
3. Avoid placing the diffuser directly near strong airflow, open windows, or exhaust vents.
4. Use a stronger or more concentrated fragrance oil if needed.

Mist Is Not Clearly Visible

Explanation:
This is a waterless cold-air diffuser. The mist particles are very fine and may not always be clearly visible.

Solution:
Please check the scent output instead of judging only by visible mist.

Troubleshooting

Oil Leakage

Possible Causes:
The oil bottle is not tightened properly, the diffuser is tilted, or the nozzle assembly is turned upside down after filling.

Solutions:
1. Make sure the oil bottle is tightened securely.
2. Keep the diffuser upright during use.
3. Do not tilt, shake, move, or turn the diffuser upside down while the oil bottle is installed.
4. Wipe off spilled oil immediately with a soft dry cloth.

Bluetooth Cannot Be Found

Possible Causes:
The diffuser is not powered on, the phone is too far away, or the diffuser was previously connected to another phone.

Solutions:
1. Make sure the diffuser is turned on.
2. Make sure Bluetooth is enabled on your phone.
3. Keep your phone close to the diffuser.
4. If the diffuser was previously connected to another phone, disconnect or remove it from that phone's Bluetooth list first.
5. Restart Bluetooth on your phone and search again.
6. Restart the diffuser and try again.

Bluetooth Is Connected but No Sound

Possible Causes:
The phone music is playing on your phone.
2. Increase the volume on your phone.
3. Use the volume buttons on the back of the diffuser to adjust the speaker volume.
4. Press the play/pause button to resume music.
5. Disconnect and reconnect Bluetooth if needed.

Note:
Bluetooth is used for speaker connection and music playback. Mist level and timer settings are controlled by the touch panel on the diffuser.

Troubleshooting

Battery Drains Faster Than Expected

Possible Causes:
Battery life may vary depending on mist level, speaker volume, ambient light mode, and usage time.

Solutions:
1. Use a lower mist level when strong scent is not needed.
2. Lower the speaker volume if playing music for a long time.
3. Turn off the ambient light to reduce power consumption.
4. Fully charge the diffuser before extended use.

Note:
Please charge the diffuser when the red indicator light appears.

Ambient Light Does Not Turn On

Possible Causes:
The ambient light may be turned off, or the battery level may be too low.

Solutions:
1. Press the light button to switch the ambient light color.
2. Press and hold the light button to turn the ambient light on or off.
3. Charge the diffuser if the battery level is low.

Timer Does Not Work as Expected

Explanation:
The timer function allows the diffuser to stop automatically after the selected working time.

Solutions:
1. Short press the timer button to select 1H, 2H, 4H, or 8H.
2. The diffuser will stop working automatically after the selected timer ends.
3. If you do not want to use the timer, cycle through the timer options to cancel it.

FAQ

Q1: Why is the scent weak?

The scent strength may be affected by room size, ventilation, air circulation, oil type, oil concentration, and mist level.

Please try the following:
1. Select L2 or L3 mode.
2. Place the diffuser in a more open area.
3. Make sure the fragrance oil is not too thick.
4. If the diffuser has been used for several weeks, clean or replace the filter wick inside the nozzle.

Q2: Why can't I see obvious mist?

1. This is a waterless cold-air diffuser. The mist particles are very fine and may not always be clearly visible.
2. Please check the scent output instead of judging only by visible mist.

Q3: Why does the scent become weaker after a period of use?

1. Fragrance oil residue may build up on the filter wick inside the nozzle after continuous use, especially when using thicker or highly concentrated fragrance oils.

2. Please remove the filter wick with the included cleaning hook and soak it in 90%+ ethanol or isopropyl alcohol for about 1 hour.

3. Regular cleaning every 2–4 weeks is recommended, depending on usage frequency and the type of fragrance oil used.

If the scent is still weak after cleaning 1–2 times, replace the filter wick with a new one.

FAQ

Q4: What type of oil can I use?

1. Use pure essential oils or diffuser-compatible fragrance oils.
2. Do not add water.
3. Do not use carrier oils, massage oils, very thick oils, or diluted oil mixtures, as they may reduce mist output or cause blockage.

Q5: Why can't my phone find the Bluetooth speaker?

1. Make sure the diffuser is powered on and within Bluetooth range.
2. If the diffuser was connected to another phone before, disconnect it from the previous phone first, then search again.
3. You can also restart Bluetooth on your phone and restart the diffuser before trying again.

Q6: Why is there no sound after Bluetooth connection?

1. Please check the phone volume, diffuser volume buttons, and music playback status.
2. You can adjust the volume from both your phone and the volume buttons on the back of the diffuser.
3. If there is still no sound, disconnect and reconnect Bluetooth.

Q7: What do the charging lights mean?

Charging: White breathing light
Fully charged: Solid white light
Battery below 20%: Solid red light
Battery below 10%: Flashing red light
Please charge the diffuser when the red indicator light appears.

Q8: Will the diffuser remember my previous settings?

Yes. When the diffuser is turned off and turned on again, it will keep the previous timer and mist level settings.

FAQ

Q9: Why does the battery drain faster sometimes?

1. Battery life may vary depending on mist level, speaker volume, ambient light mode, and usage time.
2. Using a high mist level, loud music volume, and continuous ambient lighting may consume battery power faster.

Q10: Can Bluetooth control the mist level or timer?

No. Bluetooth is used for speaker connection and music playback.
Mist level and timer settings are controlled by the touch panel on the diffuser.

Q11: Why does the diffuser keep working continuously?

1. If no timer is selected, the diffuser may continue working until it is turned off or the battery runs low.
2. To stop it automatically, select a timer: 1H / 2H / 4H / 8H.
3. To stop it manually, press and hold the power button to turn off the diffuser.

Note: The diffuser does not spray continuously all the time. It works in spray-and-pause cycles according to the selected mist level.

L1: Spray 10s / Pause 240s
L2: Spray 20s / Pause 130s
L3: Spray 30s / Pause 60s

Safety Precautions

✳ SAFETY PRECAUTIONS

To avoid product damage, oil leakage, electric shock, fire risk, or personal injury, please read and follow the safety precautions below before use.

1. Use this product only for its intended purpose as described in this manual.
2. Do not disassemble, modify, repair, or attempt to replace any internal parts by yourself. If the product does not work properly, stop using it and contact customer support.
3. Do not bend, pull, twist, stretch, or damage the charging cable. Do not place heavy objects on the cable. Keep it away from heat sources.
4. If the charging cable, plug, charging port, or product housing is damaged, stop using the product immediately.
5. If abnormal odor, noise, heat, smoke, or malfunction occurs during use or charging, turn off the product, unplug the charging cable, and stop using it immediately.
6. Do not immerse the diffuser, charging cable, plug, or charging port in water or any other liquid.
7. Do not use or store the product in wet or humid areas, such as bathrooms, shower rooms, or near sinks.
8. Keep the charging port dry and clean. If the charging port gets wet, do not charge the product until it is completely dry.
9. Use only the recommended DC 5V/2A power adapter and a compatible USB charging cable.
10. Do not charge the product near water, open flames, high heat, direct sunlight, or flammable materials.
11. Do not expose the product to fire, excessive heat, or temperatures outside the recommended operating range.
12. Place the diffuser on a firm, flat, dry, and stable surface. Do not place it on soft surfaces such as beds, sofas, rugs, or pillows.
13. Do not place the diffuser directly on appliances, TVs, speakers, computers, wooden furniture, fabric surfaces, walls, or other surfaces that may be affected by fragrance oil or moisture.
14. If fragrance oil spills, wipe it off immediately with a soft dry cloth.
15. Do not tilt, shake, move, or turn the diffuser upside down while the oil bottle is installed.
16. Do not add water. Use only pure essential oils or diffuser-compatible fragrance oils.
17. Do not use very thick oils, carrier oils, massage oils, or diluted oil mixtures, as they may reduce mist output or cause blockage.
18. Do not block the mist outlet, air inlet, speaker area, or ventilation openings during operation.
19. Do not cover the diffuser while it is operating.

FCC Warning

20. Keep the product away from children and pets. This product is not a toy.
21. Children or users who have not read the manual should not operate this product without adult supervision.
22. If the product will not be used for a long time, remove the oil bottle, pour out the remaining fragrance oil, clean the nozzle and oil pathway, and store the diffuser in a cool, dry place.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.
Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement.
To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation

Contact Us for Any Problem You Meet Or Activate Your Warranty

Shop Now:
Official Store On Amazon
Scan to browse & purchase our replacement bottle / Essential Oils / other Diffusers directly.

Customer Support
Scan to email our support team for any assistance.
support@xeitin.com

说明书
尺寸：103*155mm
材质：105g铜版纸 四色印刷 钉装