50mm

200mm

75mm

150mm

THECOOPIDÉA

USER MANUAL

CARGO

TRUE WIRELESS EARBUDS

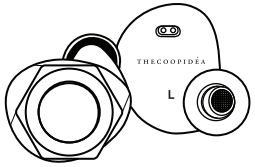

CP-TW03 V18-01

Product overview

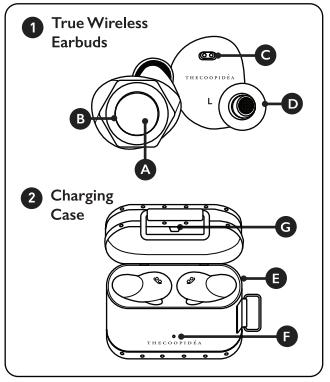

- A Multi-function button + LED light
- B Microphone
- C Charging Interface
- D Ear Cap
- E Micro USB input
- F LED Light
- G Magnetic Closure

Specification

Frequency Response	: 20 - 20KHz
Bluetooth Version	: 5.0
Bluetooth Range	: 10m
Recharge Earbuds	: 6 Times
Battery	: 800mAh
Input	: 5V/1A (Micro)
Case Dimensions	: 72x35x45mm(LxWxH)
Case Net Weight	: 154g
Earbuds Dimensions	: 25x24x20mm(each)(LxWxH)
Earbuds Net Weight	: 5g (each)
Waterproof Rating	: IPX4
Stand by Time	: 100hrs
Playtime	: Up to 5hrs (Up to 35hrs On-The-Go)
Charging Time(Earbuds)	: 1hr
(Charging case)	: 2hrs(Micro)

Package Contents

1x CARGO True Wireless Earbuds (Pair)
1x Ear tips S, M, L (Pairs)
1x CARGO Charging Case
1x Micro USB Cable
1x Decorative Sticker

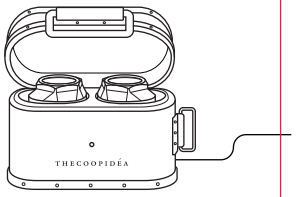

CHARGE AND ACTIVATE

Charge your CARGO before first time use.

First time use

Before using CARGO, charge it for at least 1 hour.

STEP 1
Remove the film cover on charging interface

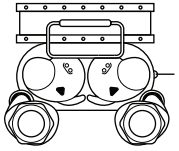

STEP 2
Put Earbuds into the charging case

Way of charging

STEP 3

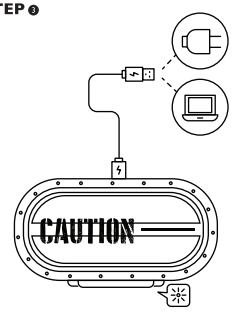

By Micro USB

1. Connect charging case to your computer or a power supply via micro USB cable.
2. Plug in micro USB port and charge the case.

Perfect Fit

Normal Ear tips

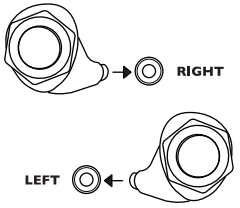

Best for music

Put on normal ear tips

Insert Earbuds

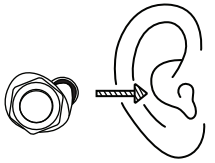

STEP 1
Tilt and insert CARGO firmly in your ear.

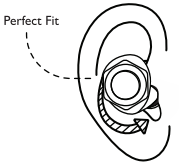

STEP 2
Adjust the CARGO by rotating it backwards.

接線

切線

正面

Black & white

50mm

200mm

75mm

150mm

Turning Earbuds On

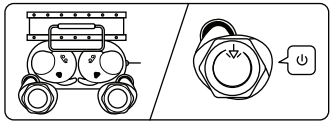

Power On

Auto Connect :
Pick up the earphones from charge case or
Manual Connect :
Hold MFB both buttons for 2secs
"Power On"

Bluetooth pairing

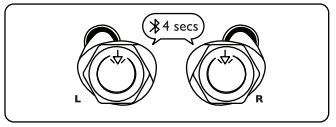

Pairing Mode

Auto Connect :
Pick up the earphones from charge case or
Manual Connect :
Hold MFB both buttons for 4secs
(When Earbuds are turned off
outside charging case)
"Pairing"

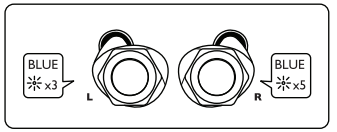

Earbuds Pairing

Left Earphone: Blue LED flash 3 times then Blue & White LED flash alternatively

Right Earphone: Blue LED flash 5 times then White light flash once every 8 seconds

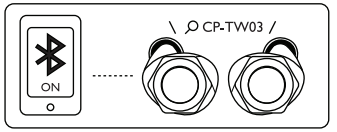

Earbuds Pairing Success

Left Earphone: Blue LED flash once every 6 seconds
Right Earphone: White LED flash once every 6 seconds
"Connected"
"Left Channel" on Left
"Right Channel" on Right

Turning Earbuds Off

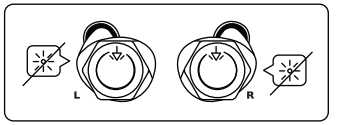

Power off Put earphones back into case or Hold either button for 4secs

Auto power off Idle the earphones for 10mins
"Power Off"

Manual Pairing / Forget Pairing

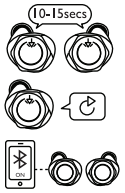

1. Turn off the earphones

2. Hold the MFB of both earphones for 10-15secs until 2 indication sound be heard

3. Turn off the earphones and turn on the earphones again

4. L and R earphones are paired and enter pairing mode with mobile devices

Charging Earbuds



Earphone charging
White light on
Earphone fully charged
White light off



Charging case charging
White light flash
Charging case fullycharged
White light on

Earphone charging in charging case
Charging case Blue light on
Earphone fully charged in charging case
Charging case blue light off

Call / music Control



		MFB(Left)		MFB(Right)
Pick up call		●	or	●
Hang up		●	or	●
Reject call		●●		
Switch between phone/headset (during call)		●●		
Play/Pause		●	or	●
Next track		▬ 🕒		▬ 🕒
Previous track		▬ 🕒		
Volume up				●●
Volume down		●●		
Siri/Google assistant		●●●	or	●●●

● TAP ▬ HOLD 🕒 2SCE

Warning

01 Always store the earbuds in the charging case and safely protected.

02 Avoid storing the earbuds in hot or cold environments to prevent depletion of the battery capacity

03 Avoid storing the earbuds for extended periods of time without recharging them.

04 If the earbuds or the charging case become dirty, it is recommended to clean them with a soft cloth that has been dampened with clean water.

05 The OS version of mobile devices may affect performance of CARGO, it is recommended to update the OS of your mobile device to the latest version before use.

06 It is strongly recommended to clean and dry CARGO properly when it has been exposed to water and sweat.

07 Don't put the CARGO into Charging case while there is moist. Doing so can cause severe damage to the electronics or housing of CARGO. CARGO Charging case is not waterproof.

08 Remove from power source once the product is fully charged. Extended periods of over-charging will decrease battery life.

09 Store the product in a dry area. Keep away from fire, heat, moist and erosive materials.

10 Do not use rough chemical such as soap or cleanser to scrub the product.

11 Do not dissemble, damage, or expose the product to water or fire. Warranty will be voided by any misuse of the product.

12 If the battery is expanded or emits smell, stop using the product immediately.

?

QUESTIONS

Find the answer at
www.thecoopidea.com

thecoopidea
Lovethecoopidea

204-820482

Inspirations from New Zealand. Designed in Hong Kong.
Produced in China. Copyright 2018 The Coop Idea Ltd.

接線

切線

背面

Black & white

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.