Karaoke Video Audio

Instruction Manual

P lease read this instruction carefully before using

INSTRUCTION

Main board: A33+**Memory** 1G+FLASH 8G

1: HOMEPAGE

❶: On the Homepage,Please use Direction Keys on the remote control to choose the Function icon and press OK Key to enter.

Note:

The user could touch the relative function icon on the screen directly and operate according to the instructions.

Unless Bluetooth,U disk,TF card,This speaker need to get connected to the network to work.

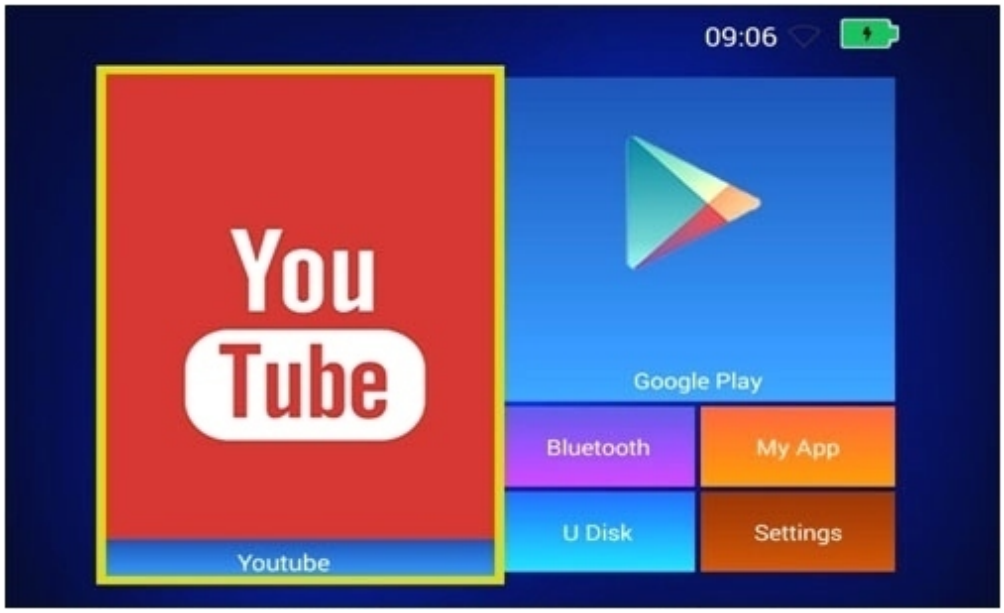

❷: Settings/SETUP:Press the SETUP key on the remote control directly to enter Settings, or press the direction keys to light the Settings icon. then press OK key to enter the following page.

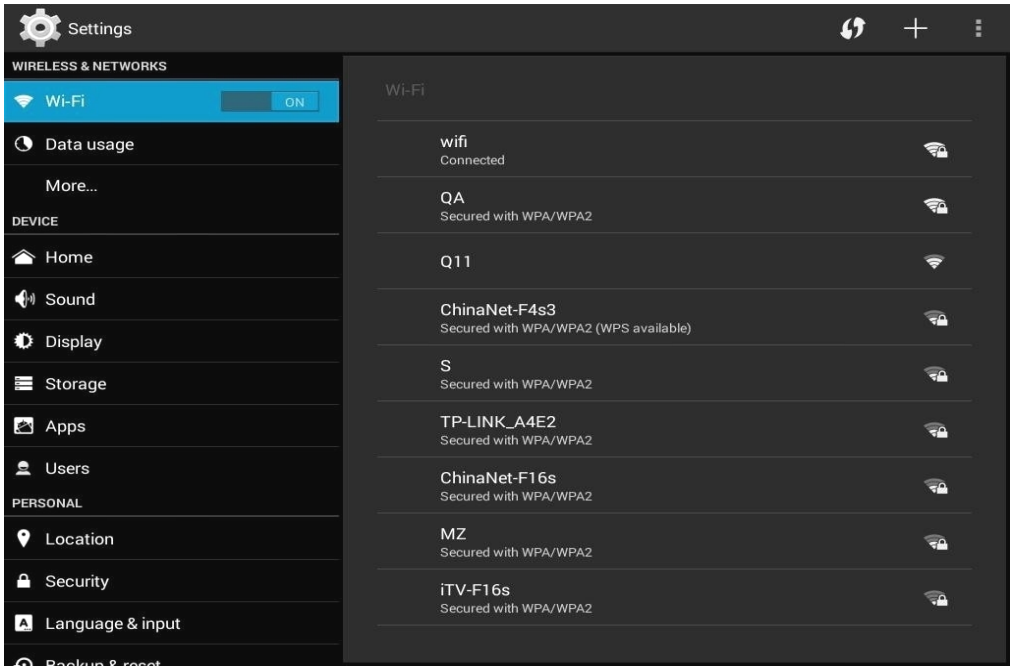

★ After enter the Settings,Press the directionkey to chooseWIFI and to choose your network,press the OK key and enter the Passwordto get connected to the Network.

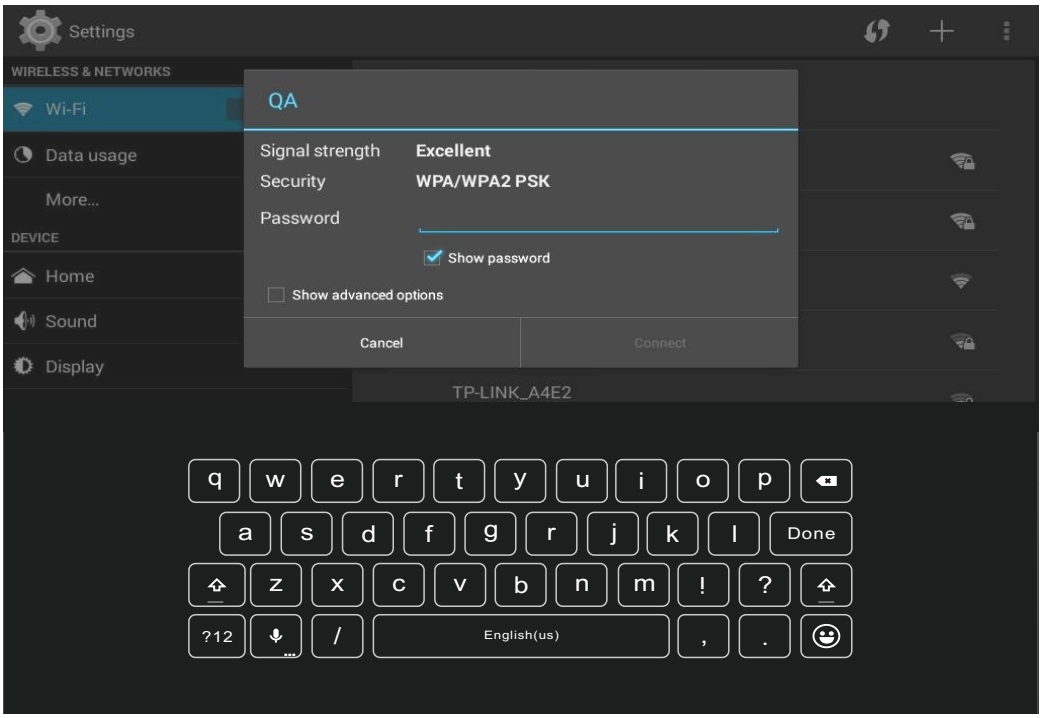

❸Press the direction key to Choose the Bluetooth icon. Press OK key to Enter.Also open the BT function in your Mobile.To choose relative BT name to connect.Press PREV,NEXT to choose songs. Press PLAY/PAUSE key to play or pause.

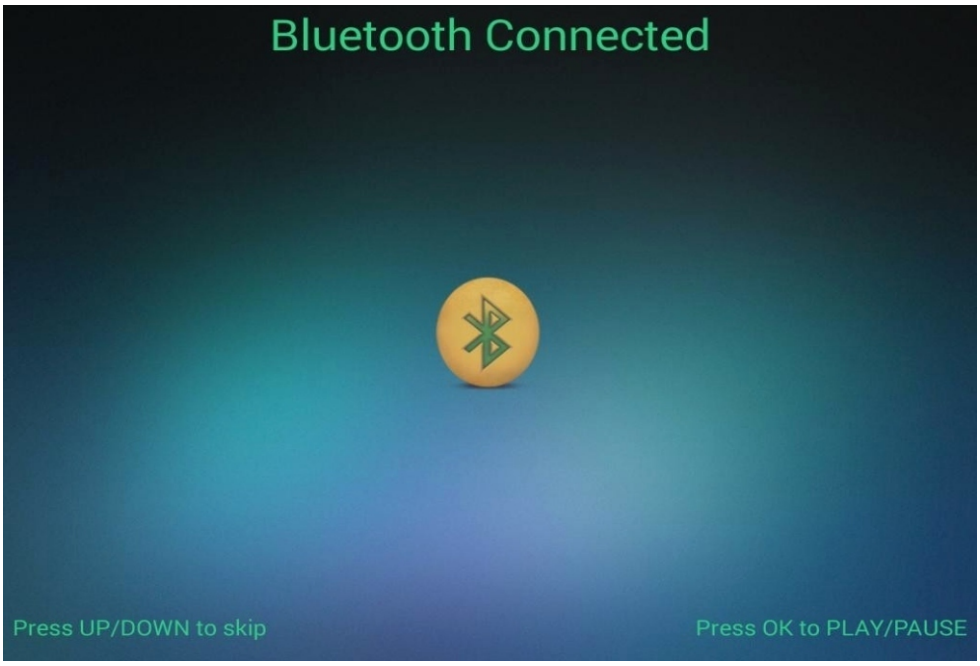

❹Plug in the U DISK or TF CARD,It would play automatically.Press EXIT key to choose your desired track and press OK key to play. Press EXIT again to show the following main page to alter Video & Music.

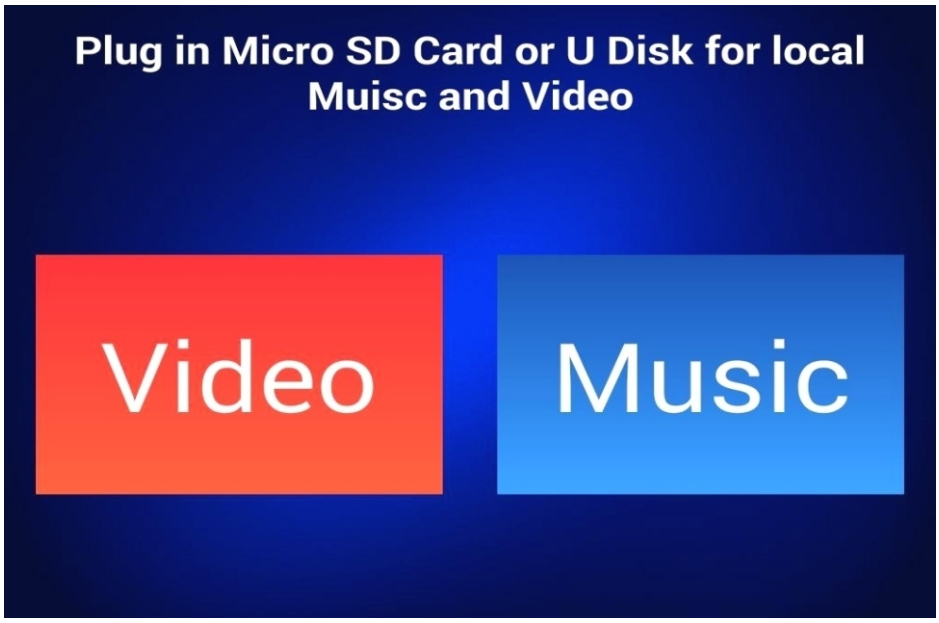

❺Press direction keys to choose My App icon on main page. Press confirm to Enter. It would show the installed APP.
Following picture just for reference.

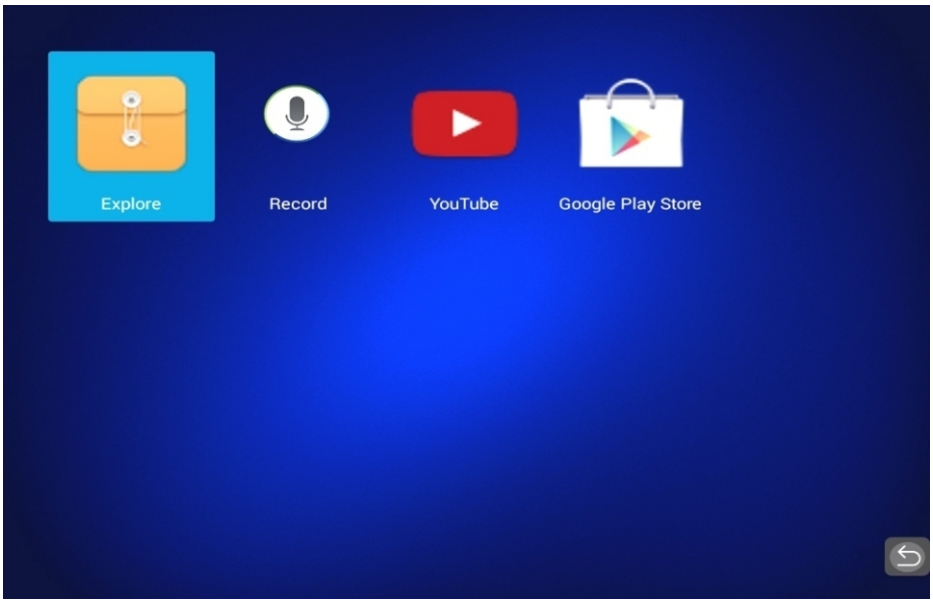

❻ Explore When plug USB & TF card, Use direction key to choose the Explore icon to play the contents in the USB/TF card.

❼ Record

①. Use direction key to choose the Record icon, and press the OK key of the remote control to start record. Press OK again to stop, and press Direction Key to select Finish, last Press OK key to preserve your recorded file.

②. Select the recorded file, and press MENU key to select Delete. Press OK key to delete your recorded file.

❽ YouTube is video website. You could only browse and watch after getting connected to the network.

❾Google Play is an application store , just like App Store, by which you could install Applications after getting connected to the network .

2: **Remote control.**

Following remote control just for reference.

① STANDBY:Long Press STANDBY key to standby or work.

② MUTE:Press the MUTE to be quiet.

③ LIVE:Live video streaming, Enter live programs.

④ VOD: Enter on-demand programs.

⑤ APPLY: Enter Application store.

⑥ SETUP: Enter the setup menu.

⑦ PREV: Enter the last track.

⑧ Next: Enter next track.

⑨ Vol－: Turn down the Volume.

⑩ Vol＋: Increase the Volume.

⑪ MENU: Alter the playing in single cycle or in all cycle.

⑫ TF/USB : Alter the video and audio playing in U disk mode.

⑬ ←↑→↓: Direction key, UP, Down, Left, Right.

⑭ OK: Confirmation key.

⑮ HOME:Return to the Homepage.

⑯ EXIT: Go back to the previous page.

⑰ 0~9: Number keys. Choose numbers and input the password.

⑱ MIC/PRIOR: Microphone priority Switch.

⑲ TRACK: choose Left/Right channel, Stereo.

3: Function keys on the panel.

Following picture just for reference.

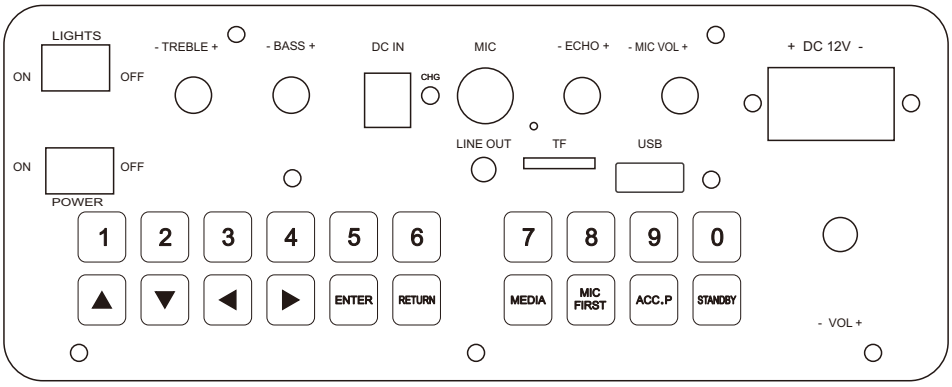

- LIGHTS ON/OFF:Turn light On or Off.
- -VOL+: Use this key to adjust the main volume, turn left to lower the volume,right to higher the volume.
- -TREBLE+: Use this key to adjust the Treble volume,turn left to lower the volume,turn right to higher the volume.
- -BASS+: Use this key to adjust the Bass volume,turn left to lower the volume,turn right to higher the volume.
- DC IN: DC 12V input.
- CHG: Charge indicator
- Mic input: The signal input of wire microphone.
- -ECHO+: Use this key to adjust the microphone Echo,turn left to lower the volume,turn right to higher the volume.Please adjust according the surroundings.
- -MIC VOL+: Use this key to adjust the microphone volume,turn left to lower the volume,turn right to higher the volume.
- POWER ON/OFF: POWER On or Off.
- Line OUT:Audio output
- TF: TF card interface
- USB: USB device socket,card reader and other equipment.
- ▲ :The last song or step.
- ▼ :The next song or step.
- ◀ :Left direction key/Fast Backward Key.
- ▶ :Right direction key/Fast Forward Key.
- Enter: Select OK or Enter Key.
- RETURN: Go back to the previous layer when the music movie is playing.
- MEDIA : When plug the U Disk,press MULTIMEDIA to play the tracks in the USB.
- MIC/FIRST: Microphone priority Switch.
- ACC.P: Choose Left/Right channel,Stereo.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
1) Reorient or relocate the receiving antenna.
2) Increase the separation between the equipment and receiver.
3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4) Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.