品名：	T20说明书（中性通用）	材料工艺：	成品尺寸: 53*80mm 双面单黑印刷，40P，骑马钉 85g哑粉纸
时间：	2020-08-20		
制作：	王润婷		
料号：	SM-EJ-T20-V1		

封底　　封面

英

SM-EJ-T20-V1

EU REP Europe business name: AMZLAB GmbH
Europe business address: Laubenhof 23, 45326 Essen, Germany
Europe phone number: +4917042969696

T20

Wireless Earbuds

User Manual

Thank you for purchasing our product. This manual addresses the safety guidelines, warranty, and operating instructions. Please review this manual thoroughly before operating your device.

English Version

Package Contents.....1
At a Glance.....2
Earbuds LED Indicator Guide.....3
Charging Case LED Indicator Guide.....3
Using the Earbuds.....4
Cleaning the Earbuds and Charging Case.....8
Trouble Shooting.....9
Specifications.....11
SAFETY AND WARRANTY.....12

Deutsche Version

Paketinhalt.....17
Übersicht.....18
Anleitung zu den LED-Anzeigen der Kopfhörer.....19
LED-Anzeige für den Ladekoffer.....19
Verwenden der Kopfhörer.....20
Reinigung der Kopfhörer und des Ladekoffers.....25
Fehlerbehebung.....26
Spezifikationen.....29
SICHERHEIT UND GARANTIE.....30

Package Contents

① Wireless earbuds × 1 pair (L / R)
② Charging case × 1
③ Ear tips × 3 pairs (S / M / L; M size ear tips pre-installed)
④ Ear wings × 3 pairs (S / M / L; M size ear wings pre-installed)
⑤ USB-C charging cable × 1
⑥ User manual × 1
⑦ Quick start guide × 1

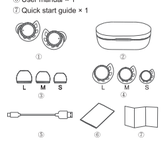

- 1 -

At a Glance

Charging Case



Earbuds



- 2 -

Earbuds LED Indicator Guide

System State	Indicator Activity
Power on	Stays green for one second
Pairing	Flashes red and green alternately
Being charged	Solid red
Fully charged	Solid green

Charging Case LED Indicator Guide

Press the function button of the charging case to check the charging case battery level.

Battery Level	Indicator Activity
50%-100% battery	Stays green for 10 seconds
10%-50% battery	Stays orange for 10 seconds
1%-10% battery	Flashes orange

- 3 -

Using the Earbuds

Charge the earbuds

1) Put the earbuds into the charging case.
2) Close the case lid.

Notes:

- Fully dry off the earbuds before charging.
- The earbuds will not be off and charge if you don't close the charging case lid. Therefore, please close the lid when putting earbuds back for charging.
- When the earbuds have a battery percentage of less than 10%, the earbuds will give a voice prompt every one minute.

Charge the charging case

1) Plug the small end of the USB-C cable into the USB-C port of the charging case.
2) Plug the other end into a USB wall charger or computer (DC 5V) that is powered on.

Notes:

- It takes approximately 1.5 hours to fully recharge the earbuds.

- 4 -

- Fully charge both the earbuds and the charging case before the first-time using.
- The earbuds and the charging case charge simultaneously. The charging case can be used as a standalone charger.

Power on & off

Power on: Open the charging case.
Power off: Put the earbuds back into the charging case and close the case lid.

Pair

1) Make sure the earbuds and your Bluetooth device are next to each other or within 3 feet and there are no obstacles between.
2) Open the charging case and the earbuds enter pairing mode.
3) Turn on the Bluetooth of your Bluetooth device.
4) In the list of found Bluetooth devices in your Bluetooth device, choose "T20" to pair.

Connect to other devices

1) Put the earbuds back into the charging case.
2) Press and hold the function button of the charging case for 3 seconds and the earbuds enter pairing mode.
3) Choose "T20" in your device to pair.

- 5 -

Notes:

- The two earbuds will automatically connect with each other when you open the charging case. But if the TWS connection fails, put the earbuds back into the charging case and press the function button of the case 3 times (the charging case indicator flashes white and orange alternately for 5 seconds and goes off).
- The earbuds will directly enter pairing mode the first time you open the charging case.
- Each time when earbuds are on, they will automatically connect to your last successfully connected device if available within the Bluetooth range.
- When the earbuds are on but not paired with a Bluetooth device, they will be automatically off in 10 minutes.
- **Mono mode:** When Bluetooth connected, you can use either one of the earbuds only by putting the other one back into the charging case and closing the lid.

- 6 -

Button controls

Function	What to do
Play / Pause	Double-tap the touch button of either earbud.
Previous / Next track	Tap and hold the touch button of the left / right earbud for 2 seconds.
Answer / End a call	Double-tap the touch button of either earbud.
Reject a call	Tap and hold the touch button of either earbud for 2 seconds.
Activate / Deactivate Siri or other voice assistant software	Triple-tap the touch button of either earbud.

- 7 -

Reset the earbuds

1) Put the earbuds back into the charging case.
2) Press and hold the function button of the charging case for 10 seconds until the charging case indicator flashes green 5 times.

Cleaning the Earbuds and Charging Case

The earbuds and charging case may require periodic cleaning.

Earbud nozzles	Clean only with a dry, soft cotton swab or equivalent. **Note:** Never insert any cleaning tool into the nozzle.
Charging pins (on earbuds and case)	To prevent rusting, regularly clean with a dry, soft cotton swab or equivalent.
Charging case	Clean only with a dry, soft cotton swab or equivalent.

- 8 -

Trouble Shooting

Q: Pairing fails.

A: 1) Put the earbuds back into the charging case and close the lid.
2) Open the case, the earbuds are automatically on and enter pairing mode.
3) Choose "T20" in your Bluetooth device to pair.

If the pairing still fails, check the following points:

- Make sure the earbuds and your Bluetooth device are next to each other or within 3 feet and there are no obstacles between.
- There are no signal interference nearby (check the "Connection is not stable" part for signal interference conditions).
- Try to reboot your Bluetooth device.

- 9 -

Q: I paired the earbuds with my phone before, but I failed to pair them with my phone again.

A: Turn on the Bluetooth of your phone and in "MY DEVICES", choose "T20" and tap "ⓘ" → "Forget This Device". Then pair the earbuds with your phone again.

Q: Connection is not stable.

A: Bluetooth signal is transmitted wirelessly and signals can be affected, which results in intermittent sound of earbuds, in the following conditions:

- The distance between the earbuds and your Bluetooth device is at the edge of the Bluetooth pairable distance.
- Transmitted signals encounter obstacles or human body blockage.
- There are high-power electronic devices nearby.
- There are other Bluetooth devices and are being turned on/off nearby.

To resume stable connection between the earbuds and your Bluetooth device, try to avoid the above conditions and do the pairing again following the steps in the pairing fails part.

- 10 -

Specifications

Model	T20
Bluetooth Version	V5.0
Battery	40mAh (each earbud), 500mAh (charging case)
Charging Time	Approximately 1.5 hours (earbuds), 1.5 hours (charging case)
Input	DC 5V/1A
Playtime (varies by volume level and content)	Up to 5 hours per charge and 30 hours with charging case
Bluetooth Range	10 meters / 33 feet
Supporting Protocols	A2DP / HFP / HSP / AVRCP
Waterproof Rate	IPX5
Working Temperature	-10°C to 40°C

- 11 -

SAFETY AND WARRANTY

Important safety instructions

- Use of earbuds will impair your ability to hear other sounds. Use caution while using your earbuds when you are engaging in any activity that requires your full attention.
- If you have a pacemaker or other electrical medical devices, consult your physician before using this product.
- This product is not a toy – never allow children to play with this product. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the products, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product.

- 12 -

- Avoid exposing your product to heat and humidity to protect against damage to the product or injury to you.
- Keep all products, cords, and cables away from operating machinery.
- If the product overheats, dropped or damaged, has a damaged cord or plug, or has been dropped in a liquid, discontinue use and contact us.
- Do NOT use in areas where there are explosive hazards.
- Do NOT submerge the product in water. Do NOT expose the product to moving water (e.g., from a faucet, etc.).
- Do NOT wear the earbuds while showering or bathing, or when participating in water sports, e.g., swimming, waterskiing, surfing, etc.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the earbuds.
- Use of a power supply or charger that is not recommended or sold by power pack manufacturer may result in a risk of fire or injury.

- 13 -

- Do not use the charging case in excess of its output range.
- Do not use a charging case that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Dispose of the product according to local standards and regulations.

Remember: *Always drive safely, avoid distractions and follow local laws!*

- Using the earbuds while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions, just as use of the earbuds with both ears covered while driving is not permitted in certain jurisdictions. Check your local laws. Use caution while using your earbuds when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the earbuds from your ear or turning off your earbuds will keep you from being distracted, so as to avoid accident or injury. Do not take notes or read documents while driving.

- 14 -

WARRANTY

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty to all our devices as we continue to make amazing products. Please contact us if you have any questions about our devices.

Federal Communications Commission (FCC) Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following twoconditions:
(1)This device may not cause harmful interference, and
(2)this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference

- 15 -

to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one ormore of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help. Warning: Changes or modifications made to this device not expressly approved by HUMBOLDT TECHNOLOGY (HK) LIMITED may void the FCC authorization to operate this device.
Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
RF exposure statement:
The transmitter must not be colocated or operated in conjunction with any other antenna or transmitter.
This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a Minimum distance of 5mm between the radiator and any part of your body.

- 16 -

T20

Bluetooth Kopfhörer

Benutzerhandbuch

Vielen Dank für den Kauf unserer Produkte. Dieses Handbuch behandelt die Sicherheitsrichtlinien, die Garantie und die Bedienungsanleitung. Bitte lesen Sie dieses Handbuch sorgfältig durch, bevor Sie Ihr Gerät bedienen.

Paketinhalt

① Bluetooth Kopfhörer × 1 Paar (L / R)
② Ladekoffer × 1
③ Ohrstöpsel × 3 Paare (S / M / L; Ohrstöpsel der Größe M vorinstalliert)
④ Ohrbügel × 3 Paare (S / M / L; Ohrbügel der Größe M vorinstalliert)
⑤ USB-C-Ladekabel × 1
⑥ Benutzerhandbuch × 1
⑦ Schnellstart-Anleitung × 1

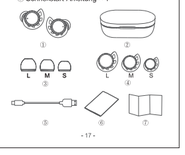

- 17 -

Übersicht

Ladekoffer



Kopfhörer



- 18 -

Anleitung zu den LED-Anzeigen der Kopfhörer

Systemzustand	Indikatoraktivität
Einschalten	Bleibt eine Sekunde lang grün
Paarung	Blinkt abwechselnd rot und grün
Aufladen	Festes Rot
Vollständig aufgeladen	Festes grün

LED-Anzeige für den Ladekoffer

Drücken Sie die Funktionstaste des Ladekastens, um den Ladezustand der Batterie zu überprüfen.

Batteriestand	Indikatoraktivität
50%-100% Batterie	Bleibt 10 Sekunden lang grün
10%-50% Batterie	Bleibt 10 Sekunden lang orange
1%-10% Batterie	Blinkt orange

- 19 -

Verwenden der Kopfhörer

Laden Sie die Kopfhörer auf

1) Setzen Sie die Kopfhörer in den Ladekoffer ein
2) Schließen Sie den Ladekoffer

Hinweis:

- Trocknen Sie die Kopfhörer vor dem Aufladen vollständig ab.
- Die Kopfhörer werden nicht ausgeschaltet und aufgeladen, wenn Sie den Deckel des Ladekoffers nicht schließen. Schließen Sie daher bitte den Deckel, wenn Sie die Kopfhörer zum Aufladen zurücklegen.
- Wenn der Batterieprozentsatz der Kopfhörer weniger als 10% beträgt, gibt die Kopfhörer alle Minute einen Sprachalarm aus.

Laden Sie den Ladekoffer auf

1) Stecken Sie das kleine Ende des USB-C-Kabels in den USB-C-Anschluss des Ladekoffers.
2) Stecken Sie das andere Ende in ein USB-Wandladegerät oder einen Computer (DC 5V), der eingeschaltet ist.

- 20 -

Hinweise:

- Es dauert ca. 1,5 Stunde, um die Kopfhörer vollständig aufzuladen.
- Laden Sie sowohl die Kopfhörer als auch den Ladekoffer vor der ersten Verwendung vollständig auf.
- The earbuds and the charging case charge simultaneously. The charging case can be used as a standalone charger.

Ein-/Ausschalten

Einschalten: Öffnen Sie den Ladekoffer.
Ausschalten: Setzen Sie die Kopfhörer wieder in den Ladekoffer ein und schließen Sie den Koffer.

Pairing

1) Stellen Sie sicher, dass die Kopfhörer und Ihr Bluetooth-Gerät nebeneinander oder innerhalb von 3 Fuß sind und dass sich keine Hindernisse dazwischen befinden.
2) Öffnen Sie den Ladekoffer und die Kopfhörer wechseln in den Pairing-Modus.
3) Schalten Sie das Bluetooth Ihres Bluetooth-Gerätes ein.
4) In der Liste der gefundenen Bluetooth-Geräte in Ihrem Bluetooth-Gerät wählen Sie "T20" für die Kopplung.

- 21 -

Verbinden mit anderen Geräten

1) Setzen Sie die Kopfhörer wieder in den den Ladekoffer ein.
2) Halten Sie die Funktionstaste des Ladekoffers 3 Sekunden lang gedrückt, und die Kopfhörer wechseln in den Pairing-Modus.
3) Wählen Sie "T20" in Ihrem Gerät zum Koppeln.

Hinweise:

- Die beiden Kopfhörer werden automatisch miteinander verbunden, wenn Sie das Ladekoffer öffnen. Wenn die TWS-Verbindung jedoch fehschlägt, setzen Sie die Kopfhörer wieder in den Ladekoffer ein und drücken Sie dreimal die Funktionstaste der Koffers (die Anzeige des Ladekoffers blinkt abwechselnd 5 Sekunden lang weiß und orange und erlischt).
- Die Kopfhörer gehen direkt in den Kopplungsmodus, wenn Sie den Ladekoffer zum ersten Mal öffnen.
- Jedes Mal, wenn Sie Ihre Kopfhörer einschalten, stellen sie automatisch eine Verbindung zu Ihrem letzten erfolgreich verbundenen Gerät her, sofern es sich innerhalb der Bluetooth-Reichweite befindet.
- Wenn die Kopfhörer eingeschaltet, aber nicht mit einem Bluetooth-Gerät gepaart sind, werden sie nach 10 Minuten automatisch ausgeschaltet.
- **Mono-Modus:** Wenn Bluetooth verbunden ist, können Sie einen der beiden Kopfhörer verwenden, indem Sie den anderen wieder in den Ladekoffer legen und den Deckel schließen.

- 22 -

- 23 -

Die Steuerung der Tasten

Funktion	Was ist zu tun
Abspielen / Pause	Tippen Sie doppelt auf die Touch-Taste eines der Kopfhörer.
Vorheriger / Nächster Titel	Tippen und halten Sie die Touch-Taste des linken / rechten Kopfhörers 2 Sekunden lang.
Anruf annehmen / beenden	Tippen Sie doppelt auf die Touch-Taste eines der Kopfhörer.
Einen Anruf ablehnen	Tippen und halten Sie die Touch-Taste eines der Kopfhörer 2 Sekunden lang.
Aktivieren Sie Siri oder andere Sprachassistenten-Software	Tippen Sie dreimal auf die Touch-Taste eines der Kopfhörer.

- 24 -

Zurücksetzen der Kopfhörer

1) Setzen Sie die Kopfhörer wieder in den Ladekoffer ein.
2) Halten Sie die Funktionstaste des Ladekoffers 10 Sekunden lang gedrückt, bis die Ladekofferanzeige fünfmal grün blinkt.

Reinigung der Kopfhörer und des Ladekoffers

Die Kopfhörer und der Ladekoffer können eine regelmäßige Reinigung erfordern.

Kopfhörer-Düsen	Nur mit einem trockenen, weichen Wattestäbchen oder einem gleichwertigen Mittel reinigen. **Hinweis:** Führen Sie niemals ein Reinigungswerkzeug in die Düse ein.
Ladestifte (auf Kopfhörer und Gehäuse)	Um Rost zu vermeiden, reinigen Sie ihn regelmäßig mit trockenen, weichen Wattestäbchen oder ähnlichen Produkten.
Ladekoffer	Reinigen Sie nur mit einem trockenen, weichen Wattestäbchen oder gleichwertig.

- 25 -

Fehlerbehebung

F: Das Pairing schlägt fehl.

A: 1) Legen Sie die Kopfhörer wieder in den Ladekoffer und schließen Sie den Deckel.
2) Öffnen Sie den Koffer, die Kopfhörer sind automatisch eingeschaltet und wechseln Sie in den Pairing-Modus.
3) Wählen Sie „T20" in Ihrem Bluetooth-Gerät zum Koppeln.

Wenn die Kopplung immer noch fehlschlägt, überprüfen Sie die folgenden Punkte:

- Stellen Sie sicher, dass sich die Kopfhörer und Ihr Bluetooth-Gerät nebeneinander oder innerhalb von 3 Fuß befinden und es keine Hindernisse dazwischen gibt.
- Es sind keine Signalstörungen in der Nähe (prüfen Sie den Teil "Verbindung ist nicht stabil" auf Signalstörungen).
- Versuchen Sie, Ihr Bluetooth-Gerät neu zu starten.

- 26 -

F: Ich habe die Kopfhörer zuvor mit meinem Telefon gekoppelt, aber es ist mir nicht gelungen, sie wieder mit meinem Telefon zu koppeln.

A: Schalten Sie das Bluetooth Ihres Telefons ein und wählen Sie unter „MEINE GERÄTE" „T20" und tippen Sie aufand tip „ⓘ" → „Dieses Gerät vergessen". Verbinden Sie dann die Kopfhörer wieder mit Ihrem Telefon.

F: Die Verbindung ist nicht stabil.

A: Das Bluetooth-Signal wird drahtlos übertragen und das Signal kann in den folgenden Fällen beeinträchtigt werden, was zu intermittierendem Ton aus den Kopfhörer führen kann:

- Der Abstand zwischen dem Kopfhörer und dem Bluetooth-Gerät befindet sich am Rand des koppelbaren Bluetooth-Abstands.
- Übertragene Signale treffen auf Hindernisse oder Blockaden des menschlichen Körpers.
- In der Nähe befinden sich elektronische Geräte mit hoher Leistung.
- Es gibt andere Bluetooth-Geräte, die in der Nähe ein- und ausgeschaltet werden.

- 27 -

德

Um wieder eine stabile Verbindung zwischen den Kopfhörern und Ihrem Bluetooth-Gerät herzustellen, versuchen Sie, die oben genannten Bedingungen zu vermeiden und führen Sie die Kopplung erneut durch, indem Sie die Schritte im Teil Kopplung fehlgeschlagen befolgen.

- 28 -

Spezifikationen

Modell	T20
Bluetooth-Version	V5.0
Batterie	40mAh (jeder Kopfhörer), 500mAh (Ladekoffer)
Ladezeit	Ca. 1,5 Stunden (Kopfhörer), 1,5 Stunden (Ladekoffer)
Eingabe	DC 5V/1A
Spielzeit (variiert je nach Lautstärkepegel und Inhalt)	Bis zu 5 Stunden pro Ladung und 30 Stunden mit dem Ladekoffer
Bluetooth-Reichweite	10 Meter / 33 Fuß
Unterstützende Protokolle	A2DP / HFP / HSP / AVRCP
Wasserdichte Rate	IPX5
Arbeitstemperatur	-10°C bis 40°C

- 29 -

SICHERHEIT UND GARANTIE

Wichtige Sicherheitshinweise

- Die Verwendung von Kopfhörer kann Ihre Fähigkeit beeinträchtigen, andere Geräusche zu hören. Wenn Sie einer Tätigkeit nachgehen, die Ihre volle Aufmerksamkeit erfordert, sollten Sie bei der Verwendung von Kopfhörer besonders vorsichtig sein.
- Wenn Sie einen Herzschrittmacher oder andere elektrische medizinische Geräte besitzen, sollten Sie Ihren Arzt konsultieren, bevor Sie dieses Produkt verwenden.
- Dieses Produkt ist kein Spielzeug. Lassen Sie Kinder niemals mit diesem Produkt spielen. Der Beutel selbst oder viele kleine Teile im Beutel können Erstickungsgefahr verursachen.
- Versuchen Sie niemals, das Produkt selbst zu zerlegen oder irgendwelche Gegenstände in die Produkte zu schieben, da dies zu einem Kurzschluss führen kann, der zu Feuer oder Stromschlag zur Folge haben können.

- 30 -

- Keine der Komponenten kann von den Benutzern ersetzt oder repariert werden. Nur autorisierte Händler oder Servicezentren dürfen das Produkt öffnen.
- Vermeiden Sie es, Ihr Produkt Hitze und Feuchtigkeit auszusetzen, um es vor Schäden am Produkt oder Verletzungen zu schützen.
- Halten Sie alle Produkte, Drähte und Kabel von der Bedienmaschine fern.
- Wenn das Produkt überhitzt, heruntergefallen oder beschädigt ist, das Netzkabel oder der Stecker beschädigt ist oder in eine Flüssigkeit gefallen ist, beenden Sie die Verwendung und kontaktieren Sie uns.
- NICHT in Bereichen verwenden, in denen Explosionsgefahr besteht.
- Tauchen Sie die Kopfhörer NICHT in Wasser ein. Setzen Sie die Kopfhörer NICHT fließendem Wasser aus (z. B. aus einem Wasserhahn usw.).
- Tragen Sie die Kopfhörer NICHT beim Duschen oder Baden oder bei der Ausübung von Wassersportarten, z.B. Schwimmen, Wasserski, Surfen usw.

- 31 -

- Das Verbleiben des Produkts an heißen oder kalten Orten, wie z.B. in einem geschlossenen Auto unter Sommer- und Winterbedingungen, verringert die Kapazität und Lebensdauer der Kopfhörer.
- Die Verwendung eines Netzteils oder Ladegeräts, das nicht vom Hersteller des Netzteils empfohlen oder verkauft wird, kann zu einem Brand- oder Verletzungsrisiko führen.
- Verwenden Sie keinen Ladekoffer, der seinen Ausgabebereich überschreitet.
- Verwenden Sie keinen beschädigten oder modifizierten Ladekoffer. Beschädigte oder modifizierte Batterien können ein unvorhersehbares Verhalten zeigen, das zu Feuer, Explosion oder Verletzungsgefahr führen kann.
- Entsorgen Sie das Produkt gemäß den örtlichen Normen und Vorschriften.

Denken Sie daran: *Fahren Sie immer sicher, vermeiden Sie Ablenkungen und befolgen Sie die örtlichen Gesetze!*

In einigen Bereichen kann die Verwendung von Kopfhörer beim Bedienen von Kraftfahrzeugen, Motorrädern, Booten oder

- 32 -

Fahrrädern gefährlich und illegal sein, ebenso wie die Verwendung der Kopfhörer mit beiden Ohren, während der Fahrt in bestimmten Rechtsordnungen nicht erlaubt ist. Prüfen Sie Ihre örtlichen Gesetze. Seien Sie vorsichtig, wenn Sie Ihre Kopfhörer verwenden, wenn Sie sich an Aktivitäten beteiligen, die Ihre volle Aufmerksamkeit erfordern.Wenn Sie eine dieser Aktivitäten ausführen, entfernen Sie die Kopfhörer von Ihren Ohren oder schließen Sie sie, um Sie nicht abzulenken und um Unfälle oder Verletzungen zu vermeiden. Machen Sie sich während der Fahrt keine Notizen und lesen Sie keine Dokumente.

- 33 -

GARANTIE

Wir sind bestrebt, unsere Produkte mit höchster Liebe zum Detail und Handwerkskunst zu bauen. Manchmal treten jedoch Mängel auf. Wir freuen uns, eine einjährige, problemlose Garantie auf alle unsere Produkte anbieten zu können, da wir weiterhin erstaunliche Produkte herstellen. Bitte kontaktieren Sie uns, wenn Sie Fragen zu unseren Geräten haben.

- 34 -

FCC ID：2AW9K-T20

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, in alignment with section 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.