Freq. Stability NVNT a 5700MHz Ant1

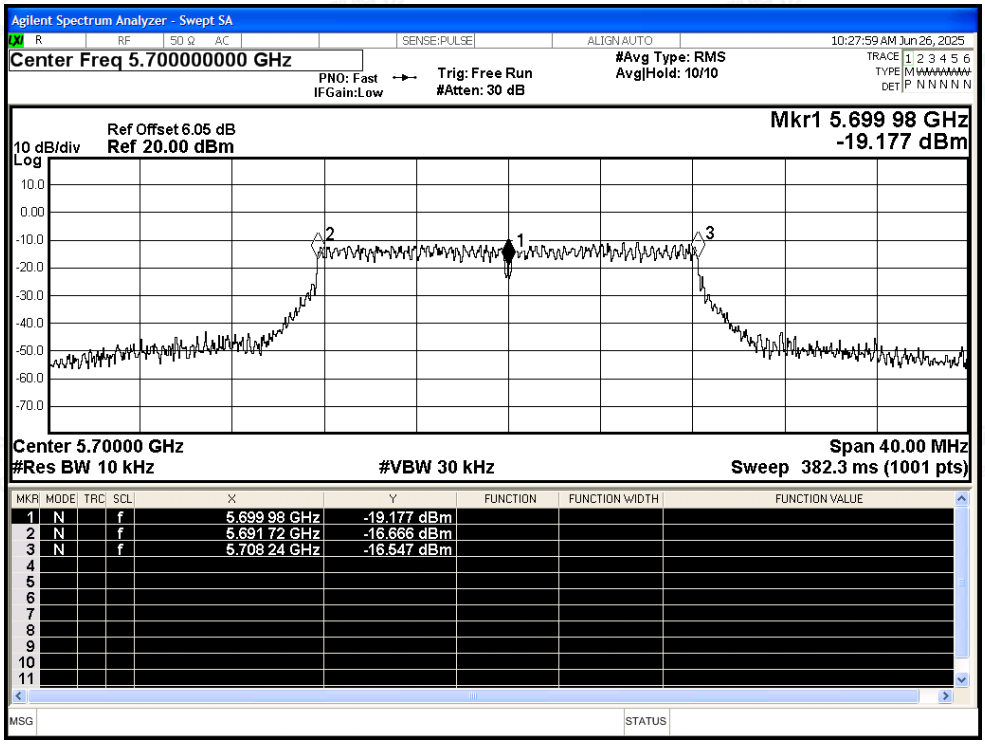

Freq. Stability NVNT n20 5500MHz Ant1

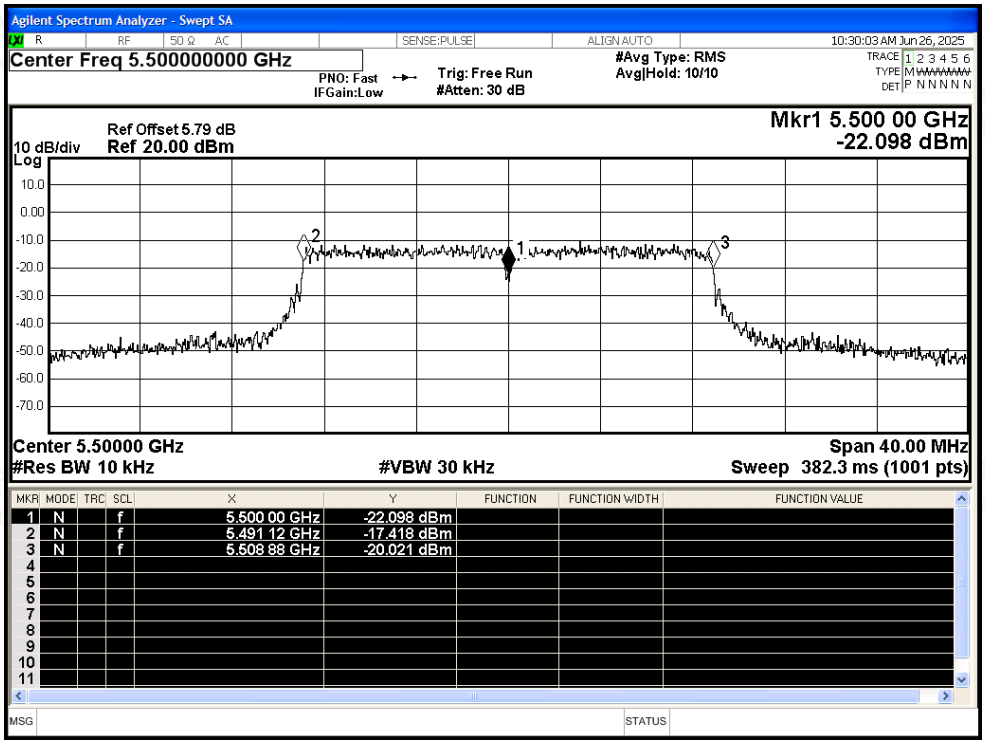

Freq. Stability NVNT n20 5580MHz Ant1

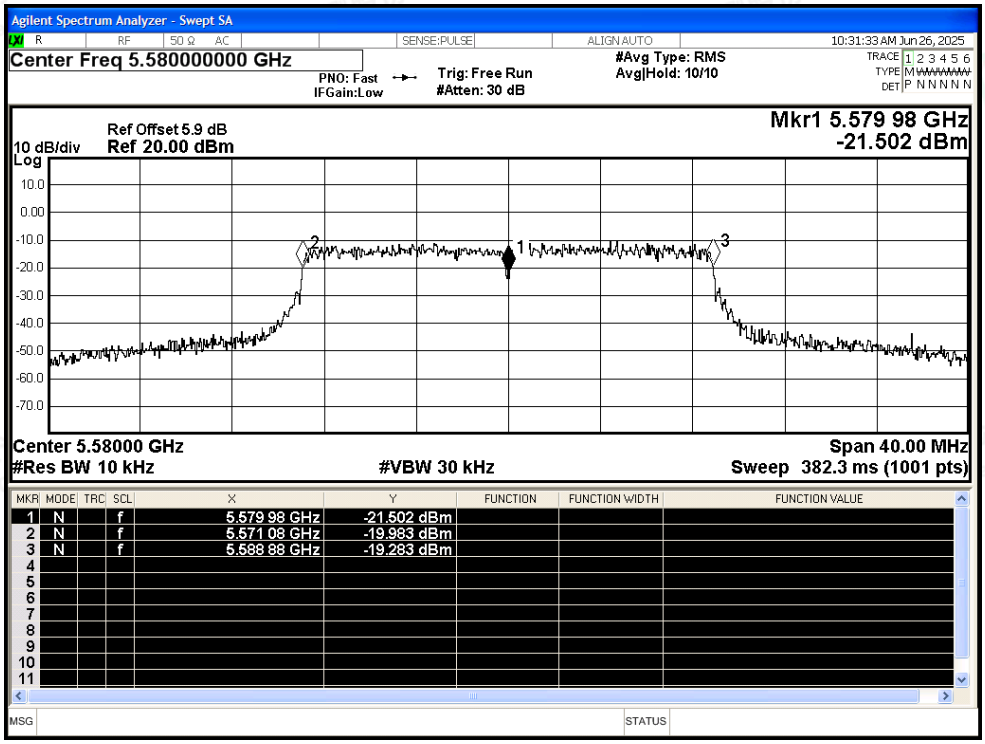

Freq. Stability NVNT n20 5700MHz Ant1

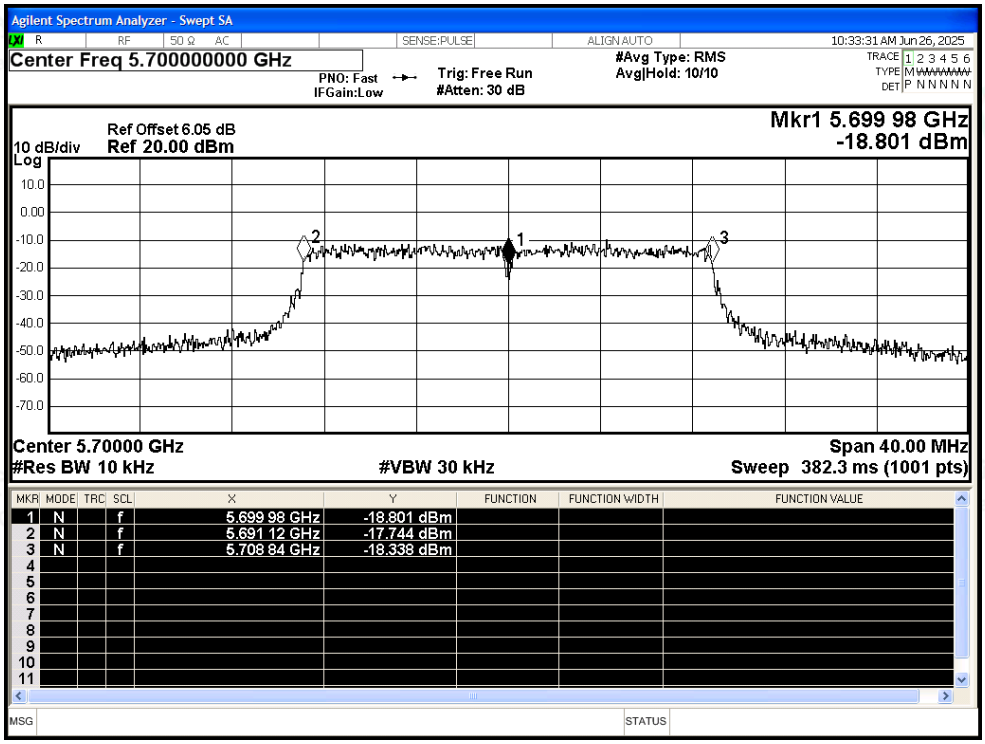

Freq. Stability NVNT n40 5510MHz Ant1

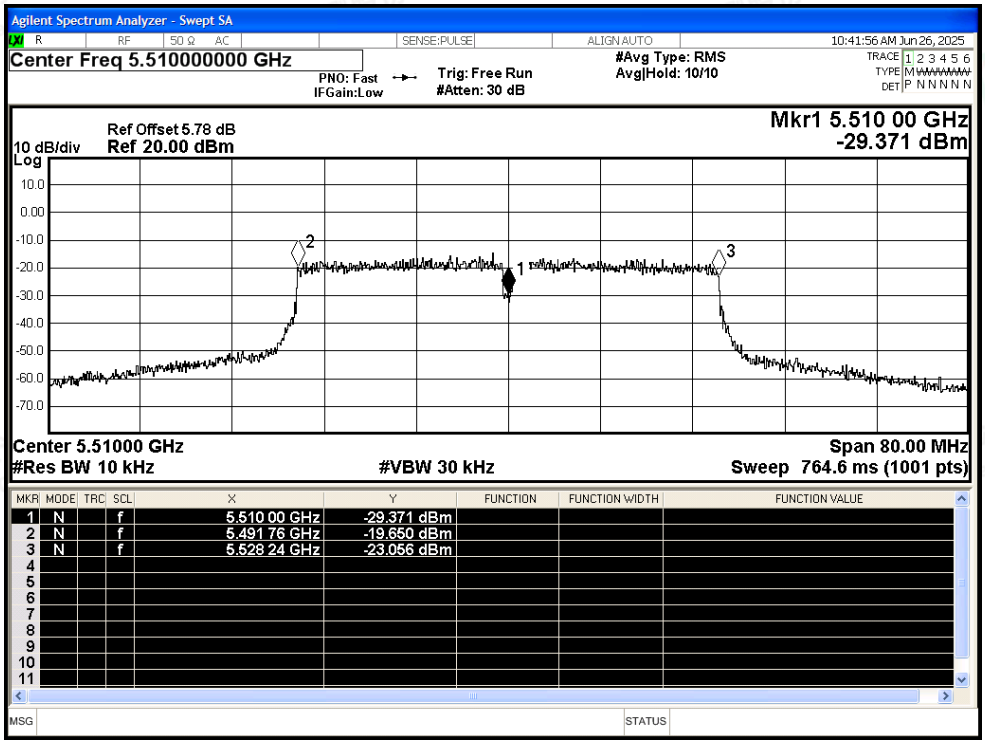

Freq. Stability NVNT n40 5550MHz Ant1

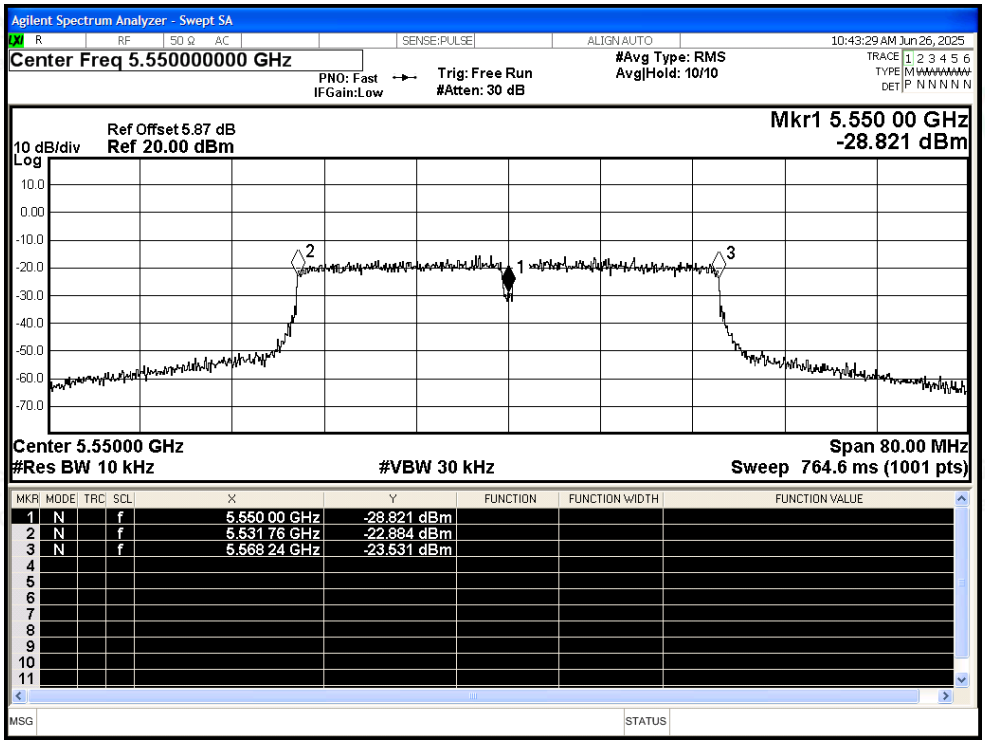

Freq. Stability NVNT n40 5670MHz Ant1

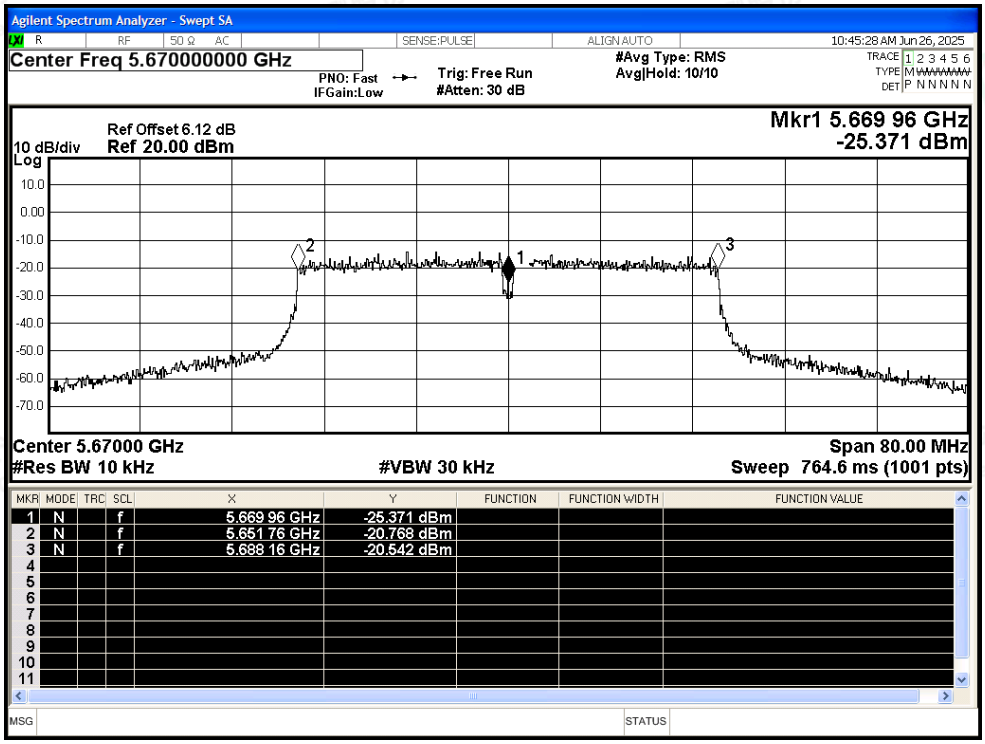

Freq. Stability NVNT ac20 5500MHz Ant1

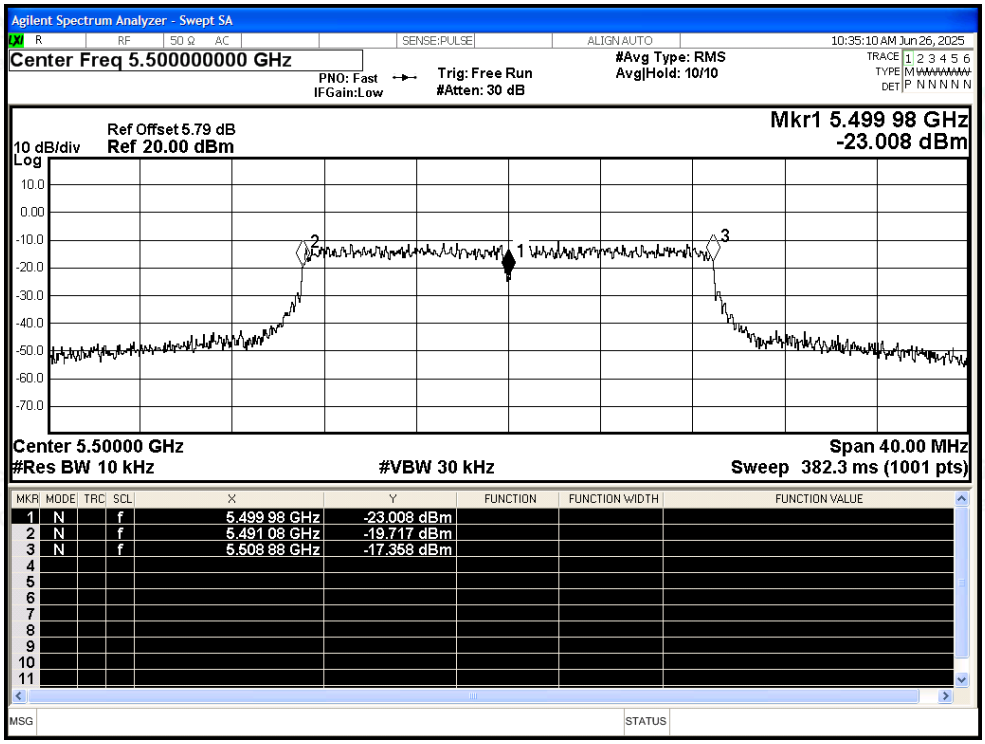

Freq. Stability NVNT ac20 5580MHz Ant1

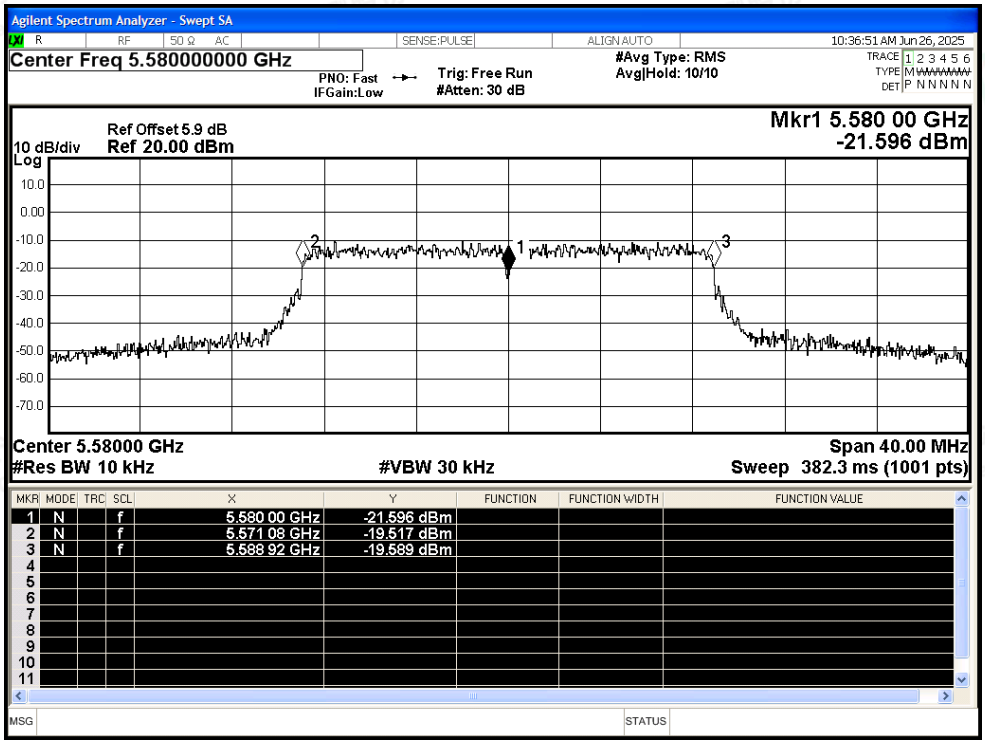

Freq. Stability NVNT ac20 5700MHz Ant1

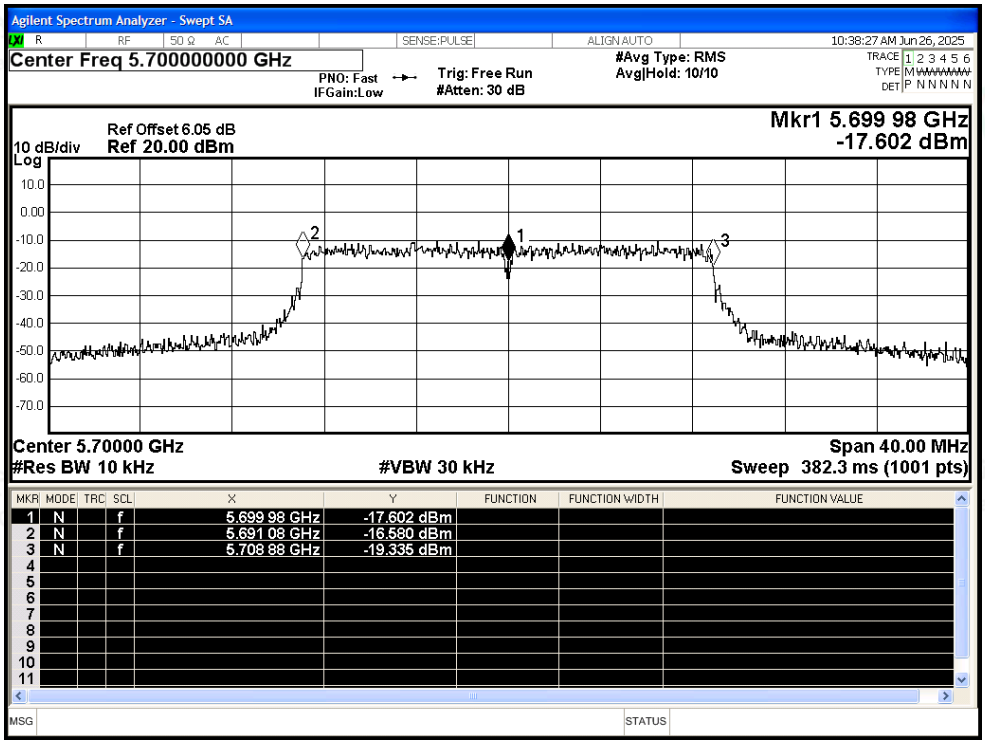

Freq. Stability NVNT ac40 5510MHz Ant1

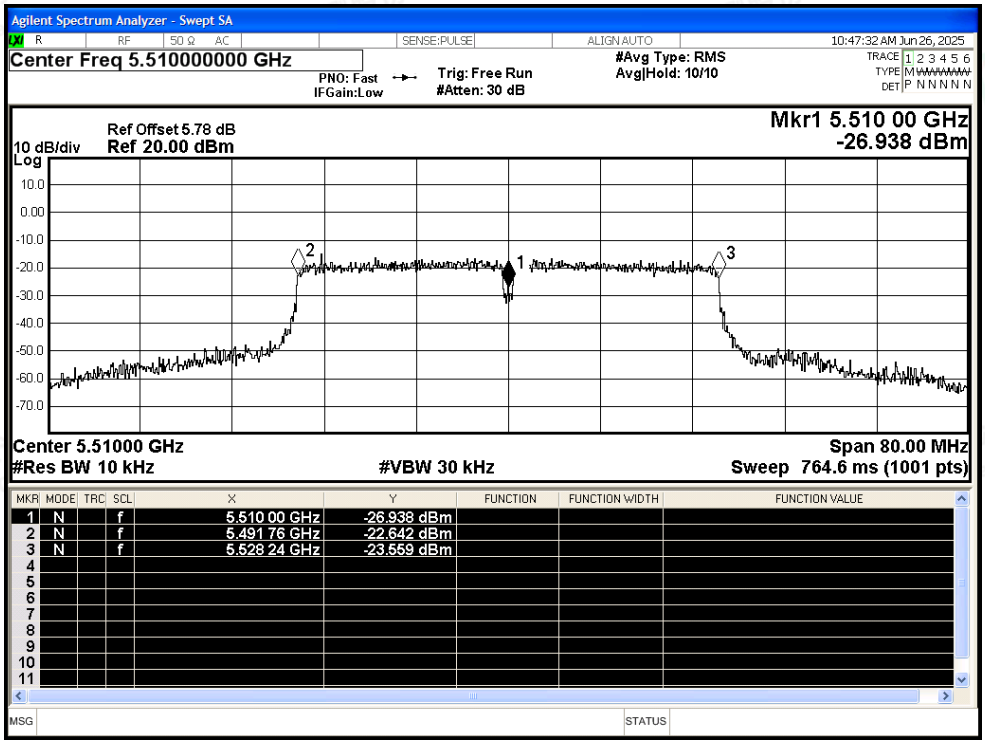

Freq. Stability NVNT ac40 5550MHz Ant1

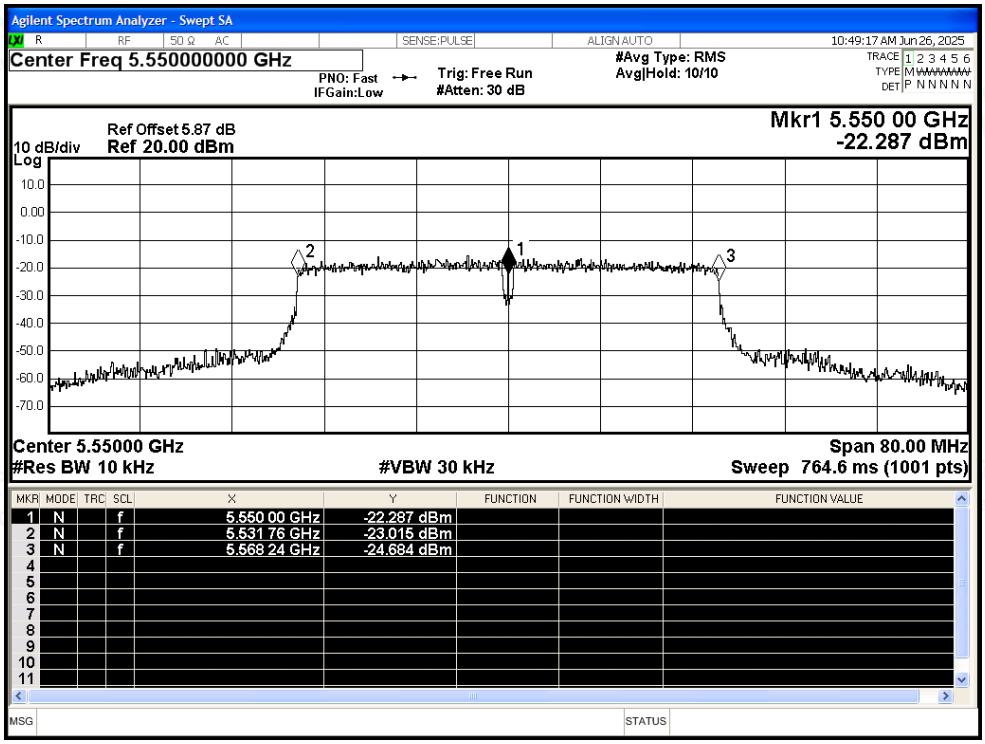

Freq. Stability NVNT ac40 5670MHz Ant1

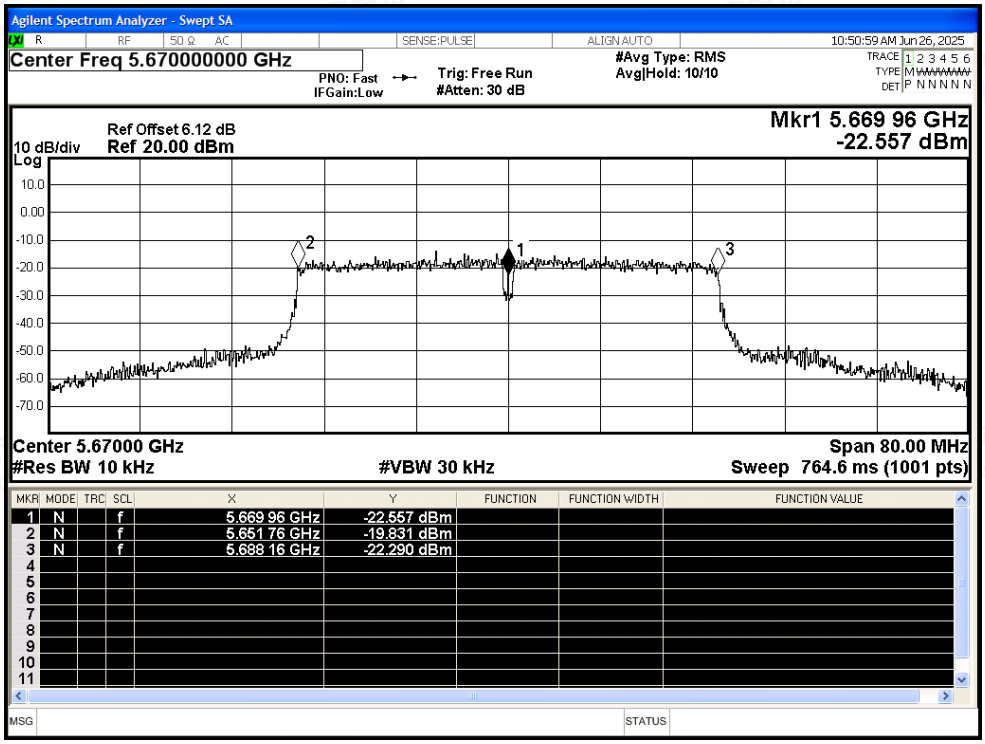

Freq. Stability NVNT ax20 5500MHz Ant1

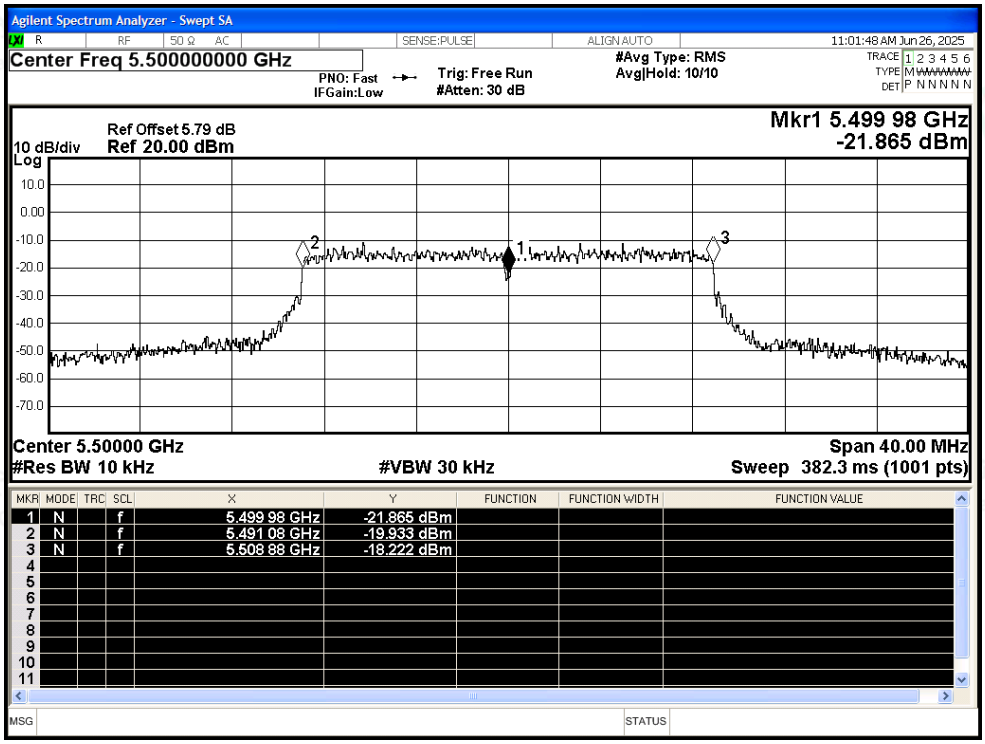

Freq. Stability NVNT ax20 5580MHz Ant1

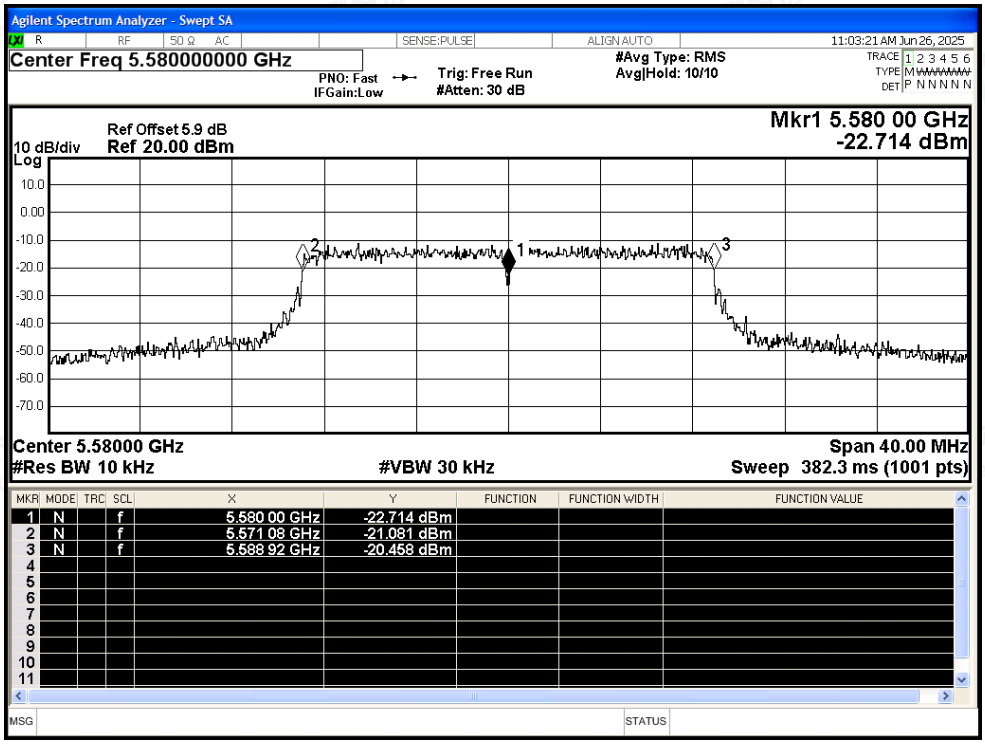

Freq. Stability NVNT ax20 5700MHz Ant1

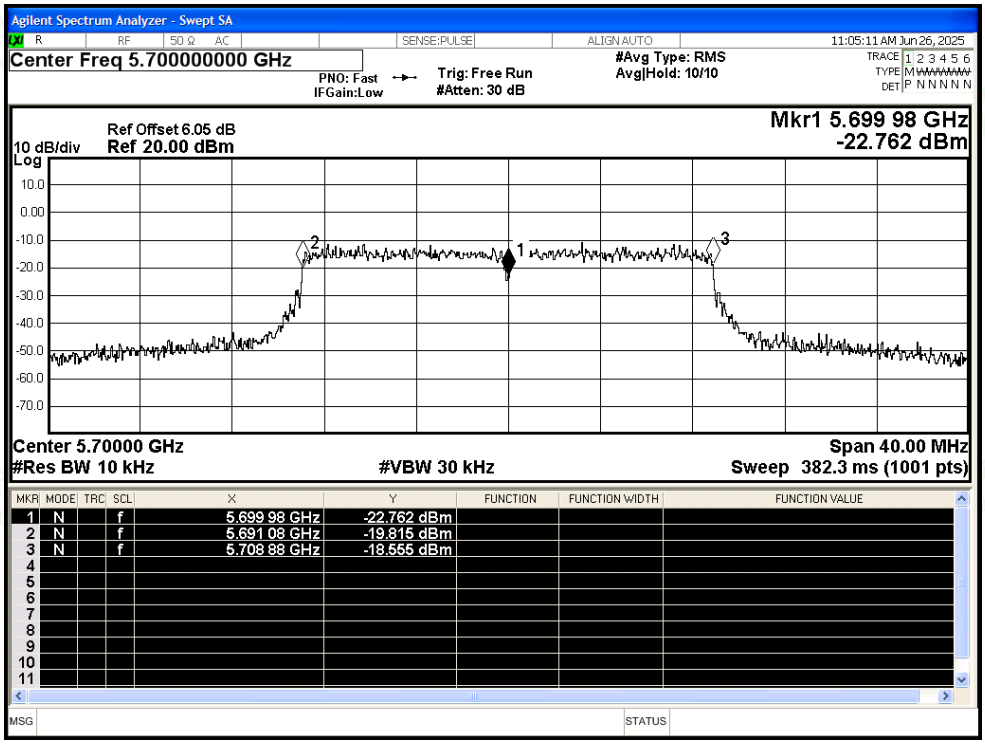

Freq. Stability NVNT ax40 5510MHz Ant1

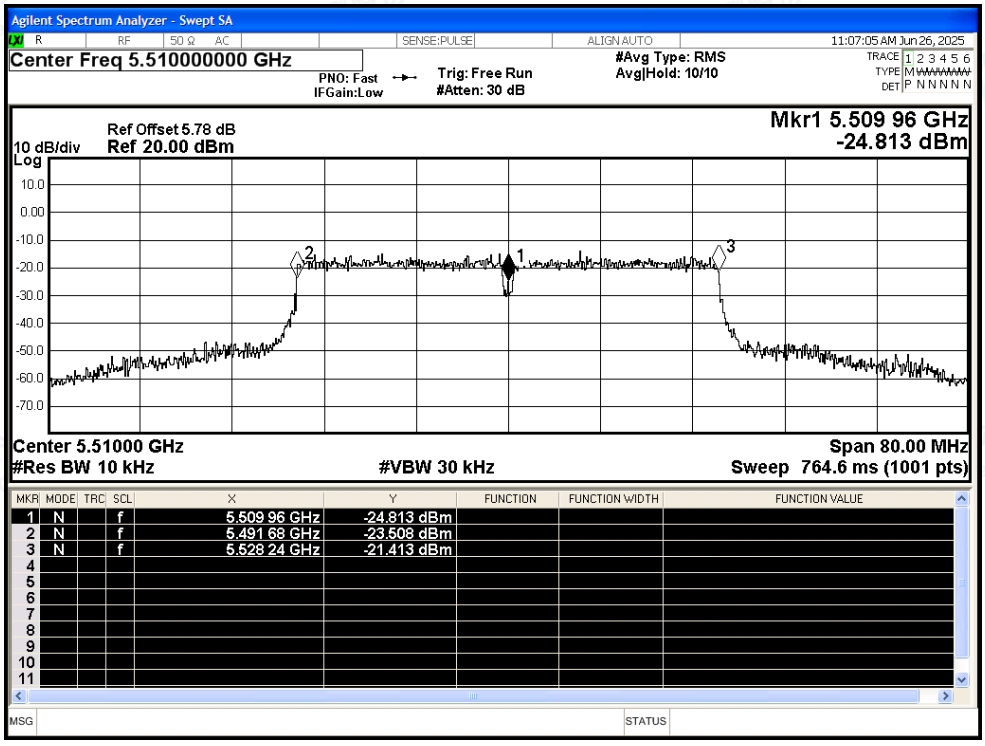

Freq. Stability NVNT ax40 5550MHz Ant1

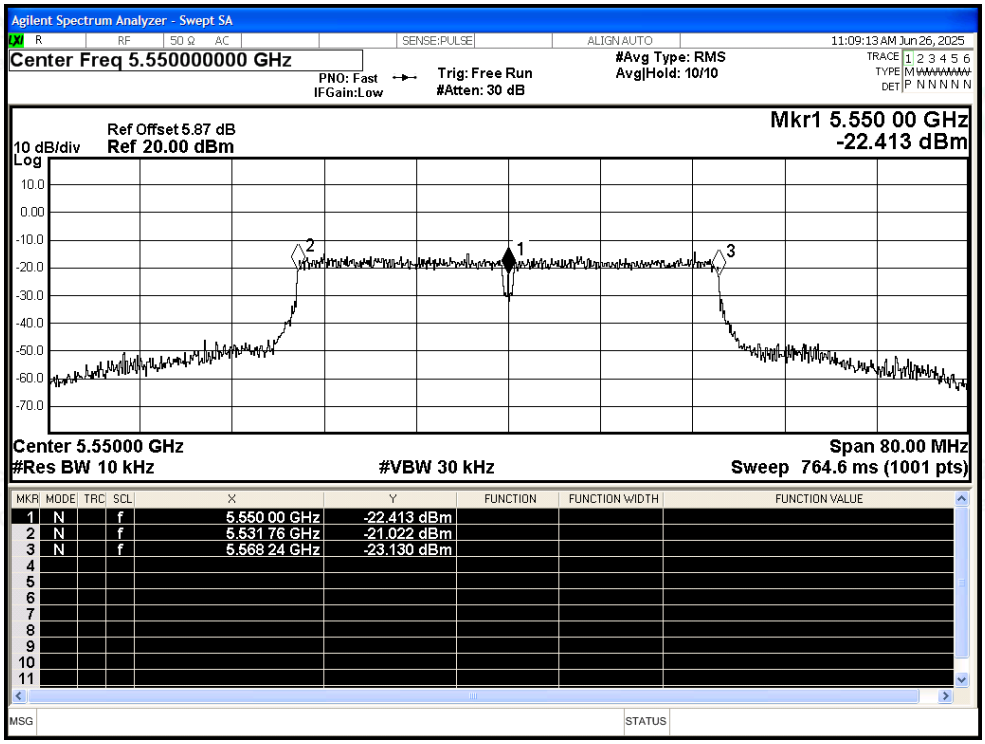

Freq. Stability NVNT ax40 5670MHz Ant1

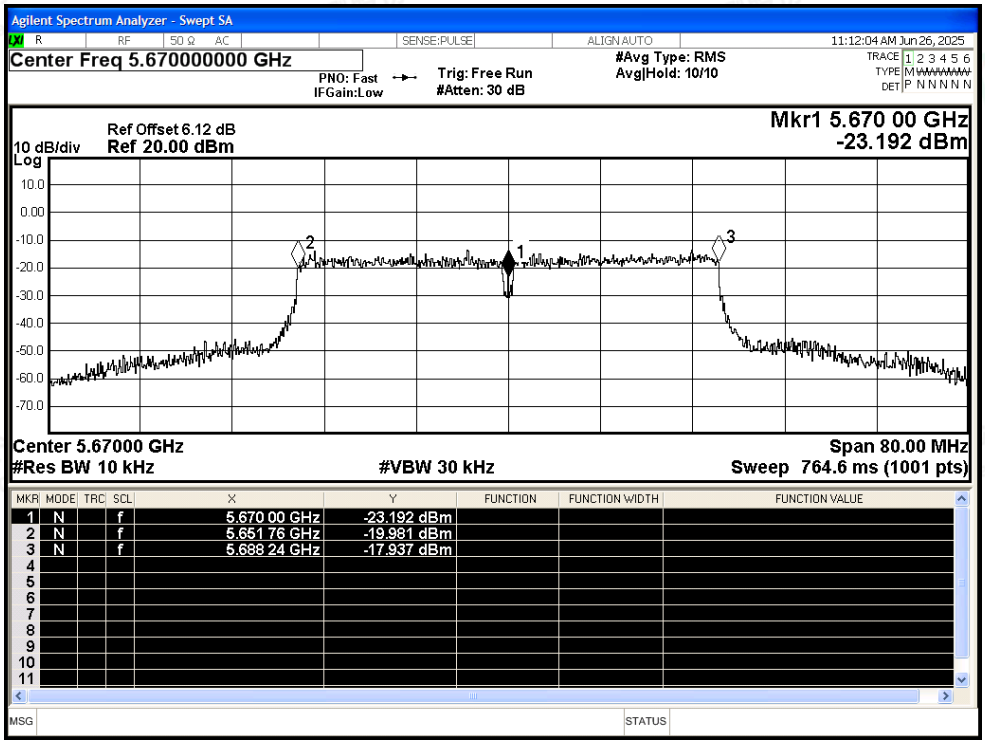

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5500	Ant2	5500	0	0	25	Pass
NVNT	a	5580	Ant2	5580	0	0	25	Pass
NVNT	a	5700	Ant2	5699.98	-20000	-3.51	25	Pass
NVNT	n20	5500	Ant2	5500	0	0	25	Pass
NVNT	n20	5580	Ant2	5580	0	0	25	Pass
NVNT	n20	5700	Ant2	5700	0	0	25	Pass
NVNT	n40	5510	Ant2	5509.96	-40000	-7.26	25	Pass
NVNT	n40	5550	Ant2	5550	0	0	25	Pass
NVNT	n40	5670	Ant2	5670	0	0	25	Pass
NVNT	ac20	5500	Ant2	5500	0	0	25	Pass
NVNT	ac20	5580	Ant2	5579.98	-20000	-3.58	25	Pass
NVNT	ac20	5700	Ant2	5699.98	-20000	-3.51	25	Pass
NVNT	ac40	5510	Ant2	5510	0	0	25	Pass
NVNT	ac40	5550	Ant2	5550	0	0	25	Pass
NVNT	ac40	5670	Ant2	5670	0	0	25	Pass
NVNT	ax20	5500	Ant2	5499.98	-20000	-3.64	25	Pass
NVNT	ax20	5580	Ant2	5580	0	0	25	Pass
NVNT	ax20	5700	Ant2	5699.98	-20000	-3.51	25	Pass
NVNT	ax40	5510	Ant2	5510	0	0	25	Pass
NVNT	ax40	5550	Ant2	5550	0	0	25	Pass
NVNT	ax40	5670	Ant2	5670	0	0	25	Pass

Test Graphs

Freq. Stability NVNT a 5500MHz Ant2

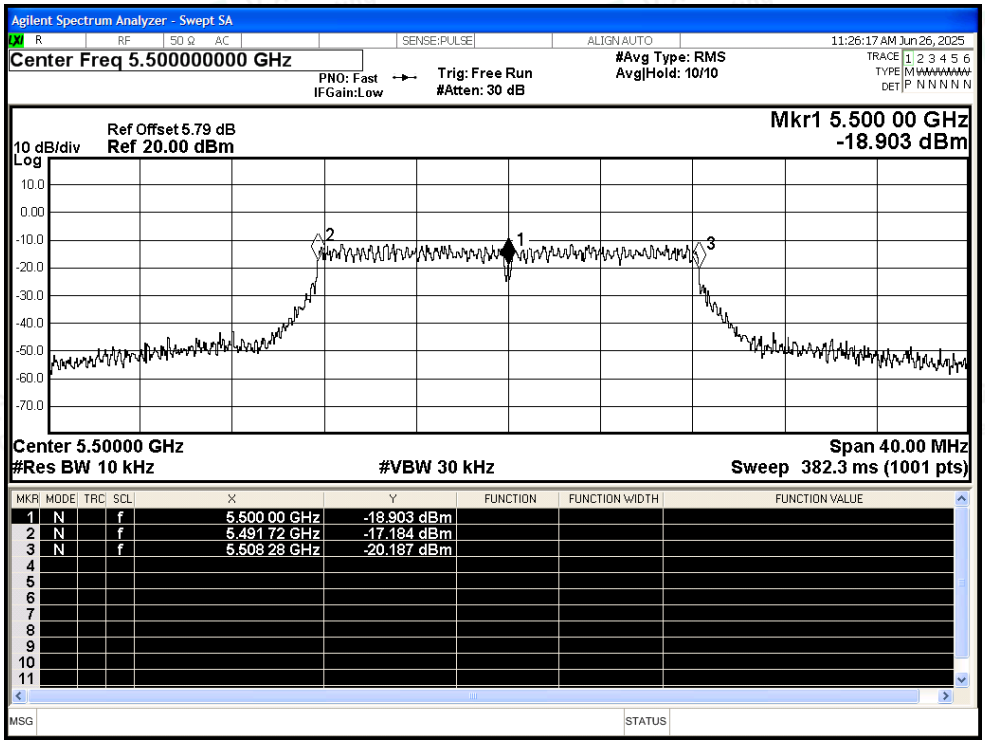

Freq. Stability NVNT a 5580MHz Ant2

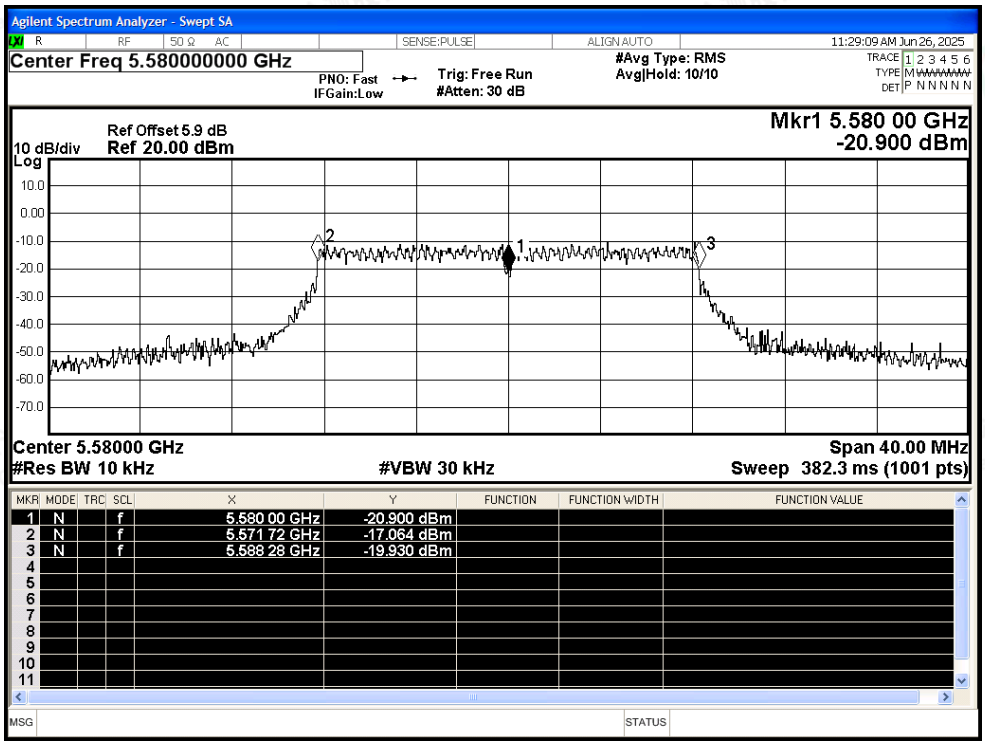

Freq. Stability NVNT a 5700MHz Ant2

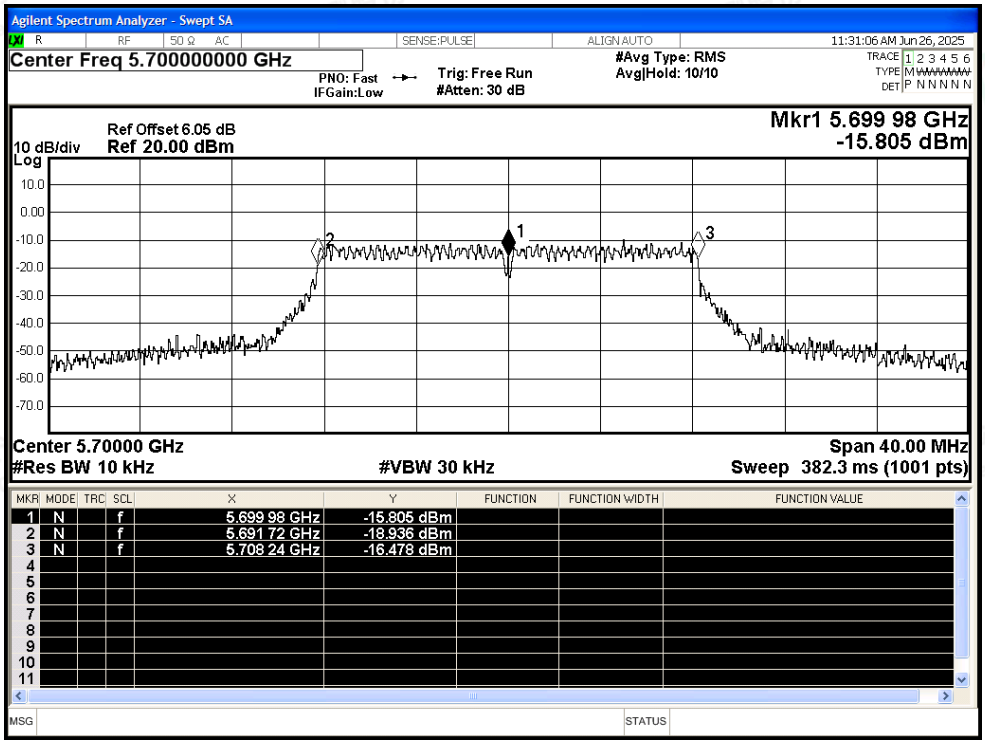

Freq. Stability NVNT n20 5500MHz Ant2

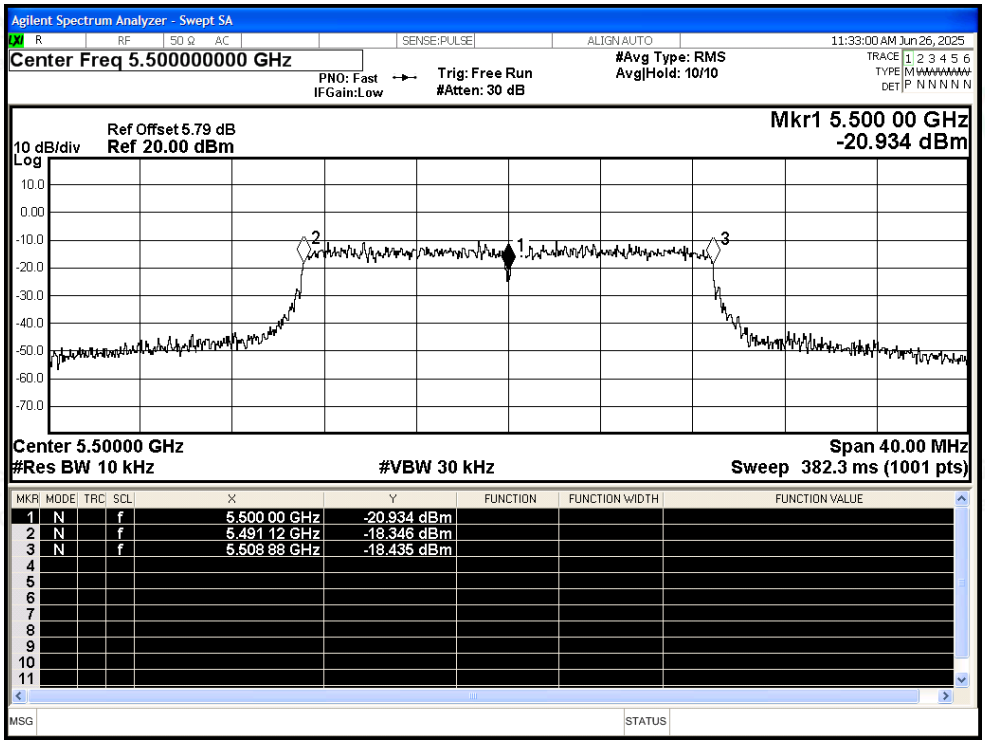

Freq. Stability NVNT n20 5580MHz Ant2

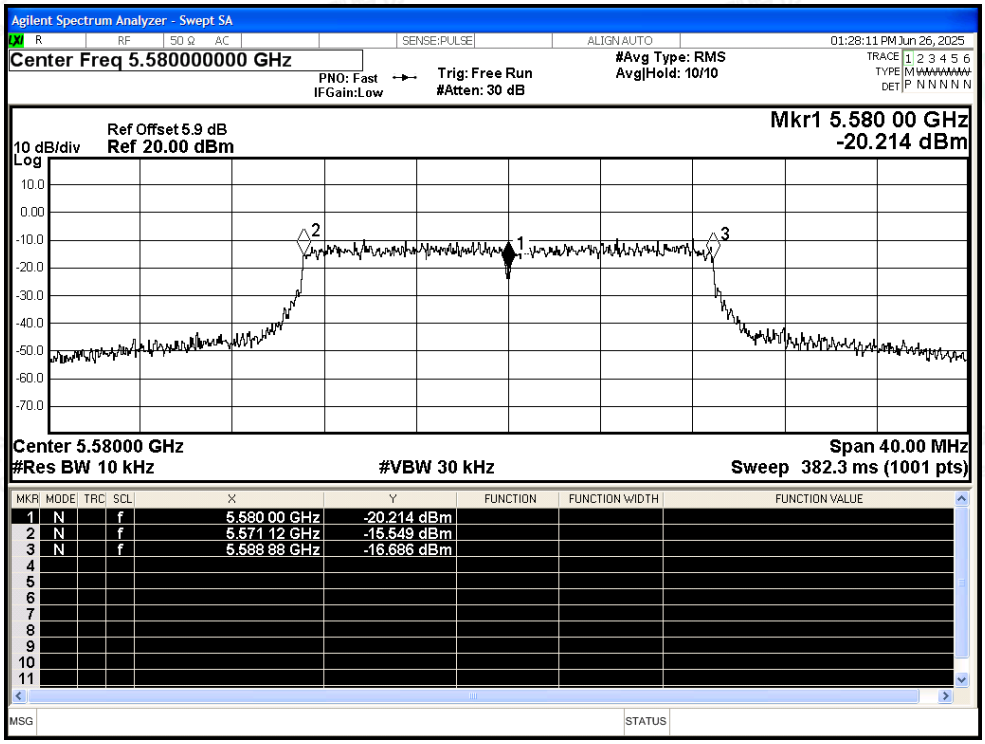

Freq. Stability NVNT n20 5700MHz Ant2

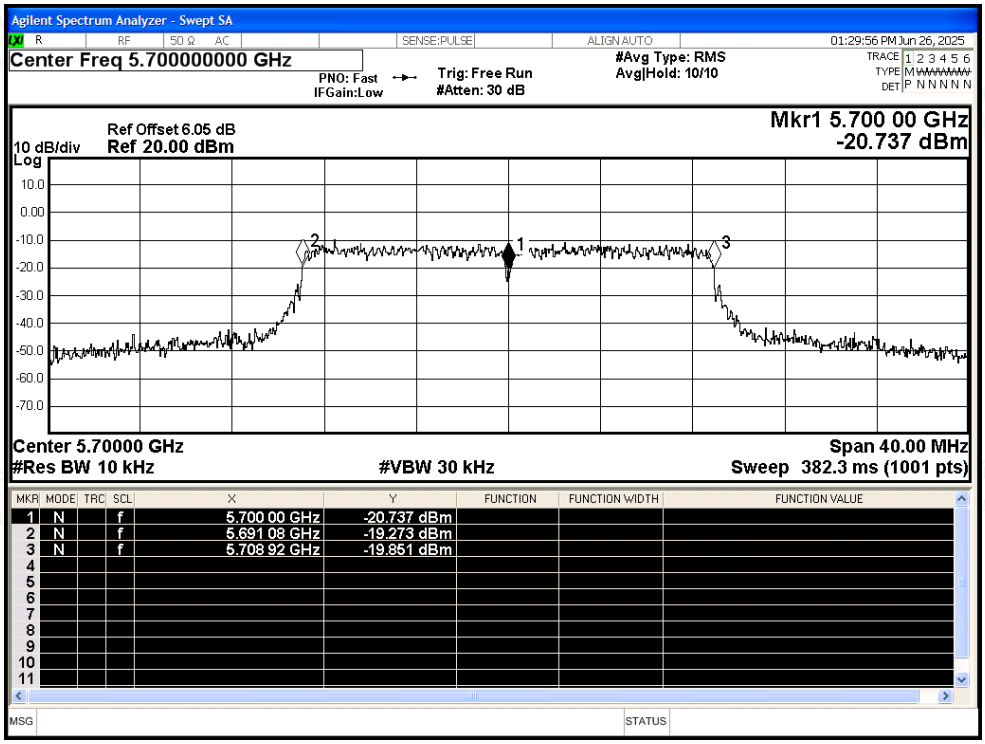

Freq. Stability NVNT n40 5510MHz Ant2

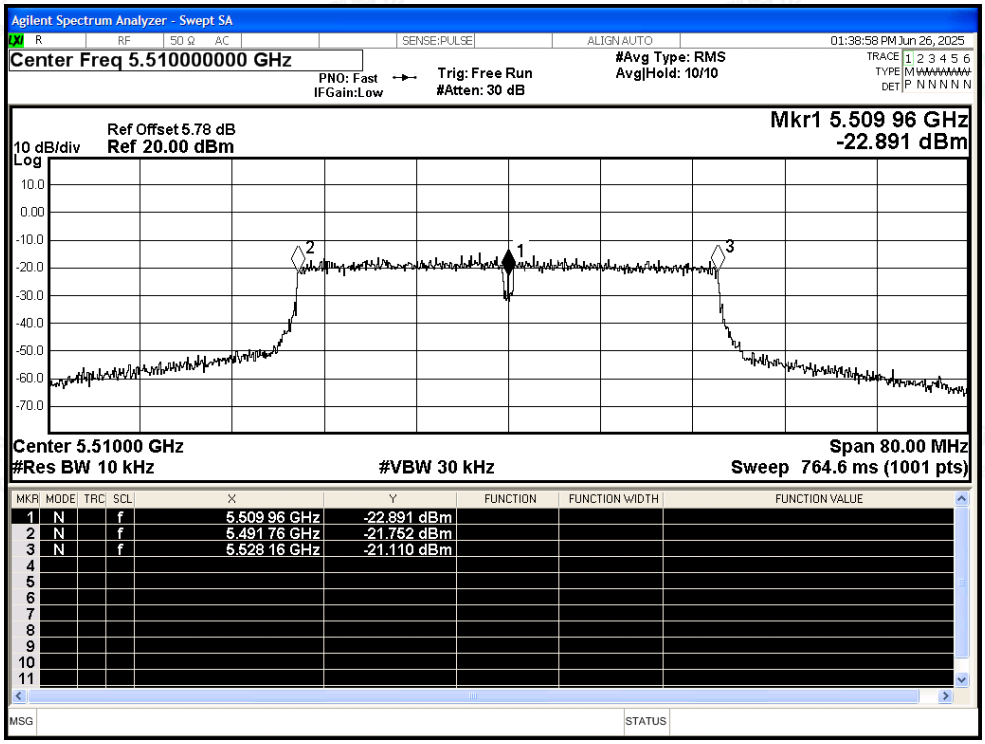

Freq. Stability NVNT n40 5550MHz Ant2

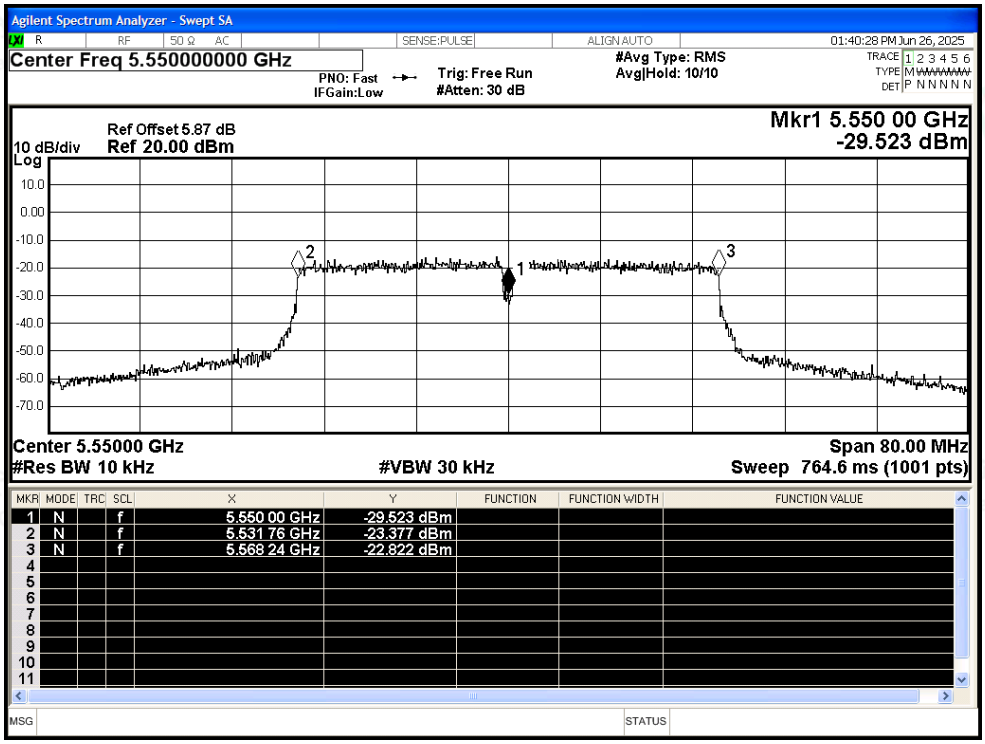

Freq. Stability NVNT n40 5670MHz Ant2

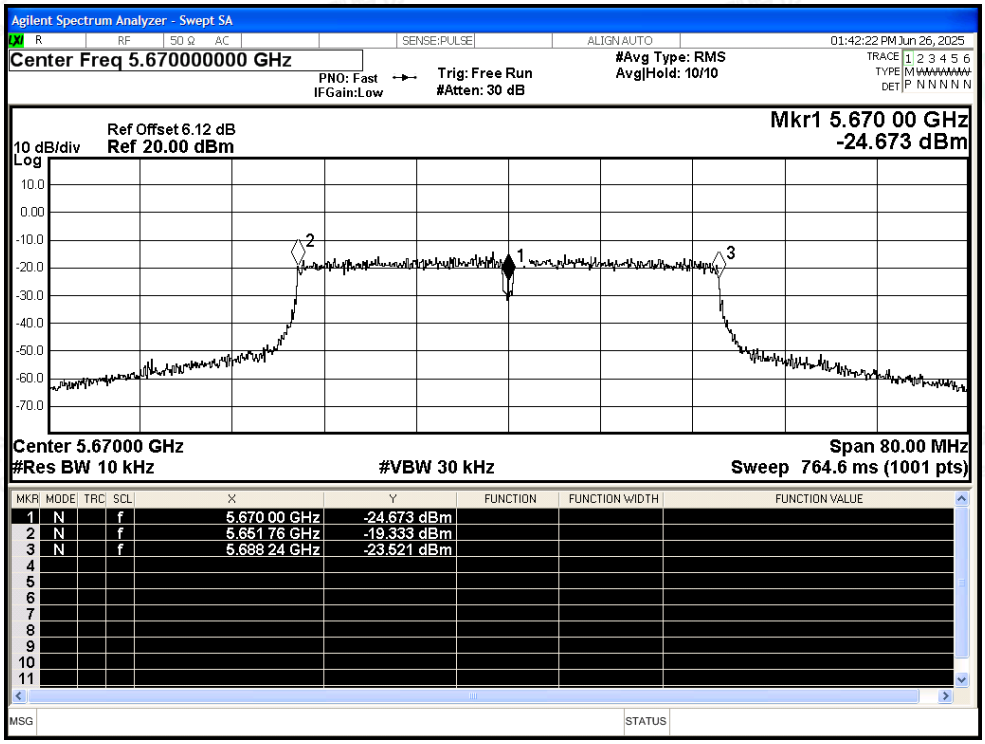

Freq. Stability NVNT ac20 5500MHz Ant2

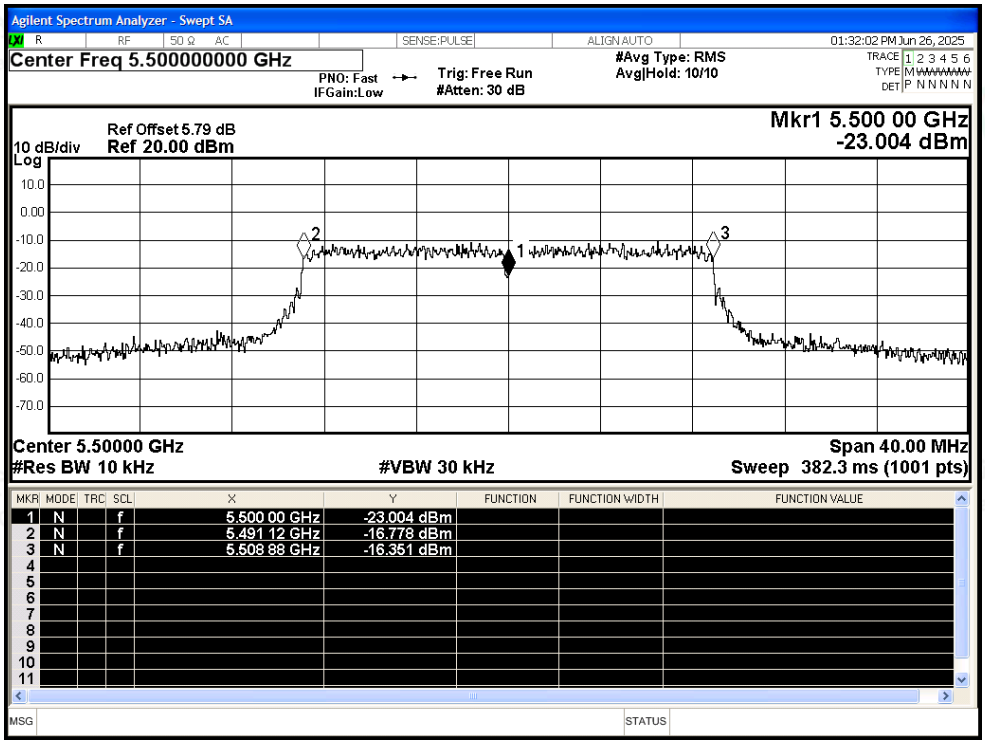

Freq. Stability NVNT ac20 5580MHz Ant2

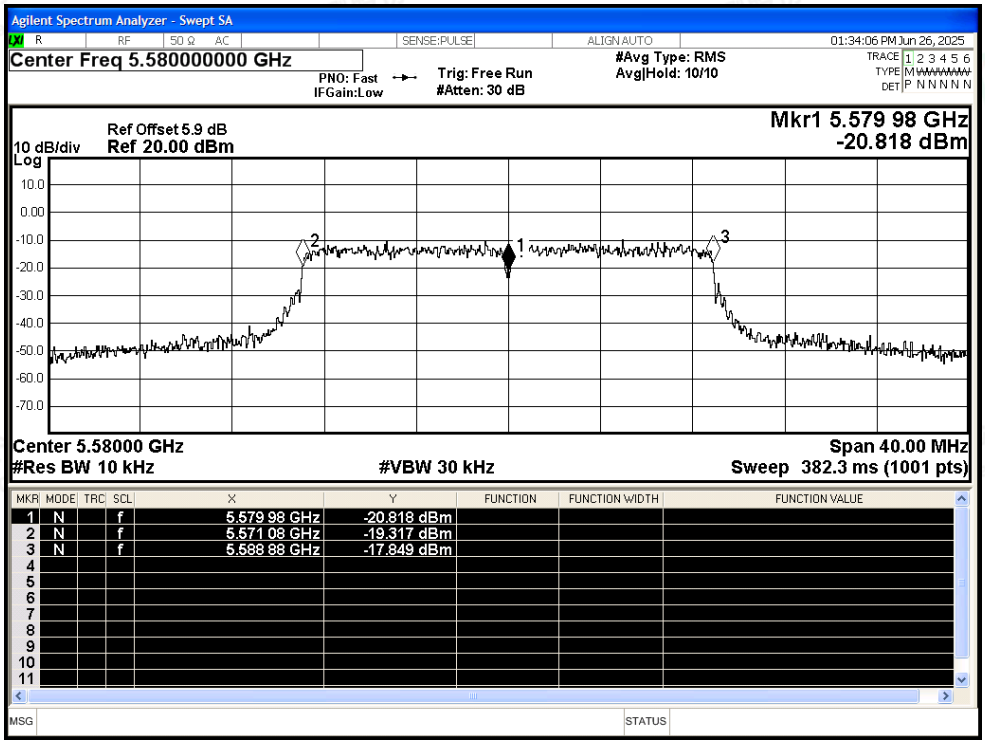

Freq. Stability NVNT ac20 5700MHz Ant2

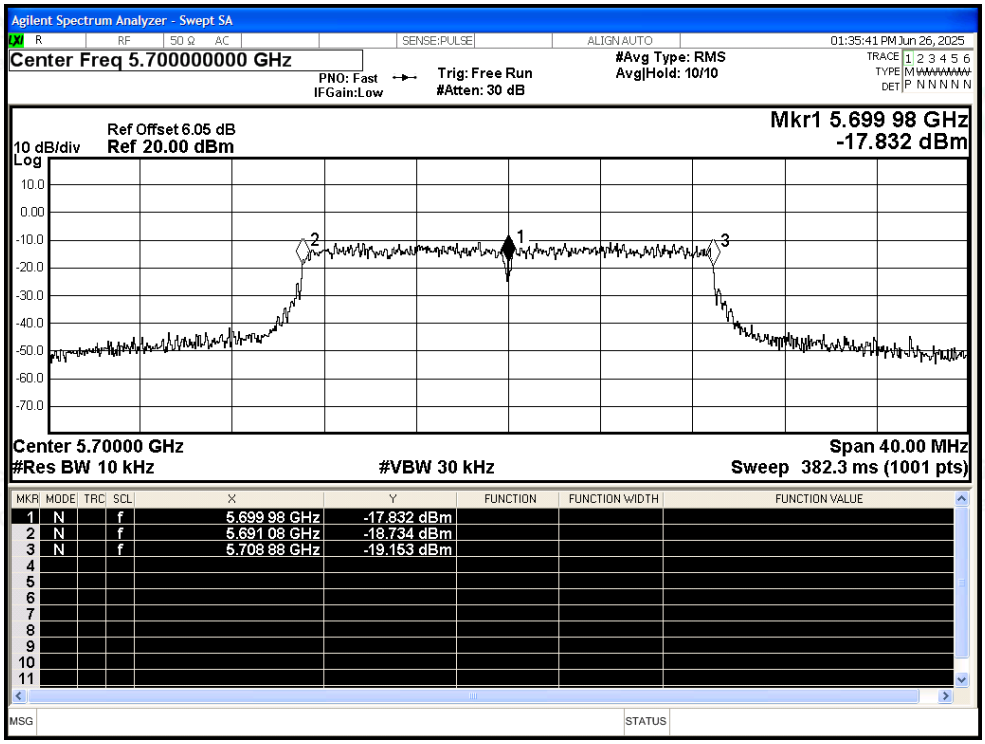

Freq. Stability NVNT ac40 5510MHz Ant2

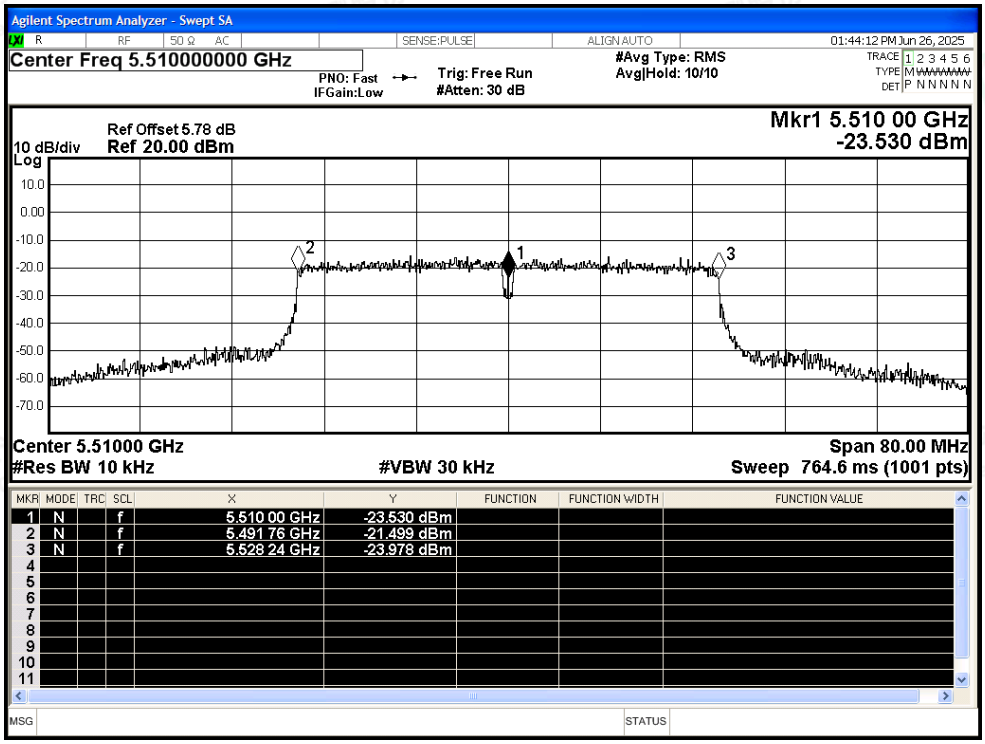

Freq. Stability NVNT ac40 5550MHz Ant2

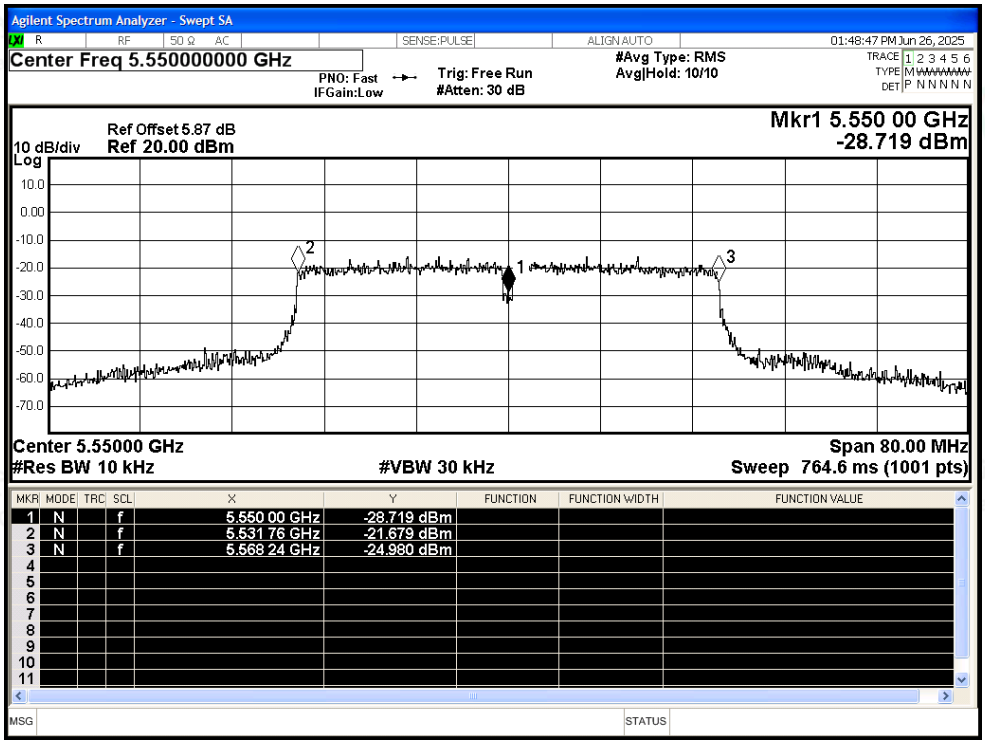

Freq. Stability NVNT ac40 5670MHz Ant2

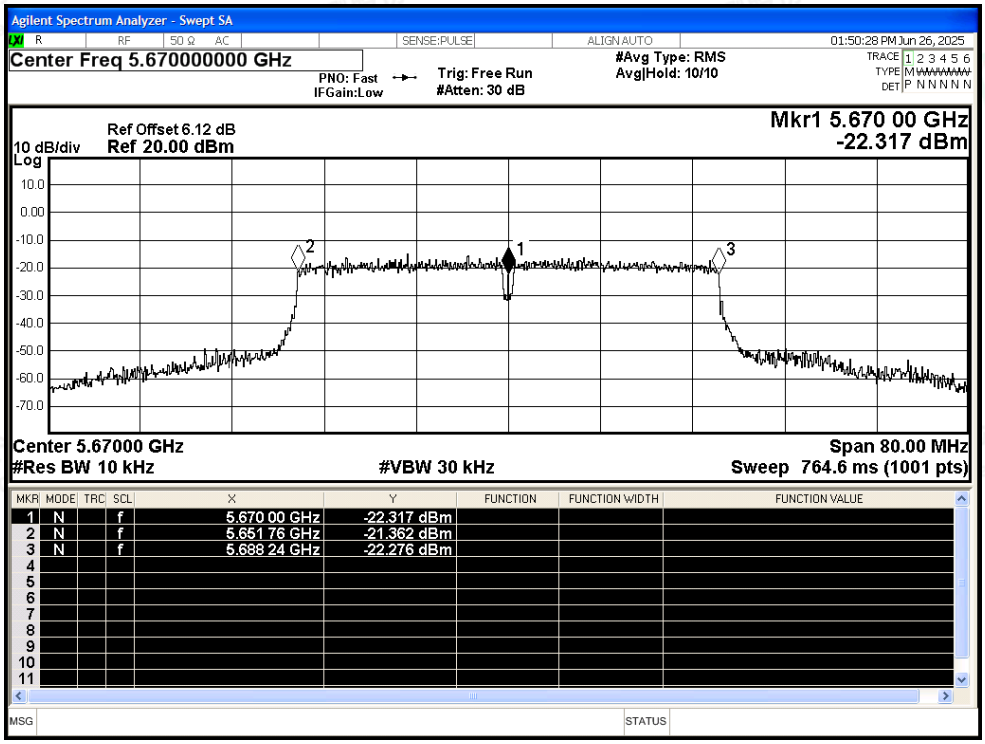

Freq. Stability NVNT ax20 5500MHz Ant2

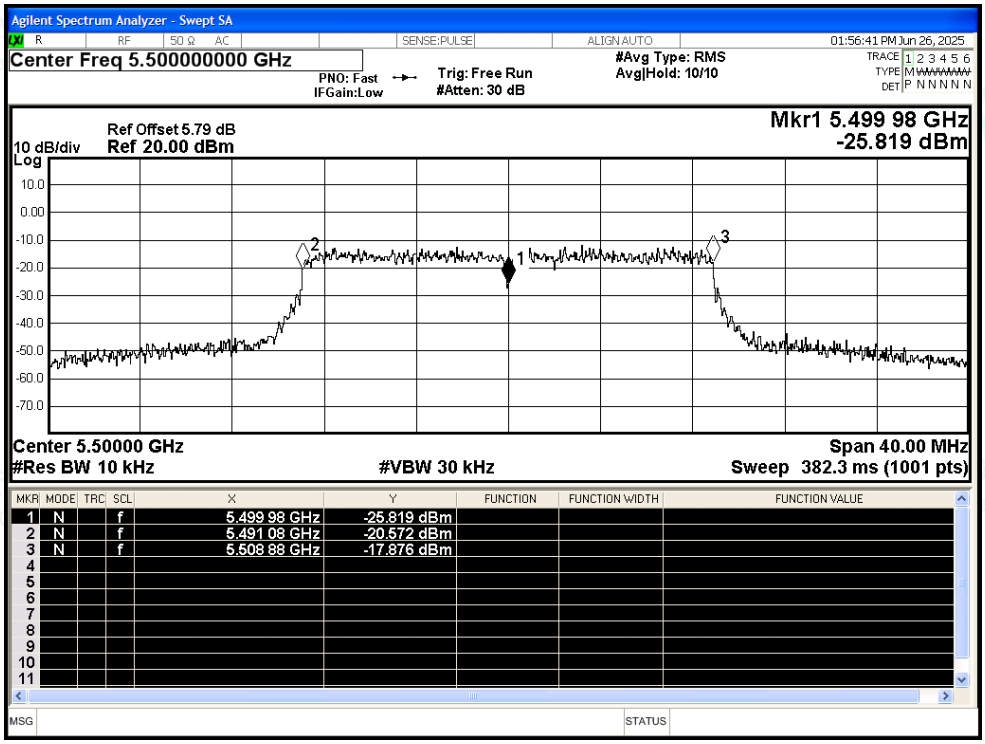

Freq. Stability NVNT ax20 5580MHz Ant2

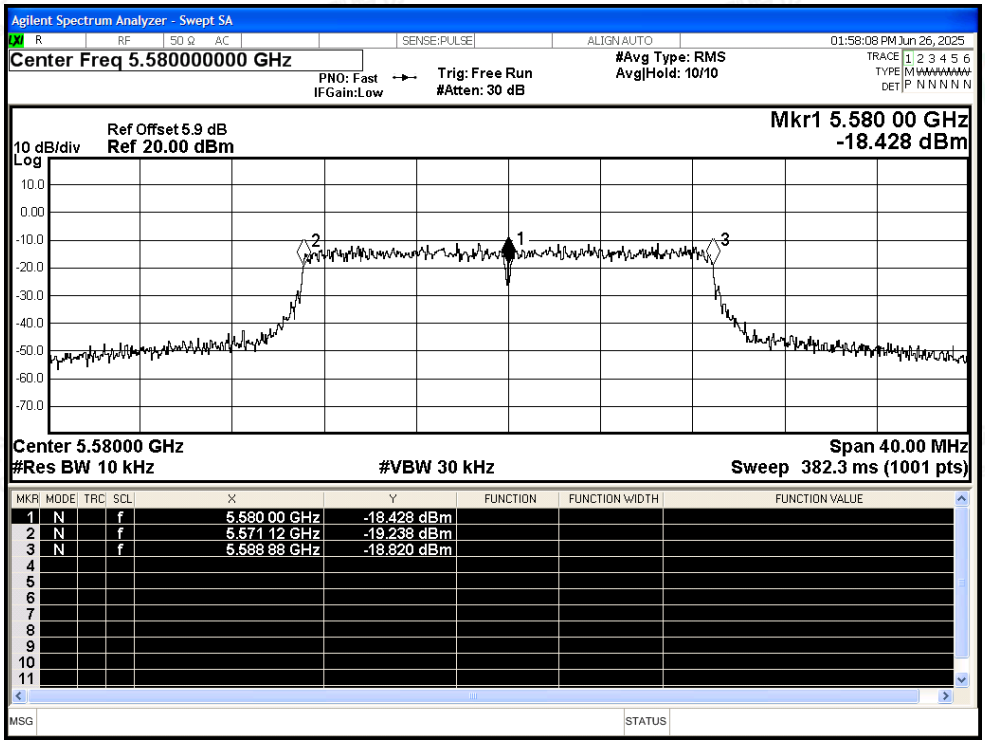

Freq. Stability NVNT ax20 5700MHz Ant2

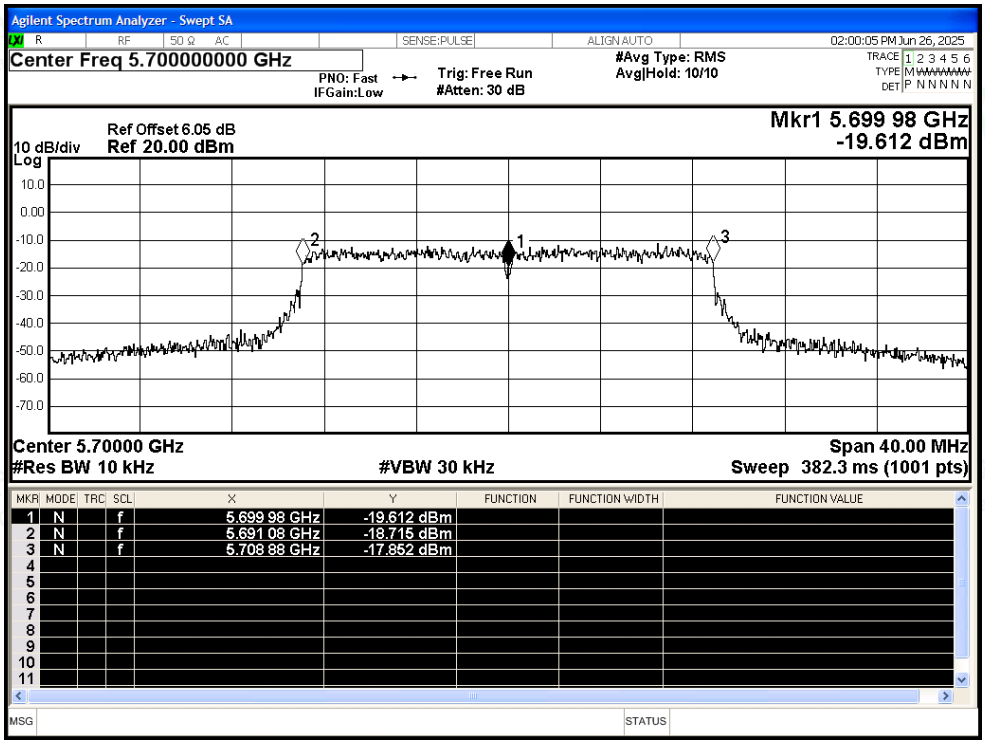

Freq. Stability NVNT ax40 5510MHz Ant2

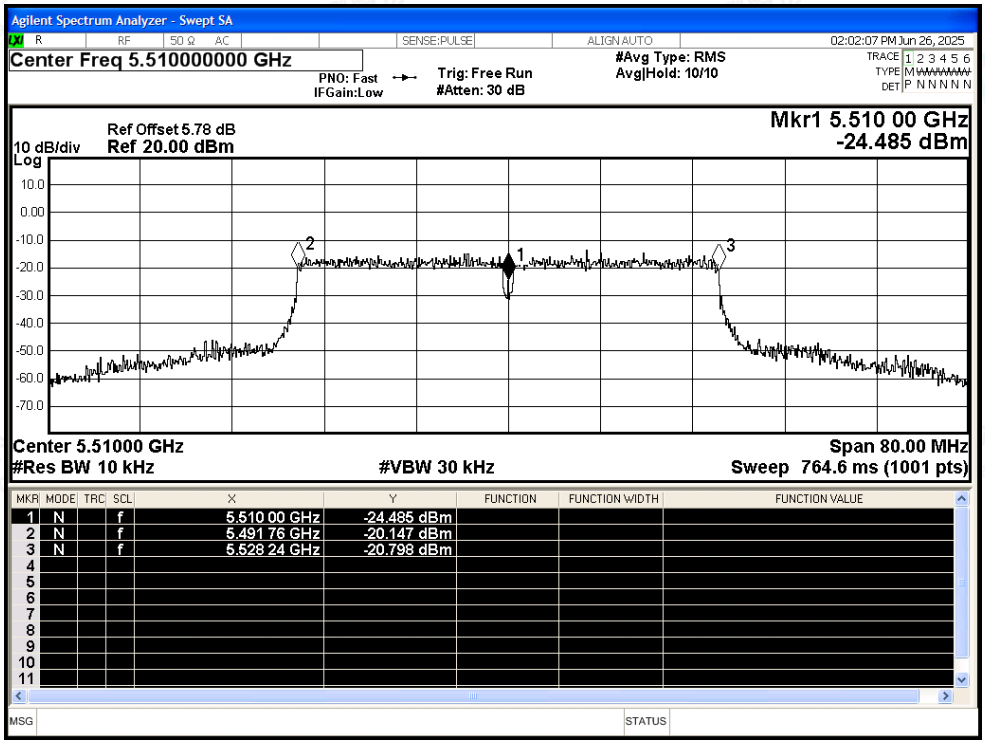

Freq. Stability NVNT ax40 5550MHz Ant2

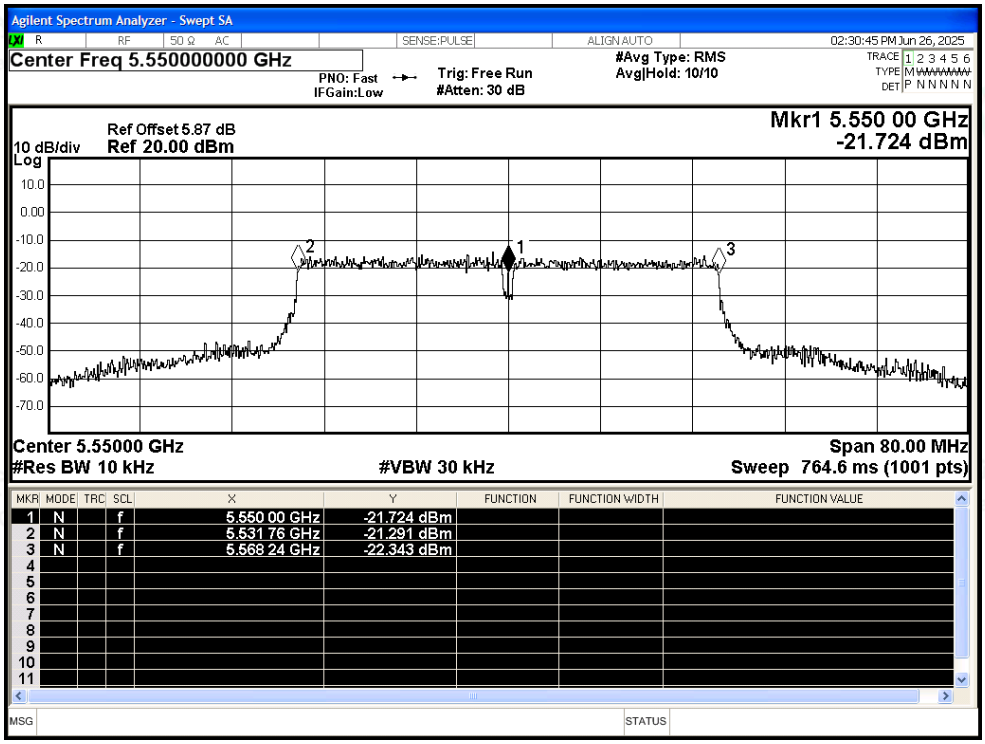

Freq. Stability NVNT ax40 5670MHz Ant2

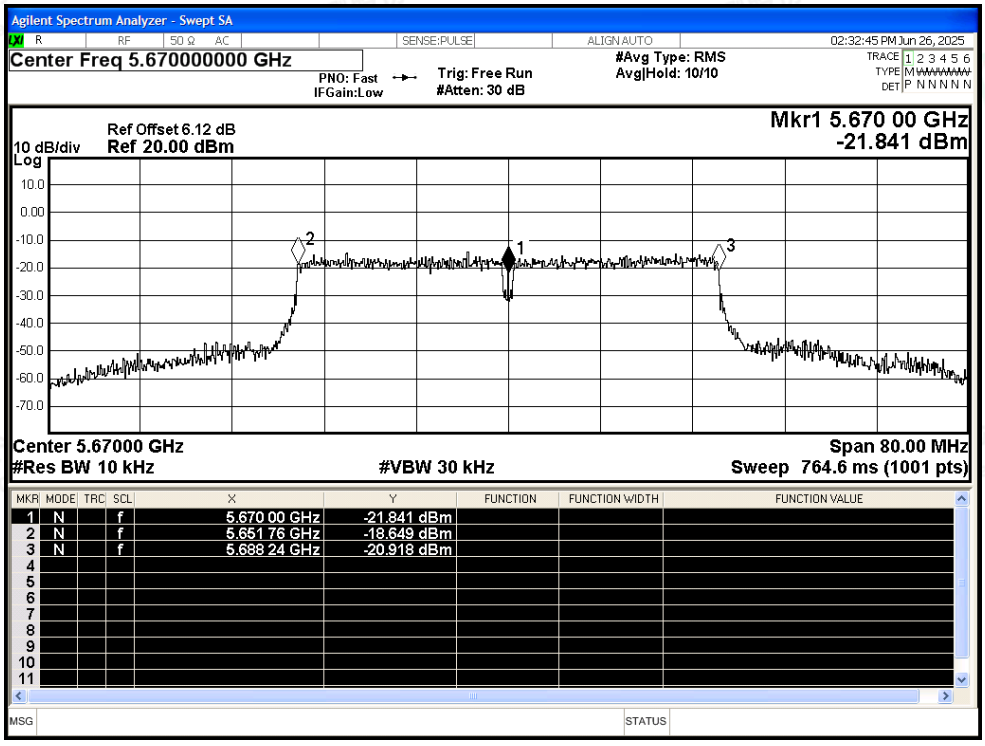

F.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant1	94.56	0.24	0.91
NVNT	a	5580	Ant1	94.65	0.24	0.91
NVNT	a	5700	Ant1	94.56	0.24	0.91
NVNT	n20	5500	Ant1	93.77	0.28	1.07
NVNT	n20	5580	Ant1	93.67	0.28	1.07
NVNT	n20	5700	Ant1	93.77	0.28	1.07
NVNT	n40	5510	Ant1	88.14	0.55	2.14
NVNT	n40	5550	Ant1	88.14	0.55	2.14
NVNT	n40	5670	Ant1	88.14	0.55	2.14
NVNT	ac20	5500	Ant1	93.82	0.28	1.06
NVNT	ac20	5580	Ant1	93.72	0.28	1.06
NVNT	ac20	5700	Ant1	93.82	0.28	1.06
NVNT	ac40	5510	Ant1	88.29	0.54	2.11
NVNT	ac40	5550	Ant1	88.48	0.53	2.1
NVNT	ac40	5670	Ant1	88.48	0.53	2.1
NVNT	ax20	5500	Ant1	93.72	0.28	1.06
NVNT	ax20	5580	Ant1	93.72	0.28	1.06
NVNT	ax20	5700	Ant1	93.72	0.28	1.06
NVNT	ax40	5510	Ant1	88.48	0.53	2.1
NVNT	ax40	5550	Ant1	88.48	0.53	2.1
NVNT	ax40	5670	Ant1	88.48	0.53	2.1

Test Graphs

Duty Cycle NVNT a 5500MHz Ant1

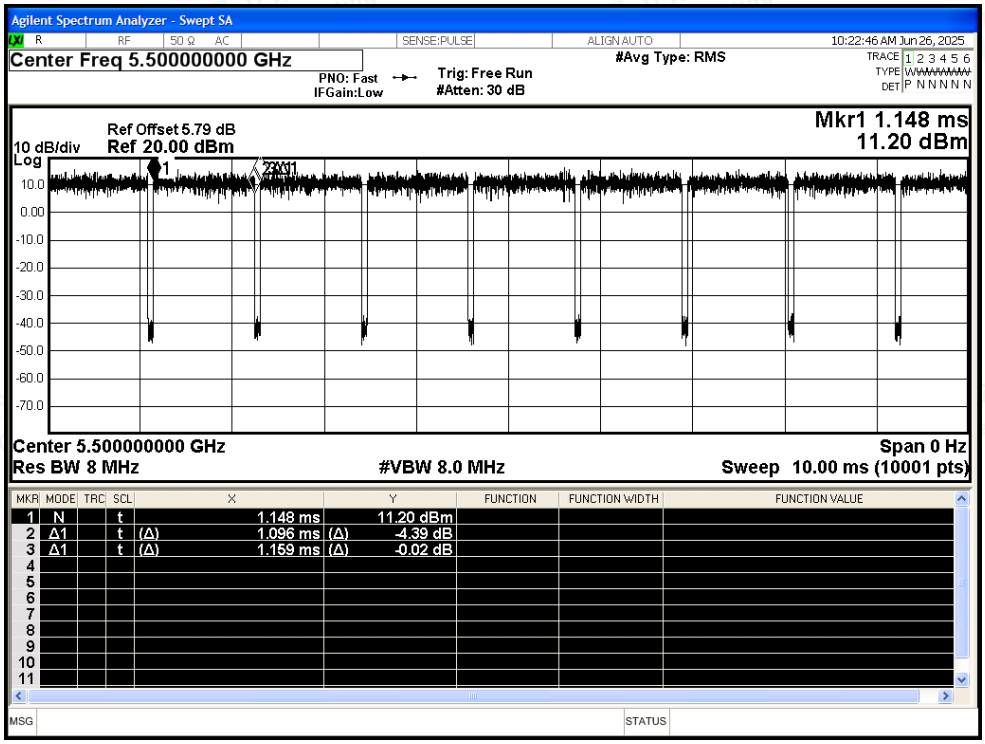

Duty Cycle NVNT a 5580MHz Ant1

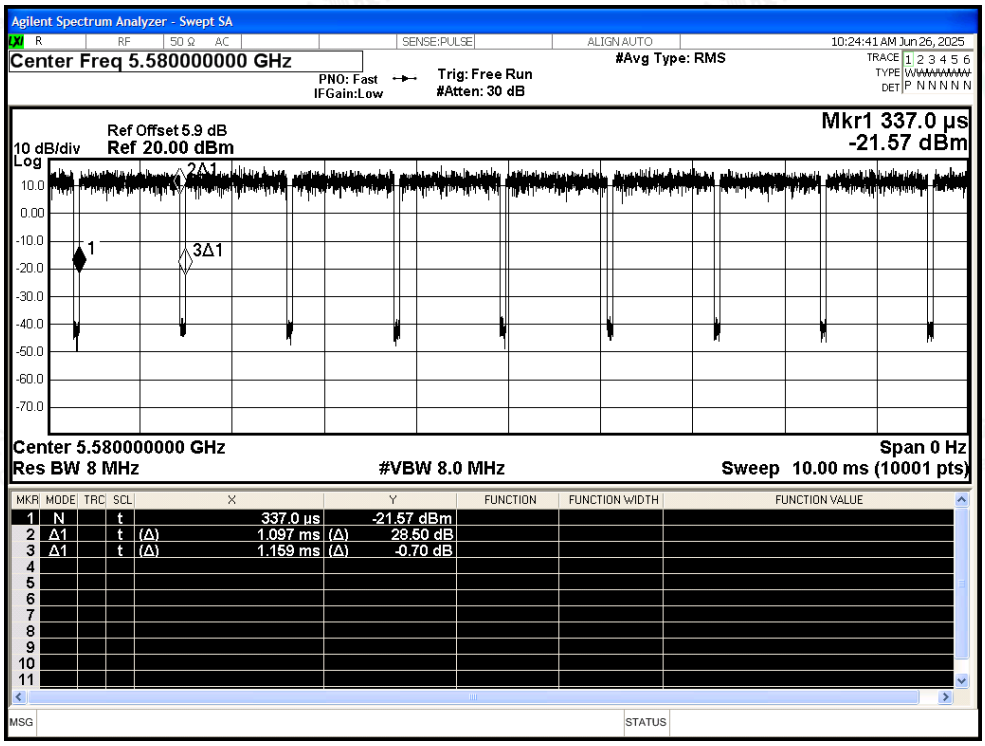

Duty Cycle NVNT a 5700MHz Ant1

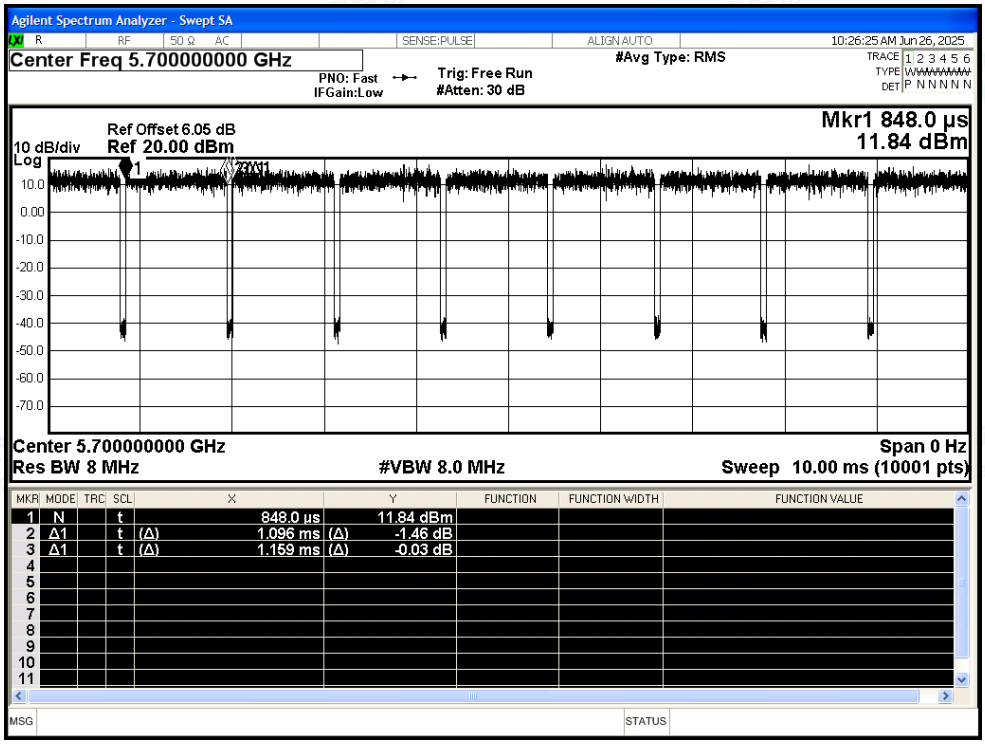

Duty Cycle NVNT n20 5500MHz Ant1

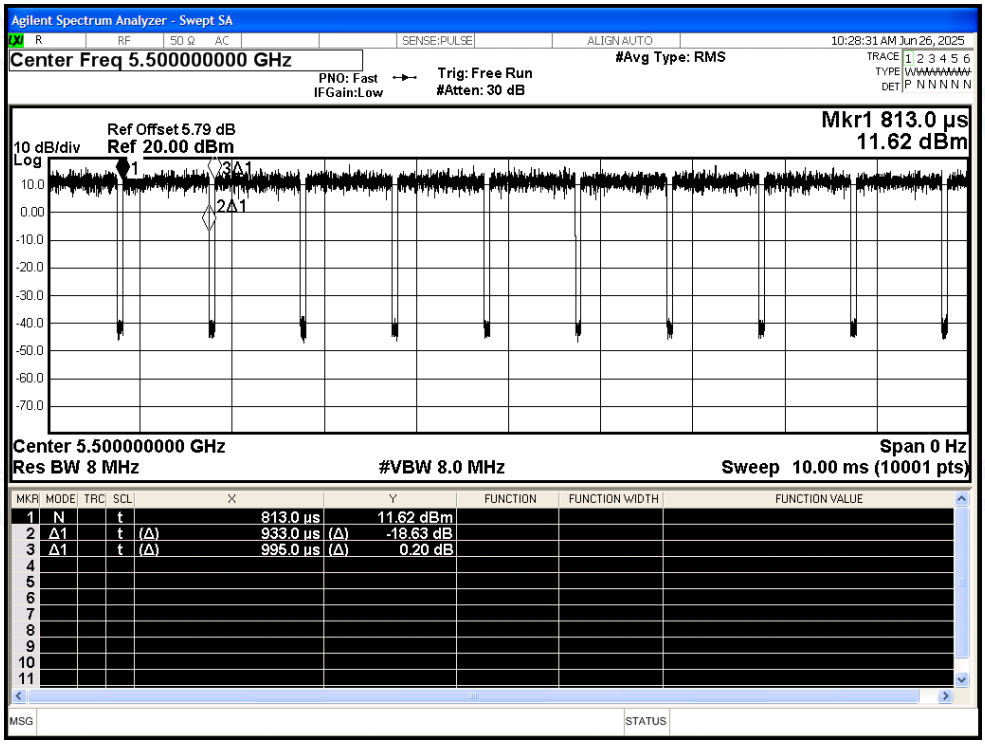

Duty Cycle NVNT n20 5580MHz Ant1

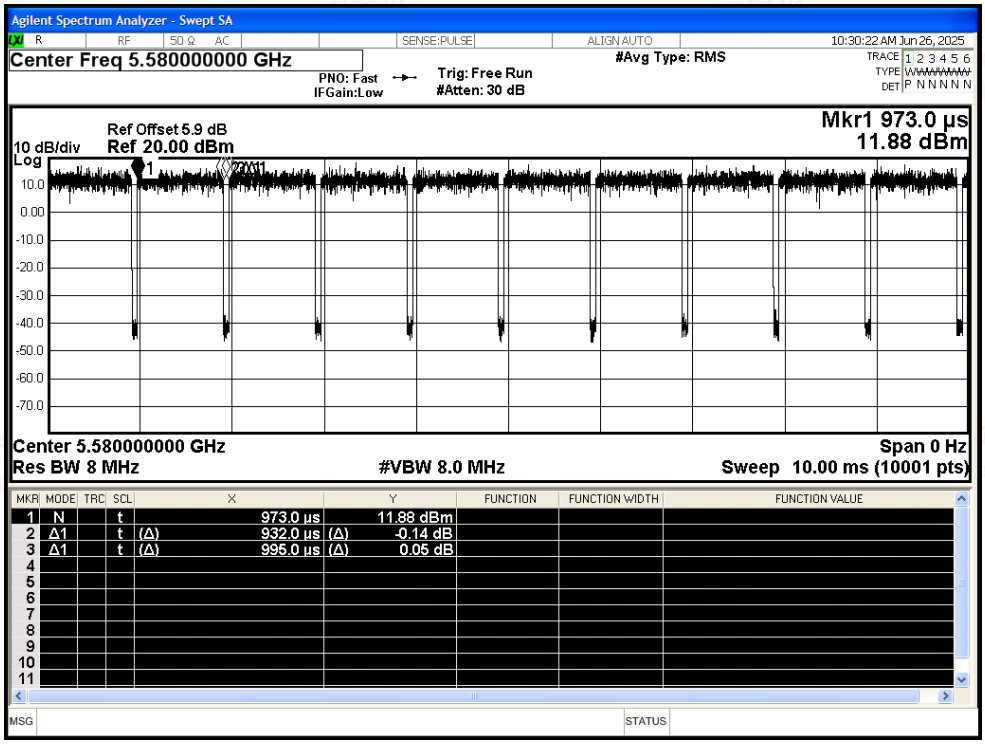

Duty Cycle NVNT n20 5700MHz Ant1

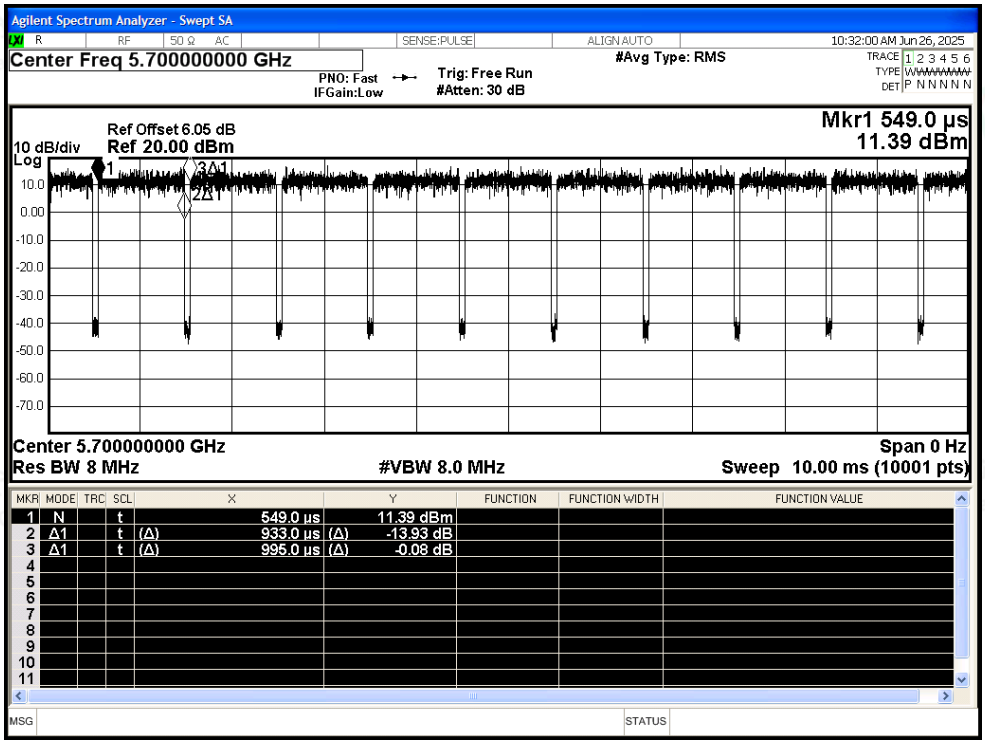

Duty Cycle NVNT n40 5510MHz Ant1

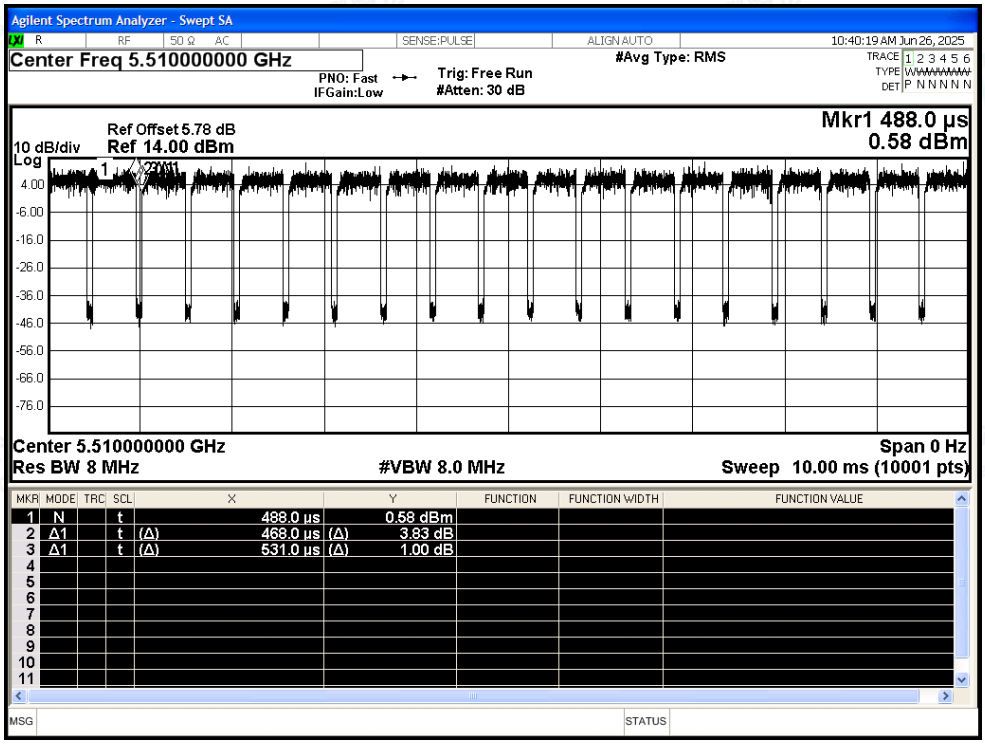

Duty Cycle NVNT n40 5550MHz Ant1

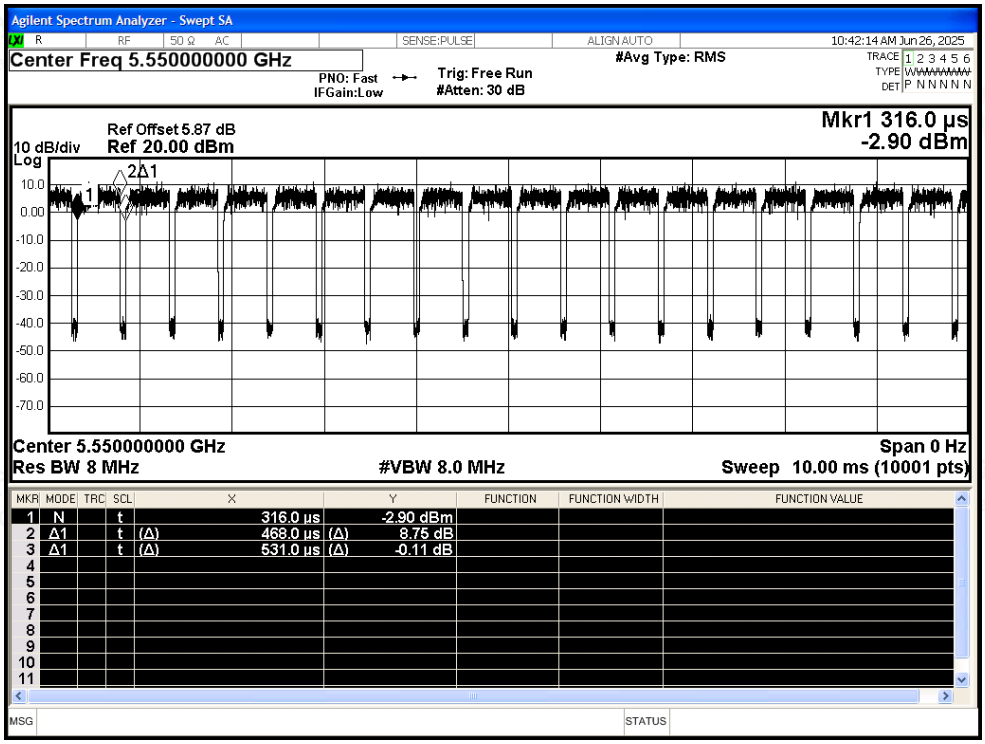

Duty Cycle NVNT n40 5670MHz Ant1

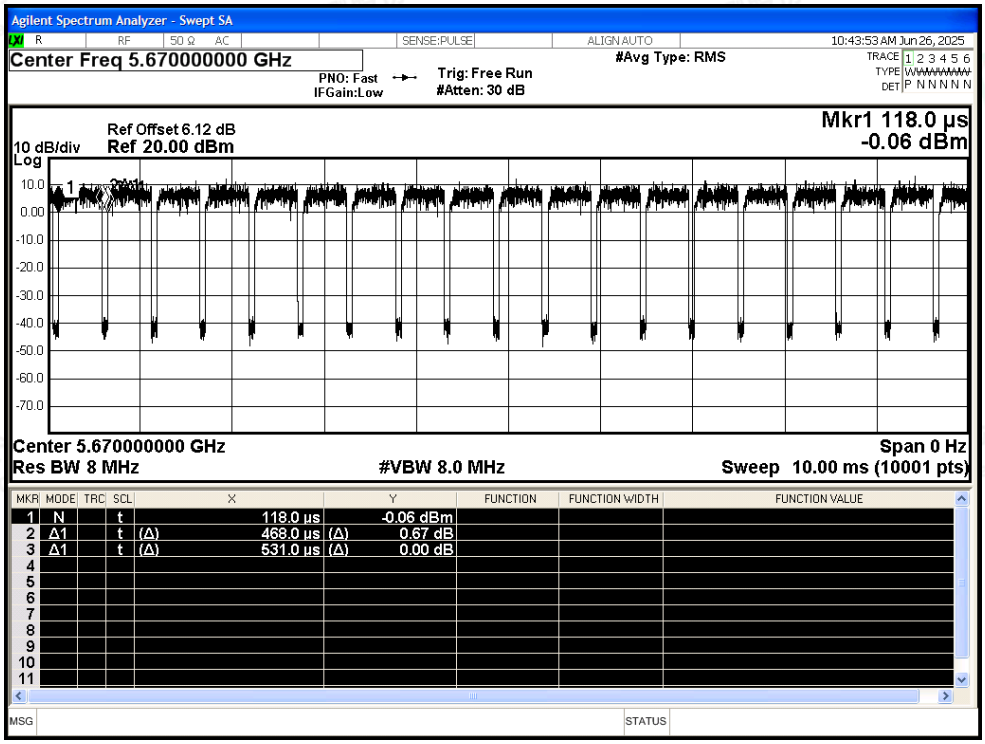

Duty Cycle NVNT ac20 5500MHz Ant1

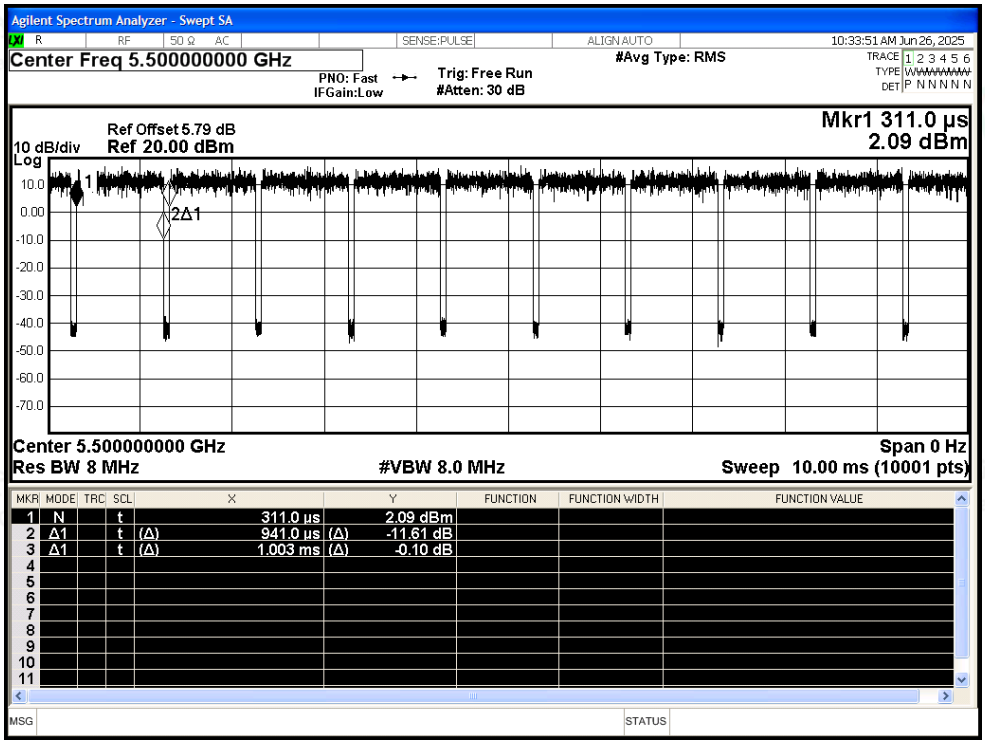

Duty Cycle NVNT ac20 5580MHz Ant1

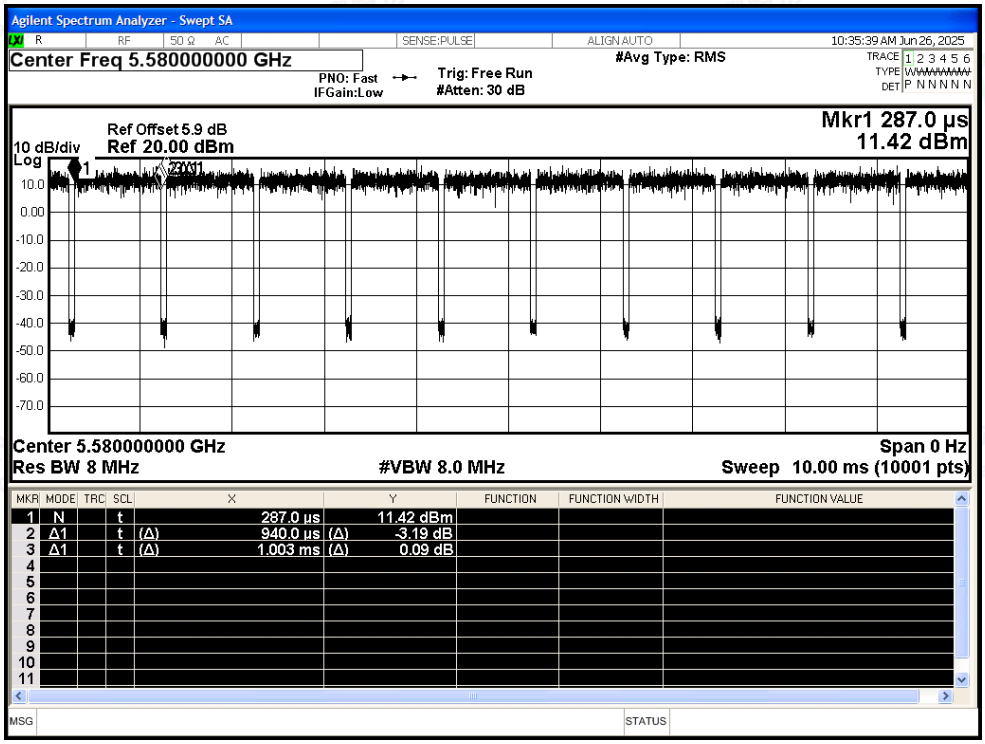

Duty Cycle NVNT ac20 5700MHz Ant1

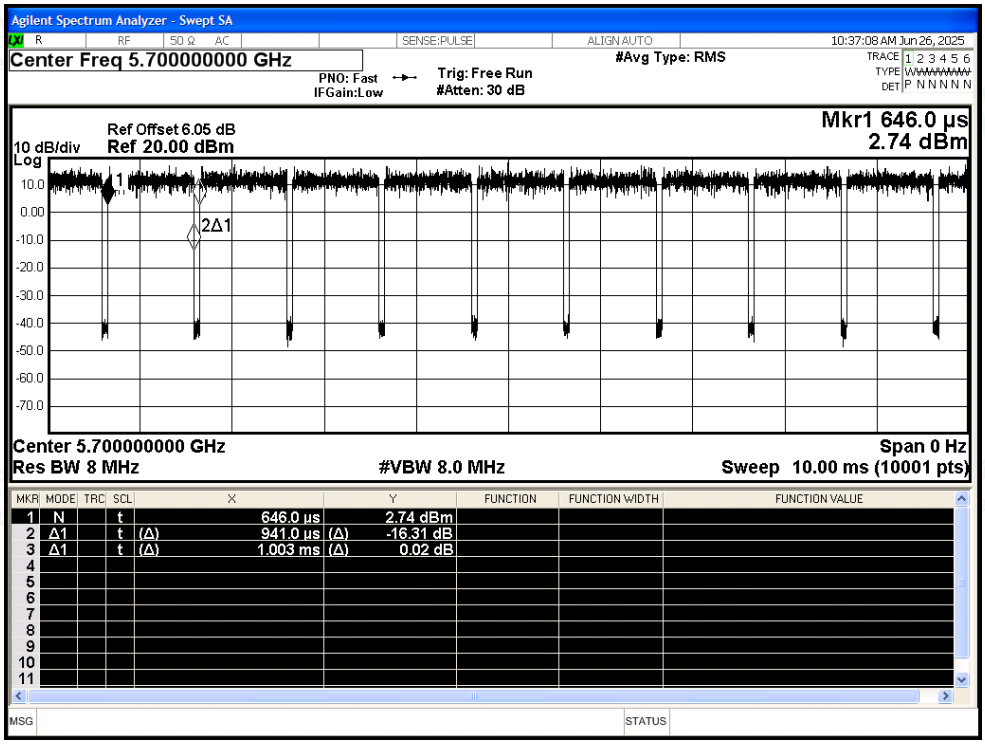

Duty Cycle NVNT ac40 5510MHz Ant1

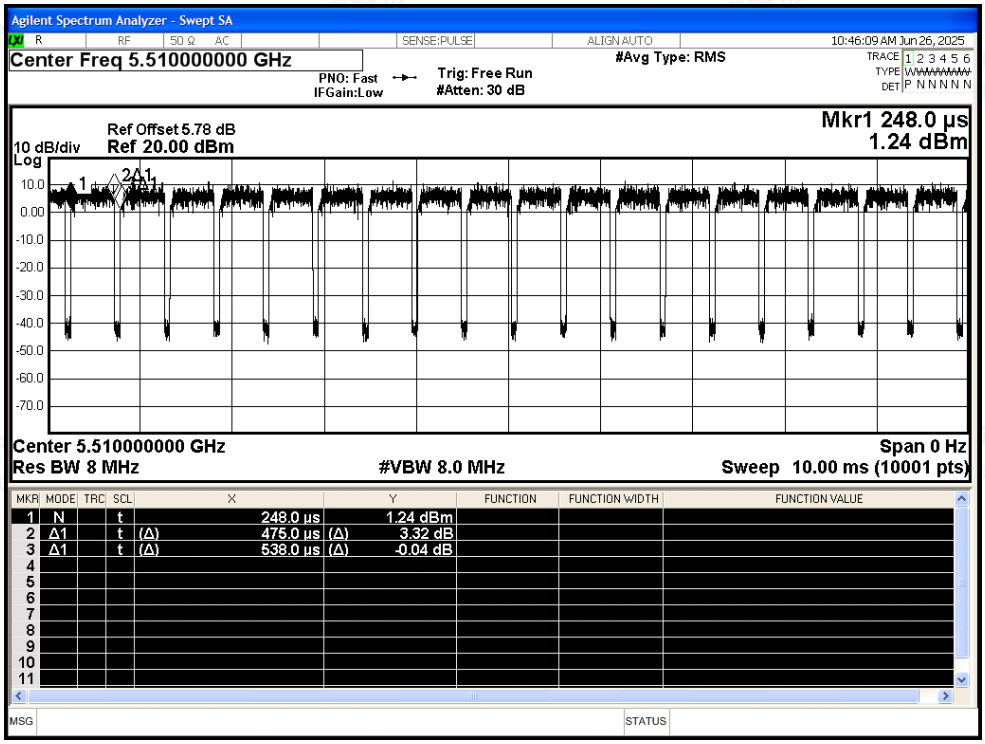

Duty Cycle NVNT ac40 5550MHz Ant1

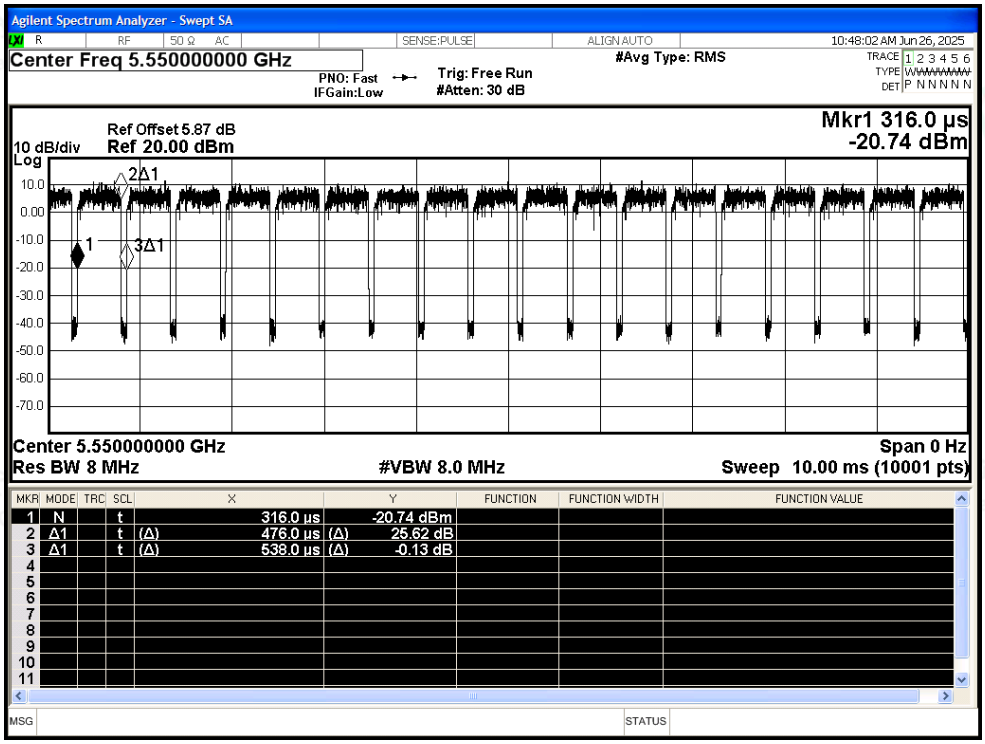

Duty Cycle NVNT ac40 5670MHz Ant1

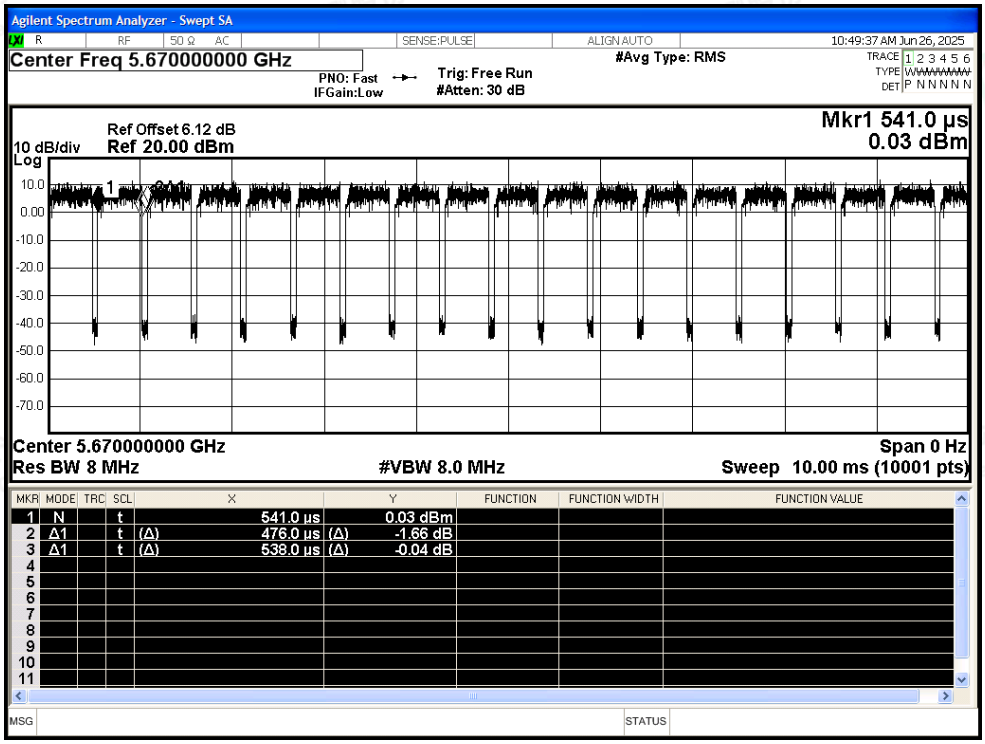

Duty Cycle NVNT ax20 5500MHz Ant1

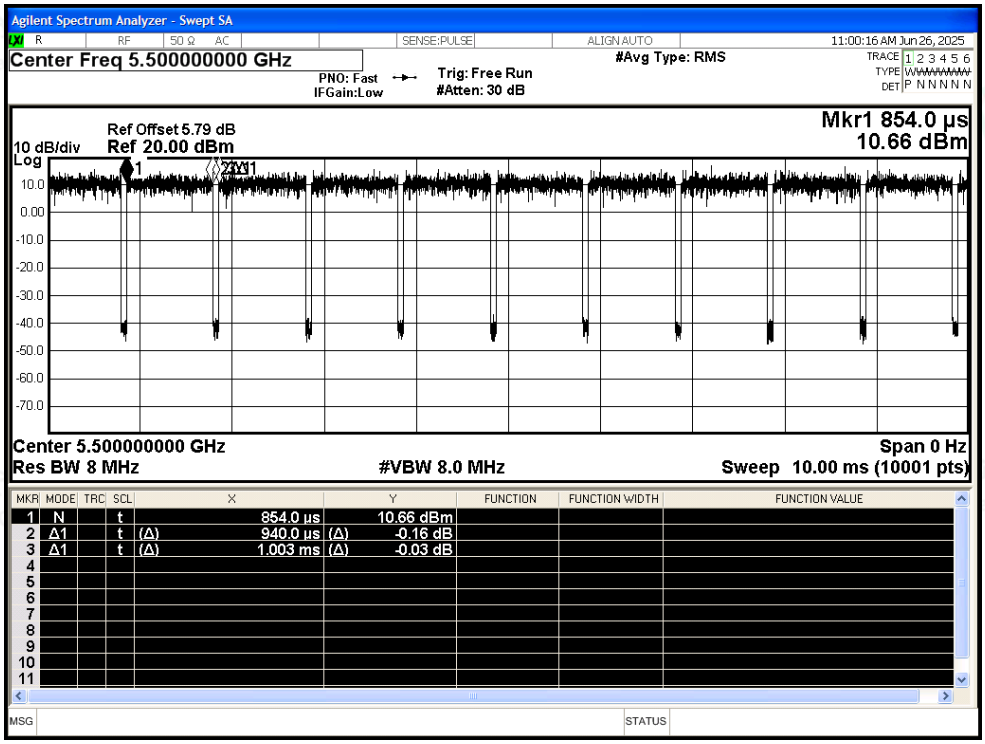

Duty Cycle NVNT ax20 5580MHz Ant1

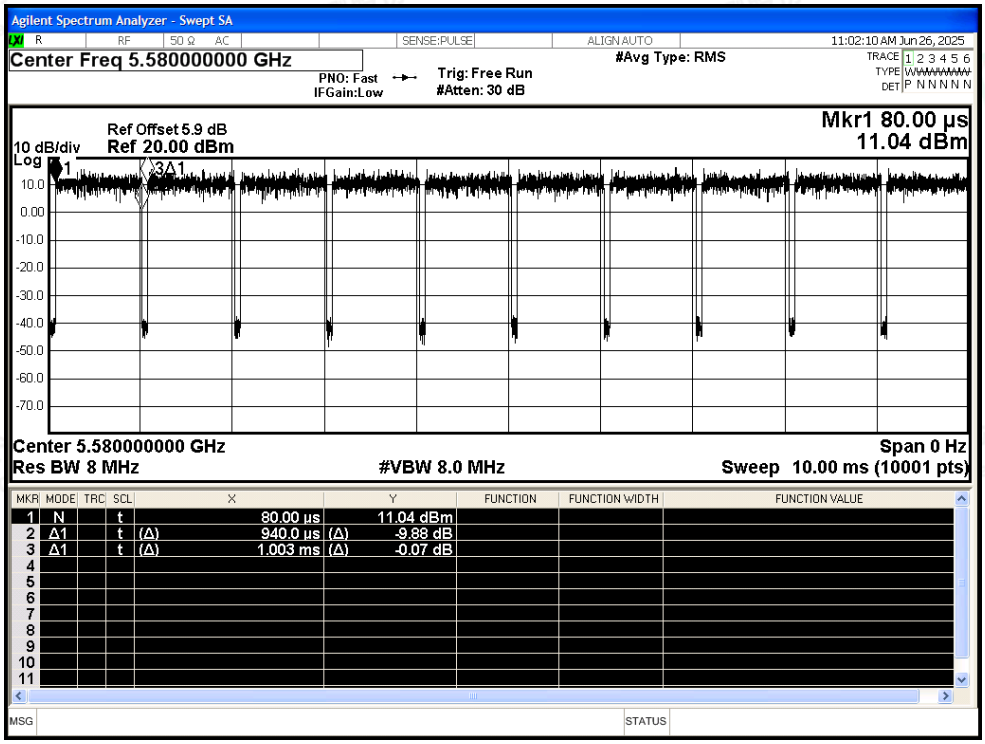

Duty Cycle NVNT ax20 5700MHz Ant1

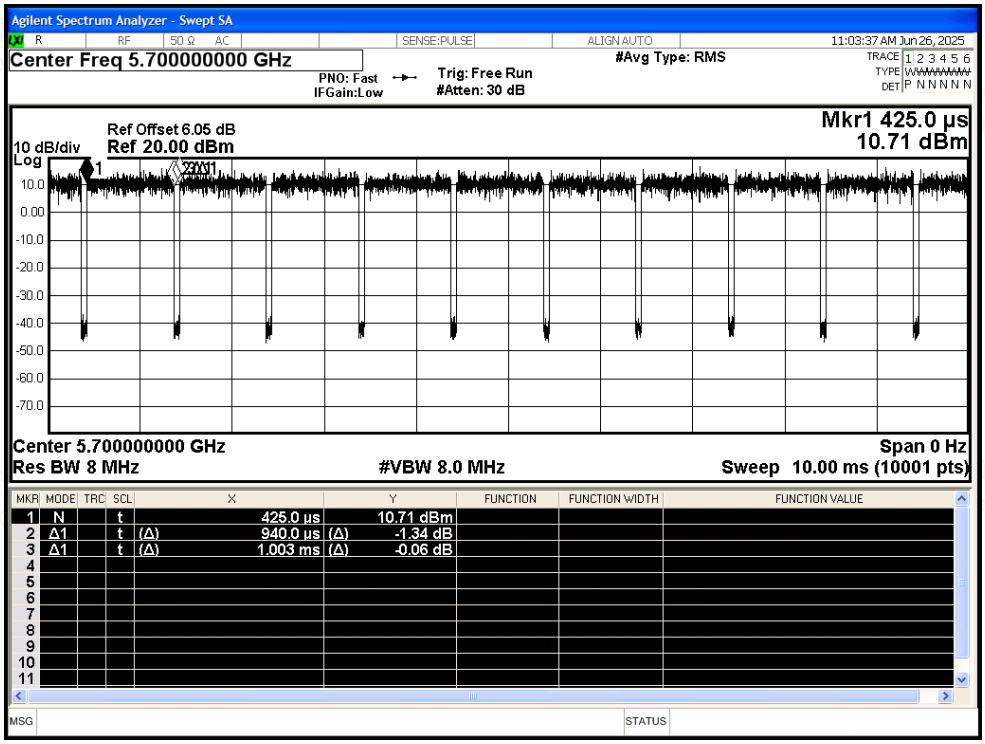

Duty Cycle NVNT ax40 5510MHz Ant1

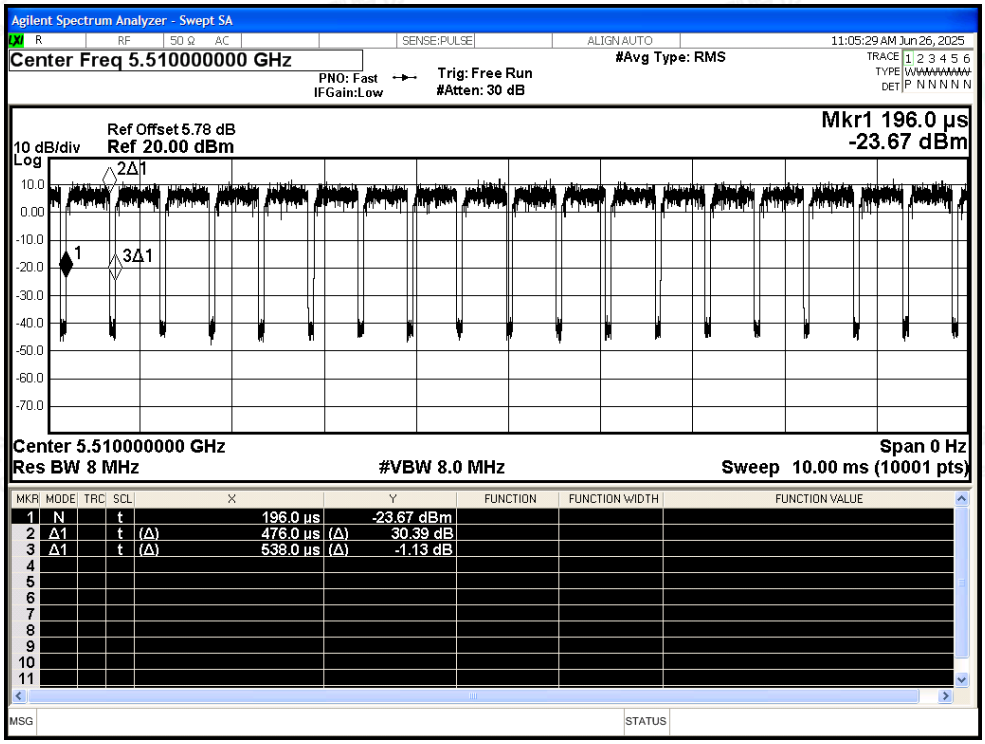

Duty Cycle NVNT ax40 5550MHz Ant1

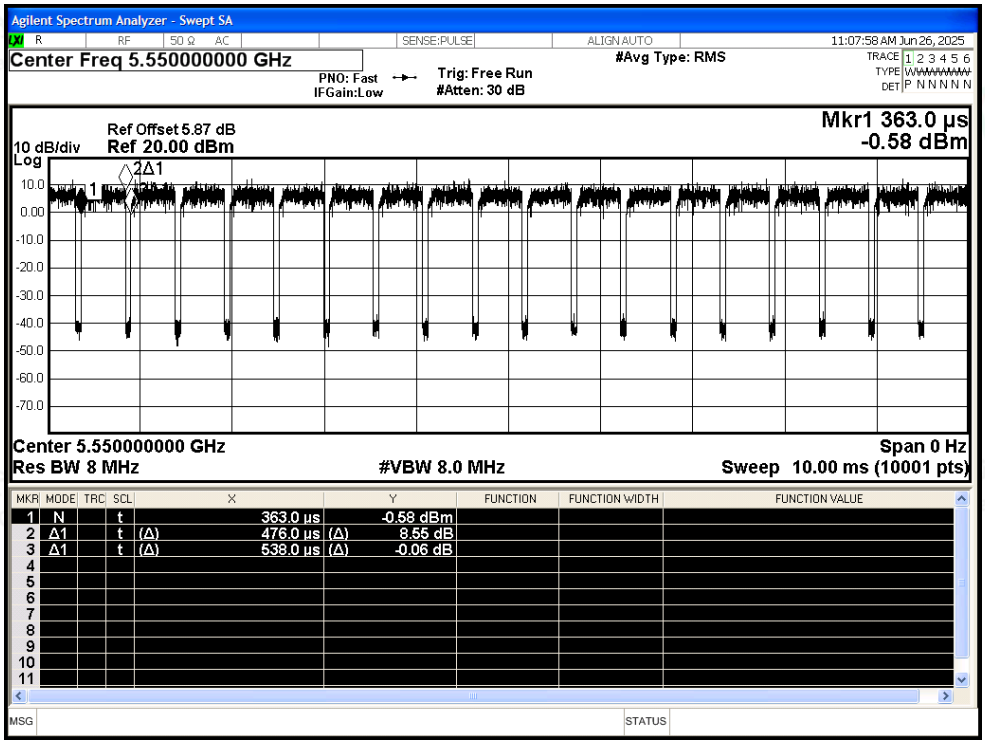

Duty Cycle NVNT ax40 5670MHz Ant1

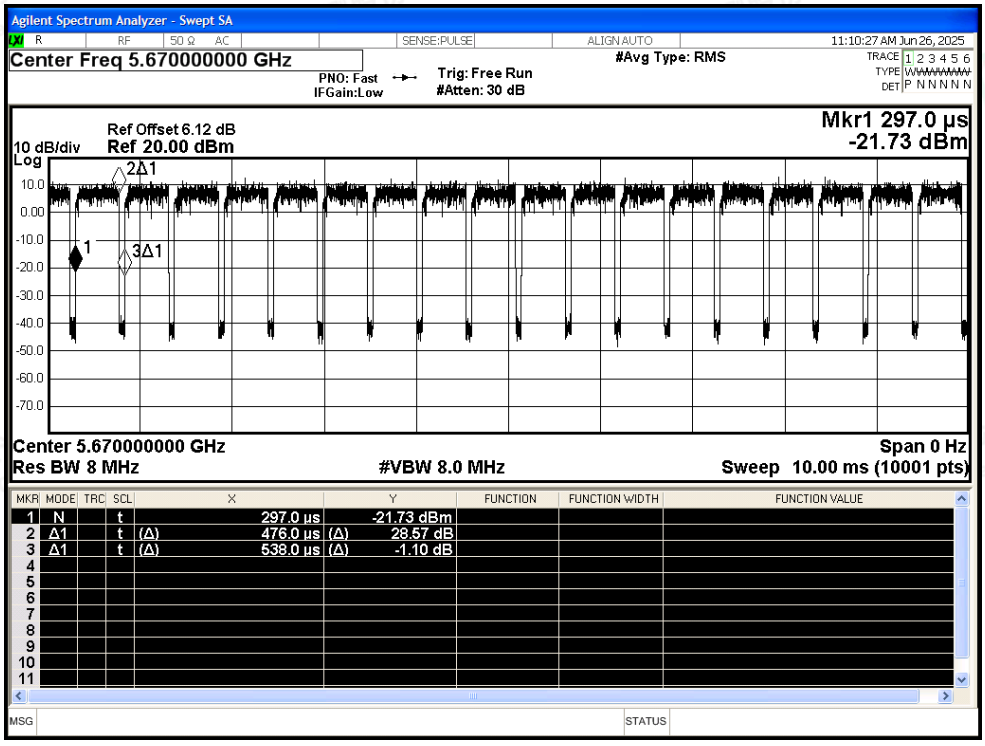

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant2	94.56	0.24	0.91
NVNT	a	5580	Ant2	94.65	0.24	0.91
NVNT	a	5700	Ant2	94.56	0.24	0.91
NVNT	n20	5500	Ant2	93.77	0.28	1.07
NVNT	n20	5580	Ant2	93.67	0.28	1.07
NVNT	n20	5700	Ant2	93.77	0.28	1.07
NVNT	n40	5510	Ant2	88.32	0.54	2.13
NVNT	n40	5550	Ant2	88.14	0.55	2.14
NVNT	n40	5670	Ant2	88.32	0.54	2.13
NVNT	ac20	5500	Ant2	93.82	0.28	1.06
NVNT	ac20	5580	Ant2	93.82	0.28	1.06
NVNT	ac20	5700	Ant2	93.82	0.28	1.06
NVNT	ac40	5510	Ant2	88.48	0.53	2.1
NVNT	ac40	5550	Ant2	88.48	0.53	2.1
NVNT	ac40	5670	Ant2	88.48	0.53	2.1
NVNT	ax20	5500	Ant2	93.72	0.28	1.06
NVNT	ax20	5580	Ant2	93.72	0.28	1.06
NVNT	ax20	5700	Ant2	93.72	0.28	1.06
NVNT	ax40	5510	Ant2	88.29	0.54	2.11
NVNT	ax40	5550	Ant2	88.48	0.53	2.1
NVNT	ax40	5670	Ant2	88.48	0.53	2.1

Test Graphs

Duty Cycle NVNT a 5500MHz Ant2

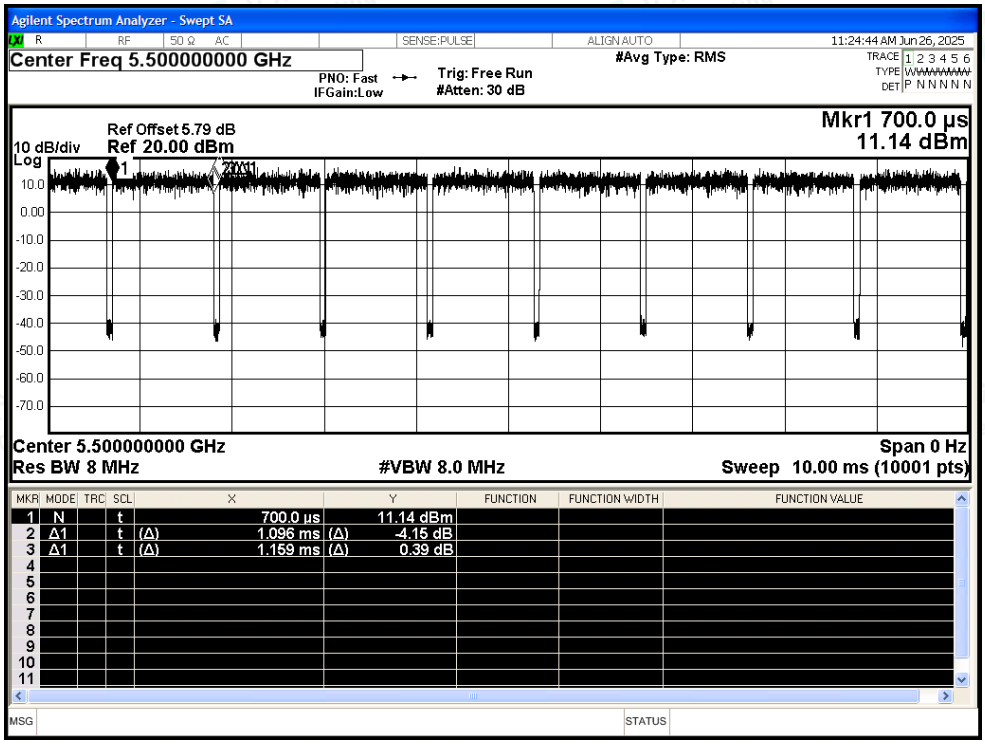

Duty Cycle NVNT a 5580MHz Ant2

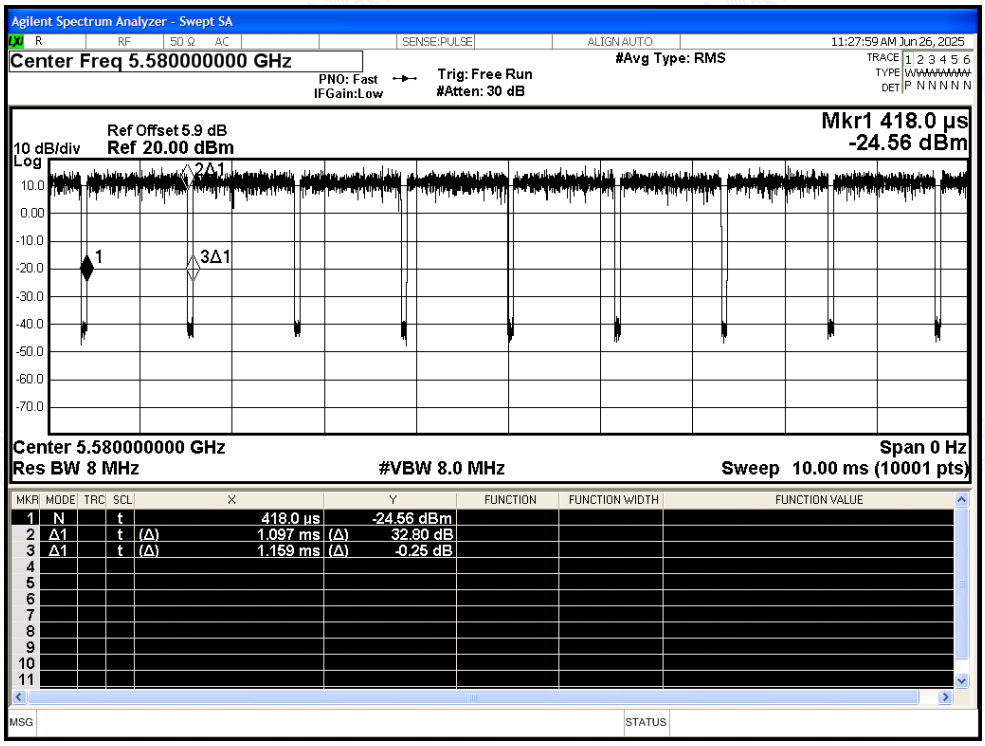

Duty Cycle NVNT a 5700MHz Ant2

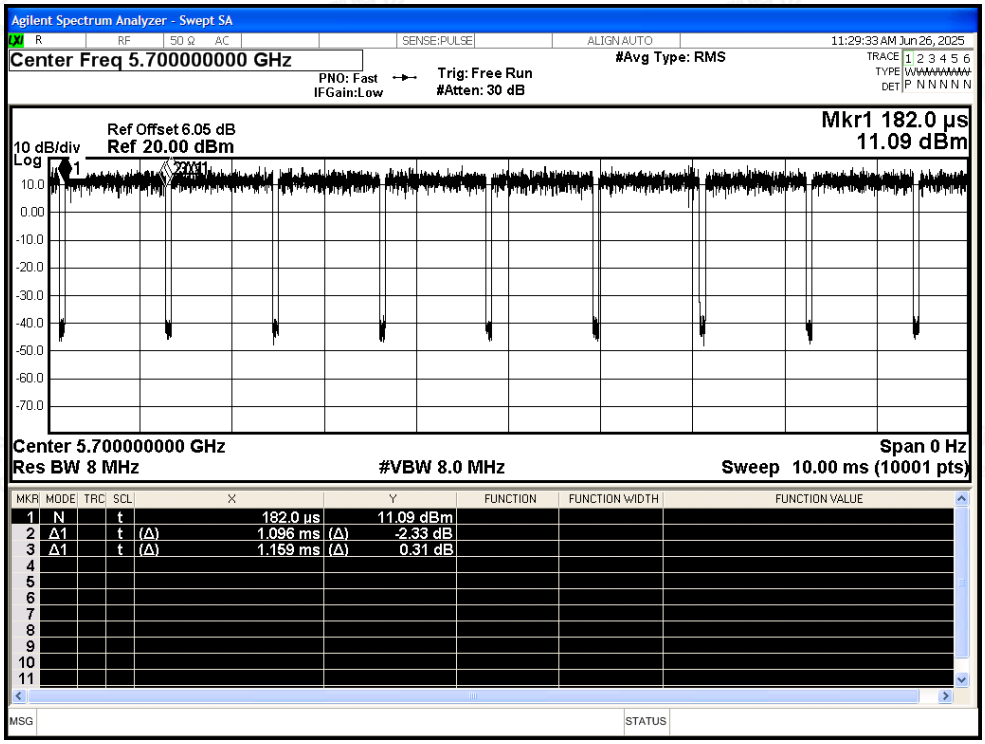

Duty Cycle NVNT n20 5500MHz Ant2

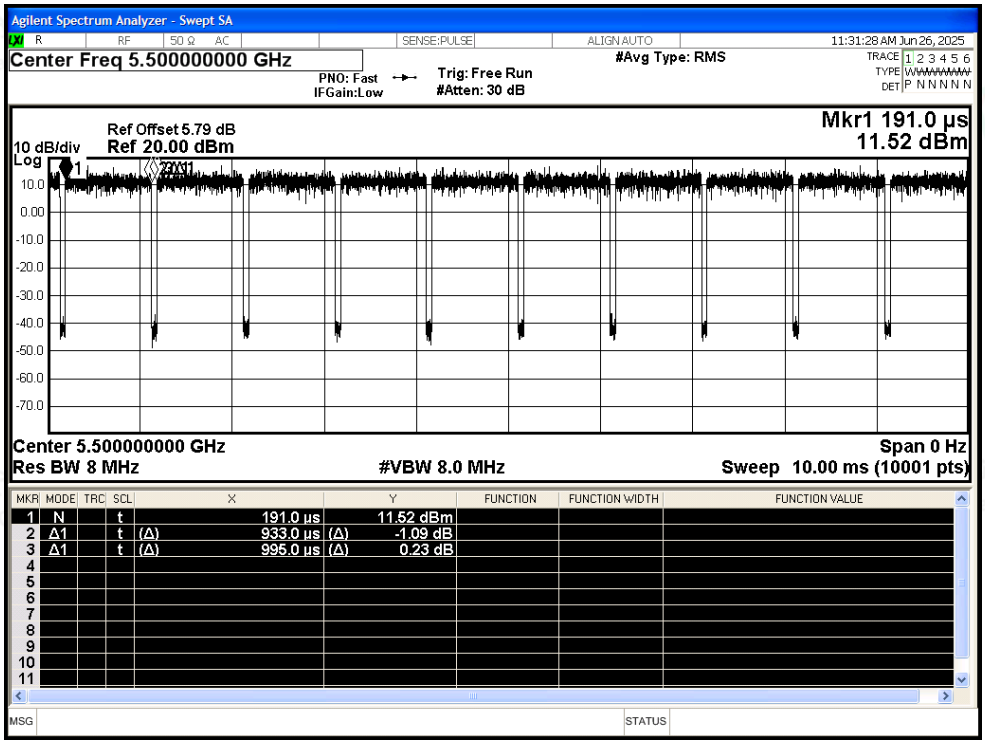

Duty Cycle NVNT n20 5580MHz Ant2

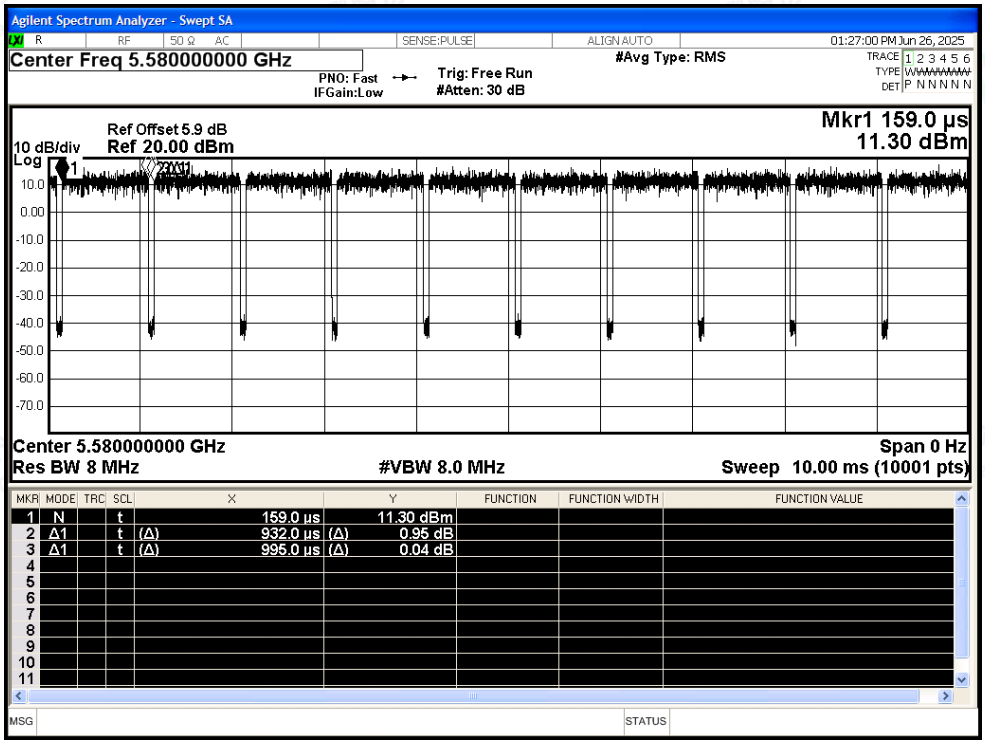

Duty Cycle NVNT n20 5700MHz Ant2

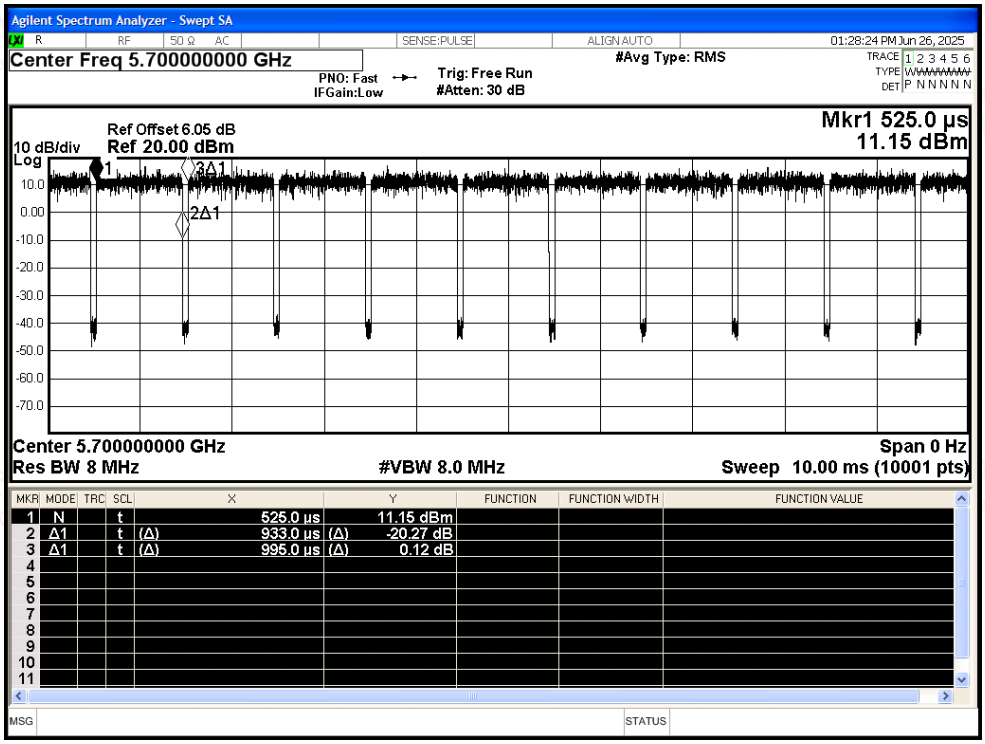

Duty Cycle NVNT n40 5510MHz Ant2

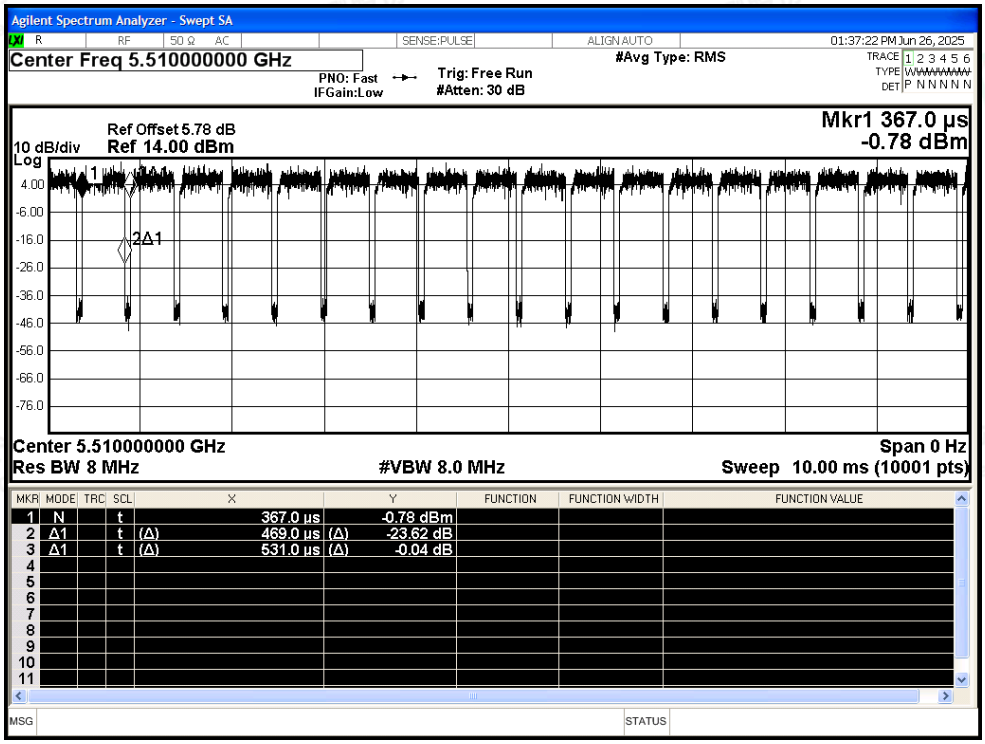

Duty Cycle NVNT n40 5550MHz Ant2

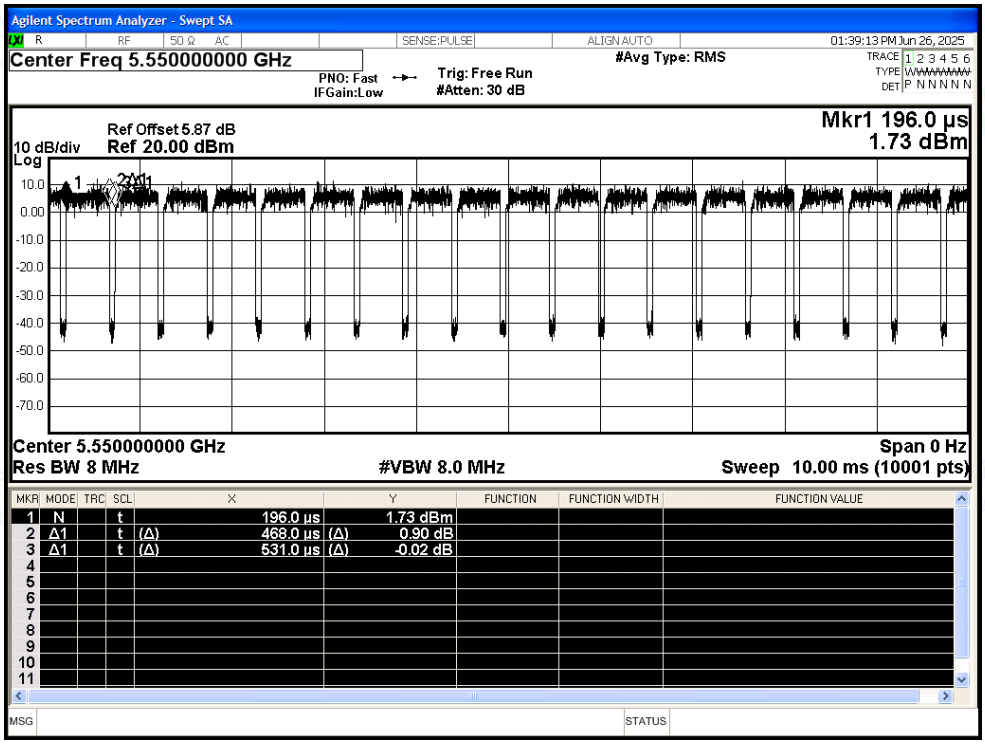

Duty Cycle NVNT n40 5670MHz Ant2

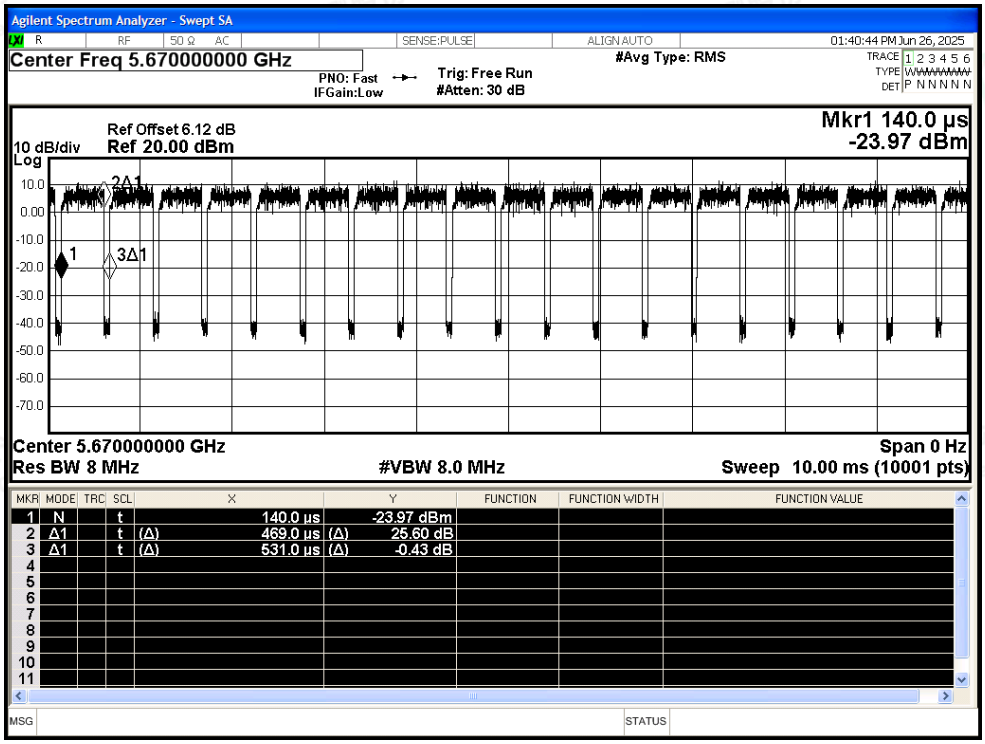

Duty Cycle NVNT ac20 5500MHz Ant2

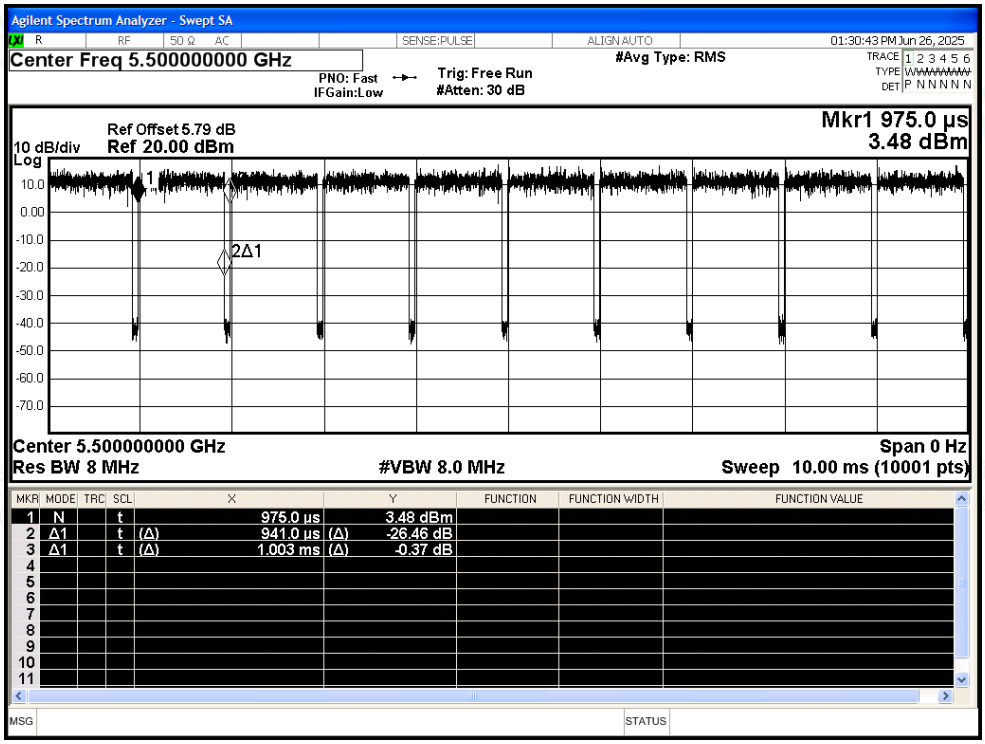

Duty Cycle NVNT ac20 5580MHz Ant2

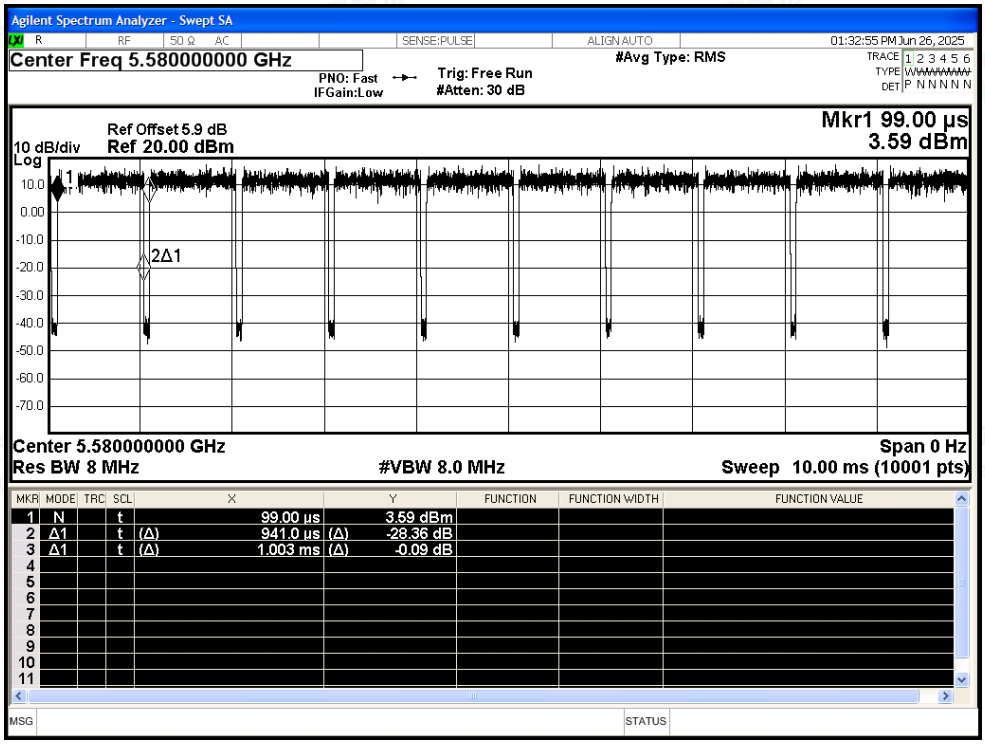

Duty Cycle NVNT ac20 5700MHz Ant2

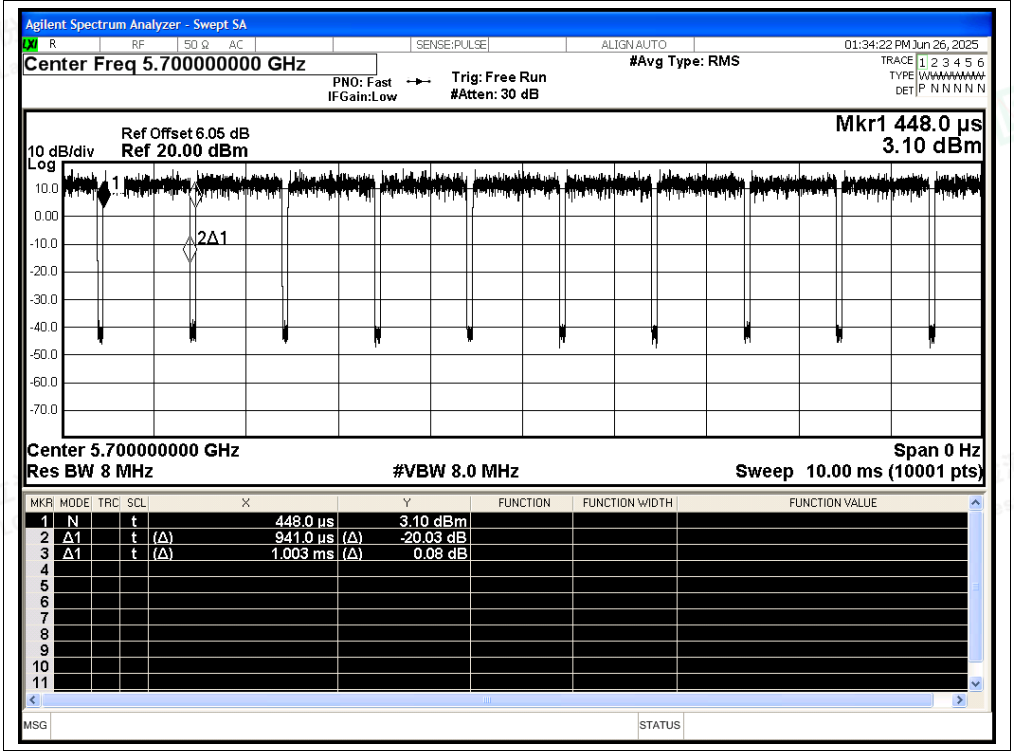

Duty Cycle NVNT ac40 5510MHz Ant2

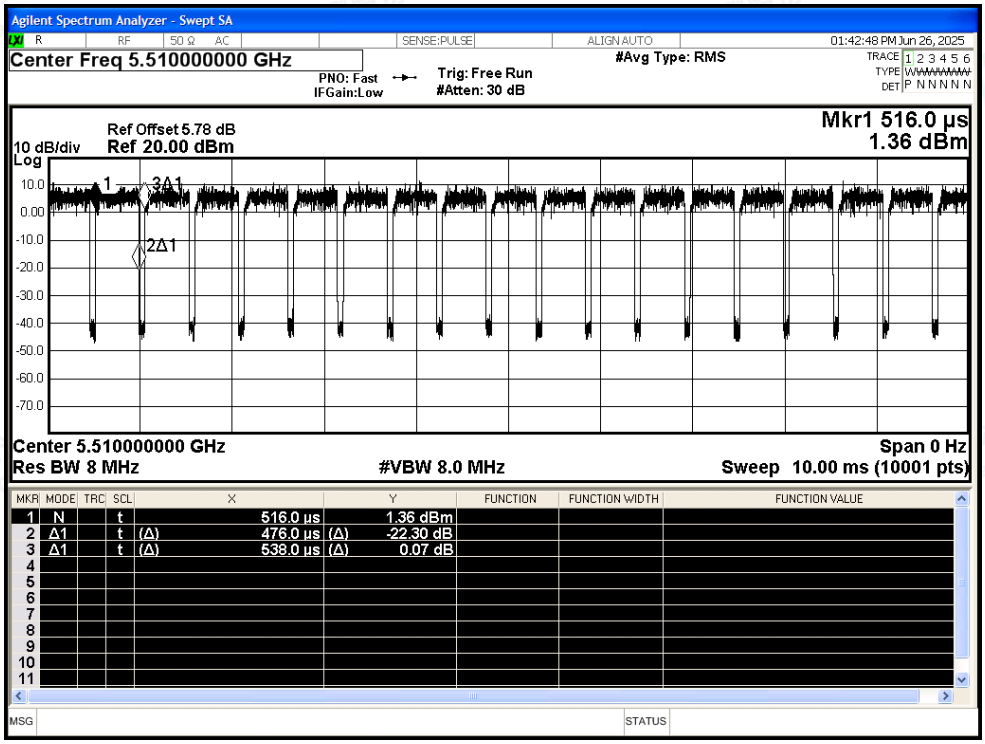

Duty Cycle NVNT ac40 5550MHz Ant2

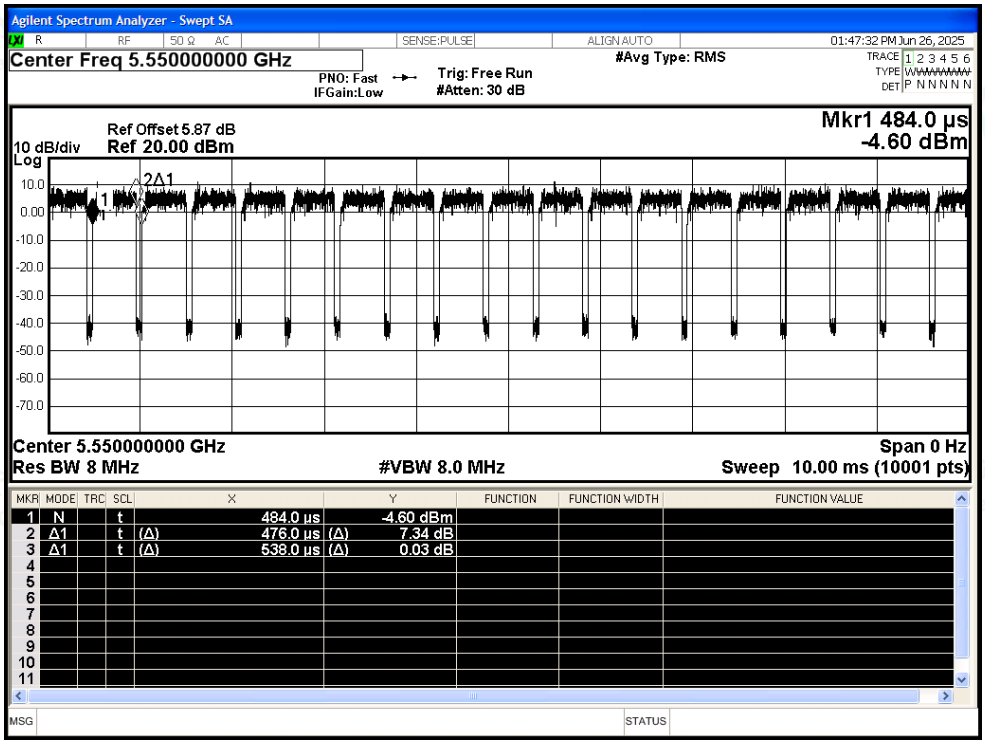

Duty Cycle NVNT ac40 5670MHz Ant2

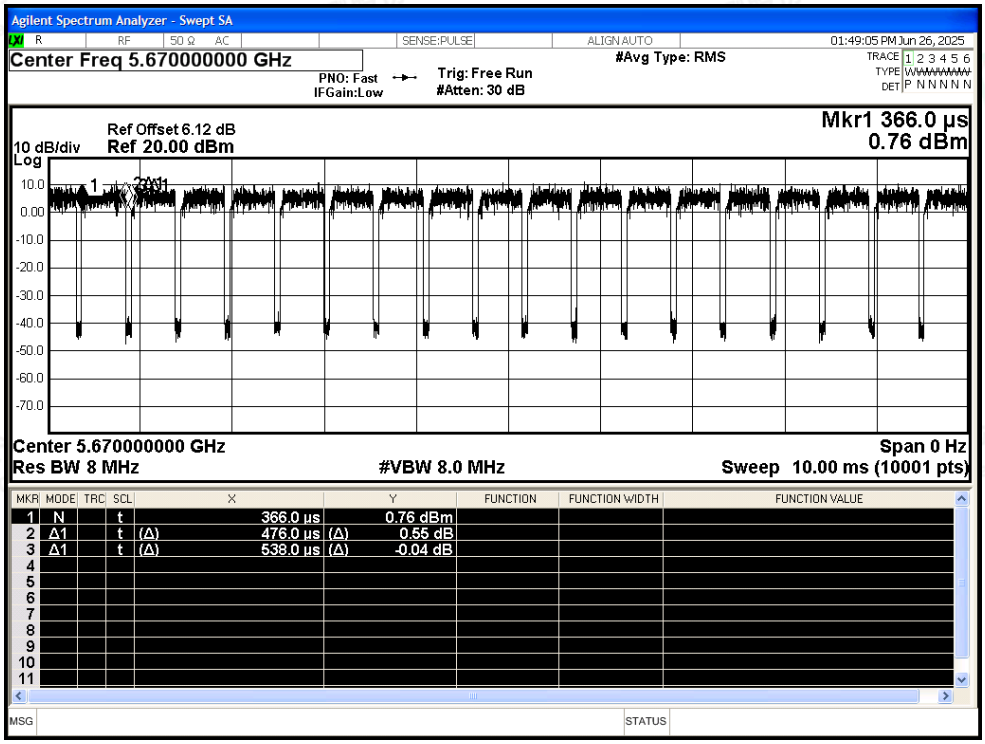

Duty Cycle NVNT ax20 5500MHz Ant2

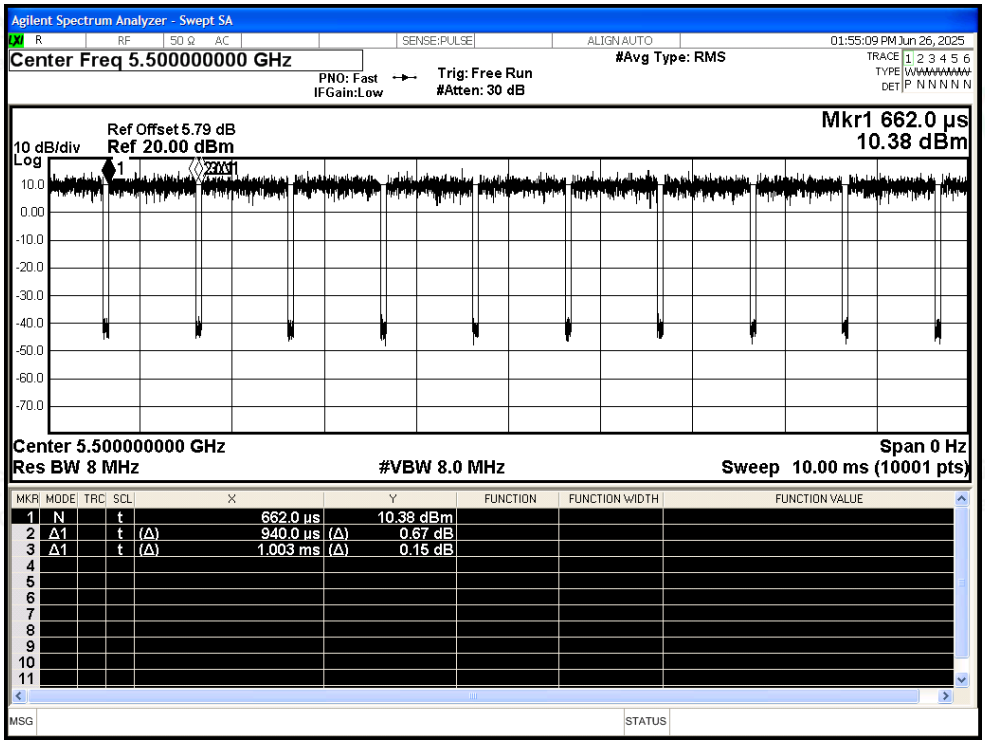

Duty Cycle NVNT ax20 5580MHz Ant2

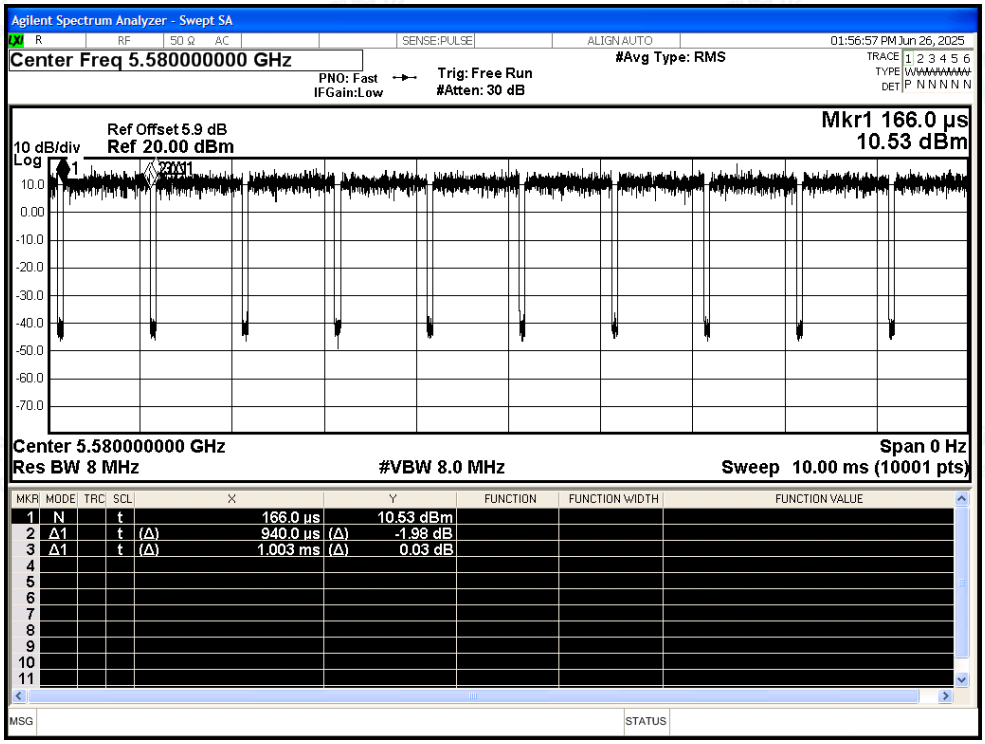

Duty Cycle NVNT ax20 5700MHz Ant2

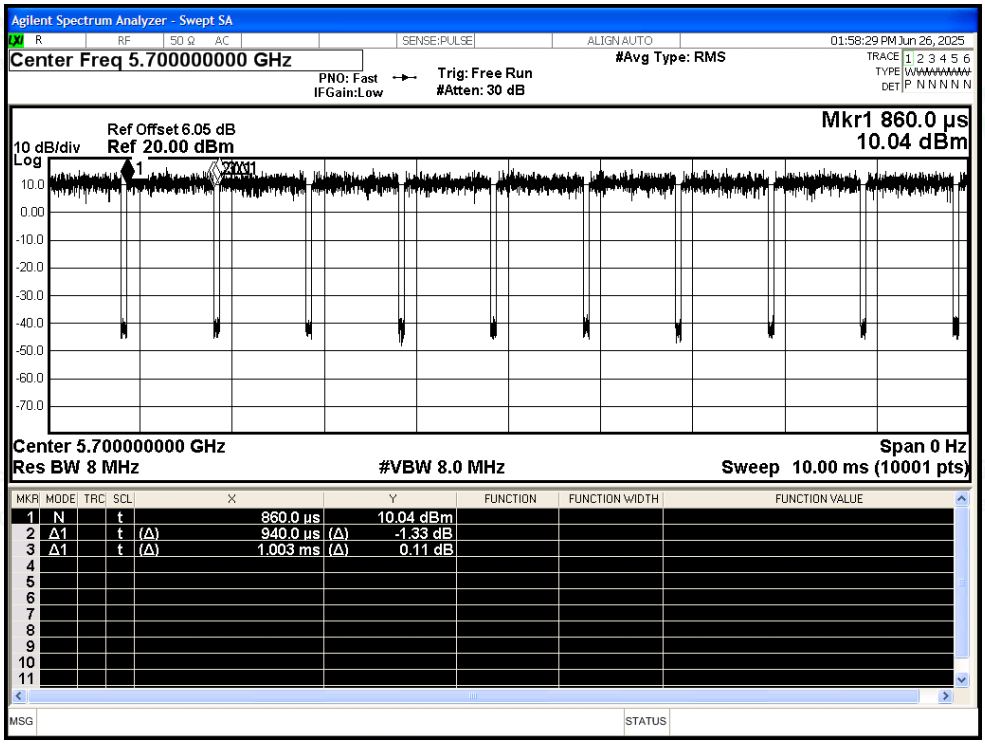

Duty Cycle NVNT ax40 5510MHz Ant2

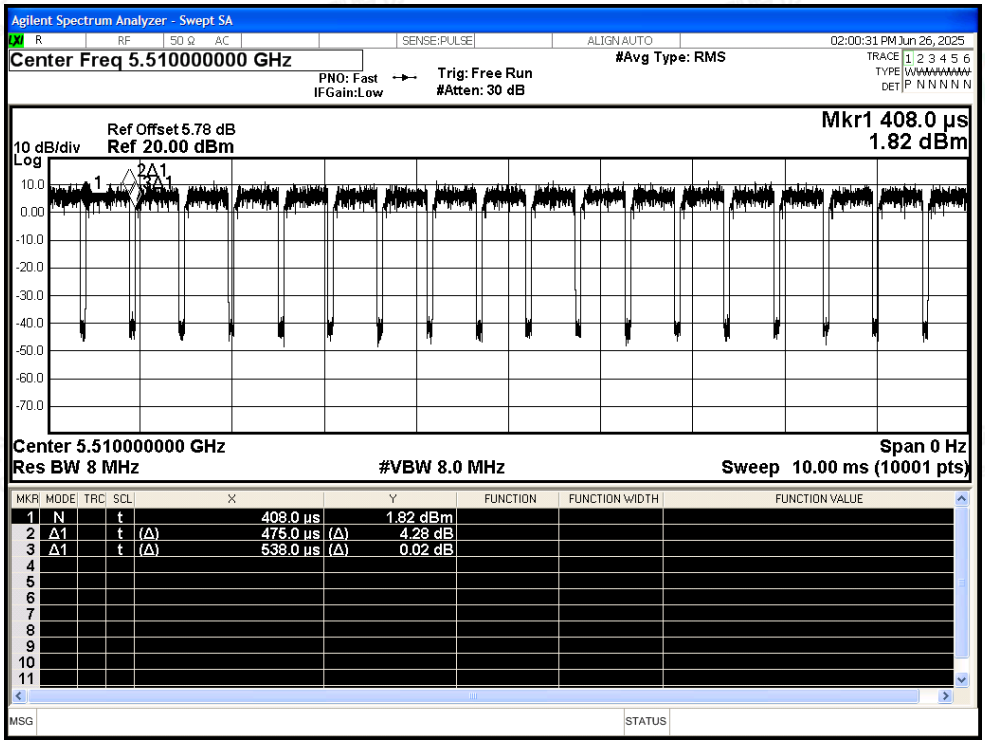

Duty Cycle NVNT ax40 5550MHz Ant2

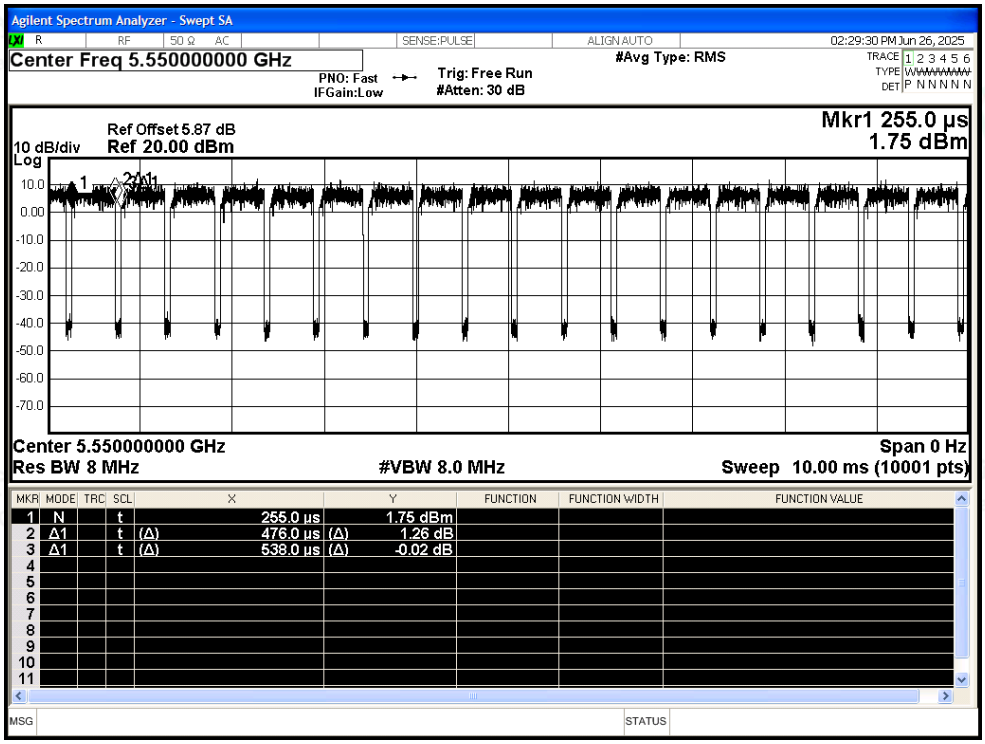
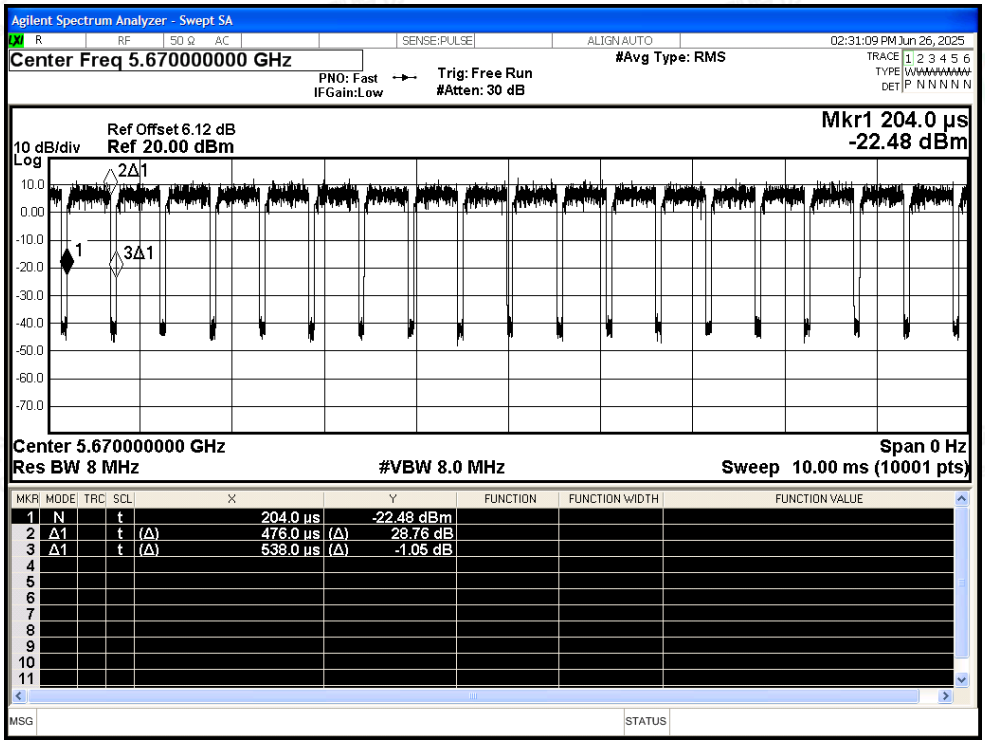
Duty Cycle NVNT ax40 5670MHz Ant2