Voger

VM300
Video Baby Monitor
User Manual

Content

1. Attention / Package Content 2
2. Product Introduction 3
3. Installation Introduction 4
   (1) Baby Unit installation
   (2) Charging and Power On/Off
4. Product function introduction 6
   (1) LCD display icon introduction
   (2) Night vision function
   (3) Music player
   (4) Intercom function
   (5) Volume adjustment
   (6) Reset the Parent Unit
5. Product Menu introduction 7
   (1) Main menu
   (2) Pairing Camera
   (3) Alarm clock
   (4) Settings
      a. Time and date
      b. Temperature unit
      c. Anti-Flicker
      d. Mode setting
      e. VOX sensitivity setting
      f. LCD backlight brightness adjustment
6. Language setting 8
7. Warranty 8

▲ Attention

Thank you for purchasing Voger Video Baby Monitor VM300. Now you can see and hear your baby sleeping in the other room or you can monitor your elder kids in their playroom. Before you use the device, please read this EN User Manual carefully.

- This product should be assembled by adults.
- Keep small parts away from children when assembling.
- This product is not a toy, do not allow children to play with it as a toy.
- This baby monitor is not a substitute for responsible adult supervision.
- Do not place the baby monitor cables in the cot or with the baby, arm's reach (at least 1 meter away).
- Keep the cords out of reach of children.
- Do not use the baby monitor near water or a heat source.
- Only use the power adapters provided.
- Do not touch the power plug with sharp or metal objects.

Package Content

One Parent Unit | One Baby U nit | Two Power adapter

Product Introduction

Overview of your Parent Unit

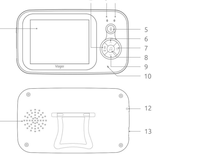

1. LCD Display
2. Menu Button / OK Button
3. Power Indicator light
4. Vox Indicator light
5. Push to talk Button
6. Volume + Button / Up Button
7. Return Button
8. Music control Button
9. Volume-Button / Down Button
10. Microphone
11. Speaker
12. Power Button
13. Charging Interface

Overview of your Baby Unit

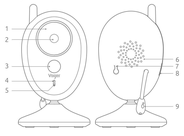

1. Light Sensor
2. Camera Lens
3. Infrared LED
4. Microphone
5. Power LED
6. Speaker
7. Pair Button
8. Power Interface
9. Temperature Sensor

Product Introduction

1. Baby unit installation

(1) Place the baby unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor. Adjust the baby unit until you are satisfied with the image in the parent unit.

(2) To mount the baby unit on the wall
Use the template below to mark the wall in the correct places to drill holes for wall-mounting screws.
Insert 4mm head screws (not supplied) into the holes and tighten the screws. Then, align your baby unit with the screws and push it down.

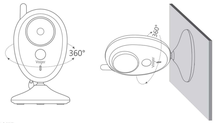

NOTE:
Do not place the baby unit within baby's reach! If there is interference on the picture or sound, try moving the units to different location, and ensure they are not close to other electronic equipment.

2. Charging and Power On/Off

(1) Baby unit power supply
Connect the small plug of the power adapter to the baby unit and the other end to the mains socket. The green LED light indicates that the baby unit is on working.
Parent unit p ower supply
Connect the plug of the power adapter to the parent unit and the other end to the mains socket. Please fully charge the parent unit before use, so that it could continue working without connecting to the power socket.
The LCD screen illuminates and starts up automatically after a few seconds.

(2) Power On/Off
Press and hold the power button at least 3 seconds to turn on the parent unit, then two units will be connectEd automatically.

Product function introduction

1. LCD display icon introduction
   ① Signal strength indicator ② Temperature of the baby's room
   ③ Date and time ④ Battery indicator ⑤ Alarm activated
2. Night vision function
   The baby unit has 1 high-intensity infrared LED for picking up clear images in the darkness.
3. Music player
   Press and hold the Music button at least 3 seconds will turn on the music player and play lullaby, through the baby unit, long press the button for 3 seconds again will turn off it.
4. Intercom function
   Press and hold the Push to talk button on the parent unit to talk to your baby through the baby unit loudSpeaker.
5. Volume adjustment
   When the video is playing, press the Volume — Button to decrease volume or Volume + Button to increase volume, the display will show the current volume for 5 seconds.
6. Reset the Parent Unit
   Press and hold the power button at least 3 seconds, the parent unit will be forced to restart.

Product Menu introduction

1. Main menu
   Press Menu Button at monitor screen will enter the main menu, It contains 4 items.
   a. Camera
   b. Alarm
   c. Settings
   d. Languages
   You can press the UP/Down Button to move the cursor to select an item and press Menu Button will enter the sub-menu which you selected. Press the Return Button back to main menu.



2. Pairing camera
   The endosed baby unit has already registered, you do not need to register it again unless the baby unit loses its link with parent unit.
   Otherwise, you just restart the parent unit, and the press the Pair Button back of the Baby Unit, then they will re-connect.
3. Alarm clock
   Press UP/DOWN Button to choose ON or OFF, press Music Button to change the Value.
   Press Music Button to choose item, press UP/ DOWN Button to change the setting.

4. Settings
   a. Time and date
   b. Temperature unit: Switch the unit to Celsius of Fahrenheit.
   c. Anti-flicke
   You are able to adjust the frequency of 50/60Hz to suit your lighting for anti-Flicker.

d. Mode setting
   Normal mode/Vox Mode
e. VOX sensitivity setting
   Low/Medium/High
f. LCD backlight brightness adjustment
   Press the UP Button to adjust the brightness of the LCD you are viewing and the LCD backlight active time in the menu operation.



Language setting

Choose your language from the following:

English	French	Spanish	Portuguese
Italian	German	Turkish	Russian

Warranty

All Voger products come with a limited warranty of 12 months from the date of purchase. And we have proEfessional customer service team for your support as soon as we can.
If you have any questions or confusions about our product or warranty, please feel free to contact us. We will do our best to help you solve the problem until you are satisfied.
Customer Service Mailbox: **support@vogerhome.com**

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information:

For One Parent Unit
This equipment has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For One Baby Unit
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Version 1.0

If you have any problem,
please feel free to let us know.
Customer Service E-mail: **support@vogerhome.com**
www.vogerhome.com
Made in China

Inhaltsangabe

1. Hinweise / Verpackungsinhalt 10
2. Produktbeschreibung 11
3. Installationsbeschreibung 12
   (1) Installation der Baby Einheit
   (2) Aufladen und Power Ein/Aus
4. Funktionsbeschreibung 14
   (1) LCD Display Symbolerklärung
   (2) Nachtsichtfunktion
   (3) Musikwiedergabe
   (4) Gegensprechfunktion
   (5) Lautstärkeregelung
   (6) Reset der Elterneinheit
5. Menübeschreibung 15
   (1) Hauptmenü
   (2) Koppeln der Kamera
   (3) Wecker
   (4) Grundeinstellungen
      a. Zeit und Datum
      b. Temperatureinheit
      c. Flackern reduzieren
      d. Moduseinstellung
      e. Einstellung Stimmen Empfindlichkeit
      f. Einstellung LCD Helligkeit Hintergrundbeleuchtung
6. Spracheinstellung 16
7. Garantie 16

▲ Hinweis

Vielen Dank, dass Sie sich für Voger Babyphone mit Kamera VM300 entschieden haben. Jetzt konnen Sie sehen und horen, wie Ihr Baby in einem anderen Raum schlaft, oder Sie konnen ihre alteren Kinder in ihrem Spielzimmer überwachen. Lesen Sie diese Bedienungsanleitung sorgfaltig durch, bevor Sie das Gerat verwenden.

- Dieses Produkt sollte von Erwachsenen zusammengebaut werden.
- Halten Sie beim Zusammenbau kleine Teile von Kindern fern.
- Dieses Produkt ist kein Spielzeug. Lassen Sie Kinder nicht als Spielzeug damitzspielen.
- Dieses Babyphone ist kein Ersatz fur die verantwortungsvolle Beaufsichtigung von Erwachsenen.
- Verlegen Sie die Kabel des Babymonitors nicht im Kinderbett oder in Reichweite des Babyarms (mindestens 1 Meter entfernt).
- Halten Sie die Kabel von Kindern fern.
- Verwenden Sie das Babyphone nicht in der Nähe von Wasser oder einer Warmequelle.
- Verwenden Sie nur die mitgelieferten Netzteile.
- Berühren Sie den Netzstecker nicht mit spitzen oder metallischen Gegenstanden.

Packungsinhalt

Elterneinheit X1 | Babyeinheit X1 | Netzteil /Stromversorgung X2

Produktbeschreibung

Übersicht Elterneinheit

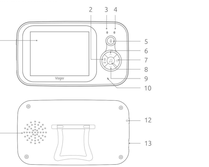

1. LCD-Anzeige
2. Menütaste / OK-Taste
3. Power Kontrollleuchte
4. Stimmen Kontrollleuchte
5. Sprechtaste
6. Lautstärke + Taste / Aufwartstaste
7. Return-Taste
8. Musiksteuerungstaste
9. Lautstärke - Taste/Abwartstaste
10. Mikrofon
11. Lautsprecher
12. Ladeschnittstelle
13. Einschaltknopf

Übersicht Babyeinheit

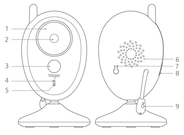

1. Lichtsensor
2. Kameraobjektiv
3. Infrarot-LED
4. Mikrofon
5. Power LED
6. Lautsprecher
7. Kopplungstaste
8. Power-Schnittstelle
9. Temparatursensor

Installationsbeschreibung

Installation der Babyeinheit

(1) Platzieren Sie die Babyeinheit an einem geeigneten Ort (z. B. auf einem Tisch) und richten Sie das Kameraobjektiv auf den Bereich, den Sie überwachen mochten. Passen Sie die Babyeinheit an, bis Sie mit dem Bild in der Elterneinheit zufrieden sind.

(2) So montieren Sie die Babyeinheit an der Wand.
Verwenden Sie die nachstehende Schablone, um die Wand an den richtigen Stellen zu markieren und Locher fur Wandmontageschrauben zu bohren. Setzen Sie 4-mm-Kopfschrauben (nicht mitgeliefert) in die Locher ein und ziehen Sie die Schrauben fest. Richten Sie dann Ihre Babyeinheit mit den Schrauben aus und drucken Sie sie nach unten.

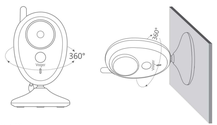

HINWEIS:
Stellen Sie die Babyeinheit nicht in Reichweite des Babys auf! Stellen Sie bei Bild-oder Tonstorungen sicher, dass sich die Gerate nicht in der Nahe anderer elektronischer Gerate befindet.

2. Aufladen and Power Ein/Aus

(1) Stromversorgung der Babyeinheit
Verbinden Sie den kleinen Stecker des Netzteils mit der Babyeinheit und das andere Ends mit der Steckdose. Das grune LED-Lichtzeigt an, dass die Babyeinheit in Betrieb ist.
Netzteil der Elterneinheit
Verbinden Sie den Stecker des Netzteils mit der Elterneinheit und das andere Ende mit der Steckdose.
Blitze laden Sie die Elterneinheit vor dem Gebrauch vollstandig auf, damit sie ohne Anschluss an die Steckdose weiterarbeiten kann. Der LCD-Bildschirm leuchtetauf und startet nach einigen Sekunden automatisch.

(2) Ein- /Ausschalten
Halten Sie den Netzschalter mindestens 3 Sekunden lang gedruckt, um die Elterneinheit einzuschalten. Anschließend werden automatisch die zwei Einheiten verbunden.

Funktionsbeschreibung

1. LCD display icon introduction
   ① Anzeige Signalstarke ② Temparatur im Baby-Schlafzimmer
   ③ Datum und Zeit ④ Batterieanzeige ⑤ Wecker ein /aus
2. Nachtsichtfunktion
   Die Babyeinheit verfugt uber 1 hochintensive Infrarot-LEDzur Aufnahme klarer Bilder im Dunkeln.
3. Musikwiedergabe
   Halten Sie die Musiktaste mindestens 3 Sekunden lang gedruckt, um das Ge rat einzuschalten,
   Drücken Sie die Taste erneut 3 Sekunden lang, um den Musik-Player und das Wiegenlied uber die Babyein©heit auszuschalten.
4. Gegensprechfunktion
   Halten Sie die Sprechtaste an der Elterneinheit gedruckt, um uber den Lautsprecher der Babyeinheit mit Ihrem Baby zu sprechen.
5. Lautstärke einstellenq
   Drücken Sie wahrend derWiedergabe des Videos die Lautstarketaste, um die Lautstarke zu verringern, oderdie Lautstarketaste, um die Lautstarke zu erhdhen. Das Display zeigt 5 Sekunden lang die aktuelle Lautstarke an.
6. Zurücksetzen der Elterneinheit
   Halten Sie den Netzschalter mindestens 3 Sekunden lang gedrickt, um den Neustart der Elterneinheit zu erzwingen.

Menubeschreibung

1. Hauptmenü
   Drücken Sie die Menütaste auf dem Bildschirm, um das Hauptmenü aufzurufen. Eb enthalt 4 Elements.
   a.Kam era
   b.Alarm
   c.die Einstellungen
   d.Sprachen
   Sie konnen die UP/ Down-Taste drucken, um den Cursor zur Auswahl eines Elements zu bewegen, und die Menu-Taste drucken, um das von Ihnen ausgewahlte Unternmenü aufzurufen. Drucken Sie die Eingabetaste, umzum Hauptmenuzu-ruckzukehren.

2. Kamera koppeln
   Die beiliegende Babyeinheit wurde here its registriert. Sie mussen sie erst dann erneut registrieren, wenn die Babyeinheit die Vsrbindung zur Elterneinheit verliert. Andernfalls starten Sie einfach die Elterneinheit neu und drucken die PairTaste auf der Ruckseite der Babyeinheit dann warden sie s ch wieder verbinden.
3. Wecker
   Drucken Sie die Musiktaste, um eine Option auszuwahlen, und die AUF/AB-Taste, um die Einstellung zu andern.

4. Einstellungen
   a. Einstellungen
   Drucken Siede UP /DOWNTasts, um ON oder OFF auszuwahlen, und drucken Sie die Musiktaste, um den Wert zu andern.
   b. Temperatureinheit
   Schalten Sie die Einheit auf Fahrenheit um.

c. Anti-Flimmern
   Sie konnen die Frequenz von 50/60 Hz an Ihre Beleuchtung anpassen, um ein Flimmern zu vermeiden.
d. Modus-Einstellung
   Normaler Modus / Stimmen-Modus
e. Stimmen Empfindlichkeitseinstellung
   Niedrig/Mittel/Hoch
f. Helligkeitseinstellung der LCD-Hintergrundbe-leuchtung
   Drucken Sie die UP-Taste, um die Helligkeit des angezeigten LCD und die Aktivitatszeit der LCD-Hintergrund beleuchtu ng im Menu einzu-stellen



Spracheinstellung

Wahlen Sie Ihre Sprache aus den folgenden Moglichkeiten:

Englisch	Franzosisch	Spanisch	Portugiesisch
Italienisch	Deutsche	Turkisch	Russisch

Garantie

Furalle Voger-Produkte gilt eine beschrankte Garantie von 12 Monaten ab Kaufdatum. Und wir haben ein professionelles Kundenservice-Team fur Ihre Untersutzung, sobald wir konnen.
Wenn Sie Fragen oder Unklarheiten zu unserem Produkt oder unserer Garantie haben, konnen Sie sich gerne an uns wenden. Wir werden unser Bestes tun, um Ihnen bei der Losung des Problems zu helfen, bis Sie zufrie- den sind.
Mailbox des Voger-Kundendienstes: **support@vogerhome.com**