RF720說明書

尺寸：H 125 X W 525 mm

PANTONE BIackC黑色



步驟1.
如左圖說明
橫向彈簧折

POWZAN

RF720 無線發光鍵鼠組

Backlit Wireless Keyboard and Mouse Combo

瞭解你的鍵盤及滑鼠



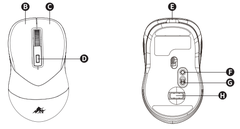

A 鍵盤電源開關 / 充電孔

B 左鍵

C 右鍵

D DPI鍵

E 滑鼠充電孔

F 燈光鍵

G 滑鼠電源開關

H 接收器(鍵鼠共用)

產品規格

產品名稱: RF720 無線發光鍵鼠組

鍵盤
- 無線介面: 2.4GHz無線功能
- 約略尺寸: (L)440*(W)127*(H)20 mm
- 約略重量: 459g
- 最大操作距離範圍: 10M
- 電池容量: 1500 mAH
- 工作電流(無背光): 2mA
- 連續使用時間(無背光): 750小時
- 工作電流(使用最亮背光): 320mA
- 連續使用時間(使用最亮背光): 9小時
- 充電時間: 3.5小時
- 燈光休眠: 鍵盤無動作120秒背光進入休眠
- 鍵盤休眠: 鍵盤無動作30分鐘進入休眠
- 系統需求規格: Windows XP, Windows 7, Windows 8, Windows 10, Mac OS

滑鼠
- DPI: 800/1200/1600/2000
- 約略重量: 80g
- 最大操作距離範圍:10M
- 電池容量: 650mA
- 最大工作電流: 16mA
- 燈光休眠: 滑鼠無動作90秒燈光進入休眠
- 滑鼠休眠: 滑鼠無動作8分鐘進入休眠
- 系統需求規格: Windows XP, Windows 7, Windows 8, Windows 10, Mac OS

包裝內容
- 無線發光鍵盤*1
- 無線發光滑鼠*1
- 鍵鼠共用接收器*1(於滑鼠底部)
- 充電線*1
- 說明書*1

設備名稱：RF720無線發光鍵鼠組
Equipment name

型號（型式）：RF720(全無線鍵盤KB-RF720, 無線滑鼠MA-RF720)
Type designation (Type)

單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbols				
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
塑膠材料	○	○	○	○	○	○
電路板組	○	○	○	○	○	○
線材組	○	○	○	○	○	○
金屬材料	○	○	○	○	○	○

備考1."超出0.1 wt %"及"超出0.01 wt %"係指限用物質之百分比含量超出百分比含量基準值。
Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2."○"係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3."—"係指該項限用物質為排除項目。
The "—" indicates that the restricted substance corresponds to the exemption.

2.4GHZ 連接方式

1.將接收器連接至可用的USB連接埠
2.打開鍵盤及滑鼠開關
3.鍵鼠將會自動配對至您的裝置

若無自動配對,請參考以下配對方法:

鍵盤 1. 打開鍵盤開關。
2. 請同時按住ESC+K。num lock指示燈會閃爍四次。
並在15秒內將接收器接到可用的USB連接埠。
配對成功後num lock指示燈會快閃5次。然後滅掉。

滑鼠 1. 打開滑鼠開關。
2. 將接收器接到可用的USB連接埠。
3. 請同時按住左鍵+右鍵。即可完成配對。

操作說明

- 鍵盤-指示燈說明



LED1: 數字燈(低電壓指示燈)
LED2: 大寫燈
LED3: 充電指示燈
低電壓報警:當鍵盤電池電壓低於3.3v，數字燈(低電壓指示燈)開始閃爍。提示用戶需要對鍵盤進行充電。當電池充飽後，充電指示燈LED紅燈熄滅。

- 鍵盤-背光按鍵說明

1.單擊 切換背光顏色
2.長按 開啟/關閉背光
3.按住 Fn + PgUp 增加背光亮度
4.按住 Fn + PgDn 減少背光亮度

- 滑鼠-指示燈說明



1.充電中:滑鼠亮起紅燈
2.電量已充足:滑鼠紅燈熄滅
3.低電量指示:滑鼠兩面背光閃爍紅燈

- 滑鼠-燈光按鍵說明

1.長按燈光鍵3秒,開啟/關閉燈光
2.單按燈光鍵切換背光顏色
(21種燈光模式循環)

- DPI鍵說明

單按DPI鍵切換
DPI800(紅色)
/1200(藍色)
/1600(綠色)
/2000(紫色)

注意事項: 1.使用前請確保鍵盤及滑鼠電量已充滿 2.若鍵盤或滑鼠出現延遲,請先確認電量是否充足
3.鍵盤會自動辨識win/mac系統,無需手動切換

按鍵及功能

按鍵	Windows system	Mac OS system
F1	螢幕亮度-	螢幕亮度-
F2	螢幕亮度+	螢幕亮度+
F3	X	Mission Control
F4	X	Launchpad
F5	郵件	X
F6	主頁	X
F7	上一曲	上一曲
F8	播放/暫停	播放/暫停
F9	下一曲	下一曲
F10	靜音	靜音
F11	音量調小	音量調小
F12	音量調大	音量調大
	全選	全選
	複製	複製
	貼上	貼上
	剪下	剪下
Esc	按住FN加ESC鍵, 鎖定或解鎖 Fn (功能) 鍵	

安全聲明

開始使用前請請閱讀以下事項並請保留此聲明作為未來之依據。
請勿摔落或撞擊您的鍵盤/滑鼠。
請勿在強烈震動環境下使用您的鍵盤/滑鼠，因為震動可能開啟您的鍵盤/滑鼠。
請勿用任何方式拆解或改裝您的鍵盤/滑鼠，自行拆解或改裝您的鍵盤/滑鼠將
造成，您的保固失效，或有可能造成短路。
請勿使用您的鍵盤/滑鼠於潮濕的環境中，液體進入鍵盤/滑鼠中將可能造成
產品損壞或有可能觸電短路。
請勿將金屬材質插入滑鼠主體中。
開始使用前請請閱讀以下事項並請保留此聲明作為未來之依據。
經型式認證合格之低功率射頻電機，非經許可，公司，商號或使用者
均不得擅自變更頻率，加大功率或變更原設計之特性之功能。
低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有
干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前述合法通信，指依電信法規定作業之無線電通信。
低功率射頻電機須忍受合法通信或工業，科學及醫療用電波輻射性電
機設備之干擾。

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

POWZAN
BISON TECHNOLOGY CO., LTD
www.powzan.com

TW
拜森電競有限公司
新北市新莊縣五權二路200號7樓之6
客服電話：(02) 2298-1780

Product overview

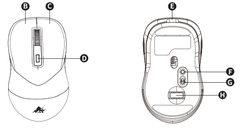

A Keyboard Power Switch / Charging Port

B Left Button

C Right Button

D DPI

E Charging Port

F Light Mode Switch

G Power Switch

H USB Receiver

Product Specification

Model: RF720 Backlit Wireless Keyboard and Mouse Combo

KEYBOARD
- Connection: 2.4G Wireless Connection
- Dimension: (L)17.3"(W)5"(H)0.6 in
- Net Weight: 1 lb
- Working range: 10M
- Battery capacity: 1500 mAH
- Working current(without backlit): 2mA
- Working hour(without backlit): 750 hours
- Working current(with the brightest backlit): 320mA
- Working hour(with the brightest backlit): 9 hours
- Charging time: 3.5 hours
- Backlit sleep mode: after 2 minutes of not use
- Keyboard sleep mode: after 30 minutes of not use
- System Requirement: Windows XP, Windows 7, Windows 8, Windows 10, Mac OS

MOUSE
- DPI: 800/1200/1600/2000
- Net Weight: 2.8 oz
- Working range: 10M
- Battery capacity: 650 mAH
- Maximum working current: 16mA
- Backlit sleep mode: after 90 minutes of not use
- Mouse sleep mode: after 8 minutes of not use
- System Requirement: Windows XP, Windows 7, Windows 8, Windows 10, Mac OS

Package include
- 1 x backlit wireless keyboard
- 1 x backlit wireless mouse
- 1 x USB receiver (under the mouse)
- 1 x charging cable
- 1 x manual

2.4G wireless mode connection

1. Plug the USB dongle into your device.
2. Turn on the keyboard and mouse.
3. The keyboard and mouse will connect to your device automatically.

If USB dongle doesn't connect to your device automatically, please reference below:

KEYBOARD
1. Turn on the keyboard.
2. Please hold ESC and press K key, the num lock indicator will slowly flashes.
Then plug the USB receiver into your device within 15 seconds.
If connect successfully, the num lock indicator will flash 5 times and off.

MOUSE
1. Turn on the mouse
2. Plug the USB receiver into your device.
3. Please press scroll wheel and right button together then connect to pair.

Operation guidance

- KEYBOARD-LED Indicator light

LED1: Num lock(low power)
LED2: Caps Lock
LED3: Charing

Low Battery: LED1 flashes slowly
Charging: LED3 is always on, light off after fully charged

- KEYBOARD-Backlit operation guidance

1.Press to switch backlit color
2.Hold and press for 5 seconds to turn on/off backlit
3.Press Fn + PgUp to increase backlit brightness
4.Press Fn + PgDn to decrease backlit brightness



- Backlit operation guidance

1.Hold and press light button for 3 seconds to turn on/off the light
2.Single press light button to switch light color
(21 light modes in cycles)



- DPI Switch

Single press DPI to switch DPI800(red) / 1200(blue) / 1600(green) / 2000(purple)

- MOUSE-LED Indicator light

Battery charging: The red light of the scroll wheel will stay on
Battery is full: The red light of the scroll wheel will off
Low Battery: Backlit red light will flash

Troubleshooting

1.Please make sure to fully charge keyboard and mouse before use.
2.If the keyboard and mouse have lag problem, please check if the battery is low and fully charge it.
3.Keyboard will switch to mac / win mode automatically according to your device.
4.On mac mode, there is no num lock key on standard mac keyboard. However, you may choose "system Preferences", then go to "Accessibility" - "Mouse & Trackpad" and look for an option called "Enable Mouse Keys" to enable num lock.

Key and Function

Key	Windows system	Mac OS system
F1	Decrease the brightness	Decrease the brightness
F2	Increase the brightness	Increase the brightness
F3	X	Mission Control
F4	X	Launchpad
F5	Mail	X
F6	Home	X
F7	Prev. Track	Prev. Track
F8	Play/Pause	Play/Pause
F9	Next Track	Next Track
F10	Mute	Mute
F11	Volume down	Volume down
F12	Volume up	Volume up
	Select all	Select all
	Copy	Copy
	Paste	Paste
	Cut	Cut
Esc	Please hold FN and press ESC key to turn on/off FN function.	