材质：80G双铜+正反印刷+风琴折
尺寸：88x76mm(折后尺寸)

digipower®

ESSENTIAL VIDEO BLOGGING KIT

Quick Guide

Model: WFC-482

The Smartphone holder is on the inside of leg 1

The action camera screw is on the inside of leg 2

The remote-control is on the outside of leg 3

The Bluetooth remote is located under one of the legs of the tripod. From the inside of the leg, push the remote outward to release it.

FOR FIRST USE, PAIR THE REMOTE WITH YOUR SMARTPHONE

- Go into phone settings and turn Bluetooth on, make sure it is discoverable.
- Press and hold the remote button for 1 second.
- The blue LED on the remote will blink to indicate it is in pairing mode.
- On your Smartphone you will see "remote control", select it to pair the devices.
- Go to camera mode on your Smartphone then press the shutter button on the remote to ensure it is working correctly.

If the remote is not functioning, check and replace the battery.
Battery size: coin cell CR2025 3Volt.

1. Using a coin, turn the battery compartment door counterclockwise to open.
2. Insert the new battery with the printing face up
3. Replace and lock the battery door by turning it clockwise

USING THE CAMERA/PHONE MOUNT

- Open up the tripod and look under the legs for the phone mount.
- Grab the top and bottom of the mount and pull to release it from the tripod.
- Attach it to the top of the tripod by screwing the bottom part of the mount into the top of the tripod.
- Open both top and bottom panels of the mount by pulling upward, get enough space to insert your phone sideways into the mount.

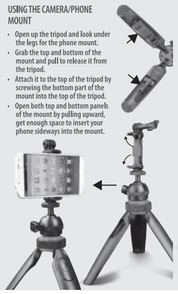

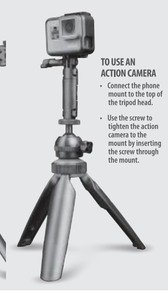

TO USE AN ACTION CAMERA

- Connect the phone mount to the top of the tripod head.
- Use the screw to tighten the action camera to the mount by inserting the screw through the mount.

USING THE MICROPHONE WITH A CAMERA

- Mount the microphone on top of the camera using the microphone's cold shoe, found underneath the microphone. Slide it into the top shoe of the camera.
- Rotate the knob until the microphone fits securely on the camera.
- Move the microphone's switch to the "camera" setting, the red light indicator will turn on .
- Connect the microphone's plug into the camera's 3.5mm audio jack.
- The microphone should now be working with your camera.

USING THE MICROPHONE WITH A PHONE

- Make sure the microphone's switch is in the "phone" position.
- For an iPhone 7 or newer, you will first need to connect a Lightning to 3.5mm adapter to your iPhone (this adapter is not included).
- For an Android phone with a USB-C port and no 3.5mm jack, you will first need to connect a USB-C to 3.5mm adapter to your phone (this adapter is not included)
- Connect the microphone's 3.5mm plug to the jack on the lightning or USB-C adapter.
- For other models of Smartphones, connect the microphone's 3.5mm plug directly into the jack on the phone.
- The microphone should now work with your phone.

Note: If you hear interference on your recording, it means the lightning to 3.5mm adapter is not connected properly to your iPhone.
You may need to remove the case from your iPhone to make better contact between the phone and the microphone.

CHARGING THE LIGHT

- Fully charge the light before first use.
- Connect the included micro USB cable from the light to a USB charger (not included).
- Let charge until the blue blinking power indicator light stays on, charge time approximately 2 hours.

Using the light

- Connect the light to a standard tripod or to a camera shoe.
- Press and hold the power button for 2 seconds to turn the light on.
- To increase the brightness to medium, quick press the power button.
- To increase the brightness to high, quick press the power button again.
- Press and hold the power button for 2 seconds to turn the light off.
- When the internal battery power is low the blue indicator LED will blink rapidly, in 4 minutes the light will power off and needs to be recharged.

USING THE DIFFUSER FILTERS

- This kit features 3 color diffusers to get different lighting effects.
- Insert the tabs on the bottom of the diffusers into the slots on the bottom of the light.
- Clip the diffuser to the top of the light.

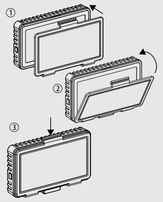

Questions? Problems? Picked up the wrong item? Before returning to the Store, please give our customer service team a chance to help.

email us at TechSupport@Mizco.com

for a seamless and speedy resolution.

digipower®

Mizco International, Inc.
Cranford, New Jersey
All rights reserved.
DIGIPOWER is a registered trademark of Mizco International Inc.

WARRANTY INFORMATION FOR DIGIPOWER PRODUCTS, A DIVISION OF MIZCO INTERNATIONAL, INC.

We warrant all Digipower branded products against defects in material and workmanship for two years from the original date of purchase. At our option, we shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the date of purchase in order to obtain any warranty service. This warranty is void if the product has been handled or used in any manner which is inconsistent with the instructions accompanying the product or the intended use of the product. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty does not extend to equipment used with the product. This warranty is valid only if the product is used on a compatible device as specified on or attached to the product package. To verify compatibility, please check the product package for details or visit:
www.DigiPowerSolutions.com.

Repair or replacement, as provided under this warranty, is your exclusive remedy. We shall not be liable for any incidental or consequential damages. DigiPower hereby expressly disclaims any and all implied warranties of merchantability and fitness for a particular purpose.

Some states/countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Some states/countries do not allow limitations on implied warranties, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and country to country.

FCC STATEMENT :
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ICES
This Class B digital apparatus complies with Canadian ICES-003.

For disposal in countries outside of the European Union This symbol is only valid in the European Union (EU). If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.

This symbol means that the product cannot be disposed of with normal household waste (2012/19/EU).

1. old devices can be returned free of charge to suitable collection points.
2. these are collected there professionally or prepared for reuse. Old appliances may contain harmful substances that can harm the environment and human health. The raw materials contained can contribute to environmental protection through their recycling.
3. the deletion of personal data on the waste equipment to be disposed of must be carried out by the end user on his own responsibility.