T801

SAFETY INFORMATION

To avoid possible hearing damage, limit the time listening at high volumes.

Hospital Safety

Please follow hospital rules and limitations.
Please turn off your tablet PC when near medical instruments.

Airport Safety

Remember to follow all airport and flight safety regulations.

Water Hazard

Your device is not waterproof. Keep your device away from water or liquid to avoid damage.

Emergency Calls

Make sure your device is switched on and in a service area. On home screen, tap the tablet key and dial the emergency number

Battery usage

For better performance and longer battery life, it is recommended that you charge the battery fully before using the tablet for the first time and that you initially complete two to three charge cycles

KEY FUNCTIONS

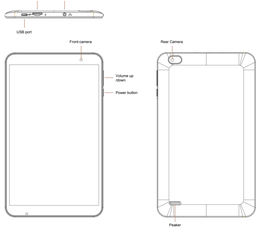

Power On / Off

- Long press power button to power on;
- While the device is powered on, long press to access the power off menu or click to lock the screen.

Volume

Adjusts the ringer volume, call volume, and multimedia volume.

Home

The home button pauses any current action and returns to the home screen.

Recent Apps

Opens a list of recently opened applications that allows you to switch conveniently between them. This option can also close any open applications by swiping to the side.

Back

Returns to the previous screen; Closes the keyboard, any open program, or any menu option.

USB Port

Charges the device and transfers data such as documents, music, and video between your device and a PC

Headset Port

Connect earphones to this port for hands-free capabilities. You may also to listen to music or FM radio.

Front Camera

A high-resolution front camera to take pictures and video. This option is ideal for self-portraits.

Rear Camera

A high-resolution real camera to take pictures and video.

Flash

Provides light for pictures in low-light conditions. It also may be used as a flashlight.

Charging the Phone

Your phone's battery should have enough power for the Tablet PC

to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

WARNING!

Use only IPRO-approved chargers and USB cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adaptor to the charging jack.Ensure that the adaptor is inserted in the c orrect direction.

2. Connect the charger to a standard AC power outlet.

3. Disconnect the charger when the battery is fully charged.

NOTE:

If the screen freezes or takes too long to respond, try pressing and holding the Power key for about 10 seconds to restart the phone.

FCC Statement:
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:
- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.
The distance between user and products should be no less than 20cm
The ECT is for desk use only

SELECT LANGUAGE

While on the Welcome screen, please scroll to select your language.

SELECT WI-FI

This process allows the device to connect to the internet. Click on the desired Wi-Fi network that the device that will be connected. Please note that any unsecured Wi-Fi networks can be connected to without credentials and any secured Wi-Fi networks require a password for credentials prior to connection. It is recommended that you connect to a Wi-Fi network to check for software updates prior to start up.

ADD YOUR ACCOUNT

Sign in to your Google™ account in order to keep accounts streamlined with Google services. Your Gmail™ account will be used for some Google programs. If you do not have a Google account, click to create a new account.

GOOGLE SERVICESE

Click to add or remove Google services that include Backup, Location Service, etc.

RESTORE APPS & DATA

You can restore your previous applications and data that was stored from another device.

Google and Gmail are trademarks of Google LLC.

Product Safety Information

	Don't make or receive phone calls while driving. Never text while driving.
	Keep your phone at least 5 mm away from your body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the loudspeaker is in use.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to on aircraft and at airport.
	Turn off when near explosive materials or liquids.
	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Do not attempt to disassemble your phone.
	Don't rely on your phone as a primary device for emergency communications.