骨传导耳机

使用指南及保修说明
User Manual & Warranty Information

示意图

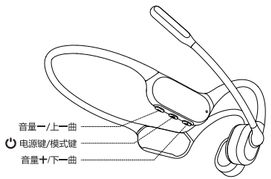

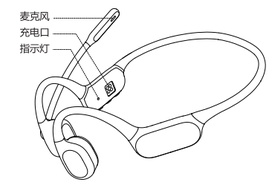

充电

该耳机使用内置可充电电池，首次使用耳机必须给电池充满电。使用中，若语音“电量低”提示音，表示电池电量低，此时需要给耳机充电。

将充电线连接到耳机的磁吸充电口，2小时左右即可充满。充电状态指示灯长亮红灯，充满电常亮蓝灯。

注意 磁吸充电有正负级对应，相互吸附可正常充电，相互排斥则无法充电甚至造成短路。

⚠ 本产品的可充电电池必须妥善处理，以便回收利用。请不要将电池放入火中，以免引起爆炸。

开关机

功能	操作	指示灯
开机	长按“⏻”3-5 秒	灯亮
关机		灯灭

功能操作

功能	状态	操作
音量＋	无线已连接	单击“＋”
音量—		单击“—”
下一曲	播放音乐	长按“＋”2秒
上一曲		长按“—”2秒
暂停播放		单击“⏻”
恢复播放	暂停播放	
接或挂电话	来电时	
拒绝电话		长按“⏻”2秒
手机/耳机听筒切换	通话中	
关/开耳机麦通话		双击“—”

AI智能语音控制

（手机需支持语音唤醒功能）

功能	状态	操作
语音控制	无线已连接	双击“⏻”

说明: 在无线连接状态中，双击电源键，听到提示音后，就可以语音操控手机，节约操作手机的时间，快捷又智能。

例如您可以直接操控耳机问:

现在几点钟.....今天天气.....

导航去深圳世界之窗.....打电话给某某.....

打开网易云音乐.....播放刘德华的冰雨.....下一曲.....音量降低.....

打开美团.....打开喜马拉雅.....打开微信.....播放戏曲.....

智能运动，轻松好玩

指示灯

充电中	常亮红灯
充电完成	常亮蓝灯
搜索配对	红蓝灯交替闪烁
无线音乐播放	蓝灯5秒慢闪

故障及排除

无法开机
确定耳机是否充满电量，按键是否误操作，同时充电激活。

无法无线连接
耳机指示灯是否处于红蓝交替闪阶段，如耳机处于蓝灯呼吸状，表示耳机与其他设备已经连接，需要断开当前连接设备。

无法回连
确定前端（如手机无线）是否正常开启。

耳机音量较小
手机是否需加大音量，需要手机增加或减小音量。确认佩戴方式是否正确。

产品参数

型号：S18M　　无线版本：6.0
充电：≈2h　　电池容量：180mAh
输入：5V/150mA　　有效距离：≈10m
播放：≈5h@60%音量
协议：HFP A2DP AVRCP

注意事项

- 耳机切不可浸入水中，否则极易因短路而损坏。
- 如何长时间不使用，请至少一个月充满一次电。
- 请不要私自拆装产品上任何部件，如发现产品有缺陷请立即停止使用，并联系销售方售后处理。
- 每次运动后请将耳机擦拭干净，特别是充电口位置，要及时处理干净，防止汗水，盐水腐蚀充电口，影响产品寿命。
- 产品远离火源、热源、冷冻源、化学品、严禁暴力撞击拆装挤压产品。
- 请使用输出5V1A及以内的充电头。

合格證
Q.C.Passed

产品保修卡

该卡为产品保修凭证，请妥善保管

产品名称:	产品型号:
购买日期:	客戶名称:
联系方式:	

产品维修记录

日期	不良现象	方案

Bone Conduction Headphones

使用指南及保修说明
User Manual & Warranty Information

Schematic diagram

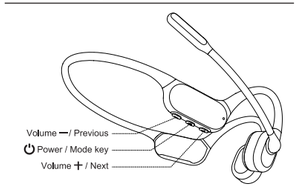

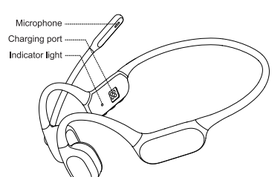

Charge

The headphones uses a built-in rechargeable battery, the first use of the headphones must be fully charged to the battery. In use, if the voice promps "low battery", the battery is low, and you need to charge the headphones.

The charging cable should be connected to the headset's magnetic charging port , about 2 hours to fill . Charging status indicator is red light, full charge often blue light .

Note Magnetic charging has a positive and negative polarity correspondence, mutual adsorption can be charged normally, and mutual repulsion will not charge or even cause a short circuit.

⚠ The rechargeable battery of this product must be properly disposed of for recycling. Please do not place the battery in a fire to avoid explosion.

Power On/Off

Function	Operation	Indicator
On	Press ' ⏻ ' for 3-5s	Light is on
Off		Light is off

Operating instruction

Function	Status	Operation
Volume ＋	Wireless connected	Click ' ＋ '
Volume —		Click ' — '
Next song	Play music	Press ' ＋ ' for 2s
Previous song		Press ' — ' for 2s
Pause		Click ' ⏻ '
Resume	Pause	
Answer the call / Hang up	Phone calls in	
Decline the call		Press ' ⏻ ' for 2s
Switch Earpiece Phone/Headphone	Calling	
Turn Off/On headset mic for calls		Double click ' — '

AI intelligent voice control

(Phone needs to support voice wake-up function)

Function	Status	Operation
Voice control	Wireless connected	Double click ' ⏻ '

In Wireless connection mode, double-click the Power Button. Once you hear the tone, you can voice-control your phone—saving time on manual operation, fast and intelligent.

Indicator

Charging	Normally on red light
Finished charging	Normally on blue light
Search for a match	Red and blue lights flash alternately
Wireless music player	Blue light flashes once every 5 sec.

Troubleshooting

Unable to boot
Determine whether the headset is fully charged, whether the button is misoperated, and then charge and activate.

Unable to connect to Wireless
Whether the headphone indicator is in the alternately flashing stage of red and blue, such as the headphone is in the breathing state of blue light, Indicates that the headset has been connected to other devices and needs to disconnect the current connected device.

Can't back to even
Make sure the front end (e.g., Wireless) is open properly.

Headphones volume is low
Whether the phone increases the volume, the phone needs to increase or decrease the volume. Wearing a way Whether it is right.

Product parameter

Model: S18M　　Wireless: 6.0
Charging time: ≈2h　　Battery: 180mAh
Input: 5V/150mA　　Distance: ≈10m
Operating time : ≈5h@60% Volume
Profile: HFP, A2DP, AVRCP

Care and cleaning

- The product cannot be soaked in water, otherwise it will short-circuit and burn out.
- If not used for a long time, please fully charge it at least once a month.
- Do not disassemble any part of the product without permission. If you find that the earphone is defective, please stop using it.
- Keep the product away from fire, heat, freezing, and chemicals. Do not immerse the earphone in water, and do not wipe it with chemicals such as aromatherapy water.
- Store in a cool, dry place. Do not expose the product to direct sunlight for a long time.
- Please use a USB power adapter with an output of 5V less than 1A.

Certificate of conformity
Q.C.Passed

Product warranty card

This card is a product warranty certificate, please keep it properly

Product name:	Product model:
Purchase date:	Clients name:
Contact:	

Product maintenance records

Date	Bad phenomenon	Solution

75mm

55mm

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.