Smart lock

User's Manual

F06

APP Application Download

The software (iOS version) can be downloaded from the APP store,and the Android version can be downloaded from the application store of Google play.

APP Store　　Google Play

User Registration And Login

User registration:
On the login page, click "Register" in the upper right corner, enter your mobile phone number or email address, set a password and click Register.
1.User can use phone number or email for registration which supported 159 countries.
2.Verification code will send to phone or email.
3.When the registration is successful, it will jump to home page.

User login:
On the login page, enter the account and password, and click "Login"

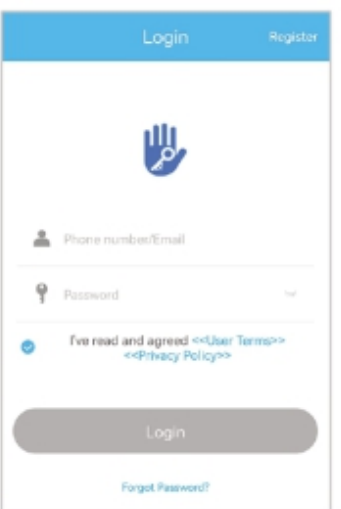

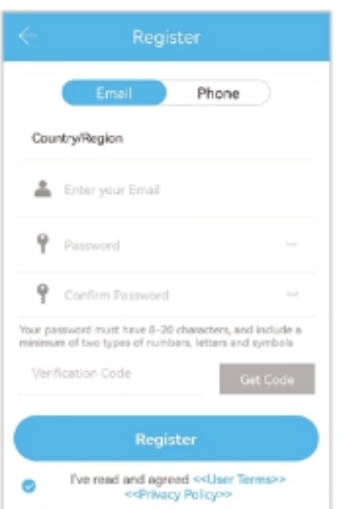

Add Door Lock Device

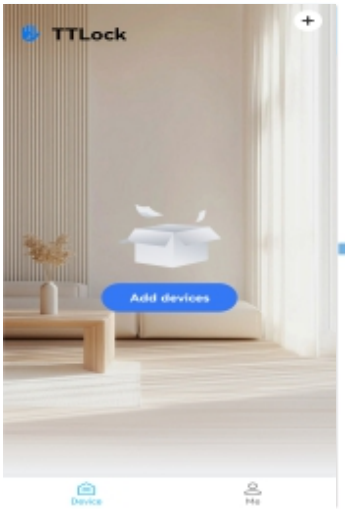

Add devices

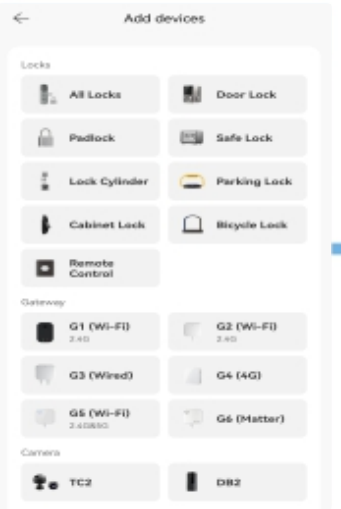

Select All Locks

Light Up Keypad

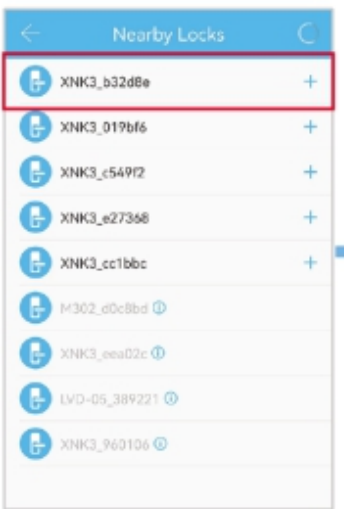

Select Lock

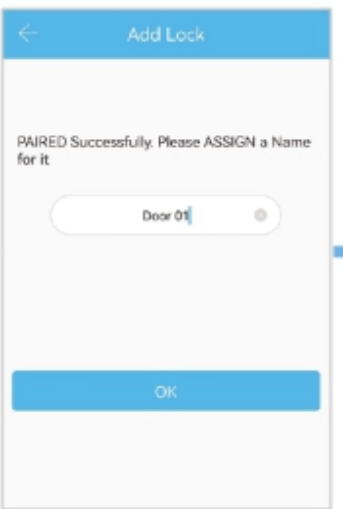

Enter Name

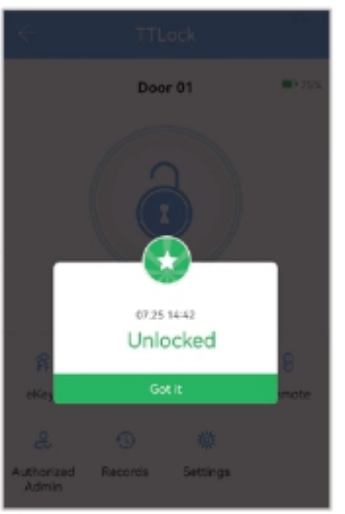

Operation complete

Set Up Fingerprint Unlock

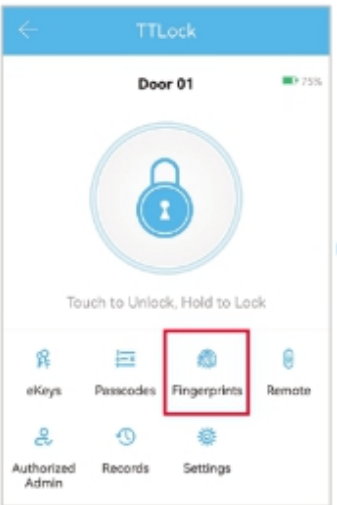

Select on the main page Fingerprints

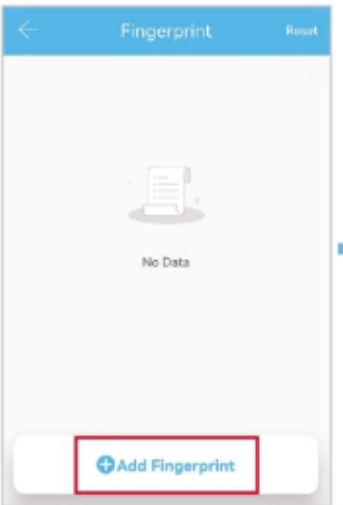

Click Add Fingerprint

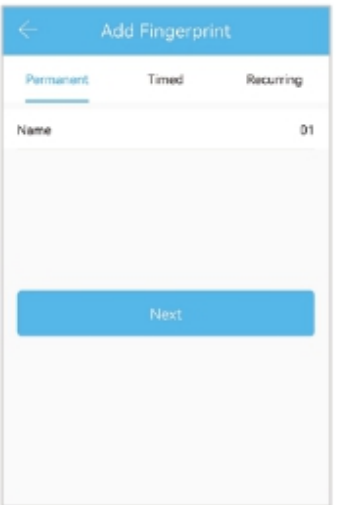

According to the customer's door opening needs Select fingerprint type

Bring your phone close to the door lock device click Start

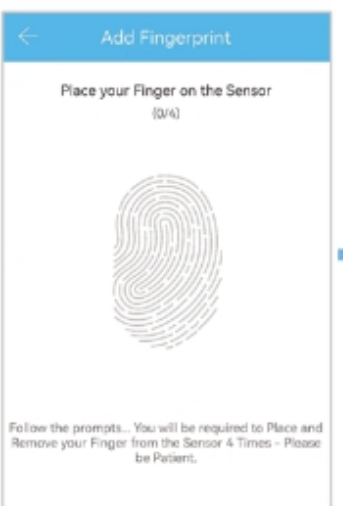

Follow the prompts to collect fingerprints

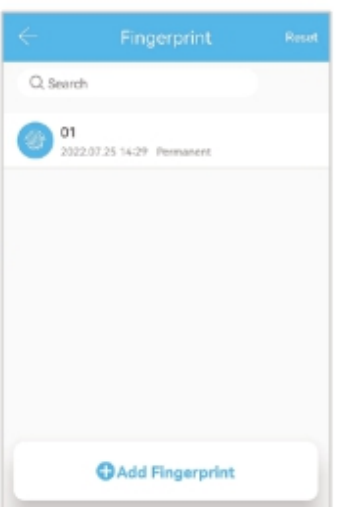

Fingerprint collection completed

Set Password To Unlock

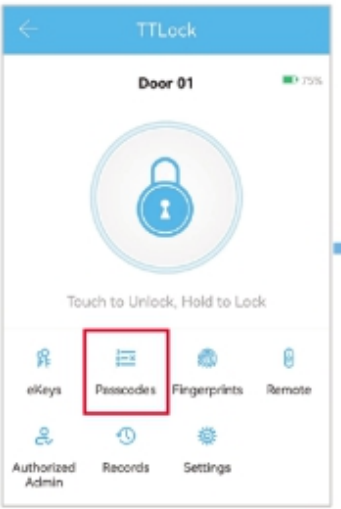

Select on the main page Passcodes

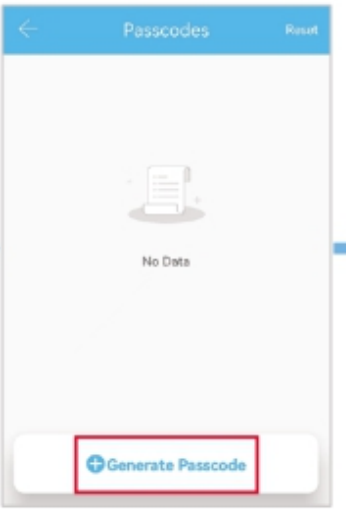

Select Generate Passcode

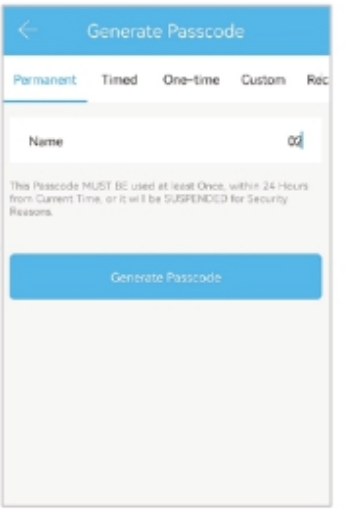

Select the password type according to the use requirements of the door lock

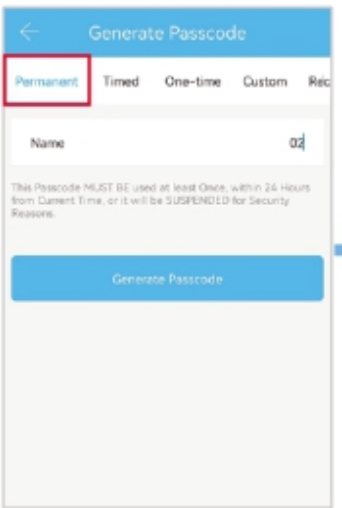

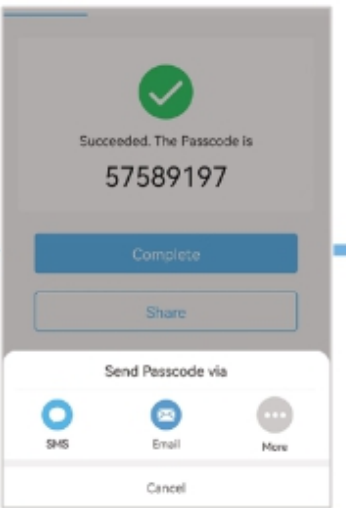

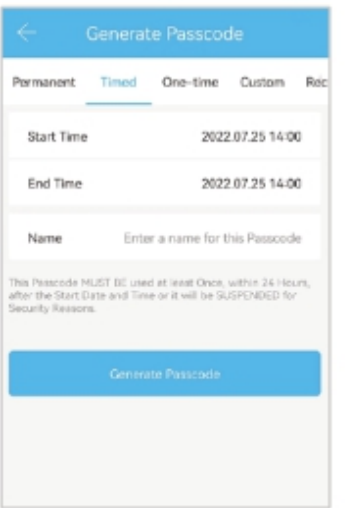

Get Permanent password
1.Select Permanent
2.Name the password
3.Click Generate Passcode
4.Click finish or share to send password

Get Timed password
1.Select Timed
2.Set Start Time or End Time
3.Name the password
4.Click Generate Passcode

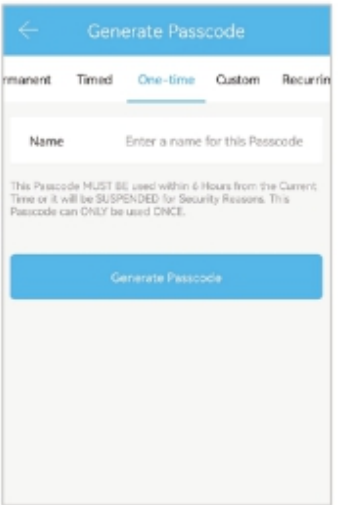

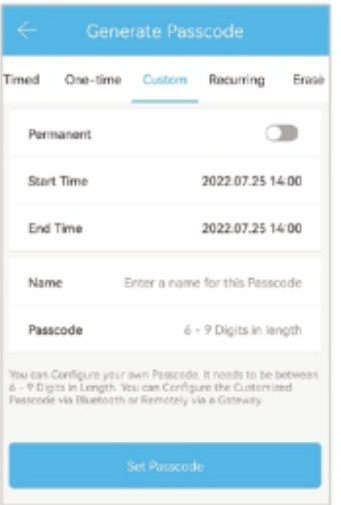

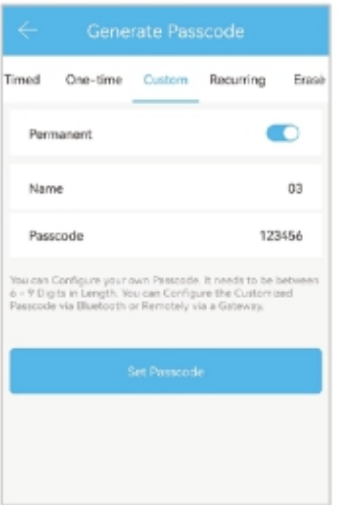

Get One-time password
1.Select One-time
2.Name the password
3.Click Generate Passcode

Get Custom password
1.Select Custom
2.Set Start Time or End Time or enable permanent option
3.Name the password
4.Set a 6-digit password
5.Click Generate Passcode

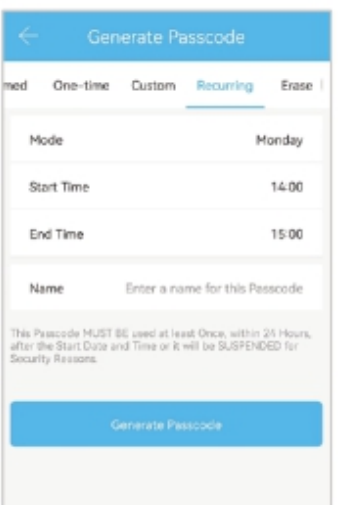

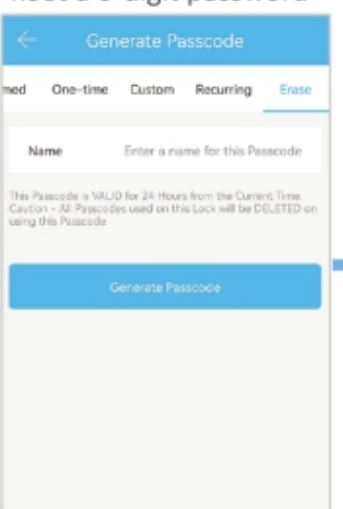

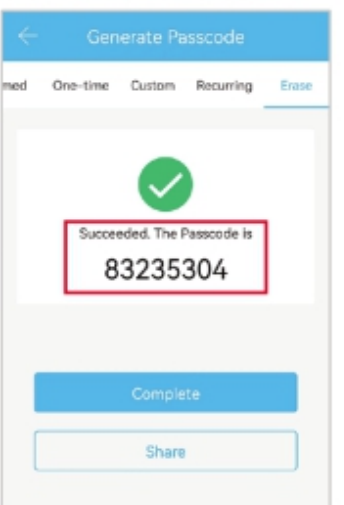

Get Recurring password
1.Select Recurring
2. Set repeat mode
3.Set Start Time or End Time
4.Name the password
5.Click Generate Passcode

Erase password
1.Select Erase
2.Enter the password on the door lock device and clear all passwords

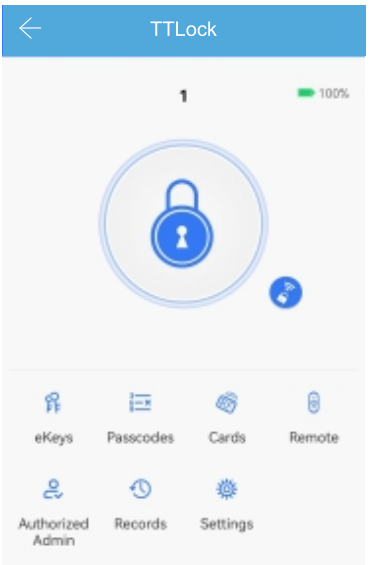

1.Select a card on the homepage

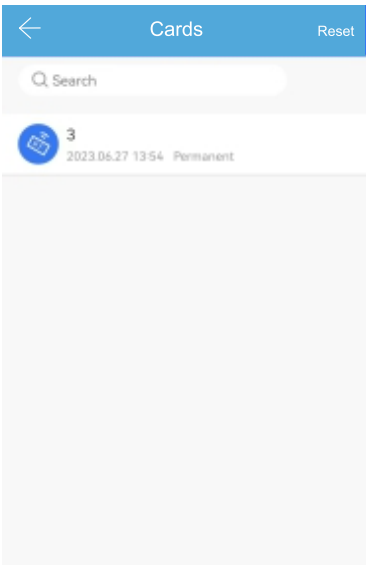

2.Click to add card

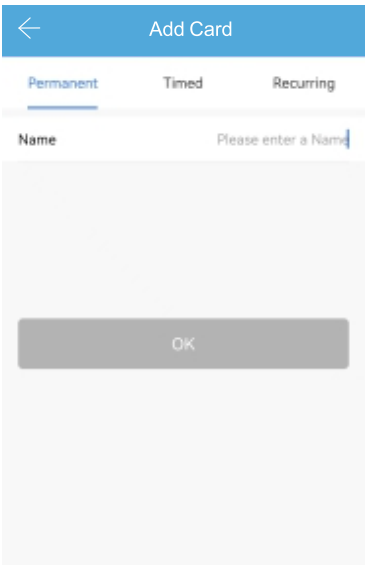

3.Choose the type of card based on the customer's door opening needs

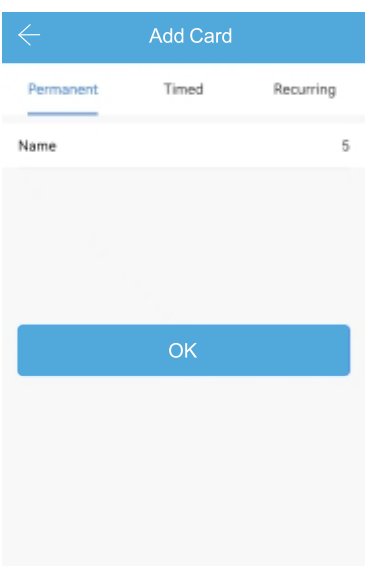

4.Name the card， Click to confirm

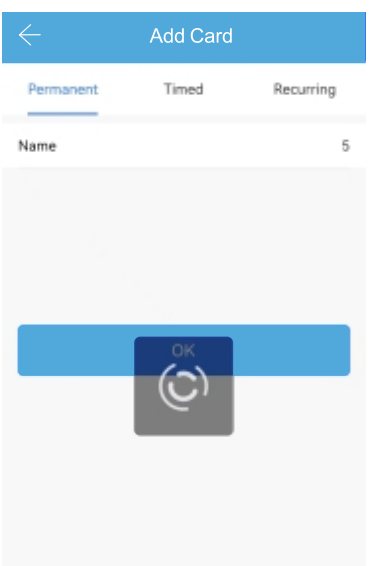

5.Follow the prompts to move the card to the swipe area of the lock

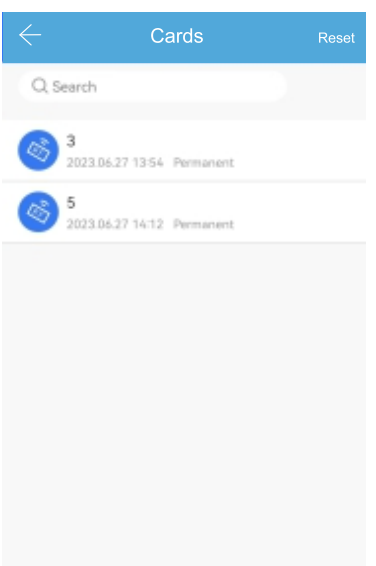

6.Card admission completed

Password sharing

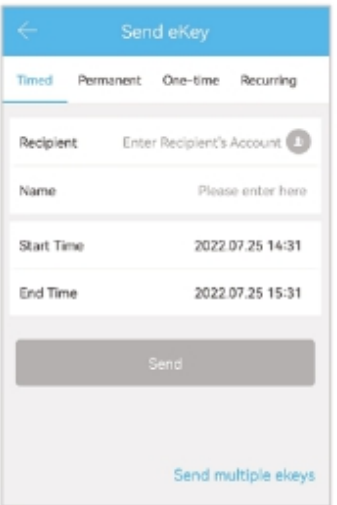

1.Select on the main page eKey
2.Select the type of password to share
3.Choose who to send
4.Click Send

Timed : The validity period can be set, the shortest is 1 hour and the longest is 3 years. If the validity period is less than one year, the time is accurate to the hour; if the validity period exceeds one year, the time is accurate to the month.The password must be used within 24 hours after it takes effect, otherwise it will automatically expire.
Permanent : Set a password that will always be used from now on.The password must be used within 24 hours after it takes effect, otherwise it will automatically expire.
One-time : Can only be used once and is valid for 1 hour.
Recurring : It can be used repeatedly within the specified time interval, and types such as daily cycle, weekday cycle, and weekend cycle can be set.

Add a remote

1.Select on the main page Remote
2.Click to add remote
3.Select remote control type Select
Permanent, Timed, Recurring
4.Name the remote and click Next
5.When the light flashes, click Next
6.Linking device
7.Add finished

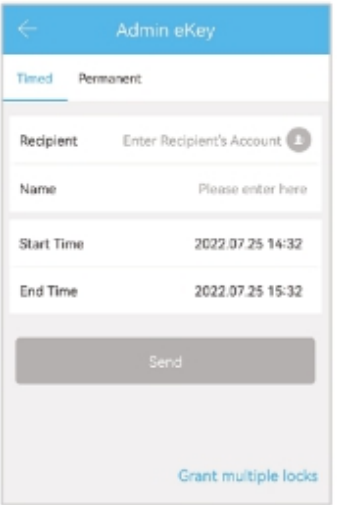

Authorized Admin

1.Select on the main page Authorized Admin
2.Click Add Authorized Administrator
3.Select administrator type
  Timed, Permanent
4.Fill in the account number and name of the other party
5.Set Start Time or End Time
6.Click Send

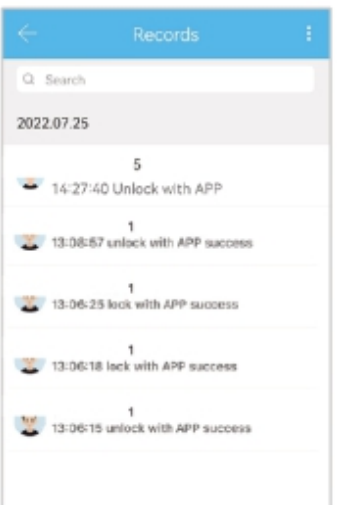

Open door record query

Select on the main page Records
It is also possible to search the door opening records of a single user.

Passage Mode

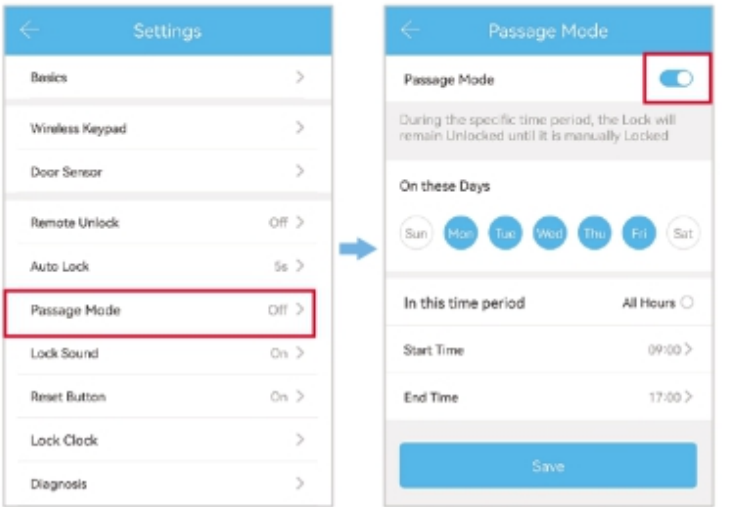

Settings on the APP passage mode

1.Select on the main page Settings
2.Choose Passage Mode
3.Open Passage Mode
4.Set opening hours
5.Click Save

Turn on channel mode by fingerprint

Open the lock by fingerprint (this fingerprint must input at lock), press the digit #123# ,then the passage mode is on, freely to in and out. How to off this passage mode, just scan the fingerprint again,then it will be locked.

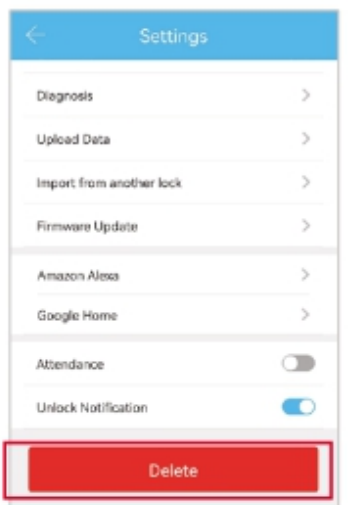

Restore Factory Settings

1.Delete the device at TT lock app, after click the delete,it need fill your register password and also press # at the panel of lock, then app will show deleted successfully.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.