BIGBIG WON

PLAY BIG. WON BIG

© 2022 BIGBIG WON Inc. All rights reserved.
Product may vary slightly from pictures.

BIGBIG WON®

ARMOR-X Pro

BIGBIG WON ELITE APP

Customize the button functions of your ARMORX Pro back button with BIGBIG WON ELITE APP, and a series functions can be set such as Macro, on-board configuration, mapping back buttons, motion control and more.
www.bigbigwon.com/support

BIGBIG WON ELITE APP REQUIREMENTS APP

iOS 13(or higher) / Android 11(or higher)
The ELITE APP needs internet, Bluetooth permission and location permission. Please APP get these permission when install, if there is no prompt please open it in your mobile phone's system or the APP can not connect to your device.

CONNECT BIGBIG WON ELITE APP

1. Ensure that the ARMORX Pro is connected with your controller successfully.
2. Turn on the mobile device's Bluetooth function.
3. Press "ARMORX Pro" to connect your ARMORX Pro.
4. After the connection is successful, you can set many custom functions for your device.

PACKAGE CONTENTS	BIGBIG WON ARMORX Pro Wireless Back Button/USB Wireless Adapter TYPE-C Data Cable/User Manual/Qualified Certification
SUPPORTED CONTROLLER	Xbox Series Controller
SUPPORTED PLATFORM	Xbox Series X | S / Xbox One / Switch / Win 10/11

NOTICE: The audio jack of controller can not be used when using ARMORX Pro

NAME OF EACH PART

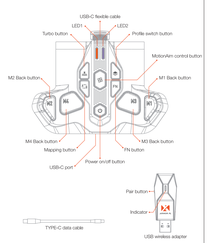

ATTACH THE ARMORX PRO

1. Remove the battery compartment cover off the Controller and attach the ARMORX Pro to the battery compartment.
2. Plug the USB-C flexible cable of ARMORX Pro into the USB port of the Xbox Series Controller.

NOTICE:For best performance, please fully charge the ARMORX Pro before using it for the first time. It takes about 2.5 hours to fully charge a depleted battery.

CONNECT TO THE CONSOLE

The Xbox Series controller with ARMORX Pro can support Xbox/ PC/ Switch originally. Hold the power button to turn on the ARMORX Pro and plug the USB wireless adapter into the console's USB port. The ARMORX Pro will detect the platform automatically.

- LED1 slowly flashes mean that the ARMORX Pro is connecting with the adapter. And the fast flashes mean that the ARMORX Pro is pairing with the adapter. After the connection is successful the LED1 will become always on (The adapter indicator is same).
- After the connection is successful the LED1 and adapter indicator will become always on and switch to the corresponding platform color.
- LED2 flashes mean the connection between ARMORX Pro and controller is unsuccessful and always on means connection success.
- Connect with Switch console need to set: System Settings> Controllers and Sensors> Pro Controller Wired Communication On.

RE-PAIR

ARMORX Pro is already paired with the adapter in the factory. The only situation you need to pair it with is that the connection of ARMORX Pro and adapter is failed. The steps of re-pair:
1. After the ARMORX Pro is on, hold the [Pair] + [Power] until the LED1 fast flashes, the ARMORX Pro enters pairing mode.
2. Plug the adapter into the console and hold the pair button on the adapter until the indicator fast flashes, the adapter enters the pairing mode.
3. When the LED1 and adapter indicator fast flashing means it is pairing. Please wait for it until the LED1 and adapter indicator become always on, the re-pair is successful.

MOTION CONTROL

The ARMORX Pro has motion control function that allows you to use the gyroscope to simulate the action of left/right joysticks in games that do not support motion control originally.
1. **Turn on:** Click once the MotionAim control button [MotionAim]. The LED2 will be purple.
2. **Turn off:** Click the MotionAim control button once again to turn off the motion control. The LED2 will flash twice and turn off.

THE MODES OF MOTION CONTROL

There are three modes of motion control:
Global right joystick simulation, Response right joystick simulation, Global left joystick simulation.
The open methods of three modes:
1. Global joystick simulation:
Hold [M1] + LS to open the global left joystick simulation.
Hold [M2] + RS to open the global right joystick simulation.
2. Response joystick simulation:
Hold [M2] + response button and press RS to open the response left joystick simulation.
- Open the motion control by click once MotionAim control button will open the last mode you have used.

SUPPORT SWITCH ORIGINAL MOTION CONTROL

ARMORX Pro has a built-in 6-axis gyroscope, and the game of Switch console supports native motion control by default. There is no need to turn on Simulated motion control, please make sure Simulated motion control is turned off.

THE CALIBRATION OF GYROSCOPE

Put the Xbox Series controller that is already attached to the ARMORX Pro on the horizontal desk and press the [View] + [Menu] of the Xbox Series controller, The LED2 will slowly flash in purple, The LED2 flashes twice and turns off means the calibration is successful.

MAPPING BUTTON

1. **MAPPING SETTING:**
Press [M1] + [M1/M2/M3/M4] to enter the mapping mode, The LED2 will breathe in green, Then press the target button, the LED2 will flash twice, The mapping is success.
2. **THE BUTTONS SUPPORT MAPPING:**
ABXY/Dpad, LT/RT/LB/RB, M1-M4, RS/LS, menu, view, share.
3. **CANCEL MAPPING:**
Hold the button that needs to be canceled (M1-M4) and double click the [M1], LED2 will flash twice in green means cancel success.
4. **CANCEL ALL MAPPING:**
Double click the [M1], LED2 will flash twice in green means cancel success.

TURBO BUTTON

1. **TURBO SETTING:**
Hold [Turbo] + the button needs TURBO to open the TURBO function, The controller will shake for 0.2 seconds and LED2 will flash twice in orange.
2. **THE BUTTONS SUPPORT TURBO:**
ABXY/Dpad, LT/RT/LB/RB, M1-M4, RS/LS.
3. **CANCEL TURBO:**
Hold the button that needs to be canceled + double click the [Turbo], the LED2 will flash twice in orange.
4. **CANCEL ALL BUTTONS' TURBO:**
Double click the [Turbo], LED2 will flash twice in orange and all TURBO will be canceled.
5. **CHANGE THE FREQUENCY OF TURBO:**
Hold [Turbo] + [-] to change the frequency in 5/s, 10/s, 20/s
(The TURBO frequency won't be changed by on-board profiles).

MACRO RECORDINGN

1. **MACRO RECORDING:**
Press [M1] + (M1/M2/M3/M4), the LED2 will breathe in red the ARMORX Pro enters recording mode, Press the buttons on the controller after the recording is finished click once [M1] LED2 will flash twice means end recording, The LED2 will slowly flash during the MACRO is being executed.
2. **THE BUTTONS SUPPORT RECORDING:**
ABXY/Dpad, LT/RT/LB/RB, M1-M4, RS/LS, joystick.
3. **CANCEL MACRO:**
Hold the button need to be canceled (M1-M4) and double click the [M1], LED2 will flash twice in red means cancel success.
4. **CANCEL ALL MACRO:**
Double click the [M1], LED2 will flash twice in red means cancel success.

ADJUSTMENT OF RUMBLE MOTOR

1. Press [M1] + [-] to change the vibration intensity of trigger motor, 4 gears vibration intensity can be changed cyclically: strong, medium, weak, off.
2. Press [M1] + [+] to change the vibration intensity of handle motor, 4 gears vibration intensity can be changed cyclically: strong, medium, weak, off.

ON-BOARD PROFILE

ARMORX Pro has 3 on-board profiles can be cycle switched by click the [Profile].
The color of LED1 on the left side shows different profiles.
1. Orange is the first profile.
2. Green is the second profile.
3. Blue is the third profile.

BATTERY

The ARMORX has 1300mAh to satisfy 10 hours using, The biggest factor affecting battery life is the vibration intensity of motor, The high-frequency vibration will greatly reduce battery life.
The charging power is 5V1A, and it will take 2 hours to fully charge.
1. **Low battery:** When the battery is too low, the controller will vibrate 3 times and the LED1 will flash quickly in red, It will cycle every 5 minutes.
2. **Charging:** When the ARMORX Pro is charging LED1 will be always on in red, And it will be always on in green after fully charged.

DETAILED FUNCTIONAL OPERATION INSTRUCTIONS

Please access "BIGBIG WON Official Website>Support" to check the instruction
https://www.bigbigwon.com/support

Scan the QR code to watch video tutorial

Visit the official support page for a detailed video tutorial
www.bigbigwon.com/support
If you have any questions or issues, please submit a support request through the ways below:
amazon AMAZON Product page> Seller profile> "Ask a question"
Customer Service EMAIL: support@bigbigwon.com

BIGBIG WON SUPPORT

WELCOME TO THE BIGBIGWON COMMUNITY

The BIGBIG WON community is built to connect those who seek the winning edge, Join us Discord and Follow our social channels for the latest offerings, exclusive event coverage, and opportunities to some BIGBIG WON hardwares.

BIGBIG WON DISCORD

@BIGBIG WON

BIGBIG WON ELITE APP

BIGBIG WON APP では、ゲームを作成したり、オンボードメモリプロファイルを調整したり、ボタン機能の切替したり、モーションエイムの感度調整したりすることで、お使いのBIGBIG WONデバイスを完全にカスタマイズできます。
jp.bigbigwon.com/support

BIGBIG WON ELITE APP動作要件

iOS 13以降 / Android 11以降
インターネット接続 (APPインストール用)

BIGBIG WON ELITE APPの接続方法

1. ARMORX Proが正常に接続されている状態（オン）を確認します。
2. モバイルデバイスのBluetoothをオンにして、「ARMORX Pro」を検索して、お使いのモバイルデバイスに接続します。
3. 接続完了 ELITE APP を開き、豊かな機能プロファイルをカスタマイズできます。
- アプリを使用になる際は、iOS 13以降 / Android 11以降およびインターネット接続環境（APPインストール用）が必要となります。

パッケージ内容	BIGBIG WON ARMORX Pro / ワイヤレスUSBアダプター TYPE-C USBケーブル / 取扱説明書
対応コントローラー	Xbox Series コントローラー
対応コンソール	Xbox Series X|S / Xbox One / Switch / Windows 10/11

ご注意:ARMORX Proを使える場合は、Xbox Series コントローラーのオーディオ一体型でさらなるヘッドオーディオ機能を使用しない場合は、ワイヤレスヘッドセットを選択してください。

各部の各称

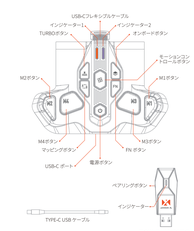

装着方法

1. Xbox Series コントローラーのバッテリーコンパートメントカバーを取り外します。
2. ARMORX Proをバッテリーコンパートメントに取り付けた、しかりと固定されていることを確認し、さらにUSBフレキシブルケーブルを Xbox Series コントローラーの USBポートに挿入します。

ご注意:ARMORX Proを初めてご使用になるとき、最高のパフォーマンスを発揮するよう、事前に充電をご実施ください。

コンソールへの接続

ご注意：Switch と接続する前に、設定＞コントローラーとセンサー＞Proコントローラーの有線通信をオンにしてください。有線通信をオンに設定しませんと、Switch でお使えできません。
ARMORX Pro の電源ボタンを3秒間押し続けて、オン状態になりますとワイヤレス USB アダプター をコンソールの USB ポートに差し込みさえ、自動的に接続します。
★ワイヤレス USB アダプター と接続中は、インジケーター 1が ゆっくり点滅します。
ワイヤレス USB アダプター とペアリング中は、インジケーター 1が速く点滅します。
ワイヤレス USB アダプター と接続が成功する場合は、インジケーター 1が点灯になります。(ワイヤレス USB アダプターインジケーター 2 消灯)
★コンソールと接続が完了する場合は、インジケーター 1とワイヤレス USB アダプター インジケーターが点灯になり、ライトの色も異なるコンソールに従って変化します。
★コントローラーと接続が失敗する場合は、インジケーター 2 が点滅します。

再ペアリング

一般的な場合は、ペアリングの必要がありません。ワイヤレス USB アダプターをコンソールに差し込むとお使えできます。正常に使えてできない場合は、再ペアリングの必要があります。
1. ARMORX Proがオン状態で、FNボタン [FN] とマッピングボタン [M1] を同時に長押し。
2. ワイヤレス USB アダプター をコンソールの USB ポートに差し込んで、ペアリングボタンを長押して、ワイヤレス USB アダプターインジケーターが速く点滅するとペアリングモードになります。
3. ARMORX Proとワイヤレス USB アダプター のインジケーターが速く点滅して、ペアリングができ、シンキを待って、インジケーター 1とワイヤレス USB アダプター が同時に点灯し、再ペアリングが成功です。

モーションコントロール機能

BIGBIG WON は、モーションエイム機能を実現した GYROCON+ テクノロジーを開発。使用中では、コントローラーを動かさなくても、スティックを操作できる機能です。正確なモーションコントロールアシストによりゲーム程度早く照準を合わせることができ、特にFPSゲームとレーシングゲームの操作性を飛躍的に優べ。

1. モーションコントロールオン：モーションコントロールボタン [MotionAim] を押して、インジケーター2がオレンジ色で点灯すると、モーションコントロール機能がオンになります。
2. モーションコントロールオフ：モーションコントロール機能をオン状態で、モーションコントロールボタン [MotionAim] を押して、インジケーター2がオレンジ色で点灯すると、モーションコントロール機能がオフになります。
3. モーションコントロールモード：モーションコントロール機能をオン状態で、モーションコントロールボタン [MotionAim] を押して、インジケーター2がオレンジ色で点灯すると、モーションコントロールモードがあります。
1. モーションコントロールボタン [MotionAim] を押しながら、L3ボタンを押すと、右ジョイスティックモーションコントロールモードがオンになります。
2. モーションコントロールボタン [MotionAim] を押しながら、R3ボタンを押すと、左ジョイスティックモーションコントロールモードがオンになります。
3. いずれか設定したいボタン（M1 / M2 / M3 / M4）を押しながら、モーションコントロールボタン [MotionAim] と R3ボタンを同時に押すと、右ジョイスティックレスポンスモーションコントロールモードがオンになります。
モーションコントロールモードを使用中でモーションコントロールボタンを押して、オフになります。もう一度モーションコントロールボタンを押して、オンになります。

Switch加速度センサーをサポート

ARMORX Pro は精ジャイロ/加速度センサーを搭載。Switch のゲームをもっと"感じる"になります。
ご注意：本機能は、モーションコントロール機能とは異なるものです。本機能を使用する場合は、モーションコントロール機能をオフすることを確認してください。

ジャイロ/加速度センサー校正

Xbox Series コントローラーを水平面に置き、[View] と [Menu] 同時に押して、インジケーター2がオレンジ色でフリーシングします。インジケーター2がパープル色で2回点滅すると、校正完了です。

M1 / M2 / M3 / M4 ボタン機能の設定

1. 機能を設定：
マッピングボタン [M1] を押しながら、M1 / M2 / M3 / M4 ボタンを同時に押すと、インジケーター2がグリーン色でフリーシングします。ボタン設定モードになります。ターゲットボタン を押すと、インジケーター2がグリーン色で2回点滅すると、機能設定完了です。
2. 機能をキャンセル：
機能設定完了の M1 / M2 / M3 / M4 ボタン を押しながら、マッピングボタン [M1] をダブルクリックすると、インジケーター2がグリーンで2回点滅すると、対応M1 / M2 / M3 / M4 ボタンのヘアパリガーモードがキャンセルされます。
3. 全ボタンの機能をキャンセル：
マッピングボタン [M1] をダブルクリックすると、インジケーター2がグリーン色で2回点滅すると、全M1 / M2 / M3 / M4 ボタンの機能がキャンセルされます。

TURBO機能

1. TURBO を設定：
TURBO ボタン [Turbo] を押し、しながら、TURBO させたいボタンを押して、インジケーター2がオレンジ色で点滅すると、対応ボタンの TURBO 機能がオンになります。
2. TURBO をキャンセル：
TURBO ボタン [Turbo] を押し、しながら、TURBO をキャンセルさせたいボタンを押して、インジケーター2がオレンジ色で2回点滅すると、対応ボタンの TURBO 機能がキャンセルされます。
3. 全ボタンのTURBO をキャンセル：
TURBO ボタン [Turbo] をダブルクリックすると、インジケーター2がグリーン色で2回点滅すると、全ボタンの機能がキャンセルされます。
4. FNボタン [FN] を押しながら、方向キー の [↑] を押すと、TURBO のスピードを調節できます。TURBOのスピードは毎秒5 / 10 / 20回。このスピードをサイクルします。
- TURBO 機能を設定可能のボタン：B / X / Y アクションボタン、LB / RB / LT / RT ボタン、方向キー、L3 / R3ボタン、左 / 右ジョイスティック。
1. マクロ をレコード：
FN ボタン [FN] を押し、しながら、M1 / M2 / M3 / M4 ボタンを同時に3秒間押し続けて、インジケーター2がレッド色でフリーシングすると、レコードモードになりますシーケンスと間隔をレコードする。FN ボタン [FN] をダブルクリックします。インジケーター2がレッド色で二回点滅したら、レコード完了です。
2. マクロをキャンセル：
マクロ をキャンセルさせたいボタンを押しながら、FN ボタン [FN] をダブルクリックします。インジケーター2がレッド色で二回点滅して、対応ボタンのマクロ機能がキャンセルされます。
3. 全ボタンのマクロをキャンセル：
FN ボタン [FN] をダブルクリックして、インジケーター2がレッド色で二回点滅すると、全ボタンのマクロ機能がキャンセルされます。

オンボードプロファイル切り替え

好みの機能設定を最大3セットまでARMORX Pro 内のオンボードに保存でき、オンボードボタン [Profile] を押して、三段階に切り替えることができます。インジケーター1は常にあるオンボードプロファイルに従って、異なる色を表示します。
1. オレンジ色はオンボードプロファイル1を表示します。
2. グリーン色はオンボードプロファイル2を表示します。
3. ブルー色はオンボードプロファイル3を表示します。

モーター振動の強さの調節

1. FNボタン [FN] を押しながら、方向キー の [←] を押すと、ハンドル部分モーター振動の強さを調節できます。振動の強さは強(デフォルト)中/弱/オフで、組計4レベルでサイクルします。
2. FNボタン [FN] を押しながら、方向キー の [→] を押すと、ハンドル部分モーター振動の強さを調節できます。振動の強さは強(デフォルト)中/弱/オフで、組計4レベルでサイクルします。

バッテリー / 充電

ARMORX Pro を初めてご使用になるときは、最高のパフォーマンスを発揮できるよう、事前に完全に充電してください。少しかなりバッテリーは、約 2 時間で完全に充電できます。ARMORX Pro を長期間使用しているかった場合は、使用前に再充電していただくと良好であります。バッテリーを充電するためのキットなり電力が弱くれるように、ARMORX Pro を USB 接続する必要があります。ARMORX Pro をキーボードや周辺機器に付属の、電源がない USB ハブまたは USB ポートに接続すると、バッテリー充電プロセスが重複を受けることがあります。不明な場合は、ARMORX Pro をご使用のコンソールの USB ポートに直接接続することをお勧めします。
充電時間: 約3時間
推奨電圧: 5V1A
1. バッテリー残量が15%以下四る場合は、コントローラーが回振動し、インジケーター1がレッド色で点滅します。（毎30分間）
2. 充電中は、インジケーター1がレッド色で点灯します。バッテリー残量が15%以上 / 充電完了100%充電済みの場合は、インジケーター1がグリーン色で点灯します。

QRコードをスキャンしてビデオチュートリアルをご覧ください

公式サポートページ、詳しいビデオチュートリアルをご覧ください
jp.bigbigwon.com/support

初期不良やご質問・ご不明な点などございましたら、お気軽にお問合せください：
amazon AMAZONお品ページ>出品者プロフィール>「質問する」
お客様サービスEMAIL: support@bigbigwon.com

BIGBIG WON SUPPORT

BIGBIG WON コミュニティへようこそ

BIGBIG WON コミュニティは、勝利を求めるゲーマー達を繋ぐためにつくる応援です。BIGBIG WON Discordを参加し、SNSをフォローして、BIGBIG WON製品の最新情報と独占イベントを入手でき、最新レッドエクルビュー権を取得可能です。

BIGBIG WON DISCORD

@BIGBIG WON JP

墨将助手APP

自定义控制 ARMORX Pro 支持固键;
包含按键映射, 可设置宏, 电机配置, 连发设置, 模拟体感控制等系列功能。
www.bigbigwon.cn/support

APP运行要求

需iOS 13(或更高版本) / Android 11(或更高版本)；
APP运行需互联网环境, 蓝牙权限, 位置权限, 安装时请允许APP的权限获取。若安装时未提示权限获取, 请安装完成后在手机设置上动开启, 否则将无法与设备正常连接与实现功能。

APP连接方法

1. 确认ARMORX Pro 处于正常连接状态。
2. 打开移动设备上的蓝牙。
3. 打开APP后, 点击"ARMORX Pro"设备进行搜索连接。
4. 连接成功后, 您可以为 APP 对您的设备进行丰富的自定义功能设置。

包装清单	ARMORX Pro无线手柄*1 / 2.4G接收器*1 / TYPE-C数据线*1 说明书*2 / 合格证*1
支持手柄	Xbox Series 手柄
支持主机	Xbox Series X|S / Xbox One / Switch / Win 10/11

注意:使用ARMORX Pro 无线手柄后, 无法使用3.5mm音频口, 建议使用无线耳机

部件示意

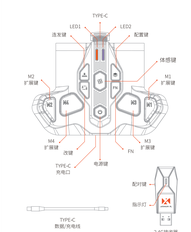

安装背键

1.把手柄电池盖,将ARMORX-Pro 安装在电池仓中, 并确保其牢固固定。
2.将ARMORX-Pro的连接线转接插入 Xbox Series 手柄的USB口。

注意:为达到最佳使用效果,请在首次使用前充电2小时, 使其完全充满电。

开机与连接

装配ARMORX-Pro的Series手柄将可直接支持Xbox(pc)/switch三大平台。
长按ARMORX-Pro电源键开机, 将接收器插入主机USB口, ARMORX-Pro会自动识别所在平台并切换至对应模式。
- LED1指示灯慢闪, 代表ARMORX-Pro处于与接收器回连的状态;快闪代表其处于与接收器配对的状态;长亮则代表其与接收器连接成功(接收器指示灯同理)。
- 连接成功后LED1指示灯与接收器指示灯长亮, 并将切换为对应所示颜色。
- LED2指示灯闪烁, 代表ARMORX-Pro与手柄通信不成功。长亮则代表通信成功。
- 连接Switch主机需开启"设置＞手柄与感应器＞Pro手柄的有线连接"。

重新配对

ARMORX-Pro与接收器出厂时已完成配对, 即插即用。如出现连接异常, 则需重新配对, 以下为重新配对步骤:
1.ARMORX-Pro开机后, 按住 [Pair] + [Power], 直至LED1指示灯快闪,代表进入配对状态。
2.将接收器插入主机, 长按接收器上的配对按钮, 直至接收器指示灯快闪,代表接收器进入配对状态。
3.此时ARMORX-Pro与接收器指示灯都处于快闪状态, 代表正在配对。
等待片刻, LED1与接收器指示灯均长亮, 代表配对成功。

模拟体感

ARMORX-Pro搭载模拟体感技术, 可以通过陀螺仪模拟手柄的左右摇杆来实现对游戏的体感控制,从而达到新的游戏操作体感。
1. **开启:** 单击体感键 [M] 开启模拟体感, 同时LED2指示灯紫色,灭灯则表示关闭。
2. **关闭:** 再次单击则关闭模拟体感,LED2指示灯紫色灭灯后熄灭。

体感模式

模拟体感一共分为三种模式,"左摇杆全屏体感"、"右摇杆全屏体感"与"右摇杆响应式体感",三种体感模式的开启方式如下:
1. 按住 [M] + 左摇杆下压(LS) , 开启"左摇杆全屏体感模式"
2. 按住 [M] + 右摇杆下压(RS) , 开启"右摇杆全屏体感模式"
3. 按住 [M] + "需设定按键" + 右摇杆下压（RS）, 开启"右摇杆响应体感模式"
- 单击体感键将关闭模拟体感,再次单击则重新开启模拟体感,自动继承上一次的体感模式。

陀螺仪校准

将装配有ARMORX-Pro的手柄静置于水平桌面,按下Series手柄的" [View] + [Menu] ", LED2常色呼吸,待LED2常亮闪动熄灭,即代表陀螺仪校准成功。

Switch原生体感支持

ARMORX-Pro内置6轴陀螺仪, Switch主机默认支持游戏原生体感控制,无需开启模拟体感,请确认模拟体感处于关闭状态。

改键设置

装配ARMORX-Pro的手柄将支持改键,可以将手柄本身的按键映射到背键上,快捷操作位置将M1 / M2 / M3 / M4的改键, 使用APP即开可设置将A/B/X/Y、↑/↓/←/→、LT/RT/LB/RB、RS/LS,LB的快键操作。
1. **改键设置：**按下 [M] + (M1/M2/M3/M4) , LED2绿色呼吸, 表示进入改键状态;再次按下需要映射到M1/M2/M3/M4的正面按键, LED2绿色灭灯, 表示改键成功。
2. **清除改键：**按住"所需取消改键的按键（M1-M4）",灭灯, LED2绿色灭灯, 表示取消成功。
3. **清除所有：**双击 [M], LED2指示灯绿色灭灯, 表示全部取消。

连发设置

装配ARMORX-Pro的手柄将支持连发功能,可连发的按键有A/B/X/Y、↑/↓/←/→、LT/RT/LB/RB、M1-M4、RS/LS。
1. **连点设定：**按住 [M] + "所需设定的按键", LED2指示灯橙色闪烁,代表开启成功。解除连发时,LED2会根据连发频率闪动。
2. **连点关闭：**按住"所需取消连发的按键", 同点 [M], LED2指示灯橙色闪动,代表取消成功。
3. **取消所有：**双击 [M], LED2指示灯橙色闪动,代表全部取消成功。
4. **频率调整：**按住 [M] + 十字位置S5、10/s、20/s三种频率可切换。
- 连发频率不受配置影响,全配置通用。

宏录制

装配ARMORX-Pro的手柄将支持宏录制功能,支持录制的按键有A/B/X/Y、↑/↓/←/→、LT/RT/LB/RB、RS/LS,操作八方向;每套宏都必须绑定一颗背键作为触发开关。
1. **录制宏：**长按 [M] + (M1/M2/M3/M4) 3秒, LED2红色呼吸,表示进入宏录制状态。按手柄按键的宏录制,待录制完成后单击 [M], LED2红色双闪,代表结束录制。宏信息将自动保存;LED2会红色闪烁直到灯结束。
2. **清除宏：**按住"所需取消宏的按键（M1-M4）",灭灯 [M], LED2红色双闪,表示取消成功。
3. **清除所有：**双击 [M], LED2指示灯红色双闪,表示全部取消。

震动调节

装配ARMORX-Pro的手柄将可以全动调节手柄握把动态与扳机马达的震动强度,一共有三种强度以及关闭选项可以选择。
1. 按下 [M] + [-] ,可对扳机马达的震动进行强、中、弱、关闭四档循环切换;
2. 按下 [M] + [+] ,可对握把马达的震动进行强、中、弱、关闭四档循环切换。

配置切换

ARMORX-Pro 一共可以储存三套检配置,通过单击 [-] 来循环切换三套配置:三套配置对应LED指示灯的三种颜色。
1. LED1指示灯橙色代表处于第一套配置;
2. LED1指示灯绿色代表处于第二套配置;
3. LED1指示灯蓝色代表处于第三套配置。

电池

ARMORX-Pro 配备1300mAh锂电池, 可满足10个小时左右的正常使用,影响续航的最大因素为马达震动的强度与频率,高频震动是大幅耗减续航。
长电功率为5V1A, 电量耗尽时充电完全充满电大概需要2个小时。
1. **低电：**当电量过低时, 手柄会连续震动3次, 且LED1红色快闪, 每5分钟循环一次。
2. **充电：**充电时,LED1红色长亮, 充满后绿色长亮。

详细功能操作说明

请访问官网查阅使用教程：查询官网 支持页面
https://www.bigbigwon.cn/support

请扫码看视频教程
获得技术支持

我们将在这里为您提供最好产品的支持与服务:
视频教程、升级工具、APP、电子说明书、FAQ

官网在线支持中心

▲ NOTICE Please read this Precautions carefully.

- COCHAIN (WHL) PARTS Keep out of reach of children under the age of 3. Seek immediate medical attention if ingestion occurs.
- DO NOT use the product near fire.
- DO NOT place the product in very high temperatures.
- DO NOT leave the product in high or low humidity environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT disassemble the product, it may cause malfunctions.
- DO NOT strongly twist or pull cable wire.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals, cleaning agents, gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage caused by improper use or modification.
- DO NOT lock directly at the optical light, it might damage your eyes.
- If you have any quality concerns or suggestions, please contact BIGBIG WON or your local distributor.
- PS5, PS4, PS3, DualSense and DualShock are registered trademarks or trademarks of Sony Computer Entertainment Inc. Windows, Xbox One, Xbox and Xbox Series X are registered trademarks of Microsoft Inc. Switch and Nintendo Switch are registered trademarks of Nintendo. Steam is a trademark of Valve Corporation. All of the respective names, Photos and illustrations are not binding. Contents, designs and specifications are subject to change without notice. Some of the contents may differ from the product in some respects. The product is not distributed under an official license and it may not fully comply with the specifications of the original hardware. The product is not manufactured by Sony Computer Entertainment Inc or Microsoft Inc or Nintendo Inc.

▲ ご注意:保護者の方へぜひお読みください。

- ゴムいな保護品が多すぎて誤飲事故の手段に使用されないようにしてください。
- 高温四方の場所にご使用ならびにご保管しないでください。一番あるいは電池・ドライ湿度に相当してください。
- 火災の点火場所で分解的に使用しないでください。
- 強い衝撃を与えたり、落下させたりしないでください。
- 電源電圧をコンセントにご使用ないでください。
- 表面に物を当てたり、落下させるなど強い衝撃を与えないでください。
- 結晶の調節しなければ、ドライ湿度が高度で強くないでください。
- ケーブル線を強く曲げたりひっぱったりしないでください。
- 分解・改造・修理しないでください。
- ベンジン、シンナーなどの薬品使用しないでください。
- 分解や修理、改造は絶対にしないでください。
- 本製品は、ゲーム目的にしないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
- 光学式ライトの光を直接見ないでください。強い光より、目を傷める可能性があります。
- PS5, PS4, PS3, DualSense および DualShock は Sony Computer Entertainment Inc の登録商標または商標です。Windows, Xbox One, Xbox および Xbox Series X は Microsoft の登録商標です。Switch, Switch Nintendo Switch は、Nintendo の登録商標です。Steam は Valve Corporation の商標です。すべての名称、写真およびイラストは拘束力がありません。内容、デザインおよび仕様は予告なしに変更される場合があります。一部の内容は、この製品とは異なる場合があります。
- この製品は、Sony Computer Entertainment Inc、Microsoft Inc または Nintendo Inc によって製造されたものではありません。

FCC Caution
(1) § 15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
§ 15.21 Changes or modification warning
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

深圳市战歌智控科技有限公司