BIGBIG WON

CHOCO可可龙(C2 Lite)

附件名称	设计师
CHOCO	徐海洲

基本印刷工艺要求

材质工艺：80G书写纸+单黑印刷+骑马订/32P
成品尺寸：120x80mm

其他注意事项

/

版本	变更表述	变更日期
V1.0	初始发行	2023/08/24

封底　　封面

英文　　中文　　日文

1
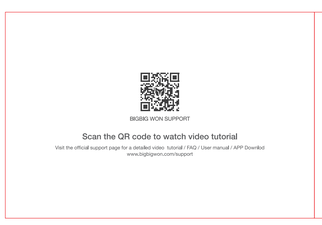

2 ENGLISH
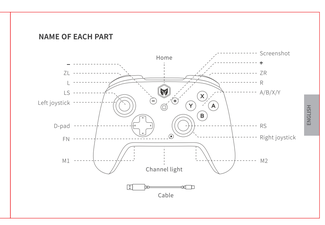

3 ENGLISH
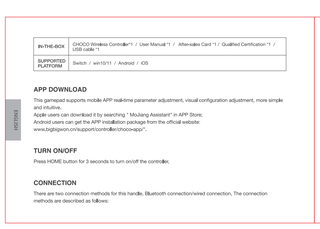
IN-THE-BOX	CHOCO Wireless Controller*1 / User Manual *1 / Afterwsales Card *1 / Qualified Certification *1 / USB cable *1
SUPPORTED PLATFORM	Switch / win10/11 / Android / iOS

APP DOWNLOAD
This gamepad supports mobile APP real-time parameter adjustment, visual configuration adjustment, more simple and intuitive.
Apple users can download it by searching " MoJiang Assistant" in APP Store;
Android users can get the APP installation package from the official website:
www.bigbigwon.cn/support/controller/choco-app".

TURN ON/OFF
Press HOME button for 3 seconds to turn on/off the controller.

CONNECTION
There are two connection methods for this handle, Bluetooth connection/wired connection. The connection methods are described as follows:

4 ENGLISH
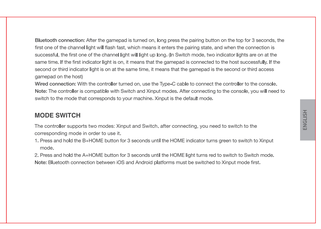
Bluetooth connection: After the gamepad is turned on, long press the pairing button on the top for 3 seconds, the first one of the channel light will flash fast, which means it enters the pairing state, and when the connection is successful, the first one of the channel light will light up long. In Switch mode, two indicator lights are on at the same time, If the first indicator light is on, it means that the gamepad is connected to the host successfully. If the second or third indicator light is on at the same time, it means that the gamepad is the second or third access gamepad on the host.
Wired connection: With the controller turned on, use the Type-C cable to connect the controller to the console, Note: The controller is compatible with Switch and Xinput modes. After connecting to the console, you will need to switch to the mode that corresponds to your machine. Xinput is the default mode.

MODE SWITCH
The controller supports two modes: Xinput and Switch, after connecting, you need to switch to the corresponding mode in order to use it.
1. Press and hold the 8s+HOME button for 3 seconds until the HOME indicator turns green to switch to Xinput mode.
2. Press and hold the A+HOME button for 3 seconds until the HOME light turns red to switch to Switch mode.
Note: Bluetooth connection between iOS and Android platforms must be switched to Xinput mode first.

5 ENGLISH
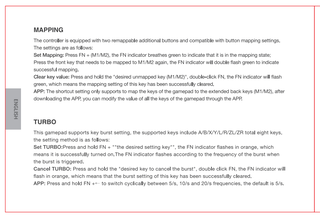
MAPPING
The controller is equipped with two remappable additional buttons and compatible with button mapping settings, The settings are as follows:
Set Mapping: Press FN + (M1/M2), the FN indicator breathes green to indicate that it is in the mapping state; Press the front key that needs to be mapped to M1/M2 again, the FN indicator will double flash green to indicate successful mapping.
Clear key value: Press and hold the "desired unmapped key (M1/M2)", double+click FN, the FN indicator will flash green, which means the mapping setting of this key has been successfully cleared.
APP: The shortcut setting only supports to map the keys of the gamepad to the extended back keys (M1/M2), after downloading the APP, you can modify the value of all the keys of the gamepad through the APP.

TURBO
This gamepad supports key burst setting, the supported keys include A/B/X/Y/L/R/ZL/ZR total eight keys, the setting method is as follows:
Set TURBO:Press and hold FN + "+the desired setting key+", the FN indicator flashes in orange, which means it is successfully turned on,The FN indicator flashes according to the frequency of the burst when the burst is triggered.
Cancel TURBO: Press and hold the "desired key to cancel the burst", double click FN, the FN indicator will flash in orange, which means that the burst setting of this key has been successfully cleared.
APP: Press and hold FN + - to switch cyclically between 5/s, 10/s and 20/s frequencies, the default is 5/s.

6 ENGLISH
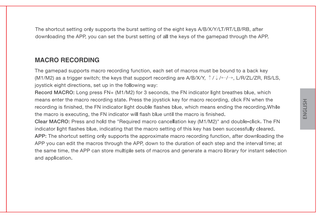
The shortcut setting only supports the burst setting of the eight keys A/B/X/Y/LT/RT/LB/RB, after downloading the APP, you can set the burst setting of all the keys of the gamepad through the APP.

MACRO RECORDING
The gamepad supports macro recording function, each set of macros must be bound to a back key (M1/M2) as a trigger switch; the keys that support recording are A/B/X/Y, ↑/↓/←/→, L/R/ZL/ZR, RS/LS, joystick eight directions, set up in the following way:
Record MACRO: Long press FN+ (M1/M2) for 3 seconds, the FN indicator light breathes blue, which means enter the macro recording state. Press the joystick key for macro recording, click FN when the recording is finished, the FN indicator light double flashes blue, which means ending the recording.While the macro is executing, the FN indicator will flash blue until the macro is finished.
Clear MACRO: Press and hold the "Required macro cancellation key (M1/M2)" and double+click. The FN indicator light flashes blue, indicating that the macro setting of this key has been successfully cleared.
APP: The shortcut setting only supports the approximate macro recording function, after downloading the APP you can edit the macro through the APP, down to the duration of each step and the interval time; at the same time, the APP can store multiple sets of macros and generate a macro library for instant selection and application.

7 ENGLISH
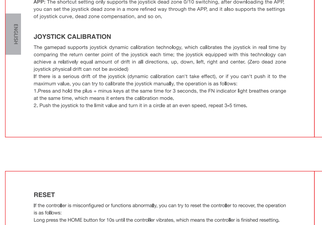
DEADZONE OF JOYSTICK
This gamepad has a certain joystick deadband set in the factory default configuration, users who have the need for 0 deadband can press FN + Left/Right joystick Down (LS/RS) to switch the deadband of the left and right joysticks between 0/10 respectively.
Notice: Gamepad with 0 deadzone will have higher control precision, but it will also lead to drifting phenomenon in games without deadzone.
APP: The shortcut setting only supports the joystick dead zone 0/10 switching, after downloading the APP, you can set the joystick dead zone in a more refined way through the APP, and it also supports the settings of joystick curve, dead zone compensation, and so on.

JOYSTICK CALIBRATION
The gamepad supports joystick dynamic calibration technology, which calibrates the joystick in real time by comparing the return center point of the joystick each time; the joystick equipped with this technology can achieve a relatively equal amount of drift in all directions, up, down, left, right and center, (Zero dead zone joystick physical drift can not be avoided)
If there is a serious drift of the joystick (dynamic calibration can't take effect), or if you can't push it to the maximum value, you can try to calibrate the joystick manually, the operation is as follows:
1.Press and hold the plus + minus keys at the same time for 3 seconds, the FN indicator light breathes orange at the same time, which means it enters the calibration mode.
2. Push the joystick to the limit value and turn it in a circle at an even speed, repeat 3-5 times.

8 ENGLISH
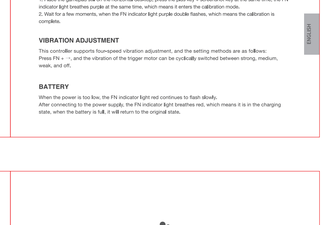
3. Finally, press the plus and minus keys at the same time, the FN indicator light will double flash and then go out, which means the calibration is complete.

GYROSCOPE CALIBRATION
When the gamepad has gyroscope drift, you can try to calibrate the gyroscope, the operation is as follows:
1. Place the gamepad still on the horizontal desktop, press the plus key + screenshot key at the same time, the FN indicator light breathes purple at the same time, which means it enters the calibration mode.
2. Wait for a few moments, when the FN indicator light purple double flashes, which means the calibration is complete.

VIBRATION ADJUSTMENT
This controller supports four-speed vibration adjustment, and the setting methods are as follows:
Press FN + -, and the vibration of the trigger motor can be cyclically switched between strong, medium, weak, and off.

BATTERY
When the power is too low, the FN indicator light red continues to flash slowly.
After connecting to the power supply, the FN indicator light breathes red, which means it is in the charging state, when the battery is full, it will return to the original state.

9 ENGLISH

RESET
If the controller is misconfigured or functions abnormally, you can try to reset the controller to recover, the operation is as follows:
Long press the HOME button for 10s until the controller vibrates, which means the controller is finished resetting.

DETAILED INSTRUCTIONS
There access "BIGBIG WON Official Website>Support" to check the instruction
https://www.bigbigwon.com/support/

WARRANTY
12-month limited warranty from the date of purchase.

10 ENGLISH

WELCOME TO THE BIGBIGWON COMMUNITY
The BIGBIG WON community is built to connect those who seek the winning edge. Join us Discord and Follow our social channels for the latest offerings, exclusive event coverage, and opportunities to score BIGBIG WON hardware.
@BIGBIG WON
BIGBIG WON DISCORD

11

12 CHINESE
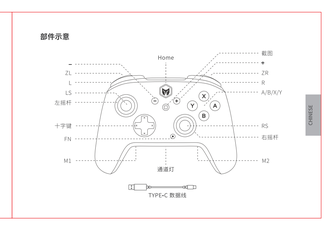

13 CHINESE

包装清单	可可龙游戏手柄 *1 / 说明书 *1 / 售后卡片 *1 / 合格证 *1 / 数据线 *1
支持平台	Switch / win10/11 / Android/iOS

APP 下载
本手柄支持手机 APP 实时调参，可视化配置调整，更简单直观。
苹果用户在 APP Store 搜索"墨江辅助助手"即可下载；
安卓用户可在官网获取 APP 安装包：www.bigbigwon.cn/support/controller/choco-app/

开/关机
长按HOME键 3 秒，可对手柄进行开/关机操作。

连接
本手柄一共有两种连接方式，蓝牙连接和有线连接，连接方式如下：
蓝牙连接:手柄开机后，长按顶部的配对键 3 秒，通道灯第一颗亮0.5s,代表进入配对状态，待连接成功后，通道灯第一颗长亮。(Switch模式下存在两颗指示灯同时长亮的情况,第一颗指示灯长亮代表手柄与主机连接成功,若有第二颗或第三颗指示灯也同时亮起,则代表手柄占主机上第二个或第三个接入的手柄) 有线连接：使用Type-c数据线将控制器与主机连接即可。
有线连接:使用Type-c数据线将控制器与主机连接即可。

14 CHINESE

注意:本手柄支持Switch与Xinput两种模式,与主机连接后需切换到对应主机的模式才能正常使用,默认为Switch模式(有线连接switch 的情况下,需打开"设置-手柄与感应器-Pro手柄有线连接)

模式切换
本手柄支持Switch与Xinput两种模式,连接后需切换到对应的模式才能正常使用,设定方式如下：
1. 长按8+HOME键 3 秒,直到 HOME 指示灯变为绿色,代表切换到Xinput模式。
2. 长按A+HOME键 3 秒,直到 HOME 指示灯变为红色,代表切换到Switch模式。
注意:蓝牙连接iOS与Android平台,须切换到Xinput模式下。

映射
本手柄附带两颗可扩展背键,且支持映射设定,设定方式如下：
设置映射:按下 FN + (M1,M2),FN指示灯绿色呼吸,表示进入映射状态;再次按下需要映射到M1/M2的正面按键,FN指示灯绿色双闪,表示映射成功。
清除映射:按住"所需取消映射的按键（M1/M2）",双击FN,FN指示灯绿色双闪,代表已成功清除该颗按键的映射设置。
快捷设定仅支持手柄的键值映射到扩展背键(M1/M2)上,下载APP之后则可以通过APP对手柄的所有按键进行键值修改。
APP:快捷设定仅支持手柄的键值映射到扩展背键(M1/M2)上,下载APP之后则可以通过APP对手柄的所有按键进行键值修改。

15 CHINESE

连发
本手柄支持按键连发设定,支持的按键包括A/B/X/Y/L/R/ZL/ZR共八颗按键,设定方式如下：
设置连发:按住 FN +"所需设定的按键",FN指示灯 橙色闪烁,代表开启成功,触发连发时FN指示灯会根据连发频率闪动。
清除连发:按住"所需取消连发的按键",双击 FN,FN指示灯橙色呼吸,代表已成功清除这颗按键的连发设置。
连发频率:按住 FN+← 可以在5/s,10/s,20/s三种频率之间循环切换,默认为5/s。
APP: 快捷设定仅支持A/B/X/Y/LT/RT/LB/RB八颗按键的连发设定,下载APP之后可以通过APP对手柄的所有按键进行连发设定。

宏录制
本手柄支持宏录制功能,每套宏语句定一颗背键(M1/M2)作为触发开关;支持录制的按键有A/B/X/Y,↑/↓/←/→,L/R/ZL/ZR,RS/LS,摇杆八方向,设定方式如下：
录制宏:长按FN+（M1/M2)两,FN指示灯蓝色呼吸,表示进入宏录制状态,按手柄按键进行宏录制,待录制完成后单击FN,FN指示灯蓝色双闪,代表结束录制,宏处执行的过程中,FN指示灯会蓝色闪烁直到宏结束。
清除宏:按住"所需清除宏的按键（M1/M2）"双击 FN,FN指示灯蓝色双闪,代表已成功清除该颗按键的宏设置。
APP:快捷设定仅支持大幅的宏录制功能,下载APP之后可以通过APP对宏进行编辑,精细到每一步的持续时间,间隔时长;同时APP可以储存多套宏并生成宏库,即时选择应用。

16 CHINESE

摇杆死区切换
本手柄在出厂默认配置中设置了一定的摇杆死区,有0死区需求的用户可以按FN + 左右摇杆下压(LS/RS),可分别对左右摇杆的死区在0/10两档之间切换。
注意:摇杆死区设置将降低控制精度,但同时也会导致在无死区的游戏里会出现漂移的现象。
APP:快捷设定仅支持摇杆死区0/10两档切换,下载 APP 之后可以通过 APP 对摇杆死区做更精细化的设置,同时还支持摇杆曲线、死区补偿等设置。

摇杆校准
本手柄支持摇杆动态校准技术,该技术通过对比每次摇杆的回中点来对摇杆进行实时校准;搭载该技术的摇杆能做到上下左右各个方向的漂移量相对均衡。(带有区域时钟漂移无法校准)
若出现摇杆严重漂移(动态校准无法生效),或推不到最大值时,可以尝试手动校准摇杆,操作方式如下：
1. 同时长按加号键+减号键 3秒,FN指示灯同时橙色呼吸,代表进入校准模式。
2. 将摇杆推至极限值并匀速转圈,重复3-5次。
3. 最后同时按下加号键和减号键,FN指示灯双闪熄灭,代表校准完成。

17 CHINESE

陀螺仪校准
当手柄出现陀螺仪漂移时,可尝试校准陀螺仪,操作方式如下：
1.将手柄静置于水平桌面上,同时按加号键+截图键,FN指示灯同时紫色呼吸,代表进入校准模式。
2.等待片刻,待FN指示灯紫色双闪,即代表校准完成。

震动调节
本手柄支持四挡振动调节,操作方式如下：
按下 FN + -,即可对扳机马达的振动进行强、中、弱、关闭四档循环切换。

电池说明
当电量过低时,FN指示灯红色持续慢闪。
接入电源后,FN指示灯红色呼吸,代表处于充电状态,待电池满后,恢复原状态。

一键重置配置
若手柄出现配置错乱或功能异常,可尝试一键重置手柄来恢复,操作方式如下：
长按HOME键10s,直到手柄震动,代表手柄重置配置成功。

18 CHINESE

详细功能操作说明
请访问官网查阅视频教程:墨将官网>支持页面
https://www.bigbigwon.cn/support

您的权益
从购买产品之日起享受12个月有限质量保证
联系我们微信公众号:墨将官网BIG WON服务,可获取免费在线技术支持

注意事项
- 内含细小零件,请务必放在学以下儿童触及不到的地方,若不慎吞食或吸入,请立即就医。
- 请勿重长浸泡使用产品。
- 请勿将产品暴露于阳光直射或高温的环境中。
- 请勿将产品置于潮湿或多尘的环境中。
- 请勿重压产品或使其跌落。
- 请勿直接接触长时间口、耳部可能会导致发烫。
- 请勿用万用表或短路测试。
- 请使用柔软的干布清洗。
- 请勿使用汽油或稀释剂等化学品。

19 CHINESE

- 请勿自行拆卸、修理或改装。
- 请勿将产品用于原本设计用途以外的用途,对用于非原本用途所造成的事故或损坏,我们概不负责。
- 请勿直接充电,它可能会伤害你的眼睛。
- 如果您有任何有关产品质量的问题或建议,请联系我们或您当地的经销商。

售后事项
1. 若您遇有质量问题,请首先联系我们的客服进行登记。
2. 如果退、换商品,请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡和发票),不影响二次销售。
3. 如遇保修商品,请务必完整填写用户信息、联系电话、联系地址,正确填透售后要求与详细说明售后原因,将售后卡随货寄回给不完整填写保修卡信息,恕无法提供任何的售后服务。

官网:https://www.bigbigwon.cn
出品:深圳市战歌智控科技有限公司
地址:广东省深圳市龙华区沙井街道沙头村同富裕工业区第三栋

20 CHINESE

保修卡	
（售后商家/非入为授权，三个月包换，一年保修）	
用户姓名	
联系电话	
联系地址	
售后要求	□ 退　□ 换　□ 保修
售后原因	
订单编号	
（注：非墨将官网途径购买的产品，售后问题请直接与购买商家联系）	

21

22 JAPAN
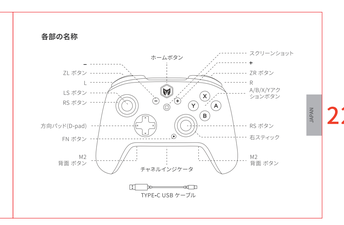

23 JAPAN

パッケージ内容	可可龙ゲーム用コントローラ*1 / 取扱説明書*1 / アフターサービスカード*1 / 合格証明書*1 / USB Type-C ケーブル *1
対応コンソール	Switch / win10/11 / Android/iOS

APPのダウンロード
本コントローラは専用電話アプリのリアルタイム調整とビジュアル設定調整をサポートして、より簡単で直観的です。
Appleユーザーは、APP Store で"墨将アシスタント"を検索するとダウンロードできます。
Androidユーザーは、公式サイトでAPPのインストールパッケージをダウンロードできます。
www.bigbigwon.cn/support/controller/choco-app/

電源オン/オフ
ホームボタンを3秒長押しで、電源をオン/オフできます。

接続
本コントローラには2つの接続方法があります。接続方法は次のとおりです。
Bluetooth/ワイヤレス接続:コントローラをオンにした後、トップのペアリングボタンを3秒長押しして、チャンネル

24 JAPAN

インジケータのインジケータ1がすばやく点滅すると、ペアリング状態に入ることを示します。接続が成功した後、チャンネルインジケータ1が常時点灯します。(Switchモードでは、2つのインジケータが同時に常時点灯する場合があります。インジケータ1が常時点灯している場合は、コントローラが本体と正常に接続されていることを示します。インジケータ2または3も同時に常時点灯している場合は、コントローラが本体の2番目または3番目の接続されているコントローラであることを示します。)
有線接続:コントローラをオンして、USB Type-C ケーブルからコンソールに差し込んで、有線接続完了です。
ご注意:本コントローラはSwitch/Xinputの2つのモードに対応しており、本体と接続した後は対応する本体のモードに切り替えられれば正常に使用できません。デフォルトでは(Switchモードになっています)Switchを有線接続する場合は、「設定-コントローラとセンサー-プロコントローラを有線接続」をオンにする必要があります。

モードの切り替え
CHOCO はXinputモードとSwitchモードを対応し、コンソールに接続した後、対応するモードに切り替えてください。
8+HOMEボタンを3秒間長押しして、チャンネルインジケータ2が赤になると、Switchモードに切り替えることを示します。
8+HOMEボタンを3秒間長押しして、チャネルインジケータ3が緑になると、Xinputモードに切り替えることを示します。
ご注意:iOS および Android を Bluetooth/ワイヤレス接続モードで接続する場合は、Xinput モードに切り替えてください。

25 JAPAN

プログラムボタン機能設定
CHOCOは、プログラム可能な2つ背面ボタンを搭載。背面ボタン機能の割り当てが可能です。
背面ボタン機能名設定:FN+(M1,M2)を押して、FNインジケータが緑にブリージングすると、マッピング状態になることを示します。インジケータ1が常時点灯している場合は、コントローラが本体と正常に接続されていることを示します。インジケータ2または3も同時に常時点灯している場合は、コントローラが本体の2番目または3番目の接続されているコントローラであることを示します。
背面ボタン機能キャンセル:「マッピング解除するボタン(M1,M2)」を押したあとFNをダブルクリックして、FNインジケータが緑にダブル点滅すると、このボタンのマッピング設定が正常に解除されたことを示します。
APP:ショートカット設定は、コントローラのボタン値を拡張バックボタン(M1,M2)にマッピングすることのみをサポートしています。APPをダウンロードした後、APPでコントローラのすべてのボタン値を変更することができます。

TURBO 機能
本コントローラは、A/B/X/Y/L/R/ZL/ZRの8本のボタンのturbo設定をサポートしています。設定方法は次の通りです。
TURBO機能を設定:FN+「設定するボタン」を押して、FNインジケータがオレンジに点滅すると、成功に示しになったことを示します。A+shift+ハンドルボタンでもこれをこれ、FNインジケータはturboの高速数に応じて点滅します。
TURBOをキャンセルし:「turbo を解除するボタン」を押したらFNをダブルクリックして、FNインジケータがオレンジにダブル点滅すると、このボタンのturbo設定が成功に解除されたことを示します。
TURBO周波:FN+ + を押すと5/s, 10/s, 20/sの3つの周波数を切り替えることができ、デフォルトは5/s です。
APP:ショートカット設定は8/A/X/LT/RT/LB/RBの8つのボタンのturbo設定のみをサポートして、APPをダウンロードした後、APPでコントローラのすべてのボタンをturbo設定することができます。

26 JAPAN

マクロ機能
本コントローラはマクロ記録機能をサポートしています。各セットのマクロはトリガースイッチとしてバックボタン(M1,M2)をバインドする必要があります。記録に対応するボタンは8/A/X/Y, ↑/↓/←/→, L/R/ZL/ZR, RS/LS, ジョイスティックの8つの方向です。設定方法は以下の通りです：
マクロをレコード: FN+(M1,M2)を3秒間長押しして、FNインジケータが青にブリージングすると、マクロ記録状態になったことを示します。コントローラのボタンを押し、記録が完了したらFNをクリックします。FNインジケータが青にダブル点滅すると、記録が終了することを示します。マクロの実行中は、マクロが終了するまでFNインジケータが青に点滅します。
マクロをキャンセル:「マクロを解除するボタン(M1,M2)」を押しながらFNをダブルクリックして、FNインジケータが青にダブル点滅すると、このボタンのマクロ設定が正常に解除されたことを示します。
APP:ショートカット設定は、大きななマクロ記録機能をサポートし、APPをダウンロードした後、APPでステップの持続時間、間隔時間まで細かくマクロを編集することができます。同時にAPPは複数のマクロセットを保存し、マクロライブラリを生成し、即座にアプリケーションを選択できます。

27 JAPAN

ジョイスティックデッドゾーン切り替え
本コントローラは工場出荷時に一定のジョイスティックデッドスペースが設定されており、0デッドスペースの需要があるユーザーはFN+左右ジョイスティックの下押し(LS/RS)を押すと、左右ジョイスティックのデッドスペースをそれぞれ0/10の2モードに切り替えることができます。
ご注意:ジョイスティックのデッドスペースはより高い制御精度を提供しますが、デッドスペースのないゲームではドリフト現象が発生する可能性があります。
APP:ショートカット設定はジョイスティックのデッドスペース0/10の2つのモードの切り替えだけをサポートして、APP をダウンロードした後、APP でジョイスティックのデッドスペースはこれにさらに細かい調定をすることができます。同時に、ジョイスティック曲線、デッドスペース補償などの設定もサポートしています。

ジョイスティックのキャリブレーション
本コントローラは、各ジョイスティックの回中間点を比較することによってジョイスティックをリアルタイムに補正する動的キャリブレーション技術をサポートしています。この技術を搭載したジョイスティックは、上下左右の各方向のドリフト量を相対的に均等にすることができます。(ゼロデッドスペースジョイスティックの物理的なドリフトは回避できません)
ジョイスティックがひどくドリフトしている場合や(キャリブレーションが機能しない場合や、最大値を押していない場合は、次のように手動でジョイスティックをキャリブレーションしてみてください。
1.(+)ボタン+ -)ボタンを同時に3秒間長押しして、FNインジケータが同時にオレンジにブリージングすると、キャリブレーションモードになったことを示します。

28 JAPAN

2.ジョイスティックを限界値まで押して一定速度で回転させることを3-5回繰り返します。
3.最後に同時に「+ボタン」と「-ボタン」を同じ時すと、FNインジケータがオレンジにダブル点滅してから消灯すると、キャリブレーション完了したことを示します。

ジャイロキャリブレーション方法
コントローラでジャイロがドリフトしている場合は、次のようにジャイロを調整してみてください。
1.水平机の上にコントローラを静置して、「+」ボタン+「スクリーンショット」ボタンを同時に押して、FNインジケータが同時に紫色にブリージングすると、キャリブレーションモードになったことを示します。
2.しばらく待った、FNインジケータが紫色にダブル点滅すると、キャリブレーションが完了したことを示します。

振動調整
本コントローラは、次のような4つの振動調整をサポートしています：
FN+ - を押すと、引金電モーターの振動に対して強、中、弱、閉の4つのモードの循環切り替えを行うことができます。

電池の説明
電気量が低下していると場合は、FNインジケータが赤に常時ゆるやか点滅します。
電源を入れた後、FNインジケータが赤にブリージングすると、充電状態を示します。電池が満タンになった後、元の状態に戻ります。

29 JAPAN

ワンタッチで設定をリセットします
コントローラの設定関係や機能に異常がある場合は、次のようにコントローラをワンタッチでリセットして回復してみてください：
HOMEボタンを10s間長押しして、コントローラが振動するとコントローラのリセット設定が成功したことを示します。

詳細な機能・操作手順
ホームページ>ビデオチュートリアル/ 墨将官網>のサポートページをご覧ください
https://www.bigbigwon.cn/support

ご保証
12ヶ月のメーカー限定保証

30 JAPAN

BIGBIG WON コミュニティへようこそ
BIGBIG WONコミュニティは、勝利を求めるゲーマーを集めるために作られました。
BIGBIG WON Discordを参加し、DISSをフォローして、
BIGBIG WONあなたの最新情報と独占イベントをお楽しみ、最新ハードウェアをレビューを取得可能です。
@BIGBIG WON
BIGBIG WON DISCORD

深圳市战歌智控科技有限公司

FCC Caution.

(1)§ 15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
§ 15.21 Changes or modification warning
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the
instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of
the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:
The device has been evaluated to meet general RF exposure requiremen t. The device can be used in portable
exposure condition without restriction.
According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy level in excess of the Commission’s guidelines.
According to KDB 447498 (2)(a)(i)

CAN RSS-Gen/CNR-Gen.

- English: This device complies with Industry Canada licence-exempt RSSs standard(s). Operation is subject to the following
two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including
interference that may cause undesired operation of the device.
- French:Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.
L'exploitationestautorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur
de l'appareildoit accepter tout brouillageradioélectriquesubi, mêmesi le brouillageest susceptible d'encompromettre le fonctionnem ent.