BIGBIG WON

Wireless game controller

C2

PLAY BIG. WON BIG

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

© 2021 BIGBIG WON Inc. All rights reserved.
Product may vary slightly from pictures.

BIGBIG WON™

Elitist S

USE TUTORIAL

GET HELP WITH
BIGBIG WON SUPPORT

We are here to assist you with your BIGBIG WON devices. If you have any questions, please feel free to contact us:

BIGBIG WON Official Web: www.bigbigwon.com
Customer Service: support@bigbigwon.com

Important: the controller should be fully charged before using for the first time.

PACKAGE CONTENTS

BIGBIG WON Elitist S Wireless Game Controller
2.4GHz Wireless Dongle
1.6 Meters Micro-USB Cable
User Manual

SYSTEM REQUIREMENTS

Switch/Switch lite
Windows 10 or above
Android 8.0 or above
* Device with a free USB port

REGISTRATION

Register your BIGBIG WON ID online at www.bigbigwon.com to get real-time information on your product's warranty status and a series of exclusive benefits from BIGBIG WON.

YOUR BENEFITS

* 12-month limited warranty from the date of purchase.
* Free online technical support at www.bigbigwon.com

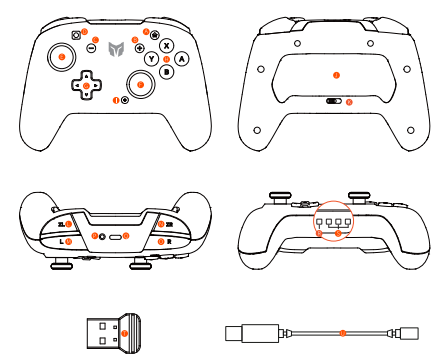

- A HOME Button
- B + Button
- C − Button
- D Capture Button
- E Left Joystick/L3
- F Right Joystick/R3
- G Directional Pad
- H A/B/X/Y Action Button
- I FN Button/FN Indicator
- J Custom Back Button Module
- K Custom Back Button Module Buckle
- L ZL Button
- M L Button
- N ZR Button
- O R Button
- P PAIR Button
- Q USB Charging Port
- R Mode Indicator
- S Power Indicator
- T 2.4GHz Wireless Dongle
- U Micro-USB Cable

CONNECT TO SWITCH DEVICES

Connect to Switch via Bluetooth

a. Long press PAIR button for 3 seconds to enter Bluetooth paring waiting state, and mode indicator flashes in green.
b. Go to the controller pairing interface of Switch (Homepage>Controllers>Change Grip/Order) and continuously and quickly press L + R button to connect according to the prompts.
c. When the corresponding controller icon shows on the Switch interface, Elitist S mode indicator stays red, and connected successfully.

Switch Wireless Wake-up

When Elitist S is connected with Bluetooth, press HOME button to wake up Switch.

Connect to Switch via a USB cable

a. Turn on Pro Controller Wired Communication on Switch by selecting (System Settings> Controllers and Sensors>Pro Controller Wired Communication).
b. Plug the USB cable from Elitist S to the USB port located on Switch base.
c. When the corresponding controller icon shows on the Switch interface, Elitist S mode indicator stays red, and connected successfully.

CONNECT TO PC DEVICES

Connect to PC Device via Bluetooth

a. Long press PAIR button for 3 seconds to enter Bluetooth paring waiting state, and mode indicator flashes in green.
b. Go to the Bluetooth search interface of the PC device, and connect with Pro Controller.
c. Elitist S mode indicator stays red, and connected succussfully.
★ Only for the PC devices with Bluetooth.

Connect to PC Device via 2.4GHz Wireless Dongle

a. Plug 2.4GHz wireless dongle to the USB port of PC device.
b. Long press PAIR button for 3 seconds to enter 2.4GHz connection waiting state, and mode indicator flashes in green.
c. Elitist S mode indicator stays green, and connected successfully.

Connect to PC Device via a USB cable

a. Plug the USB cable from Elitist S to the USB port of PC device.
b. Elitist S mode indicator stays green, and connected successfully.

CONNECT TO ANDROID DEVICES

Connect to Android Device via Bluetooth

a. Long press A + PAIR button simultaneously for 3 seconds to enter Bluetooth paring waiting state, and mode indicator flashes in green.
b. Go to the Bluetooth search interface of the Android device to search and recognize Elitist S, and connect with Elitist S after successful recognition.
c. Elitist S mode indicator stays blue, and connected successfully.

Connect to Android Device via 2.4GHz Wireless Dongle

a. Plug 2.4GHz wireless dongle via an adapter(sold separately) to the USB port of Android device.
b. Long press PAIR button for 3 seconds to enter 2.4GHz connection waiting state, and mode indicator flashes in green.
c. Elitist S mode indicator stays green or blue, and connected successfully.

Connect to Android Device via a USB Cable

a. Plug the USB cable from Elitist S to the USB port of Android device.
b. Elitist S mode indicator stays green or blue, and connected successfully.

BUTTON FUNCTIONS

System Volume Control

Press FN + UP/DOWN button of the directional pad simultaneously to set the volume (only for Android platform).

GYROCON+ Global Gyro Function

a. Long press FN button for 3 seconds to turn on global gyro, and FN indicator stays purple.
b. Repeat above step to turn off global gyro, and FN indicator lights off.

Motor Vibration Intensity Adjustment

a. There are three levels of motors intensity that can be switched circularly.
b. Press FN + RIGHT button of the directional pad simultaneously to switch motor vibration intensity from strong, medium to weak.

TURBO Function

a. Press FN + TARGET button simultaneously to set TURBO function successfully, and FN indicator flashes in blue twice.
b. Press FN + LEFT button of the directional pad to switch combo frequency from fast, middle to slow.
c. Press the TARGET button that completed the combo setting to trigger combo function of the button, and FN indicator flashes in blue.
★ Press FN button twice to cancel all TURBO settings.

Back Button Macro Function

a. Long press FN + TARGET back button simultaneously to enter the recording state, and FN indicator turns orange and breathing.
b. Press TARGET back button once after recording the button sequence and interval to exit recording mode, and organge breathing FN indicator lights off.
c. Press TARGET back button to respond to the Macro setting as just recorded.
d. Go to Macro recording mode and press TARGET back button once to cancel Macro setting.

Custom Back Button Settings

a. Long press FN + TARGET back button simultaneously to enter the setting mode, and FN indicator turns orange and breathing.
b. In setting mode, press TARGET button once to complete the setting, and orange and breathing FN indicator lights off.
c. Go to customizable button setting mode and press TARGET back button once to cancel customized function of back button.

Button Function	Mode Indicator	Button Operation
Volume Control		Press FN+▲/▼= Set the volume up/down.
Global Gyro Switch	Stay on/Light off	Long press FN = Turn on/off the global gyro.
Motor Vibration Intensity Adjustment		Press FN + ▶ = Circularly adjust the vibration intensity of the motor.
TURBO Function Setting	Flash twice	Press FN + TARGET button = Start Combo.
TURBO Frequency Adjustment	Flash once	Press FN + ◀ = Adjust three levels of TURBO frequency.
TURBO Function Cancellation	Flash once	Press FN twice = Cancel all TURBO settings.
Macro Setting	Breathing	Long press FN + TARGET back button = Enter the Macro setting. Press TARGET back button once = Exit the Marco setting.
Respond to Macro Setting	Flash	After setting, press TARGET back button once = Respond to Macro setting
Macro Setting Cancellation	Flash twice	In setting mode, press TARGET back button once = Cancel the Marco setting
Back Button Function	Breathing	Long press FN + TARGET back button = Enter the custom button setting. Press TARGET back button once = Exit the custom button setting
Back Button Function Cancellation	Flash twice	In setting state, press TARGET back button = Cancel custom button function setting.

POWER INSTRUCTIONS

Charging Time: 2-2.5 hours.
Recommended Voltage: 5V/1A
When Elitist S is connected or fully charged, right three power indicators stay green.
When Elitist S is in low power condition (below 15%), power indicator flashes in green quickly.
When Elitist S is charging, power indicator flashes in green slowly or stays green according to current power level changes.
Elitist S is equipped with 850mAh battery, and charging current should not be less than 500mAh.

SLEEP MODE/WAKE UP

a. Controller will automatically switch to sleep mode after Switch screen turned off.
b. Controller will automatically switch to sleep mode under no operation after 300 seconds.
c. In Bluetooth mode, press HOME button for 3 seconds to disconnect, and controller will switch to sleep mode.
d. When Elitist S wireless game controller is in sleep mode, press any button to wake it up.

RESET

Long press HOME button for 10 seconds to reset in any power-on state.

ご注意:最初に使用する前に、Elitist Sを完全に充電してください。

バッケージ内容

BIGBIG WON Elitist S ワイヤレスコントローラー
2.4GHzドングル
Micro-USBケーブル(1.6M)
取扱説明書

システム要件

Switch/Switch Lite
Windows 10+
Android 8.0+
＊空きのUSB端子を備えるデバイス

ユーザー登録

bigbigwon.com にてBIGBIG WON IDを作成して、ご購入の製品を登録すると、当製品の品質保証 の状態に関するリアルタイム情報と、BIGBIG WON会員専用のメリットを得ることができます。

登録による特典

12ヵ月のメーカー限定保証(コントローラー本体のみ)
https://bigbigwon.com/でのマニュアルの閲覧と無料オンラインテクニカルサポート(日本語対応)

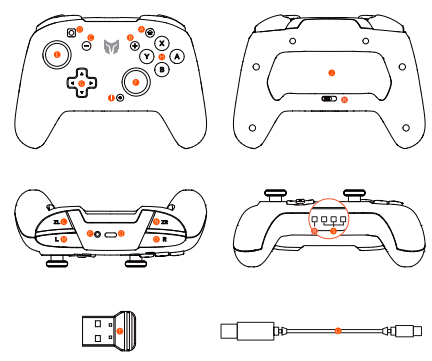

- A HOMEボタン
- B +ボタン
- C −ボタン
- D 共有ボタン
- E 左スティック/L3ボタン
- F 右スティック/R3ボタン
- G 方向キー
- H A/B/X/Yアクションボタン
- I FNボタン/FNインジケーター
- J 追加ボタンモジュール
- K モジュールスナップ
- L ZLボタン
- M Lボタン
- N ZRボタン
- O Rボタン
- P ペアリングボタン
- Q USB充電端子
- R モードインジケーター
- S バッテリーインジケーター
- T 2.4GHzドングル
- U Micro-USBケーブル

SWITCHへの接続

BluetoothでSwitchへの接続

a. ペアリングボタンを押して、Elitist S を起動してください。モードインジケーターが緑色に点滅すると、Elitist S は接続待ちの状態に入ります。
b. Switchで「ホームインターフェース>持ちかた/順番を変える」を入ると、指示に従って Elitist S の LボタンとRボタンを同時に押してください。
c. Switchでコントローラーのアイコンが現れると、Switchをコントロールできます。モードインジケーターが赤色で点灯になると、接続成功です。

Switchをリモート起動

前回Switchと接続する場合は、Elitist S のHOMEボタンを押して、Switchをリモート起動することができます。

Micro-USBケーブルでSwitchへの接続

a. 設定>コントローラーとセンサー>Proコントローラーの有線通信をオンにしてください。
b. USBケーブルで Elitist S をSwitchドックのUSB端子に差し込みます。
c. Switchでコントローラーのアイコンが現れると、Switchをコントロールできます。モードインジケーターが赤色で点灯になると、接続成功です。

WINDOWS PCへの接続

BluetoothでWindows PCへの接続

★ 当機能はBluetooth機能を備えるWindows PCのみ対応します。
a. ペアリングボタンを押して、Elitist S を起動してください。モードインジケーターが緑色に点滅すると、Elitist S は接続待ちの状態に入ります。
b. Windows PCのBluetoothをオンにして、Pro Controller を検索して、接続します。
c. モードインジケーターが赤色で点灯になると、接続成功です。Windows PCをコントロールできます。

2.4GHzドングルでWindows PCへの接続

a. 2.4GHzドングルをWindows PCのUSB端子に差し込みます。
b. ペアリングボタンを押して、Elitist S を起動してください。モードインジケーターが緑色に点滅すると、Elitist S は接続待ちの状態に入ります。
c. モードインジケーターが緑色で点灯になると、接続成功です。Windows PCをコントロールできます。

Micro-USBケーブルでWindows PCへの接続

a. USBケーブルで Elitist S をWindows PCのUSB端子に差し込みます。
b. モードインジケーターが緑色で点灯になると、接続成功です。Windows PCをコントロールできます。

Androidへの接続

BluetoothでAndroidへの接続

a. Aボタンとペアリングボタンを同時に押して、Elitist S を起動してください。モードインジケーターが緑色に点滅すると、Elitist S は接続待ちの状態に入ります。
b. AndroidデバイスのBluetoothをオンにして、Elitist S を検索して、接続します。
c. モードインジケーターが青色で点灯になると、接続成功です。Androidデバイスをコントロールできます。

2.4GHzドングルでAndroidへの接続

a. 2.4GHzドングルをAndroidデバイスのUSB端子に差し込みます。
★一部のAndroidデバイスと接続する場合はUSBアダプタ(別途購入)が必要です。
b. ペアリングボタンを押して、Elitist S を起動してください。モードインジケーターが緑色に点滅すると、Elitist S は接続待ちの状態に入ります。
c. モードインジケーターが緑色或いは青色で点灯になると、接続成功です。Windows PCをコントロールできます。

Micro-USBケーブルでAndroidへの接続

a. USBケーブルで Elitist S をAndroidデバイスのUSB端子に差し込みます。
★一部のAndroidデバイスと接続する場合はUSBアダプタ(別途購入)が必要です。
b. モードインジケーターが緑色或いは青色で点灯になると、接続成功です。Androidをコントロールできます。

ボタン機能説明

音量の調節

FNボタンを押しながら、方向キーの上/下ボタンを押すと音量を調節できます。
★当機能はAndroidのみ対応します。

グローバルジャイロ(GYROCON+)機能

a. FNボタンを3秒長押しして、FNインジケーターがパープル色で点灯になると、グローバルジャイロ機能がオンになります。
b. 再度FNボタンを3秒長押しして、FNインジケーターが消灯になると、グローバルジャイロ機能がオフになります。

モーター振動の強さの調節

FNボタンを押しながら、方向キーの右ボタンを押すとモーター振動の強さを調節できます。
振動の強さは3レベルでサイクルします。

TURBO機能

a. FNボタンを押しながらTURBOさせたいボタンを押して、FNインジケーターが青色で2回点滅になると、TURBO機能がオンになります。
b. FNボタンを押しながら、方向キーの左ボタンを押すとTURBOのスピードを調節できます。TURBOのスピードは3レベルでサイクルします。
c. FNボタンをダブルクリックして、FNインジケーターが消灯になると、TURBO機能がオフになります。

追加ボタンのマクロ機能設定

a. FNボタンを押しながら、マクロ機能を設定させたい追加ボタンを押して、FNインジケーターがオレンジ色でブリージングになると、マクロ機能レコードモードがに入ります。
b. 追加ボタンのシーケンスと間隔をレコードして、設定した追加ボタンを押して、FNインジケーターが消灯になると、レコード完成です。
c. 設定した追加ボタンを押して、レコードしたマクロ機能をコントロールできます。
b. マクロ機能レコードモードで再度設定した追加ボタンを1回押して、FNインジケーターが消灯になると、マクロ機能がオフになります。
＊設定可能のボタンは追加ボタンのみです。

追加ボタンの機能設定

a. FNボタンを押しながら、機能を設定させたい追加ボタンを押して、FNインジケーターがオレンジ色でブリージングになると、機能設定モードがに入ります。
b. 機能を設定させたいボタンを一回押すと、設定完成です。
c. 機能設定モードで再度設定した追加ボタンを1回押して、FNインジケーターが消灯になると、追加ボタンの機能がオフになります。
★設定可能のボタンは追加ボタンのみです。

ボタン機能	モード/FNインジケーター	対応ステップ
音量の調節		FN+▲/▼=音量+/−
グローバルジャイロ(GYROCON+)機能	点灯/消灯	FN=グローバルジャイロオン
モーター振動の強さの調節		FN+▶=3レベルモーター振動の強さをサイクルで調節
TURBO機能の設定	2回点滅	FN+TURBOさせたいボタン=TURBO機能オン
TURBOのスピードの調節	1回点滅	FN+◀=3レベルTURBOのスピードをサイクルで調節
TURBO機能をオフ	2回点滅	ダブルクリックFN=TURBO機能オフ
マクロ機能設定モード	ブリージング	FNボタン長押し+設定させたい追加ボタン長押し=マクロ機能設定モード 設定した追加ボタンを押し=マクロ設定モードをオフ
マクロ機能オン	点滅	マクロ機能オン状態で設定した追加ボタン押し=マクロ機能オン
マクロ機能をオフ	2回点滅	マクロ機能オン状態で設定した追加ボタン押し=マクロ機能をオフ
追加ボタンの機能設定	ブリージング	FNボタン長押し+設定させたい追加ボタン長押し=追加ボタンの機能設定 設定した追加ボタンを押し=追加ボタンの機能設定モードをオフ
追加ボタンの機能をオフ	2回点滅	機能オン状態で設定した追加ボタン押し=追加ボタンの機能をオフ

バッテリー残量説明

充電時間: 2-2.5時間
充電アダプタ:5V/1A
バッテリー残量が15%以上 / 充電完了(100%充電済み)の場合は、バッテリーインジケーターが緑色 で点灯します。
バッテリー残量が15%に下回る場合は、バッテリーインジケーターが緑色 で点滅します。
バッテリー残量が5%に下回る場合、自動的に低電力保護状態に入って自動的にシャットダウンします。
充電中ではバッテリーインジケーターが当電量に従って階段的に変換し、緑色 で 点滅します。

自動休眠

Elitist S が5分以上操作されないと自動的に休眠します。
Switchと接続された場合は、Switchを休眠すれば、Elitist Sも休眠状態になります。
Bluetooth接続された場合は、HOMEボタンを3秒押すと、Elitist Sが休眠状態になります。
自動的に休眠したら、いずれかのボタンを押すと、休眠が終わります。

リセット

オン状態でHOMEボタンを10秒以上長押して Elitist S をリセットします。

重要事项:首次使用前必须先充满电

包装内容

BIGBIG WON Elitist S 无线游戏手柄
2.4GHz 无线接收器
Mirco-USB 数据线(1.6M)
说明书
合格证

系统要求

Switch/Switch lite
Windows 10+
Android 8.0+
*设备需具有可用USB插口

注册

通过BIGBIG WON官网(www.bigbigwon.cn)在线注册您的BIGBIG WON ID,以获取有关您产品保修的实时信息,以及BIGBIG WON提供的一系列独家权益。

您的权益

*从购买产品之日起享受12个月有限质量保证。
*联系我们以获取免费的在线技术支持。

FCC CAUTION

1. 15.19 Labelling requirements
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. 15.19 Labelling requirements
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. 15.105 Information to the user
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

NOTICE Please read this Precautions carefully.