BIGBIG WON

迅龙2星闪版说明书

附件名称	设计师
BLITZ 2	徐海洲

基本印刷工艺要求

材质工艺：80G书写纸+单黑印刷+骑马订/32P
成品尺寸：120x80mm

其他注意事项

/

版本	变更表述	变更日期
V1.0	初始发布	2024/05/10

封底　　封面

英文

1

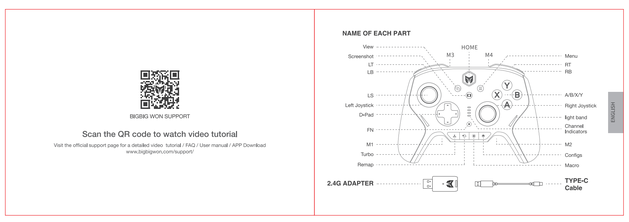

2

3

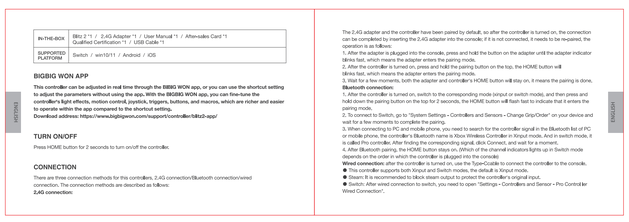

IN-THE-BOX	Blitz 2 *1 / 2.4G Adapter *1 / User Manual *1 / Aftersales Card *1 Qualified Certification *1 / USB Cable *1
SUPPORTED PLATFORM	Switch / win10/11 / Android / iOS

BIGBIG WON APP

This controller can be adjusted in real time through the BIGBIG WON app, or you can use the shortcut setting to adjust the parameters without using the app. With the BIGBIG WON app, you can fine-tune the controller's light effects, motion control, joystick, triggers, buttons, and macros, which are richer and easier to operate within the app compared to the shortcut setting.
Download address: https://www.bigbigwon.com/support/controller/blitz2-app/

TURN ON/OFF

Press HOME button for 2 seconds to turn on/off the controller.

CONNECTION

There are three connection methods for this controller: 2.4G connection/Bluetooth connection/wired connection. The connection methods are described as follows:
2.4G connection:

The 2.4G adapter and the controller have been paired by default, so after the controller is turned on, the connection can be completed by inserting the 2.4G adapter into the console; if it is not connected, it needs to be re-paired, the operation is as follows:
1. After the adapter is plugged into the console, press and hold the button on the adapter until the adapter indicator blinks fast, which means the adapter enters the pairing mode.
2. After the controller is turned on, press and hold the pairing button on the top, the HOME button will blink fast, which means the adapter enters the pairing mode.
3. Wait for a few moments, both the adapter and controller's HOME button will stay on, it means the pairing is done.
Bluetooth connection:
1. After the controller is turned on, switch to the corresponding mode (xinput or switch mode), and then press and hold down the pairing button on the top for 2 seconds, the HOME button will flash fast to indicate that it enters the pairing mode.
2. To connect to Switch, go to "System Settings → Controllers and Sensors → Change Grip/Order" on your device and wait for a few moments to complete the pairing.
3. When connecting to PC and mobile phone, you need to search for the controller signal in the Bluetooth list of PC or mobile phone, the controller's Bluetooth name is Xbox Wireless Controller in Xinput mode, And in switch mode, it is displayed as Pro controller. After finding the corresponding signal, click Connect, and wait for a moment.
4. After Bluetooth pairing, the HOME button stays on, (Which of the channel indicators lights up in Switch mode depends on the order in which the controller is plugged into the console)
Wired connection: after the controller is turned on, use the Type-C cable to connect the controller to the console.
● This controller supports both Xinput and Switch modes, the default is Xinput mode.
● Steam: It is recommended to block steam output to protect the controller's original input.
● Switch: After wired connection to switch, you need to open "Settings → Controllers and Sensor → Pro Controller Wired Connection".

4

5

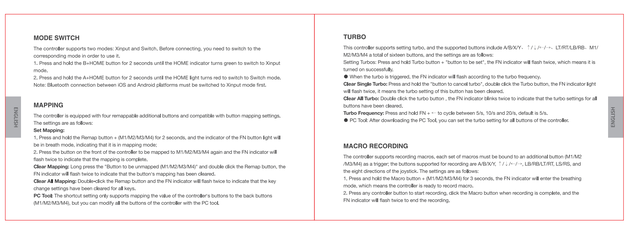

MODE SWITCH

The controller supports two modes: Xinput and Switch, Before connecting, you need to switch to the corresponding mode in order to use it.
1. Press and hold the B+HOME button for 2 seconds until the HOME indicator turns green to switch to Xinput mode.
2. Press and hold the A+HOME button for 2 seconds until the HOME light turns red to switch to Switch mode.
Note: Bluetooth connection between iOS and Android platforms must be switched to Xinput mode first.

MAPPING

The controller is equipped with four remappable additional buttons and compatible with button mapping settings, The settings are as follows:
Set Mapping:
1. Press and hold the Remap button + (M1/M2/M3/M4) for 2 seconds, and the indicator of the FN button light will be in breath mode, indicating that it is in mapping mode;
2. Press the button on the front of the controller to be mapped to M1/M2/M3/M4 again and the FN indicator will flash twice to indicate that the mapping is complete.
Clear Mapping: Long press the "Button to be unmapped (M1/M2/M3/M4)" and double click the Remap button, the FN indicator will flash twice to indicate that the button's mapping has been cleared.
Clear All Mapping: Double-click the Remap button and the FN indicator will flash twice to indicate that the key change settings have been cleared for all keys.
PC Tool: The shortcut setting only supports mapping the value of the controller's buttons to the back buttons (M1/M2/M3/M4), but you can modify all the buttons of the controller with the PC tool.

6

7

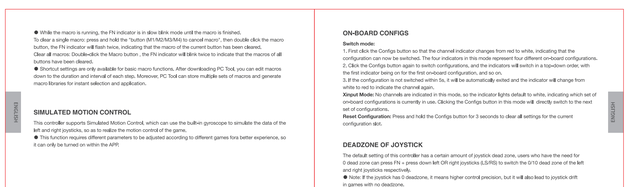

◆ While the macro is running, the FN indicator is in slow blink mode until the macro is finished.
To clear a single macro: press and hold the "button (M1/M2/M3/M4) to cancel macro", then double click the macro button, the FN indicator will flash twice, indicating that the macro of the current button has been cleared.
Clear all macros: Double-click the Macro button , the FN indicator will blink twice to indicate that the macros of all buttons have been cleared.
◆ Shortcut settings are only available for basic macro functions. After downloading PC Tool, you can edit macros down to the duration and interval of each step. Moreover, PC Tool can store multiple sets of macros and generate macro libraries for instant selection and application.

SIMULATED MOTION CONTROL

This controller supports Simulated Motion Control, which can use the built-in gyroscope to simulate the data of the left and right joysticks, so as to realize the motion control of the game.
◆ This function requires different parameters to be adjusted according to different games fora better experience, so it can only be turned on within the APP.

8

9

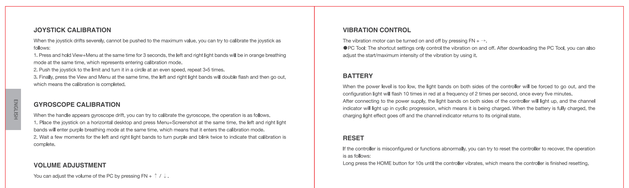

TURBO

This controller supports setting turbo, and the supported buttons include A/B/X/Y、↑/↓/←/→、LT/RT/LB/RB、M1/M2/M3/M4 a total of sixteen buttons, and the settings are as follows:
Setting Turbo: Press and hold Turbo button + "button to be set", the FN indicator will flash twice, which means it is turned on successfully.
● When the turbo is triggered, the FN indicator will flash according to the turbo frequency.
Clear Single Turbo: Press and hold the "button to cancel turbo", double click the Turbo button, the FN indicator light will flash twice, it means the turbo setting of this button has been cleared.
Clear All Turbo: Double click the turbo button , the FN indicator blinks twice to indicate that the turbo settings for all buttons have been cleared.
Turbo Frequency: Press and hold FN + + to cycle between 5/s, 10/s and 20/s, default is 5/s.
● PC Tool: After downloading the PC Tool, you can set the turbo setting for all buttons of the controller.

MACRO RECORDING

The controller supports recording macros, each set of macros must be bound to an additional button (M1/M2 /M3/M4) as a trigger; the buttons supported for recording are A/B/X/Y、↑/↓/←/→、LB/RB/LT/RT, LS/RS, and the eight directions of the joystick. The settings are as follows:
1. Press and hold the Macro button + (M1/M2/M3/M4) for 3 seconds, the FN indicator will enter the breathing mode, which means the controller is ready to record macro.
2. Press any controller button to start recording, click the Macro button when recording is complete, and the FN indicator will flash twice to end the recording.
清除单个连发：按住"所需取消连发的按键",并按住灯 后闪,表示已清除当前按键的连发设置。
清除所有连发：按住灯 后闪,表示已清除所有按键的连发设置。
连发频率：按住 FN + + 可以在5/s、15/s、20/s之间循环切换,默认为5/s。
● 下载是将数据上后可以通过重样数手柄的所有按键进行可视化的连发设置。

10

11

JOYSTICK CALIBRATION

When the joystick drifts severely, cannot be pushed to the maximum value, you can try to calibrate the joystick as follows:
1. Press and hold View+Menu at the same time for 3 seconds, the left and right light bands will be in orange breathing mode at the same time, which represents entering calibration mode.
2. Push the joystick to the limit and turn it in a circle at an even speed, repeat 3-4 times.
3. Finally, press the View and Menu at the same time, the left and right light bands will double flash and then go out, which means the calibration is completed.

GYROSCOPE CALIBRATION

When the handle appears gyroscope drift, you can try to calibrate the gyroscope, the operation is as follows.
1. Place the joystick on a horizontal desktop and press Menu+Screenshot at the same time, the left and right light bands will enter purple breathing mode at the same time, which means that it enters the calibration mode.
2. Wait a few moments for the left and right light bands to turn purple and blink twice to indicate that calibration is complete.

VOLUME ADJUSTMENT

You can adjust the volume of the PC by pressing FN + ↑/↓.

12

13

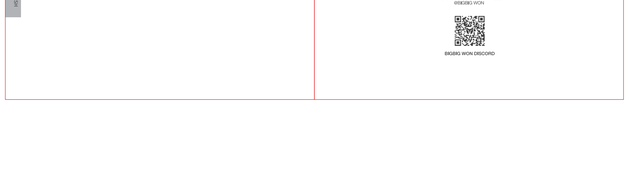

VIBRATION CONTROL

The vibration motor can be turned on and off by pressing FN + ←.
●PC Tool: The shortcut settings only control the vibration on and off. After downloading the PC Tool, you can also adjust the start/maximum intensity of the vibration by using it.

BATTERY

When the power level is too low, the light bands on both sides of the controller will be forced to go out, and the configuration light will flash 10 times in red at a frequency of 2 times per second, once every five minutes.
After connecting to the power supply, the light bands on both sides of the controller will light up, and the channel indicator will light up in cyclic progression, which means it is being charged. When the battery is fully charged, the charging light effect goes off and the channel indicator returns to its original state.

RESET

If the controller is misconfigured or functions abnormally, you can try to reset the controller to recover, the operation is as follows:
Long press the HOME button for 10s until the controller vibrates, which means the controller is finished resetting.

14

15

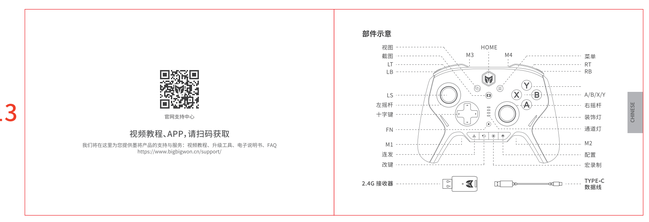

16

17

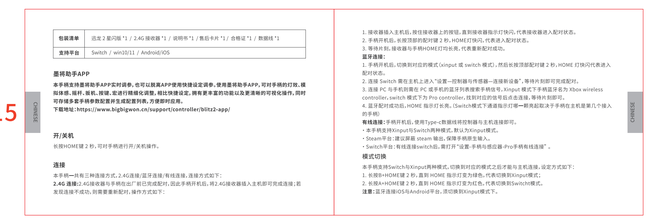

包装清单	迅龙 2 星闪版 *1 / 2.4G 接收器 *1 / 说明书 *1 / 售后卡片 *1 / 合格证 *1 / 数据线 *1
支持平台	Switch / win10/11 / Android/iOS

蓝牙APP

本手柄支持蓝牙助手APP实时调参，也可以脱离APP使用快捷设定调参，使用蓝牙助手APP，可对手柄的灯效、摇杆体感、扳机、按键、宏进行精细化调整，相比快捷设定，拥有更丰富的功能以及更清晰的可视化操作，同时可存储多套手柄参数配置并支持配置列表，方便即时应用。
下载地址:https://www.bigbigwon.cn/support/controller/blitz2-app/

开/关机

长按HOME键 2 秒，可对手柄进行开/关机操作。

连接

本手柄一共有三种连接方式，2.4G连接/蓝牙连接/有线连接，连接方式如下：
2.4G 连接:2.4G接收器与手柄出厂前已完成配对，因此手柄开机后，将2.4G接收器插入主机即可完成连接；若发现连接不成功，则需重量新配对，操作方式如下：

18

19

映射

本手柄附带两颗扩展按键（M1/M2）与两颗扩展按键（M3/M4），且支持改键设定，设定方式如下：
设置映射:
1. 按下 映射键 + (M1/M2/M3/M4)，FN指示灯 呼吸，表示进入改键状态；
2. 再次按下需要映射的M1/M2/M3/M4那边面按键，FN指示灯 双闪，表示改键成功。
清除映射: 按住"所需取消改键的按键 (M1/M2/M3/M4)",连击 映射键 ,FN指示灯 双闪, 表示已清除当前按键的改键设置。
清除所有映射: 连续双击 映射键 ,FN指示灯 双闪, 表示已清除所有按键的改键设置。
Turbo Frequency: 按住 FN + + 可以在5/s、15/s、20/s之间循环切换,默认为5/s。
● 快捷设定仅支持大概的宏录制功能，下载是将数据上后可以通过重样数手柄的所有按键进行可视化的连发设置。

连发

本手柄支持按键连发设定，支持的按键包括A/B/X/Y、↑/↓/←/→、LB/RB/LT/RT、M1/M2/M3/M4共十六颗按键，设定方式如下：
设置连发: 按住 连发键 +"所需设定的按键",FN指示灯 双闪,代表开启成功。
● 连发是行过程中,FN指示灯将以各自连发频率闪烁
清除单个连发: 按住"所需取消连发的按键",连击 连发键 ,FN指示灯 双闪, 表示已清除当前按键的连发设置。
清除所有连发: 连续双击 连发键 ,FN指示灯 双闪, 表示已清除所有按键的连发设置。
连发频率:按住 FN + + 可以在5/s、15/s、20/s之间循环切换,默认为5/s。
● 下载是将数据上后可以通过重样数手柄的所有按键进行可视化的连发设置。

20

21

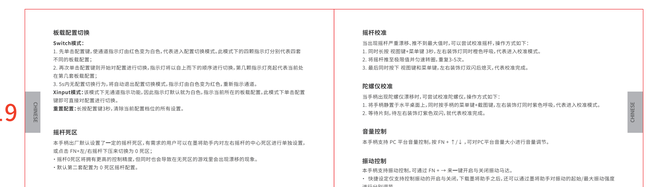

板载配置切换

Switch模式:
1. 本手柄配置键，使通道指示灯由红色变为白色，代表进入配置切换模式，此模式下的四颗指示灯分别代表四套不同的板载配置。
2. 再次单击配置键获得独对配置进行切换，指示灯将以由上而下的顺序进行切换，第几颗指示灯高起代表当前处在第几套板载配置；
3.与PC配置切换行为，将自动退出配置切换模式，指示灯由白色变为红色，重新指示通道。
Xinput模式:详模式下无通道指示功能，因此指示灯默认就为白色，指示当前所在的板载配置，此模式下单击配置键即可直接对配置进行切换。
重置配置:长按配置键3秒,清除当前配置相位的所有设置。

摇杆死区

本手柄出厂默认设置了一定的摇杆死区，有需求的用户可以在是柄软件内对左右摇杆的中心死区进行单独设置。
或点击 FN+型/左摇杆下压来切换为 0 死区；
• 摇杆死区将根据更换的控制模型，控同时也会导致在无死区的游戏里会出现漂移的现象。
• 默认第二套配置为 0 死区摇杆配置。

22

23

电池说明

当电量过低，手柄两侧装饰灯会强制熄灭，配置灯以2次每秒的频率红色闪烁10次，每五分钟重复一次。
接入电源后，手柄两侧装饰灯占亮，通道指示灯循环通道亮起，代表处于充电状态，待电池充满，充电灯效熄灭，通道指示灯恢复原状态。

一键重置配置

若手柄出现配置错乱或功能异常，可尝试一键重置手柄来恢复,操作方式如下：
长按HOME键10s，直到手柄震动，代表手柄重置配置成功。

您的权益

从购买产品之日起享受12个月有限质量保证
联系我们微信公众号:星河时代BIG WON服务,可获取免费在线技术支持

售后事项

1. 若商品有质量问题，请首先联系我们的客服进行登记。
2. 如需退、换商品，请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡和签等)，不影响二次销售。
3. 如需保修商品，请务必完整填写客户信息，联系电话，联系地址，正确填选售后要求与详细说明售后原因，将售后卡随货寄回(如不完整填写等终卡信息，恕无法提供任何的售后服务)。

24

25

注意事项

• 内含细小零件，请务必放在3岁以下儿童触及不到的地方，若不慎吞食或吸入，请立即就医。
• 请勿靠近火源使用产品。
• 请勿将产品暴露于阳光直射或高温的环境中。
• 请勿将产品置于潮湿或多尘的环境中。
• 请勿擦色产品或喷洒其表面。
• 请勿直接接触以导体接口，否则可能会导致故障。
• 请勿用力弯曲或拉扯线缆。
• 请使用柔软的干布清洁。
• 请勿使用汽油或稀释剂等化学品。
• 请勿自行拆卸、修理或改装。
• 请勿将产品用于非本设计用途以外的用途。对用于非原本用途而造成的事故或损坏，我们概不负责。
• 请勿重用长果，它可能会伤害你的眼睛。
• 如果您有任何有关产品质量的问题或建议，请联系我们或您当地的经销商。

26

27

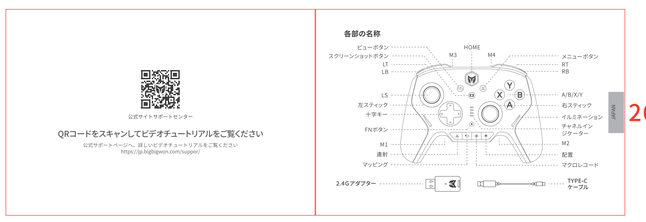

28

29

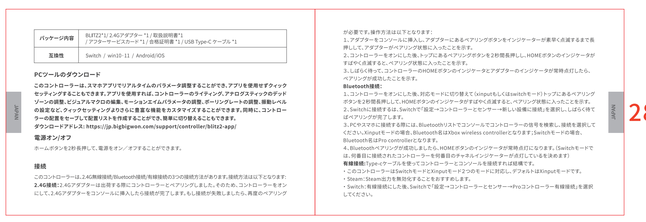

パッケージ内容	BLITZ2"1/2.4Gアダプター"1/取扱説明書"1 /アフターサービスカード"1/合格証明書"1/USB Type-Cケーブル"1
互換性	Switch / win10-11 / Android/iOS

PCツールのダウンロード

このコントローラーは、スマホアプリやリアルタイムのパラメータ調整することができ、アプリを使用せずクイックセッティングすることもできます。アプリを使用すれば、コントローラーのライティング、アナログスティックのデッドゾーンの調整、ビジュアルマクロの編集、モーションエイム/トラーターの調整、ボーリングレートの調整、振動レベルの設定など、クイックセッティングよりさらに豊富な機能をカスタマイズすることができます。同時に、コントローラーの設定をセーブし可能リストを作成することができ、効率よく切替えることもできます。
ダウンロードアドレス:https://jp.bigbigwon.com/support/controller/blitz2-app/

電源オン/オフ

ホームボタン2秒長押しで、電源をオン/オフすることができます。

接続

このコントローラーは、2.4G無線接続/Bluetooth接続/有線接続の3つの接続方法があります。接続方法は以下となります：
2.4G接続:2.4Gアダプターは出荷する際にコントローラーとペアリングしました。そのため、コントローラーをオンにして、2.4Gアダプターをコンソールに挿入したら接続が完了します。もし接続が失敗しましたら、再度のペアリングが必要です。操作方法は以下となります：
1. アダプターをコンソールに挿入し、アダプターにあるペアリングボタンをインジケーターが素早く点滅するまで長押しして、アダプターがペアリング状態に入ったことを示す。
2. コントローラーをオンにした後、トップにあるペアリングボタンを2秒間長押しし、HOMEボタンのインジケーターがすばやく点滅するとペアリングが開始したことを示す。
3. しばらく待って、コントローラーのHOMEボタンのインジケーターとアダプターのインジケーターが常時点灯したら、ペアリングが成功したことを示す。
Bluetooth接続:
1. コントローラーをオンにした後、対応モードに切り替えて（xinputもしくはswitchモード）トップにあるペアリングボタンを2秒間押しして、HOMEボタンのインジケーターがすばやく点滅するとペアリング状態に入ったことを示す。
2. Switchに接続するは、Switchで"設定→コントローラーとセンサー→新しい接続に接続」を選択し、しばらく待てばペアリングが完了します。
3.PCやスマホに接続する際には、Bluetoothリストでコンソールやコントローラーの名称を検索し、接続を選択してください。Xinputモードの場合、Bluetooth名はXbox wireless controllerになりますSwitchモードの場合、Bluetooth名はPro controllerとなります。
4. Bluetoothペアリングが成功しましたら、HOMEボタンのインジケーターが常時点灯になります。(Switchモードでは、何番目に接続されたコントローラーを何番目のチャネルインジケーターが点灯しているかを決めます)
有線接続: Type-cケーブルを使ってコントローラーとコンソールを接続すれば接続です。
・このコントローラーはSwitchモードとXinputモードの2つのモードに対応し、デフォルトはXinputモードです。
・Steam：Steam出力を無効化することをおすすめします。
・Switch:有線接続した後、Switchで"設定→コントローラーとセンサー→Proコントローラー有線接続」を選択してください。

30

31

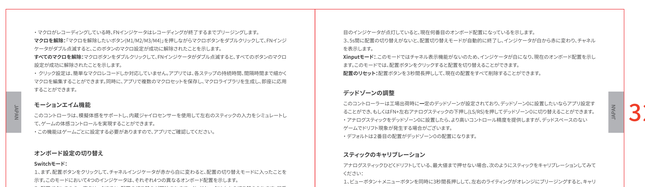

モードの切り替え

このコントローラーはSwitchモードとXinputモード2つのモードに対応し、対応しているモードに切り替えてからコンソールに接続できます。切り替え方法は以下となります：
1. B+ホームボタンを2秒間長押しし、ホームボタンのインジケーターが緑に変わるとXinputモードに切り替えます。
2. A+ホームボタンを2秒間長押しし、ホームボタンのインジケーターが赤に変わるとSwitchモードに切り替えます。
ご注意:BluetoothでiOSとAndroid間は接続するには、Xinputモードに切り替えてください。

マッピング

このコントローラーは2つのバックボタン(M1/M2) と2つのトップボタン(M3/M4)を搭載し、マッピングを設定することが可能です。設定方法は以下となります：
リマッピング を設定:
1. マッピングボタン(M1/M2/M3/M4)を押して、FNインジケーターがオレンジにブリージングするとマッピングが開始になります。
2. M1/M2/M3/M4にリマッピングしたい前面ボタンを押して、FNインジケーターがオレンジにダブル点滅すると、リマッピングが成功したことを示します。
リマッピング解除:リマッピングを解除するボタン(M1/M2/M3/M4)を押しながらFNをダブルクリックして、FNインジケーターがオレンジにダブル点滅すると、このボタンのマッピング設定が正常に解除されたことを示します。
すべてのリマッピングを解除:マッピングボタンをダブルクリックして、FNインジケーターがダブル点滅すると、すべてのリマッピングが解除されたことを示す。
・ クリック設定は、簡単のオンオフ制御しかできません。アプリで複雑の調整は可能です。複雑の強さを設定することができます。

モーションエイム機能

このコントローラーは、模擬体感をサポートし、内蔵ジャイロセンサーを使用して左右のスティックの入力をシミュレートし、ゲームの体感コントロールを実現することができます。
・この機能はゲームごとに設定する必要があるかもしれ、アプリでご確認してください。

オンボード設定の切り替え

Switchモード:
1. まず、配置ボタンをクリックして、チャネルインジケータが赤から白に変わると、配置の切り替えモードに入ったことを示す。このモードにおいて4つのインジケータは、それぞれ4つの異なるオンボード配置を示します。
2. 配置ボタンを1一度クリックすると、配置の切り替えが開始されます。インジケータは上から切り替えられます。将来目のインジケータが点灯しているとき、現在将来目のオンボード配置になっていることを示します。
3. 5秒間配置の切り替えがないと、配置切り替えモードが自動的に終了し、インジケータが白から赤に変わり、チャネルを表示します。
Xinputモード:このモードではチャネル表示機能がないのため、インジケータが白になり、現在のオンボード配置を示します。このモードでは、配置ボタンをクリックすると配置を切り替えることができます。
配置のリセット:配置ボタンを3秒間長押しして、現在の配置をすべて削除することができます。

デッドゾーンの調整

このコントローラーは三種類異なる一定のデッドゾーンが設定されており、デッドゾーンに設置したいならアプリ設定をすることができ、もしくはFN+左右のアナログスティックの下押しよ5秒を押してデッドゾーンの切り替えをすることができます。
・アナログスティックをデッドゾーンに設置したら、より良いコントロール精度を提供しますが、デッドスペースのないゲームでバフ効果が発生する場合がございます。
・ デフォルトは2番目の配置がデッドゾーンの配置になります。

スティックのキャリブレーション

アナログスティックがズレドリフトしている、最大値まで押せない場合、次のようにスティックをキャリブレーションしてみてください：
1.ビューボタン+メニューボタンを同時に3秒間長押しして、左右のライティングがオレンジにブリージングすると、キャリブレーション状態に入ったことを示します。

32

33

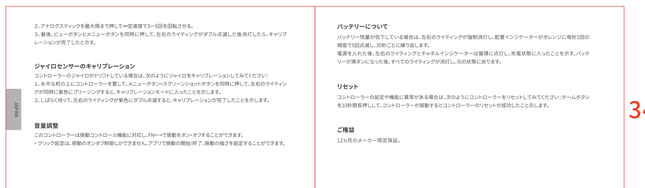

2.アナログスティックを最大限まで押して一定速度で3~5回を回転させる。
3. 最後、ビューボタンとメニューボタンを同時に押して、左右のライティングがダブル点滅した後消灯したら、キャリブレーションが完了したことを。

ジャイロセンサーのキャリブレーション

コントローラーのジャイロがドリフトしている場合は、次のようにジャイロをキャリブレーションしてみてください：
1. 水平な机の上にコントローラーを置いて、メニュー+ボタンスクリーンショットボタンを同時に押して、左右のライティングが同時に紫色にブリージングすると、キャリブレーションモードに入ったことを示します。
2. しばらく待って、左右のライティングが紫色にダブル点滅すると、キャリブレーションが完了したことを示します。

音量調整

このコントローラーは接続コントローラ機能に対応し、FN+←で接続をオン・オフすることができます。
・クリック設定は、簡単のオンオフ制御しかできません。アプリで複雑の調整は可能です。複雑の強さを設定することができます。

バッテリーについて

バッテリー残量が低下している場合は、左右のライティングが強制消灯し、配置インジケーターがオレンジに毎秒2回の頻度で5回点滅し、30秒ごとに繰り返します。
電源を入れた後、左右のライティングとチャネルインジケーターは徐々に点灯し、充電状態に入ったことを示す。バッテリーが満タンになった後、すべてのライティングが消灯し、元の状態に戻ります。

リセット

コントローラーの設定や機能に異常がある場合は、次のようにコントローラーをリセットしてみてください：ホームボタンを10秒間長押しして、コントローラーが振動すると コントローラーのリセットが成功したことを示します。

ご保証

12ヶ月のメーカー限定保証。

34

35

WARRANTY

12-month limited warranty from the date of purchase.

WELCOME TO THE BIGBIGWON COMMUNITY

The BIGBIG WON community is built to connect those who seek the winning edge. Join us Discord and Follow our social channels for the latest offerings, exclusive event coverage, and opportunities to score BIGBIG WON hardware.

@BIGBIG WON

BIGBIG WON DISCORD

36

37

保修卡	
（售后政策：非人为损坏，三个月包换，一年保修）	
用户姓名	
联系电话	
联系地址	
售后要求	□ 退　□ 换　□ 保修
售后原因	
订单编号	
（注：非意将官网途径购买的产品，售后问题请直接与购买商家联系）	

BIGBIG WON 公式LINEアカウントへようこそ

皆様により情報を届けるとともに日本市場のサービスを向上させるために、BIGBIGWONは公式LINEアカウントを開設致します。最新のセール情報、クーポンなどご覧ください。BIGBIGWONのユーザーでしたらぜひお友達を追加してください！

@BIGBIG WON

BIGBIGWON公式LINEアカウント

38

FCC Caution.
(1) § 15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
§ 15.21 Changes or modification warning
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.