POP-UP KART User Manual

Remote Control

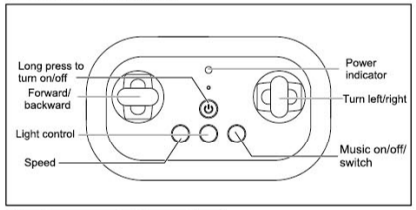

Battery and Charging

Battery installation for car

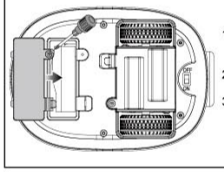

1. Loosen the screws on the battery cover using a Phillips screwdriver.
2. Load the DC 3.7V rechargeable battery (included).
3. Close the battery cover and tighten the screws.

Charging the battery of remote-controlled vehicle
(1) Remove the battery from the vehicle body;
(2) Connect the USB cable and the battery to the power supply and the USB indicator light is lit up in red.
(3) The USB indicator light goes out after the battery is fully charged.

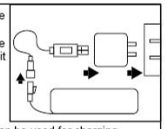

Caution:
1. Only the original battery and charger (USB) can be used for charging.
2. Do not leave during charging.
3. Keep the battery in a shade place to avoid direct sunlight.
4. Do not aim at the eyes or face while playing.

Battery installation for remote control



1. Loosen the screws on the battery cover using a Phillips screwdriver.
2. Load 2 x 1.5V AAA batteries (not included).
3. Close the battery cover and tighten the screws.

Trouble Shooting Guide

Problem	Cause	Solution
Remote control does not work	1. Batteries are installed incorrectly.	1. Check that the batteries are installed with correct polarity (+/-) as shown inside the battery compartment.
	2. The battery is low.	2. Replace new batteries.
	3. Vehicle is out of range of remote control.	3. Ensure the distance of remote control within 40 meters, point remote control at the vehicle.
	4. Fail to link remote control with vehicle.	4. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.
Vehicle does not work properly	1. The power switch is in the "OFF" position.	1. Turn the power switch to the "ON" position.
	2. The vehicle is slow to respond.	2. Charge the vehicle.
	3. Vehicle is out of range of remote control.	3. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.

Operations

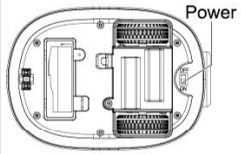

Turn on the power: Turn the power switch of the car to the "ON" position, then turn on the power switch of the remote control. The operation indicator of the remote control turns on, then the car and the remote control are paired.
Remote control distance: 20-30 meters.
Duration: Under full power, about 40 minutes in slow gear and about 30 minutes in fast gear.

Attention:
Please turn the power switch of the car to the "OFF" position when not playing, so as not to affect the service life of the battery.

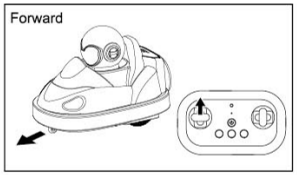

1. Forward
Push the left control lever upward and the car moves forward; keep pushing the lever upward and the car keeps moving forward.

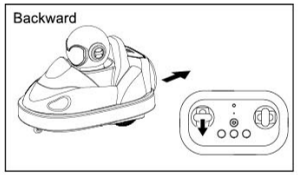

2. Backward
Push the left control lever down and the car moves backward; keep pushing the lever down and the car keeps moving backward.

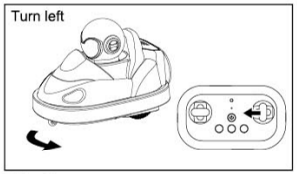

3. Turn left
Push the right control lever to the left, the car turns left; keep pushing the right control lever to the left, and the car keeps turning left and even rotates left continuously.

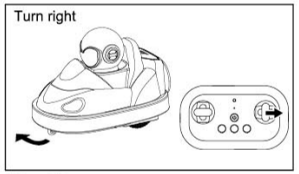

4. Turn right
Push the right control lever to the right, the car turns right; keep pushing the right control lever to the right, and the car keeps turning right and even rotates right continuously.

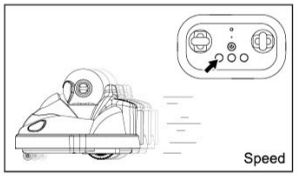

5. Speed
Press the "Speed" button, and the car enters the high-low speed switching mode; the speed gets faster and the maneuvering gets more flexible.

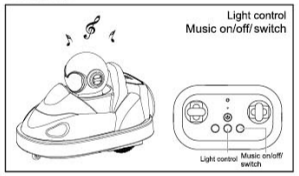

6. Music and light control
Press the Music button once to play music and press again to switch songs.
Press the Light button to emit colorful lights.

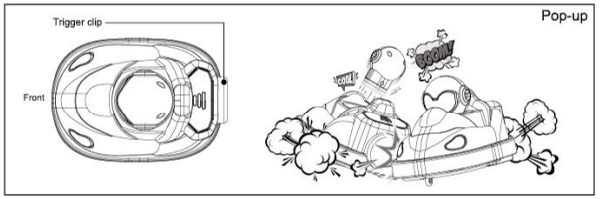

7. Pop-up
The car has a built-in trigger clip. When the car collides with another car and triggers the clip, the

⚠Warning

An adult must be present for supervision and instruction during use.
The User Manual contains important information and shall be preserved for reference.

POP-UP KART User Manual

Remote Control

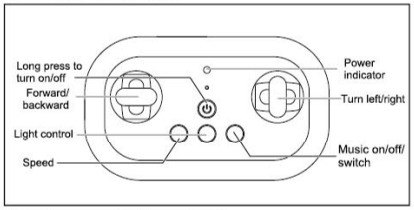

Battery and Charging

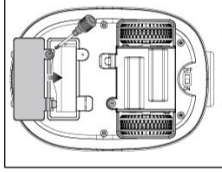

1. Loosen the screws on the battery cover using a Phillips screwdriver.
2. Load the DC 3.7V rechargeable battery (included).
3. Close the battery cover and tighten the screws.

Charging the battery of remote-controlled vehicle
(1) Remove the battery from the vehicle body;
(2) Connect the USB cable and the battery to the power supply and the USB indicator light is lit up in red.
(3) The USB indicator light goes out after the battery is fully charged.

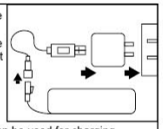

Caution:
1. Only the original battery and charger (USB) can be used for charging.
2. Do not leave during charging.
3. Keep the battery in a shade place to avoid direct sunlight.
4. Do not aim at the eyes or face while playing.



1. Loosen the screws on the battery cover using a Phillips screwdriver.
2. Load 2 x 1.5V AAA batteries (not included).
3. Close the battery cover and tighten the screws.

Trouble Shooting Guide

Problem	Cause	Solution
Remote control does not work	1. Batteries are installed incorrectly.	1. Check that the batteries are installed with correct polarity (+/-) as shown inside the battery compartment.
	2. The battery is low.	2. Replace new batteries.
	3. Vehicle is out of range of remote control.	3. Ensure the distance of remote control within 40 meters, point remote control at the vehicle.
	4. Fail to link remote control with vehicle.	4. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.
Vehicle does not work properly	1. The power switch is in the "OFF" position.	1. Turn the power switch to the "ON" position.
	2. The vehicle is slow to respond.	2. Charge the vehicle.
	3. Vehicle is out of range of remote control.	3. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.

Operations

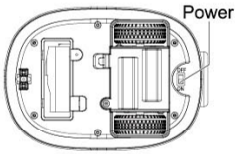

Turn on the power: Turn the power switch of the car to the "ON" position, then turn on the power switch of the remote control. The operation indicator of the remote control turns on, then the car and the remote control are paired.
Remote control distance: 20-30 meters.
Duration: Under full power, about 40 minutes in slow gear and about 30 minutes in fast gear.

Attention:
Please turn the power switch of the car to the "OFF" position when not playing, so as not to affect the service life of the battery.

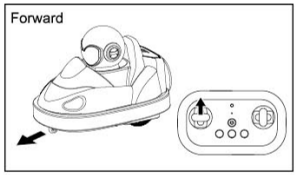

1. Forward
Push the left control lever upward and the car moves forward; keep pushing the lever upward and the car keeps moving forward.

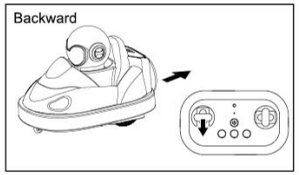

2. Backward
Push the left control lever down and the car moves backward; keep pushing the lever down and the car keeps moving backward.

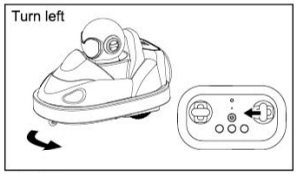

3. Turn left
Push the right control lever to the left, the car turns left; keep pushing the right control lever to the left, and the car keeps turning left and even rotates left continuously.

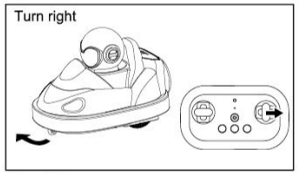

4. Turn right
Push the right control lever to the right, the car turns right; keep pushing the right control lever to the right, and the car keeps turning right and even rotates right continuously.

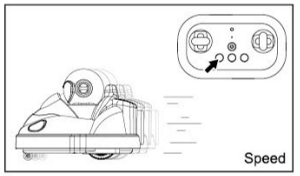

5. Speed
Press the "Speed" button, and the car enters the high-low speed switching mode; the speed gets faster and the maneuvering gets more flexible.

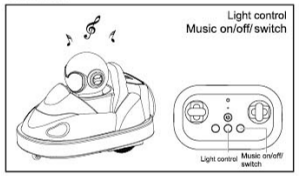

6. Music and light control
Press the Music button once to play music and press again to switch songs.
Press the Light button to emit colorful lights.

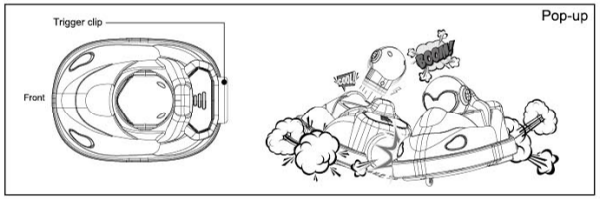

7. Pop-up
The car has a built-in trigger clip. When the car collides with another car and triggers the clip, the

⚠Warning

An adult must be present for supervision and instruction during use.
The User Manual contains important information and shall be preserved for reference.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.