USER MANUAL

K1 Karaoke Machine
Portable Wireless Microphone & Speaker

Product Diagram

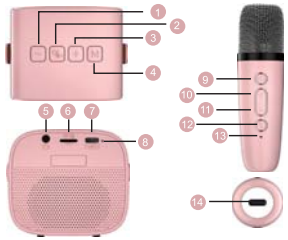

1		Short press to turn down volume of the speaker Long press to switch to the previous song
2		Long press to POWER ON/OFF the machine Short press to PLAY/PAUSE the music
3		Short press to turn up volume of the speaker Long press to switch to the next song
4		Long press to turn on/off LED dancing light Short press to switch modes(TF/Bluetooth)
5		Headphone Port
6		TF card port
7		Charging port 5V-1A
8		Working Indicator
9		Press and hold for 2-3s to turn ON/OFF the microphone. Short press to PAUSE/PLAY music remotely.
10		Short press to turn up microphone volume, there are 5 levels of mic volume. Long Press 2-3s to turn up **echo volume**, there are 5 levels of echo volume. (The default echo is 0)
11		Short press to turn down microphone volume, total 5 levels of mic vol. Long Press 2-3s to turn down **echo volume**, total 5 levels of echo vol.(The default echo is 0)
12		Short press to switch between 4 kinds of magic voices Long press 2-3s to remove/restore music vocals (Part of IOS music not supported)
13		Working Indicator
14		Charging port for microphone 5V-1A

How to use the speaker?

1.Power ON/OFF: Press and hold for 2-3s to turn ON/OFF the speaker.And short press + - button to adjust volume of the speaker.

2.Bluetooth Connection: Turn on the speaker, and press **M** button to switch to Bluetooth mode,there is a voice" Bluetooth", and search the Bluetooth name"**K1**", click and paired.
Microphone FCC ID: 2AZY5K1M, Bluetooth audio FCC ID: 2AZY5K1S , they are used together.

3.Previous/Next Song: Long press + - and hold for 2-3s to switch to next/previous song.

4.Play music via TF card: Prepare a micro SD card loaded with MP3 songs, plug the card into TF card slot of the speaker, it will auto play.

How to use the microphone?

1.Power ON/OFF

Press and hold for 2-3s to turn ON/OFF the microphone. The mic and speaker will auto connect with each other when both power on.

2.How to adjust microphone volume?

Short press + - to turn up/down microphone volume, there are 5 levels of mic volume. When reach to the highest or the lowest volume, there will be a prompt voice" du du"

3.How to adjust echo volume?

Long Press + for 2-3s to turn up echo volume, long press once to turn up 1 level, total 5 levels of echo vol.
Long Press - for 2-3s to turn down echo volume, long press once to turn down 1 level, total 5 levels of echo vol.

Note: The default echo is 0, pls long press + to turn up echo volume to suitable level for better singing/karaoke effect.

4.Magic Sound Effect

Short press to switch between 4 kinds of magic voices
Long press 2-3s to remove/restore music vocals (Part of music for IOS not supported)

How to Charge

1.Take out the type-C charging cable included in the package

2.Plug type-C end of the cable into the machine or microphone, another USB end into normal USB charging adaptor/PC Port (5V, 1A-2A)

3.When the speaker/mic is being charged, the indicator light turns red. Once it is fully charged, the indicator light will turns off.

FAQS

1.Bluetooth can't be paired

◆Press M button to switch to Bluetooth mode first
◆Distant Bluetooth connection, try to adjust the distance between the karaoke machine and the phone.
◆The karaoke machine already paired with other phone. First turn off Bluetooth of other phones and restart the machine, try to pair with phone again.

2. The mic is no sound;

◆ Try to charge the mic and use it
◆ Try to long press of the mic to turn on
◆ The speaker and mic are not connected successfully. Pls restart them and turn up mic vol to try again.

3. The machine no sound when playing music;

◆Check whether the Bluetooth is connected successfully
◆Check if the sound was paused via mic end, if yes, short press of the mic to PLAY/PAUSE the music
◆Check if the phone volume is turned up
◆Short press + of the speaker to trun up speaker's volume

4.Presence of noise

◆Environmental noise, or mobile phone signal interference, Adjust the distance between karaoke machine and the cellphone, and adjust the distance between mic and machine

5. Long press the power button and the machine/mic indicator does not light up;

◆ Try to charge the device/mic and use it

HOW TO USE THE MICROPHONE?

MODEL: K1

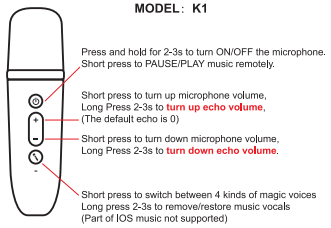

HOW TO USE THE SPEAKER?

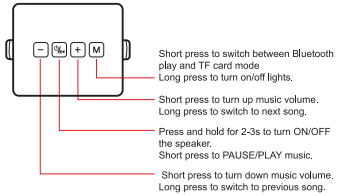

取扱説明書

K1 カラオケセット
ワイヤレスマイク&スピーカー

各ボタンの機能紹介

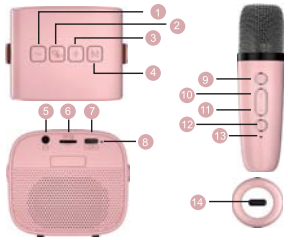

1	−	短く押すと音量を下げる / 長押しすると前の曲を再生する
2		長押しすると電源がON・OFFになる / 短く押すと音楽の再生/一時停止する
3	+	短く押すと音量を上げる / 長押しすると次の曲を再生する
4	M	長押しするとLEDライトがON・OFFになる 短く押すとTF/Bluetoothモードを切り替える
5		イヤホンジャック
6		TFカードリーダー
7		充電ポート(5V-1A)
8		インジケーター

9		約2-3秒間長押しするとマイク電源がON・OFFになる 短く押すとマイクで音楽の再生/一時停止する
10	+	短く押すとMICモードで音量が上げる 約2-3秒間長押しするとECHOモードで音量が上げる （ECHOモードで音量の初期値は0%です）
11	−	短く押すとMICモードで音量が下げる 約2-3秒間長押しするとECHOモードで音量が下げる （ECHOモードで音量の初期値は0%です）
12		短く押すと音声変更モードに入る 長押しするとボーカル音声を除去/再開する
13		インジケーター
14		充電ポート(5V-1A)

カラオケマシンの使い方

***1.*電源 ON/OFF:** ボタンを約2-3秒間長押しして電源がオンになります、+/-ボタンを短く押すことで音量を調節可能です。

2.Bluetooth接続: カラオケマシンの電源をONにして、Mボタンを押すと「Bluetooth」提示音が鳴ったら、ペアリングモードになります。スマホの Bluetooth表示画面にて「K1」を選択し、ペアリングが完了します。

3.前の曲/次の曲: +/-ボタンを約2-3秒間長押しすると前の曲/次の曲を再生する。

***4.*TFモード:** 音楽MP3データを保存したMicro SDカードをTFカードリーダーに挿入すると、自動的に音楽を再生できます。

ワイヤレスマイクの使い方

***1.*電源ON/OFF:**
マイクの ボタンを約2-3秒間長押しして電源がオンになり、自動的にカラオケマシンに接続されます。

2.MICモードで音量調整
+/-ボタンを短く押すことで音量を調節して、歌い始めましょう。音量は5段階調整でき、最大もしくは最小音量になると「dudu」と音が鳴ってお知らせします。

***3.ECHO*モードで音量調整**
+/-ボタンを約2-3秒間長押しすることでECHO音量を調節して、音量も5段階調整可能です。

注意: ECHOモードで音量の初期値は0%ですので、使用前に音量を調節してください。

4.音声変更モード:
ボタンを短く押すと、4種類の異なる音声がに変えることができます。
ボタンを約2-3秒間長押しするだけでボーカル音声を除去/再開することができます。

充電方法

1.付属のType-C充電ケーブルをパッケージから取り出します。

2.Type-C充電ケーブルでカラオケマシンまたはマイクに接続し、もう一方の USB充電端子をACアダプタ/PCポートに接続します。（5 V、1 A-2 A）

3.カラオケマシン/マイクを充電する時、LEDインジケーターが赤色に点灯し、充電が完了すると消灯します。

よくある質問

1.Bluetoothがつながらない
◆ Mボタンを押してペアリングモードになります。
◆ 距離を近づけて再度ペアリングを試みてください。（超距離接続、電気信号が複雑／遮蔽物がある環境では、Bluetoothがつながらない可能性があります。）
◆ 他のBluetooth機器と接続されている可能性があります。Bluetooth機器側でカラオケマシンの接続履歴情報を削除して、もう一度ペアリングしてみてください。
それでも改善されない場合は、弊社にお問い合わせください。お問い合わせ方法:[アカウントサービス]ー[注文履歴]ー[出品者に連絡する]

2.マイクから音が出ない
◆ マイクを充電してからお使いください。
◆ ボタンを長押しすると、マイク電源がONになります。
◆ カラオケマシンとペアリングをしていない場合は、カラオケマシンとマイクを再起動してみてください。

3.カラオケマシンから音が出ない
◆ ペアリングが正しく行われているかを確認してください。
◆ マイクで音が一時停止しているかどうかを確認してください。もしマイクで音楽を再生する場合は、ボタンを短く押すと音楽を再生/一時停止を切り替えります。
◆ スマホで音量を調整してください。
◆ カラオケマシンで+/-ボタンを短く押すと音量を調整してください。

4.ノイズ（雑音）が出る
◆ 超距離接続、電気信号が複雑／遮蔽物がある環境では、中断・ノイズが発生する可能性があります。通信距離と使用環境を再度確認してください。

5.カラオケマシン/マイクの電源ボタンを押してもLEDインジケーターが点灯しない・反応しない
◆ 充電してからお使いください。

ワイヤレスマイクの使い方

型番: K1

約2-3秒間長押しすると電源がON・OFFになる / 短く押すと音楽の再生・一時停止する

短く押すとMICモードで音量が上げる
約2-3秒間長押しするとECHOモードで音量が上げる

短く押すとMICモードで音量が下げる
約2-3秒間長押しするとECHOモードで音量が下げる

短く押すと4種類の異なる音声がに変える
約2-3秒間長押しするだけでボーカル音声を除去/再開する

カラオケマシンの使い方



短く押すとペアリングモード・TFモードを切り替える長押しするとLEDライトのON・OFFを切り替える

短く押すと音量を上げる / 長押しすると次の曲を再生する

約2-3秒間長押しして電源がON・OFFになる/短く押すと音楽の再生・一時停止する

短く押すと音量を下げる / 長押しすると前の曲を再生する

カスタマーサービスについて

一年間メーカー保証
◆ 品質問題のある製品には30日間以内の返品、1年間無料交換の保証が付いています。
◆ もしご不明の点がございましたら、ご遠慮なくお問い合わせください。
◆ support@verkstar.com

FCC statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.