143*210mm
105g铜版纸 骑马钉 四色+1专 PANTONE 201C

注意：信息备注 此页不做印刷

Pioneer

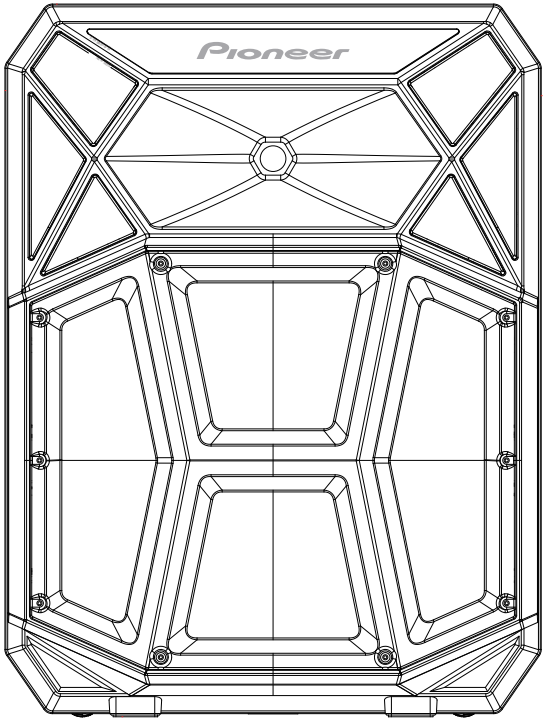

PSX615

BLUETOOTH® V5.4

PORTABLE PARTY SPEAKER

■ INDEX

Warnings 1
Product Specifications 2
User's General Instructions 3-15
Warranty 16-19

- WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

■ SPECIFICATION

- Model : PSX615
- Bluetooth : V5.4
- 700 Watts Max of Audio Power
- Sub-woofer: 15" (inch)
- Frequency Response: 40Hz-20KHz
- Product Dimensions (L×W×H) Inches: 20.71×13.35×27.56
- Tweeter: 1" (inch)
- AC Power 100-240 Volt
- THD + Noise: <10%
- S/N Ratio: >65dB
- SPL :110dB±10%
- RGB LED Lights
- USB Output/Input 5V⎓1A

■ WHAT IS IN THE BOX

1. Pioneer PSX615 PA Speaker
2. AC Power Cable
3. Wireless Microphone
4. Telescoping Tripod Speaker Stand
5. User Manual (with Warranty Statement)
6. Quick Start Guide

- Check that you have all of the above items.

■ IMPORTANT SAFETY INSTRUCTIONS

• TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE SCAN BE FULLY INSERTED TO PREV ENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.

The lightning flash with arrow- head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

❶ **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the product is operated.

❷ **RETAIN INSTRUCTIONS** -The safety and operating instructions should be retained for future reference.

❸ **HEED WARNINGS** -All warnings on the product and in the operating instructions should be adhered to.

❹ **FOLLOW INSTRUCTIONS** -All operating and use instructions should be followed.

❺ **CLEANING** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.

❻ **ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

❼ **ACCESSORIES** - Do not place this product on an unstable cart, stand, tripod, bracket, or table.The product may

fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product.Any mounting of the product should follow the manufacturer instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved care-quick stops,excessive force and uneven surfaces may cause the product and cart combination to overturn.

❽ **VENTILATION**- Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa,
or other similar surface. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided or the manufacturer*instructions have been adhered to.

❾ **POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

❿ **GROUNDING OR POLARIZATION** - This product may be equipped with a polarized alternating-current line plug(a plug having one blade wider than the other).This plug will fit into the power outlet only one way. This is a safety feature: If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should

still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

⓫ **POWER-CORD PROTECTION** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point of exit from the product.

⓬ **NON-USE PERIODS** - The power cord of the product should be unplugged from the outlet when left unused for long periods of time.

⓭ Do not use this apparatus near water.

⓮ Do not install near any heat sources such as rad ators, heat reg sters, stoves or other apparatus (including amplifiers) that produce heat.

⓯ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power - supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

⓰ Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected fr.om the mains socket outlet completely.

■ BUTTONS AND FUNCTIONS

1. LED Display with Clock
2. USB Port charge other devices
3. BT (Bluetooth • Source) Button
4. Source Button
5. Previous (back arrow) Button
6. Next (forward arrow) Button
7. Play/Pause Button
8. Number (Preset) Buttons
9. Master Volume Knob
10. Microphone Gain Knob
11. Microphone Echo Knob
12. Mic & Instrument Combo XLR-1/4" Input 1
13. Mic & Instrument Combo XLR-1/4" Input 2
14. AC Input
15. Clock/Microphone pairing button
16. Power (Green) LED Indicator Light
17. Bluetooth (Blue) LED Indicator Light
18. Wireless Mic Indicator Light
19. Lighting Mode Button
20. Auracast Button
21. Bass/Mid/Treble Button
22. Bass (Boost) Button
23. XLR-Out
24. XLR-In
25. AUX-in (3.5mm)
26. On/Off Switch

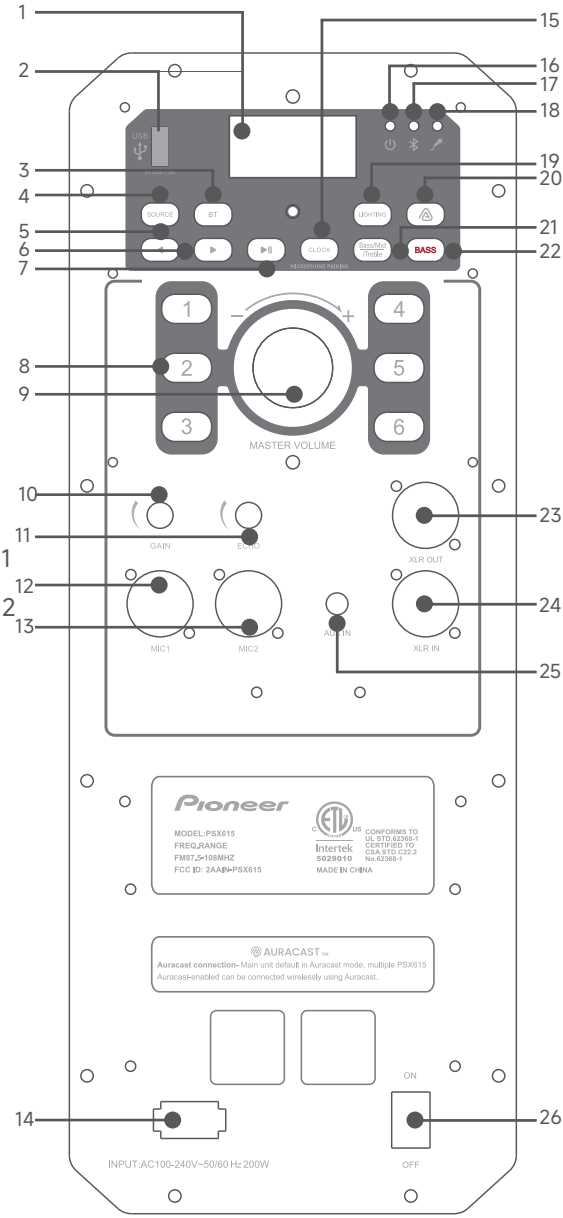

■ Power ON/OFF Switch:

- Toggle switch to ON position:
  (1)Green power LED Indicator light and LED Display will power on.
  (2)The unit voice promp will say, "Power on."
  (3)Automatically enters into Bluetooth pairing status
- Toggle switch to OFF position and all LED Indicators and the LED Display will turn off.

■ BT (Bluetooth) Button:

- Switch to Bluetooth Audio Source:
  (1)While in another audio source, press the BT Button to switch to Bluetooth mode or cycle though audio sources using the source button.
  (2)The unit will automaticelly disconnect from the cur rent device.
- Bluetooth pair audio device:
  (1)Set unit source to Bluetooth.
  (2)Long press BT Button for 2 seconds to enter into pairing status.
  (3)Select "Pioneer PSX615" from your Bluetooth enabled audio device.
  (4)The unit voice promp will say, "Connected," when successfully paired.
  (5)The blue Bluetooth indicator light will remain on.
  (6)If the signal moves out of range the blue Blue tooth indicator light will blink and disconnect if the connection is not re-established after 5 minutes.
- Disconnnect Bluetooth audio device connection:
  (1)Set unit source to Bluetooth.

(2)Long press BT Button for 2 seconds to enter into pairing status.
(3)The unit voice promp will say, "Disconnected".
(4)The blue Bluetooth LED Indicator light will begin to flash.
(5)Unit will enter pairing status.

■ Play/Pause Button:

- Play/Pause Button works with Bluetooth/USB Playback
  (1)While audio is playing, press the Play/Pause Button to pause playback.
  (2)While audio is paused, press the Play/Pause Button to resume playback.

■ USB Port:

- Insert a USB drive to playback stored MP3 files. It can also charge other devices with a maximum output of 5V 1A.

■ Master Volume Knob:

- Increase overall volume in playback mode:
  (1)Defualt volme level is 10.
  (2)Rotate master volume knob clockwise. The power LED Indicator blinks when the max level of 32 is reached.
- Decrease overall volume in playback mode:
  Rotate master volume knob counter-clockwise.
- The power LED Indicator blinks when the minimum volume level of 0 (mute) is reached.

■ Microphone / Instrument Control:

- Combo XLR and 1/4" Input Ports (Mic 1 and Mic 2):
Inputs for compatible wired microphones or instruments.
- Gain Knob (Mic 1 and Mic 2):
  Rotate the gain knob clockwise to increase or

counter clockwise to decrease the level on both channels simultaneously.

- Echo Effect Knob (Mic 1 and Mic 2):
  Rotate the echo knob clockwise to increase or counter clockwise to decrease the echo on both channels.

■ Previous and Next (arrow) Buttons:

- USB playback source controls:
  The previous/next buttons will change the audio track.
- FM radio source controls:
  (1)LED display FM indicator icon will light up in FM mode.
  (2)Short press the previous or next button to adjust the FM radio frequency shown on LED display.
  (3)Long press the previous or next button to search for radio stations.
- Bluetooth source controls:
  (1)LED display BT indicator icon will light up in Blue tooth® mode.
  (2)The previous/next buttons will change the audio track.

■ SOURCE Button:

- Short press the SOURCE button to cycle though the different audio sources:
  BT (Bluetooth) -->AUX--> FM (radio)--> USB Playback

■ BASS Button:

- Press the button to turn on/off the BASS (boost).
  The LED will display "b on" or "b off".

■ XLR In/Out:

- While in audio sources: AUX-in, BT (Bluetooth), FM radio,

and USB Playback connect the unit to another active (powered) speaker via the XLR line out.

■ Using Auracast™ on Your Speaker:

Auracast is a Bluetooth audio broadcasting technology that allows one device to share its audio with multiple receivers. Whether you're syncing multiple speakers for an immersive sound experience or broadcasting to head_ phones, Auracast makes it seamless.

How to Connect AURACAST

A. How to find the TX and RX

TX (Transmitter) Mode Setup:

- Connect your Bluetooth enabled audio device to the PSX615 speaker.

Press the Auracast button on the PSX615 to activate Transmitter (TX) mode.

RX (Receiver) Mode Setup:

- Power on a second PSX615 speaker without pairing it to any Bluetooth enabled audio device.
- Press the Auracast button on the second PSX615 to activate Receiver (RX) mode and scan for available broadcasts.

TX/RX Range

- The receiving distance range between TX and RX is 10 meters, and the distance between the Bluetooth device and the TX speaker is 5 meters.

B. The Auracast indicator

- When the **transmitting PSX615 Auracast button is solid purple** and the **receiving PSX615 Auracast button is flashing red**, the speakers are in Search Mode.
- When the **transmitting PSX615 Auracast button is solid purple** and the **receiving PSX615 Auracast button is solid red**, the speakers are connected.

C. Setting Auracast in your Bluetooth device (please make sure your device is compatible with the Auracast function) **When using the Bluetooth device Auracast**, Access Auracast through your device's settings (e.g., **Settings> Connections > Bluetooth** > Broadcast sound using **Auracast**).

- Here, you can Name Your Broadcast: Customize a unique identifier for your audio stream
- Set Privacy: PSX615 privacy code is "8888".

■ 1-6 Number Button:

- Equalizer presets available in BT (Bluetooth) and AUX audio sources.
  Short press a number (1-6) button to set the preset. The LED display will show the selected equalizer setting: "**EQ1 OUTDOOR、EQ2 INDOOR、EQ3 ROCK、EQ4 JAZZ、EQ5 POP、EQ6 DEFAULT**".
- Save and select FM Radio station presets.
  Short press a number (1-6) button to set the preset station. The LED display will show the selected preset: "P1, P2, ... P6."
  Long press a number (1-6) button to save an FM radio station as a preset. The LED display will show the saved preset: "P1, P2, ... P6."

■ BASS/MID/TREBLE Buttons:

A. Bass adjustment during playback:

(1)Press the BASS/MID/TREBLE button once to enter bass level status.

(2)The LED display will show the default setting of"b 00".

(3)Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.

B. MID adjustment during playback:

(1)Press the BASS/MID/TREBLE button twice to enter MID level status.

(2)The LED display will show the default setting of"c 00".

(3)Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.

C. Treble adjustment during playback:

(1)Short press the BASS/MID/TREBLE button triple to enter treble level status.

(2)The LED display will show the default setting of "t 00".

(3)Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.

■ CLOCK/Microphone pairing button:

- Turn on the unit, press the **CLOCK/Microphone pairing button**, the display will show "12:00".
- After connecting the Bluetooth device, the popup window on the phone needs to have access to synchronize with the time on the smartphone.
- The time will be refreshed each time you press the CLOCK/Microphone pairing button, and the display will show the current time for 10 seconds, and it will be back to show **"BT".**
- If the Bluetooth device is disconnected from the unit, the time won't show on the display. Press the CLOCK/Microphone pairing button, the display will show "12:00".
- When the unit is on **AUX**, **USB**,or **FM** mode, press the CLOCK/Microphone pairing button, the display will show "12:00".

• To pair the included wireless microphone, long press the CLOCK/Microphone pairing button, for 5 secs. Long press for 5 seconds to connect or disconnect wireless microphone.

Wireless Microphone Pairing (included microphone):

• Long press the **POWER button** on wireless microphone for 2 seconds.

• Double Click Wireless Microphone button, enter pairing mode, the **White** LED is flashing.

• Long press on PSX615 **CLOCK/Microphone pairing button**, for 5 seconds to pair wireless microphone, the white LED is flashing.

• After a succesful connection, both the **White** LED on the main unit and on the speaker will become a white solid.

• The wireless microphone and speaker has been successfully connected and can be used.

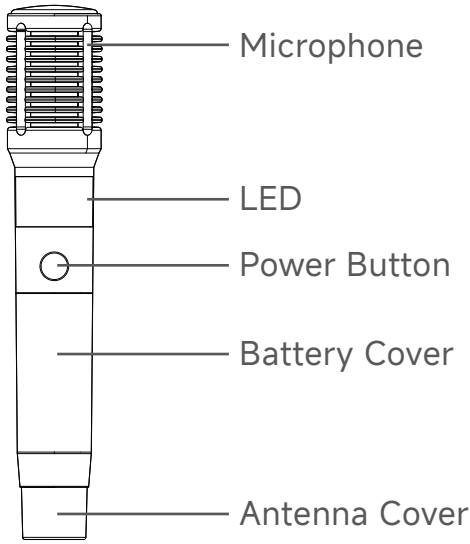

■ LIGHTING Button:

• Short press the LIGHTING button to cycle through the 15 available light modes. The LED display will indicate mode number.

Light modes included:
DANCE-> SPIN-> SWIRL-> DYNAMIC-> FOLLOW-> SPARK-> SUNSET-> MOOD-> PACE-> RED-> GREEN-> BLUE->AMBER->PURPLE->TEAL-> OFF

NOTE: Only the following modes work with the FM Radio audio source:
RED->GREEN-> BLUE->AMBER->PURPLE->TEAL-> OFF

• Long press the LIGHTING button to turn off the RGB LED modes.

■ FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference-in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Note:The Grantee is not responsible for any changes or modifications notexpressly approved by the party responsible for compliance. such modificationscould void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance mustbe at least 20 cm between the radiator and your body, and fully supported bythe operating and installation.

2.4G Wireless Microphone - 02.
PSWMIC-02

The device can be used in portable exposure condition without restriction.

■ RF Exposure Statement

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

■ Limited Warranty

This Pioneer branded “Product”, marketed as new, in the original carton to the original purchaser (“Product”), is warranted by JSP, LLC against manufacturing defects in materials and workmanship for a limited warranty period of one (1) Year for labor and one (1) year for parts.

This Limited Warranty is conditioned upon proper use of the Product by you, the purchaser.This limited Warranty does not apply to store-display products and products sold as a “marked down”, “Special”in “as is”condition,“close outs” liquidation and clearance sales”, open box”, products missing accessories,or not fault found. Proof of purchase in the form of Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the Limited Warranty period. The Bill of sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtain Limited Warranty Service.

This Limited Warranty begins on the original date of purchase and is valid only on Products purchased through our authorized dealers and used in the United States, Canada and Puerto Rico, by the original purchaser. To receive warranty service, the purchase must first contact us for problem deter-

mination and service procedures. The original dates bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the Limited Warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.Product freight must be prepaid by you, the original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.
If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.
This Limited Warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product and shall not apply to the following, including, but not limited to:
Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems.

utilities. services, hardware. supplies, accessories, applications. installations, repairs. external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise. echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY ASTHE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS

PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

PIONEER is a registered trademark of Pioneer Corporation, and is used under license.

The Bluetooth and Auracast word marks and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners. For Customer Service email us at service@pioneeraudiousa.com

This product is manufactured, distributed, serviced and warranted exclusively by E & S International, Inc., either directly or through JSP, LLC. 7801 Hayvenhurst Ave, Van Nuys CA 91406.