材质：105g 铜版纸　　尺寸：90*120mm　　印刷: 单黑双面印刷　　装订方式: 折页

# FLOOR LAMP

## User Manual

Sky LED Torchiere Floor Lamp

## Introduction

Thank you for choosing our Sky LED Torchiere Floor Lamp. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact us by email with your order number and details.

## Package Contents

- 1x LED Floor Lamp
- 1x Lamp Base
- 1x User Manual
- 6 x Iron Pipes
- 1x Remote Controller
- 1x Power Adapter with Cable
- 2x AAA Batteries

**Product Structure**

## Specification

| | |
|---|---|
| Model | MF30002R |
| Material | Metal + PC |
| Light Source | 36W LED+2.5W per color(RGB) |
| Power Consumption | 36W |
| Luminous Flux | 3600 lm |
| Dimmable | Yes (5%-100% full dimming) |
| Color Temperature | 3000K-4000K-5000K-6500K(4LevelsAdjustable) |
| Lifespan | 40,000Hrs |
| Battery for Remote Controller | AAA x 2 |
| Remote Distance | Within 8m/26.2ft |
| Input Voltage | AC100-240V 50/60 Hz |
| Adapter Voltage | DC24V 1.5A |
| Product Size | 10"(D) x 70"(H) |

## Installation

**It's very easy to install, as shown below:**

**Stepl:** Connect the iron pipe with the light base by spinning clockwise.

**Step2:** Then connect the iron pipe with the other iron pipes by spinning clockwise.

**Step3:** At last, connect the iron pipe with the LED round light by spinning clockwise.

The installation is finished, then plug in adapter, you can button control or remote control the light.



Make sure the remote control is matching the lamp : power plug in the lamp , use the remote to control the lamp. Normally the remote controls the lamp perfectly ;

If remote control doesn't work for the lamp, please re-match the Remote and Lamp.

Matching procedure :

1. Unplug the floor lamp.
2. Press and hold the CCT power button on the remote control,

3. Plug in the floor lamp and wait for the light to turn on.Keep on pressing the CCT power button during this procedure.

4. Release the CCT power button if LED lights flashes, matching successfully. Please contact us via mail if it still doesn't work.

## Usage

There are two ways to control: Button control or Remote control.

### Button control

Please touch the top button to control the lamp

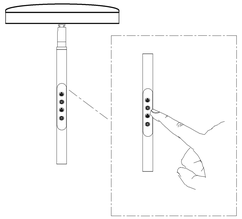

**CCT ON/OFF Button:**
Short press to turn on/off.

**CCT Color Temperature and Brightness:**
Short press to change color temperature 3000K-6000K
Long press to stepless adjust brightness.

**RGB ON/OFF Button:**
Short press to turn on RGB mode and change Seven colors
Long press to turn off RGB mode
When RGB Seven colors jump mode and Seven colors gradient mode are on, short press to pause and restart.

**RGB Mode:**
Press this to switch Seven colors jump mode and Seven colors gradient mode
When RGB Seven colors jump mode and Seven colors gradient mode are paused, short press to restart .

## Remote Control

The remote distance is within 26.2ft. It is magnetic so that you can put it on whatever contain iron, such as the iron pipe, fridge and so on.

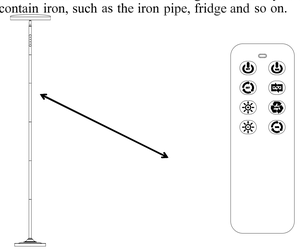

**CCT ON/OFF Button:**
Short press to turn on/off

**CCT Color Temperature+/-:**
Short press to change color temperature 3000K-6000K
Long press to stepless adjust color temperature.

**CCT Bright+:**
Short\long press the buttons to stepped enhance the brightness as you like.

**CCT Bright-:**
Short\long press the buttons to stepped lower the brightness as you like.

**RGB ON/OFF Button:**
Short press toturn on/off..

**RGB Seven colors switching mode :**
Seven colors change one by one .

**RGB jump mode:**
Seven colors quick change.

**RGB gradient mode:**
Seven colors gradually changing.

## How to adjust the lighting angle?

85 Degree Adjustable at the vertical direction. 350 Degree Adjustable at horizontal direction. Just as the following image shown

## Product Care

- Please do not bend violently the lamp head to avoid damage when adjusting the angle of the lamp.
- Please read the user manual before use
- Suggest Indoor use. It is non waterproof. Do not use this product in humid environments or athigh temperatures
- Cut off the power when cleaning it or not using it
- Do not useit exceed the voltage, the proper voltage for US is AC100- 240V, 50/60Hz.
- Please use the included power adapter, do not use other brand's adapter. Do not plug or unplug the power cord with wet hands
- Please stop use it if there is any defective issues found in the product

## Guarantee

Remote Control Floor Uplight lamp is backed by **12 MONTHS** product warranty. For questions, assistance, or support, please contact the Customer Service by e-mail with your order number and product model number.

We will send you further information about the return or the exchange.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.