Quick Setup Guide

Model: QN-I-270

Contents

Glossary....3
Icon description....3
Before you begin....4
Package contents....4
Prerequisites....4
Network requisites....4
Connect Access Point....4
Step 1 – Create new account on Quantum® RUDDER....5
Step 2- Basic setup....6
Step 3- Setting up device IP address....7
Step 4 – Set the management mode....7
Step 5 - Access Point quick setup inRUDDER Mode....8
Step 6 - Access Point quick setup in standalone mode....13
Reset Access Point to factory defaults....16
Access Point default login detail....16
FCC statement....17

ZENEXIM
quantum.zengroup.co.in

Manufactured in India by:
Zen Exim Pvt. Ltd
Reg. office
2nd Floor, Shakti 404, Opp. New Gurudwara,
S.G. Highway, Ahmedabad -380054 | Gujarat | India

This Quick Setup Guide provides step-by-step instructions on how to set up Quantum® Networks Access Point. After completing the steps described in this Guide, you will be able to install the Access Point (AP) on-site and provide wireless network access to users.

Glossary

Feature	Description
Management Mode	**Standalone:** In this mode, each device is configured and managed individually. It can be useful in scenarios with few devices or sites with limited Internet access. **RUDDER:** In this mode, devices are configured and managed from a central controller hosted in the cloud. It offers many more sets of features as compared to the Standalone mode.
Operation Mode	**Bridge:** In this mode, the device connects to a network over an ethernet cable and extends the coverage over wireless. **Router:** In this mode, the device connects to Internet Service Provider directly using DHCP / Static IP / PPPoE protocols and shares Internet access over a wired or wireless network to users.
Quantum® RUDDER	**Quantum® RUDDER** is a cloud-hosted controller which can be used to configure, manage & monitor devices associated with it. It can be accessed from https://rudder.qntmnet.com

Icon description

Icon on GUI	Description
	Click to get the option for the firmware update.
	Click to get back to the home page.
	Click to check the documentation.
	Click to check device information.

Before you begin

Your Quantum® Networks Access Point can work in **"Standalone Mode"** or can be managed by **"RUDDER"**.

Package contents

- Access Point.

Prerequisites

- Internet access.
- Desktop / Laptop / Handheld device.
- 802.3af / 802.3at PoE Switch / PoE Injector.
- 48VDC 2A DC power adapter.

Network requisites

The listed ports must be opened or allowed in the network firewall.

- TCP: 80, 443, 2232, 1883.
- UDP: 123, 1812, 1813.
- Allow rudder.qntmnet.com and reports.qntmnet.com in the destination field.

Connect Access Point

- After unpacking Access Point, connect it to an Internet source.
- Plug-in Ethernet cable of Access Point.
- Power on Access Point by using 802.3af / 802.3at PoE Switch / PoE Injector.

Note: Access Point must have Internet access during initial setup for the first time toactivate the device, warranty and support.

ZENEXIM
quantum.zengroup.co.in

Manufactured in India by:
Zen Exim Pvt. Ltd
Reg. office
2nd Floor, Shakti 404, Opp. New Gurudwara,
S.G. Highway, Ahmedabad -380054 | Gujarat | India

Step 1 – Create new account on Quantum® RUDDER

- Browse https://rudder.qntmnet.com.
- Click "**Create New Account"** to sign up for a new account.

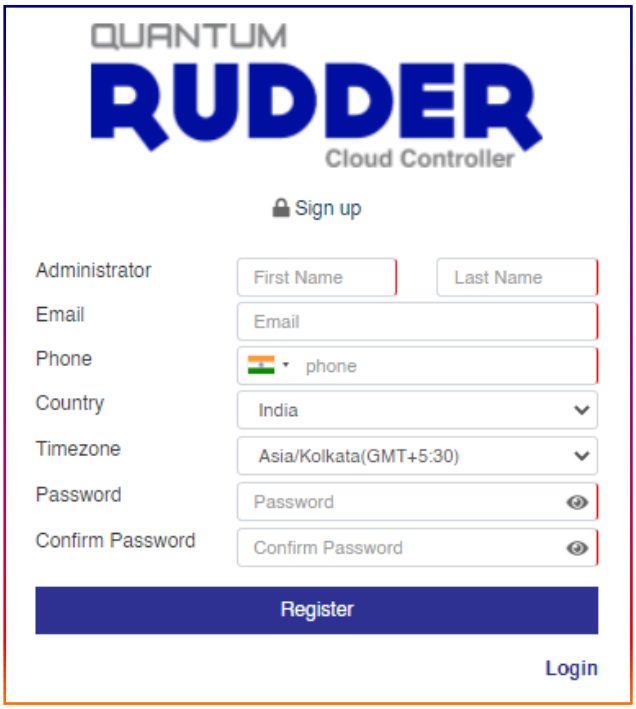

Figure 1

- Follow the steps as guided on the screen for Registration.
- Verify Quantum® RUDDER account from registered email id.
- Once the account gets validated, it turns the page to "Add License Key" (User will get the license key from respective (Partner / Resource))
- Account on Quantum® RUDDER (Quantum Networks® Cloud Controller) is now ready to use.

Step 2- Basic setup

- Connect the WAN port of the Access Point to the network with Internet access.
- You should see a new wireless network with SSID QN_XX:XX (where XX:XX are the last four digits of Access Point MAC Address).
- Connect to QN_XX:XX SSID and browse Access Point's default IP "169.254.1.1".

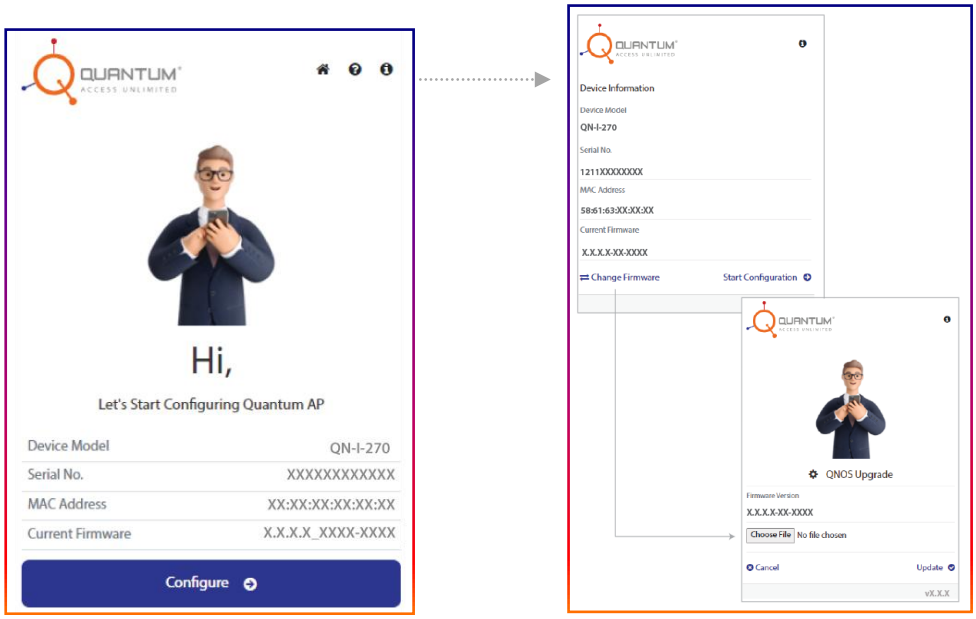

Figure 2

Let's start the configuration.
On the configuration start page, it will display,

- Device model number
- Serial number
- MAC address
- Current firmware

Note:

- Click ℹ button to get the option to "change the firmware" if required.
- Click Change Firmware to update firmware if required. Select the firmware file from the respective location and update it.

Step 3- Setting up device IP address

Click "**Configure** "and set the device IP address by selecting the required options.

- Connectivity Mode – Ethernet / USB
- Protocol - DHCP, Static or PPPoE
- Interface – Select interface
- VLAN Assignment- Enable parameter. Enter VLAN ID and click "Fetch IP Address" to get the respective IP in case of VLAN setup is required.

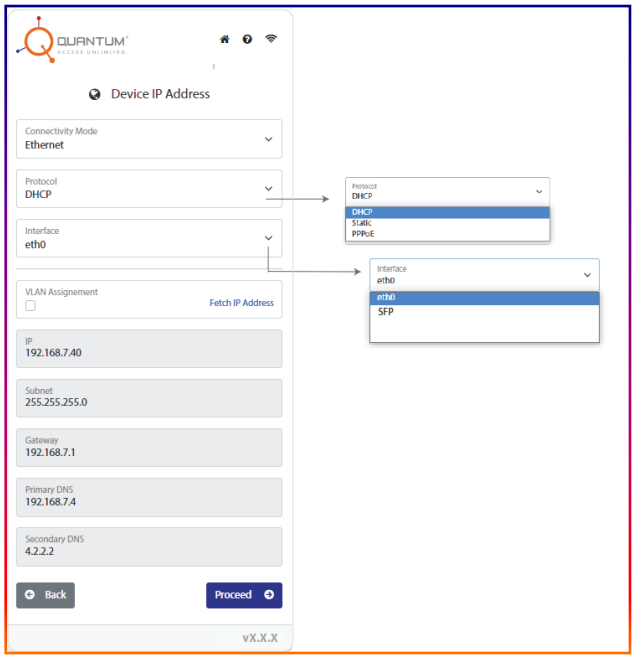

Figure 3

Click **"Proceed** "to apply configuration and turn to the next page.

Step 4 – Set the management mode

Management Mode

Quantum® Networks Access Point can be configured in two modes:

RUDDER (on cloud / on-premise)

Centralized management of Access Points using Quantum® RUDDER

Standalone

Independent management of each Access Point

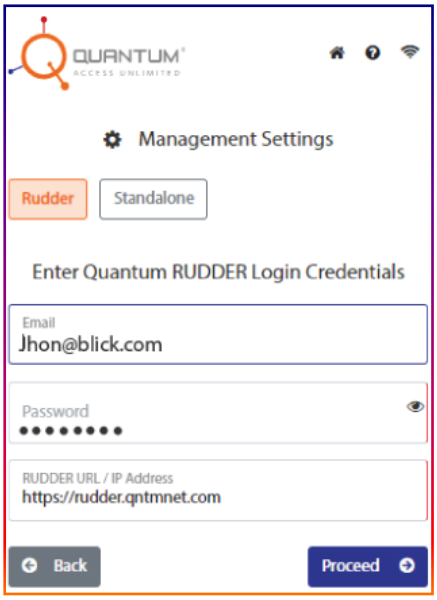

Figure 4

Step 5 - Access Point quick setup inRUDDER Mode

- Select "**Management Mode**" as "**RUDDER**", enter Quantum® RUDDER login credentials and click "**Proceed**".

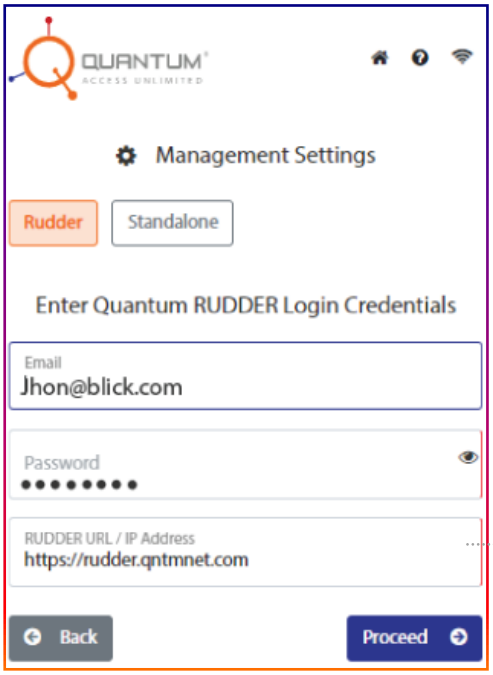

Figure 5

In the case of on-premise RUDDER, mention the local server IP Address/URL assigned to RUDDER, here.

- It will verify the credentials, and turn to a next page.

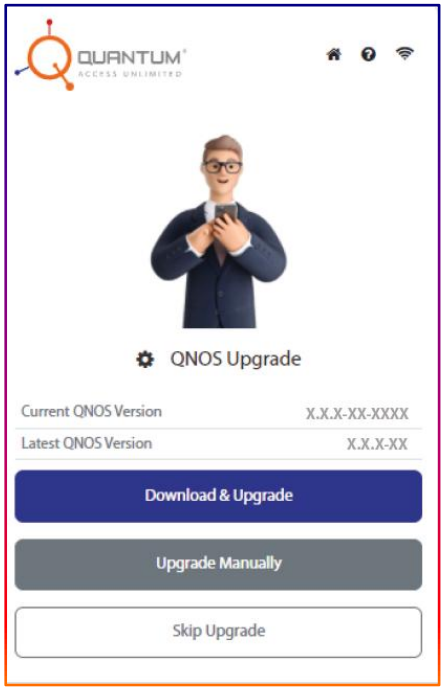

Figure 6

- Upgrade QNOS version by either downloading from the cloud or by selecting manually from respective location and upgrade orclick "**Skip Upgrade**" to move further.
- The user will turn to a page where the user has to select the site and AP group.

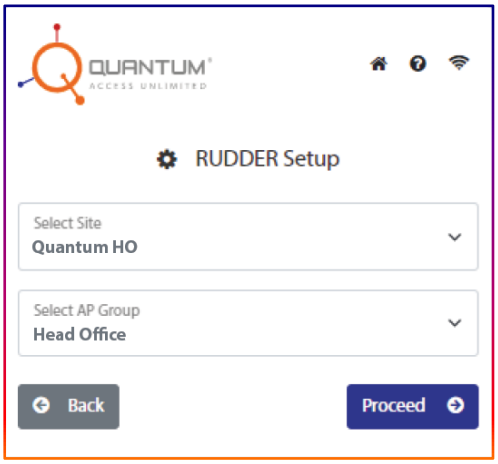

Figure 7

- Select RUDDER site and AP Group where Access Point's needs to be added and click "**Proceed**".

- If the selected site is already having another Access Point, it will automatically configure AP in a bridge mode and will turn the user on the summary page after clicking **"Proceed"**. (Figure 8)
- If this is the first Access Point for the selected site – the user will turn on the page, where the user can select Access Point Operation mode as **Bridge** or **Router**. (Figure 9)

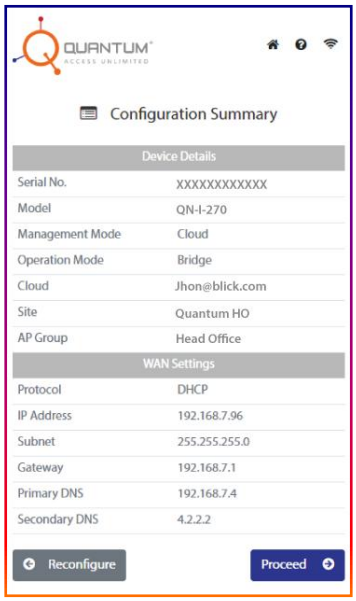

Figure 8

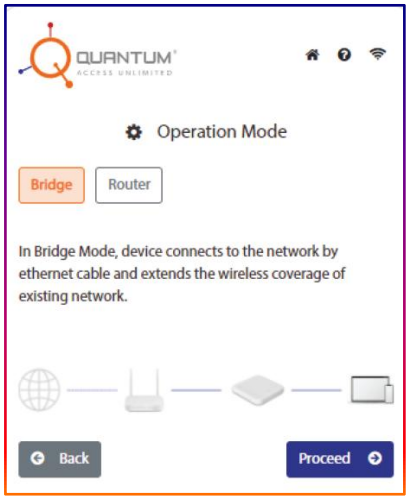

Figure 9

Bridge

- Select option **Bridge** and click "**Proceed**".
- Configure **WLAN** (SSID) parameters and click "**Proceed".**

Parameter	Value
WLAN Name	Define a name for the network
SSID	Define visible wireless network name
Passphrase	Configure a passphrase for SSID

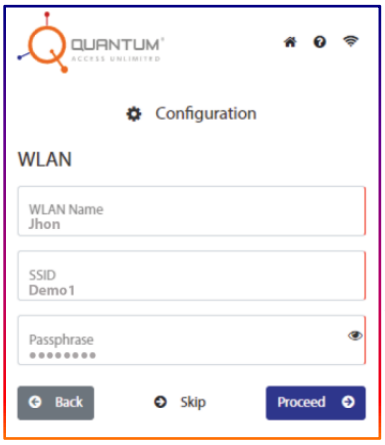

Figure 10

Note: If you do not want to create **WLAN** (SSID)/**LAN** now, click the **Skip** option. It willturn to **Configuration Summary**.

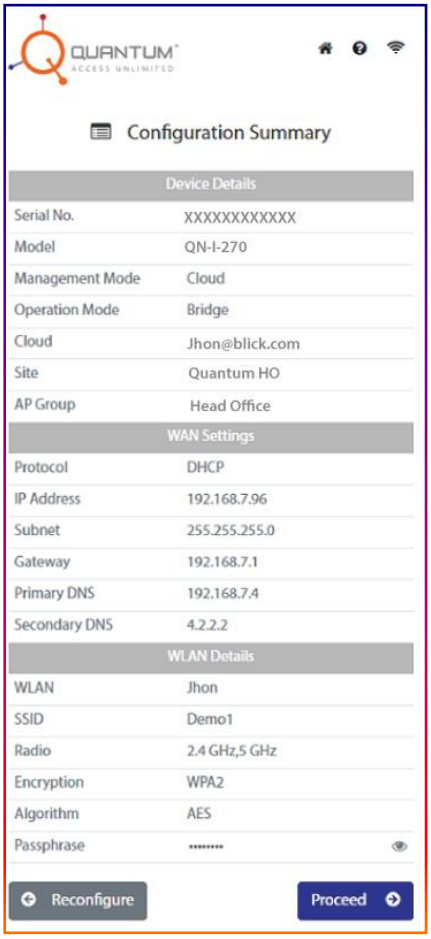

Figure 11

- Review the Configuration Summary. Click "**Reconfigure** "if any changes are required or click "**Proceed** "to complete the configuration.

Router

- Select option **Router** and click "**Proceed".**
- Configure **WLAN** (SSID) and **Local subnet** parameters and click "**Proceed".**

Parameter	Value
WLAN	
WLAN Name	Define a name for the network
SSID	Define visible wireless network name
Password	Configure passphrase for SSID
Local Subnet	
IP Address	LAN IP address. This IP address can be used for accessing this Access Point
Subnet Mask	LAN Subnet mask

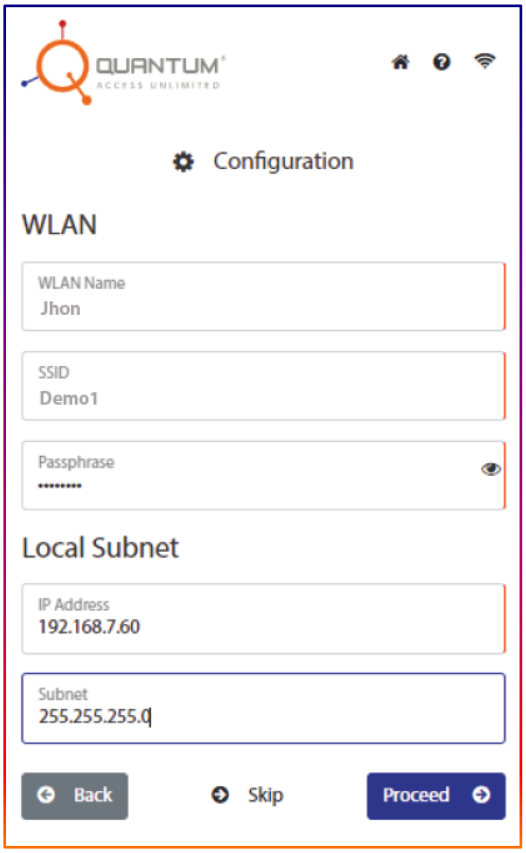

Figure 12

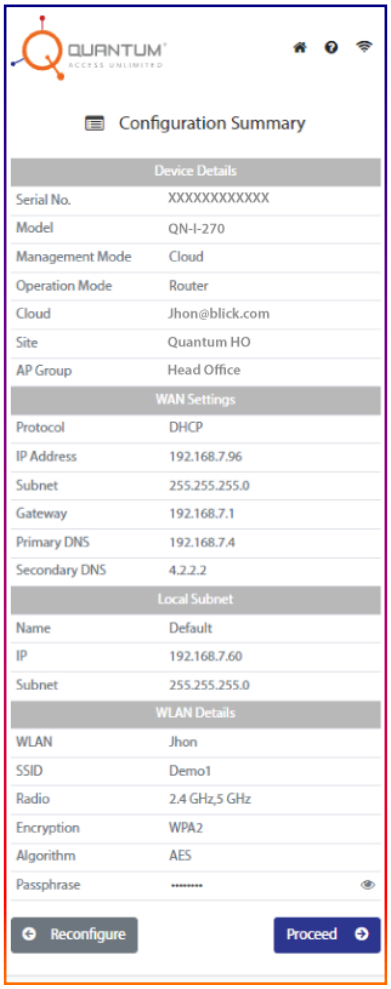

Figure 13

Note: If you do not want to create **WLAN** (SSID)/**LAN** now, click the **Skip** option. It will turn to **Configuration Summary**.

- Review the Configuration Summary. Click "**Reconfigure** "if any changes are required or click "**Proceed** "to complete the configuration.

Step 6 - Access Point quick setup in standalone mode

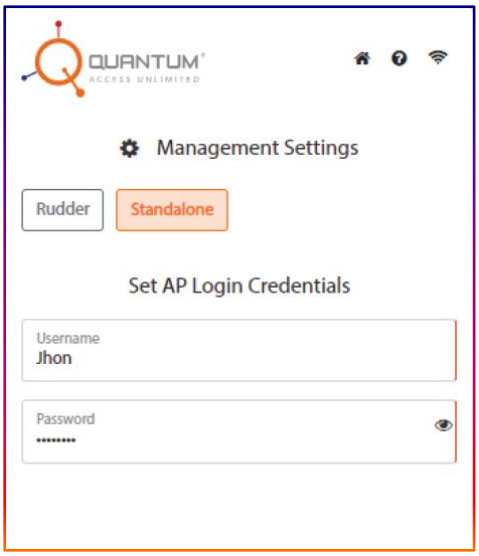

Figure 14

- Select "**Management Mode**" as "**Standalone**" if each Access Point is to be configured and managed individually. Define username and password for the device and click "**Proceed**".
- User can select Access Point Operation mode as **Bridge** or **Router**.

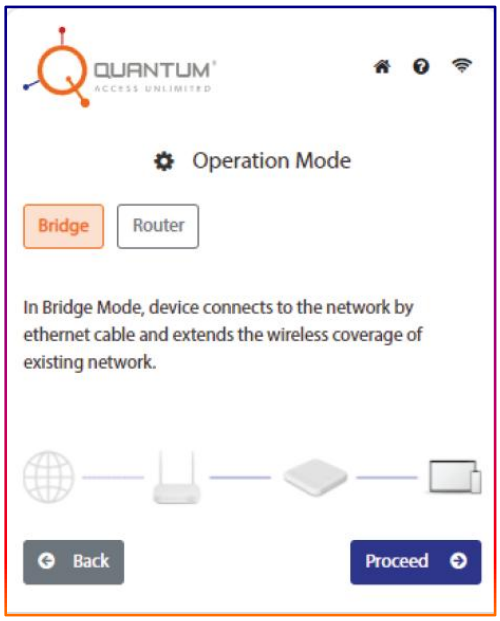

Figure 15

Bridge

- Select option **Bridge** and click "**Proceed**".
- Configure **WLAN** (SSID) parameters and click "**Proceed".**

Parameter	Value
Country	Select country for radio management.
Timezone	Select time zone for RUDDER management.
WLAN Name	Define a name for the network.
SSID	Define visible wireless network name.
Passphrase	Configure a passphrase for SSID.

- Review the Configuration Summary. Click "**Reconfigure"** if any changes are required or click "**Proceed"** to complete the configuration.

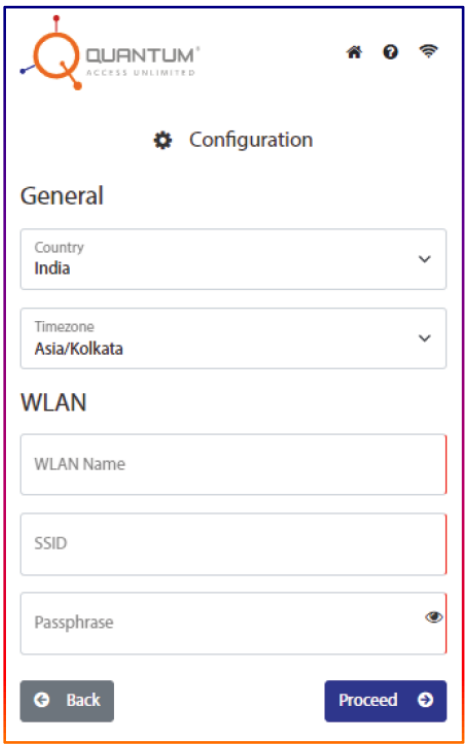

Figure 16

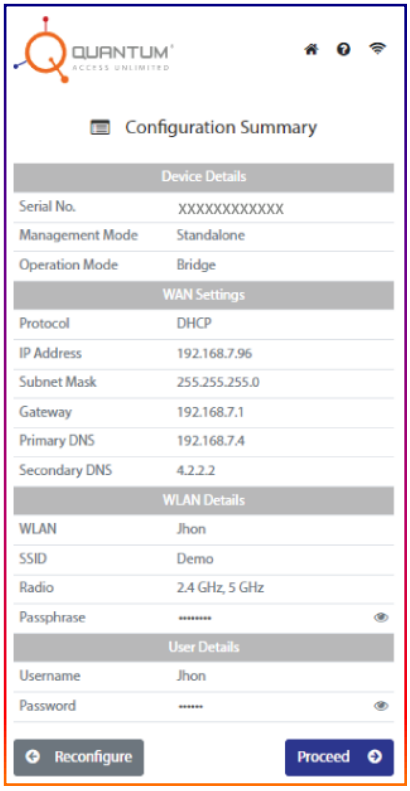

Figure 17

Router

- Select option **Router** and click "**Proceed".**
- Configure **WLAN** (SSID) and **Local subnet** parameters and click "**Proceed".**

Parameter	Value
WLAN	
Country	Select country for radio management.
Timezone	Select time zone for RUDDER management.
WLAN Name	Define a name for the network.
SSID	Define visible wireless network name.
Password	Configure a passphrase for SSID.
Local Subnet	
IP Address	LAN IP address. This IP address can be used for accessing this Access Point.
Subnet Mask	LAN subnet mask.

- Review the Configuration Summary. Click "**Reconfigure** "if any changes are required or click "**Proceed"** to complete the configuration.

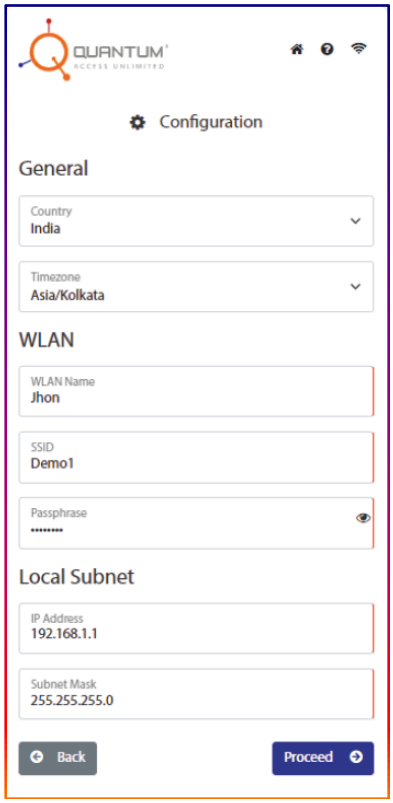

Figure 18

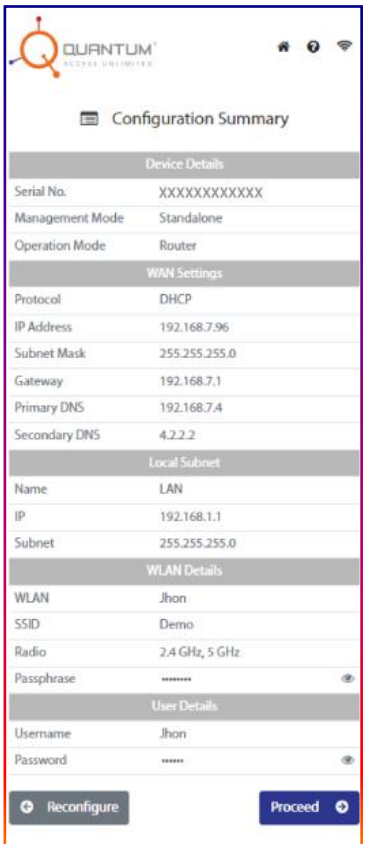

Figure 19

Reset Access Point to factory defaults

- Power on the Access Point
- Push the reset button on the back panel and hold it for 10 seconds.
- Access Point would restart with factory defaults

Access Point default login detail

With standalone mode:
User Name: Created while doing "Quick Setup"
Password: Created while doing "Quick Setup"

With RUDDER mode:
User Name: Auto Generated, administrator can change from site settings.
Password: Auto Generated, administrator can change from site settings.

If you encounter problems while installing or using this product, please browse qntmnet.zengroup.co.in

- Direct contact with the support center.
  - Contact: 18001231163
  - Email: support@qntmnet.com
- Frequently Asked Questions (FAQ)
- Download area for the latest software, user documentation and product updates.

FCC statement

FCC Class B
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible. This device is restricted for indoor use.

IMPORTANT NOTE:
FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 24 cm between the radiator and your body.

Professional Installation Instructions
1. Installation personnel
This product is designed for specific applications and should be installed by qualified personnel who have knowledge of RF and its related regulations. A general user shall not attempt to install or modify the equipment configuration.
2. Installation location
To meet regulatory RF exposure requirements, this product shall be installed at a location where, during normal operations, the radiating antenna is at least 24 cm away from any nearby persons.
3. Installation procedure
Please refer to this equipment's user manual for the procedure details.
4. Warning
The installation position must be carefully selected so that the final output power does not exceed the limit set forth in relevant regulations. Violation of output power regulations could lead to serious federal penalties.