成品尺寸：89x145mm
材质：200g双铜，不过膜
印刷：四色双面印刷
工艺：骑马钉
公差：±1mm

SAFETY INSTRUCTIONS

FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY OR EXCHANGE REQUESTS, PLEASE CONTACT US:

1-800-255-6061

YOUR SAFETY IS IMPORTANT TO US.

Please read instructions carefully and utilize the proper precautions before operating this equipment. Save instructions for future reference.

- When used correctly, lithium-ion rechargeable batteries provide a powerful source of energy. However, if damaged or misused, they are classified as absolute, fire-risk recall. Leakage, burns, fire, explosion and other hazards may occur if the battery is damaged. Misusing or incorrectly connecting your power bank may cause damage to the unit and other connected devices.
- Keep your power bank dry and away from moisture, water, and corrosive materials.
- Do not submerge your power bank to moisture, water, rain, or snow.
- Keep your power bank away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- Do not expose to fire or excessive temperatures. Do not expose to heat above 212°F (100°C) or incinerate.
- Do not puncture, crush, or damage as explosion use sand or a chemical fire extinguisher.
- Prolonged use of the unit may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict air flow around the unit. Place on a non-flammable surface.
- Do not disassemble your power bank. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard. Do not use if the unit has been dropped, or if the unit or its charging leads & it has received a sharp blow, or has otherwise been damaged in any way.
- Do not bend, twist, crush, or subject to mechanical shock.
- Keep away from children and pets. The power bank, along with its accessories are not toys.

PRODUCT MAINTENANCE

⚠ WARNING

IF THE JUMP STARTER EXHIBITS ANY DAMAGES (BRULEE), OR DEFORMED IN ANY WAY, IMMEDIATELY STOP USING THE PRODUCT AND CONTACT CUSTOMER SERVICE.

EQUIPMENT CLEANING:

- Please make sure that the device is disconnected from all input power sources before cleaning.
- Wipe with a clean, dry cloth.
- Do not use corrosive cleaners or solvents.
- Do not use sharp objects or tools to clean them as this could cause electrical shock. Blow any debris out with a pressed air type of cleaner.

DISPOSAL/RECYCLING:

- Do not put the device and its accessories in the trash can. Items must be properly handled in accordance with local laws and regulations. For additional information, please see www.epa.gov.

Li-ion | Conforms to UL Std. 1642 Certified to CSA C22.2 No. 0.4 | **CONFORMS TO UL62368** | Intertek

PRODUCT OVERVIEW

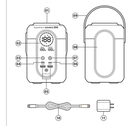

1. Magnetic Wireless 15W Output
2. Carabiner
3. Lantern ON/OFF Button
4. USB-C 30W Rapid 74WR Output
5. USB-A 18W Output
6. USB-C 20W Output
7. Power ON/OFF Button
8. Lantern Control Button
9. Convenient Carrying Handle
10. 60" USB-C to USB-C Cable
11. 20W USB-C Adapter

LCD DISPLAY

1. **BATTERY FUEL GAUGE INDICATORS**
   Indicate percentage left in the charger cassette.
2. **WIRELESS CHARGING INDICATOR**
   Displays when wireless charging is active.
3. **LANTERN INDICATOR**
   Displays when the lantern is on and in use.
4. **BATTERY PERCENTAGE**
   Displays the current battery level.
5. **INPUT INDICATOR**
   When on, this indicates the unit is plugged in and charging.
6. **OUTPUT INDICATOR**
   When on, this indicates that the unit is charging external devices.

CHARGE YOUR RAPIDPACK SOURCE 200

BEFORE YOU GET STARTED
Fully charge the RapidPack Source 200.

1. Plug the included USB-C to USB-C cable into the USB-C Input/Output port.
2. Plug the other USB-C to USB-C cable into the included USB-C wall adapter.
3. Plug the USB-C wall adapter into a wall outlet. Charging will begin and the LCD display will display the current battery level.

The included wall adapter is rated for 20W and should fully charge in 3 hours.

NOTE: Using a higher wattage adapter (up to 60W) can recharge it as little as 1.5 hrs.* *60W adapter not included.

CHARGING A LAPTOP

1. Press the Power ON/OFF Button.
2. Plug the included USB-C to USB-C cable into the USB-C Input/Output port on the RapidPack.
3. Plug the USB-C to USB-C cable to the laptop.

NOTE: The RapidPack Source 200 will automatically power off after 30 seconds of inactivity.

CHARGE YOUR DEVICES

USB-A output ports are rated for up to 18W.
USB-C 2 output port is rated for up to 20W.

1. Connect the appropriate cable to your device.
2. Plug the cable into the appropriate USB output port.
3. Press the Power ON/OFF Button to begin charging your device.

NOTE: It is recommended to use charging cables provided by the manufacturer of your devices.

WIRELESS CHARGING

Magnetic wireless charging pad is rated for up to 15W.
USB-C 2 output port is rated for up to 20W.

1. Place your wireless compatible device onto the wireless charging pad. The magnetic charging pad will help align your device for a proper connection.
2. Wait for the LED to indicate charging. The "window" icon will display on the LCD display.

NOTE: Make sure the device is aligned in the center of the wireless charging surface and that no gaps or obstructions are in between.

NOTE: Some phone cases may reduce the strength of the magnet to the point that they will prevent the phone from aligning properly. For best results, we recommend using a thin case. Remove any metal accessories or remove your case to use the magnetic wireless charging pad.

HOW TO USE THE LANTERN

Plus LED lantern offers 10 modes with 3 brightness settings for each of its 3 light colors and an Orange SOS mode.

1. Turn on the lantern by pressing the Lantern Control Button. The "light" icon will display on the LCD display.
2. Cycle through the light colors by pressing and holding the Lantern Control Button until the color changes. Hold down again to change to the next color - Warm > Bright White > Orange.
3. SOS:
   Short press the Lantern Control Button cycle through the light's brightness levels - High > Medium > Low.
   Activate SOS mode by pressing and holding down double-pressing the Lantern Control Button. This can be done whether the light is off or in use.

NOTE: The lantern default mode is Warm Medium.

⚠ CAUTION

LOOKING DIRECTLY INTO THE LANTERN CAN RESULT IN MINOR OR MODERATE INJURY.

TROUBLESHOOTING

FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY OR EXCHANGE REQUESTS, PLEASE CONTACT US:

1-800-255-6061

ISSUE	POTENTIAL CAUSE	SOLUTION
Unit does not appear to charge items, or charges items slower than expected.	Cable or device may not be compatible, or has many items charging at the same time.	Try charging fewer devices, or using the original cable for that device.
Unit does not appear to charge. (Power ON/OFF Button has no effect, and LCD screen does not turn on).	Unit may need to be charged.	Use the supplied cable to connect to a USB power source.
Unit does not appear to recharge (LCD screen does turn on, but no when the Power ON/OFF Button is pressed).	Cable or USB source may not be compatible.	Try charging with the supplied cable and a different USB source.
When plugging a device in to charge, the unit appears to "flash" between charge/not charge mode.	Overload detected, or defective device.	Try plugging in fewer devices, a different device, or a different cable.
Unit will not charge or work in cold/hot environments.	Temperature protection has been triggered.	Move the unit to a more comfortable environment for at least an hour and try again.

PRODUCT REGISTRATION

Scan the QR code below to register your product.
For product information and videos, visit **HALOFIRE.COM**

PRODUCT REGISTRATION

ACTIVATE YOUR WARRANTY TODAY
Your HALO RapidPack Source 200 has a 90 day warranty from the date of purchase. Register your product to activate your warranty, protect your investment and save a record of your purchase with our customer service team.

TECHNICAL SPECIFICATIONS

USB-C1 Input	60W Max
USB-C1 Output	140W Max
USB-C2 Output	20W
USB-A Outputs	18W
Wireless Output	15W
Flashlight Output	500lm
Battery Capacity	1440Wh
Operating Temperature	Charge: 32~95°F (0~35°C) Discharge: 32~95°F (0~35°C)
Dimensions	5.6 x 5.7 x 6.6 in. (14 x 14 x 16cm)
Weight	2.7 lb. (1kg)

FCC NOTE

COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ALLIANCE CONSUMER GROUP
7505 Network Place, Indianapolis, IN 46250
Toll Free: 866.203.2896
www.acgbrands.com

TRANSPORTING DANGEROUS GOODS

NOTE: Any changes or modifications of this device could void the warranty.

Fully charge before use.	Do not disassemble.
Do not get wet. Keep dry.	Do not puncture, crush, or damage.
Avoid extreme temperatures.	Keep out of reach of children.
Do not bend, twist, or subject to mechanical shock.	Remove or replace any damaged or defective cables.
Avoid heating.	

This jump starter meets all legal requirements for the transportation of lithium batteries. The lithium-ion battery contained in this jump starter is transported by air. It must be transported in accordance with OEM standard packaging. The instructions and labelling requirements of the International Air Transport Association and related declarations must be completed.

HALO
HALOFIRE.COM

Trusda 深圳市创世达实业股份有限公司

公差表

	A	B	C	D
0–5	±0.07	±0.10	±0.15	±0.20
5–20	±0.10	±0.15	±0.20	±0.30
20–50	±0.15	±0.20	±0.30	±0.40
50–	±0.20	±0.30	±0.40	±0.60

标记	修改前	修改后	修改日期
1		删除贮存温度	2024-12-05
2		增加认证内容	2024-12-14

产品编号	C909.PD140	零件名称	说明书	零件料号	
产品名称	移动电源	图　号	C912-M5348D	版　本	D
材　料		处理工艺		单　位	mm
比　例		客户编号		日　期	2024-12-14
制图:		审批:		批准:	

T-MF-CAD-538A