尺寸:100x135mm
封面200g铜版纸,内页158g铜版纸,请勿擅自伸缩排版。
装订方式:胶装

变更记录:V1.04-V1.05:更新警示语,美加日版本只留英日语言。

V1.05

pelsee

PMN:Dash Cam
P1 Duo



USER MANUAL

Please carefully read the user manual before using and keep it well for future reference.

ENGLISH 01-18
日本語 19-35

Dear Customer,

Thank you for selecting **Pelsee** as your preferred brand!
We sincerely hope that you will enjoy using our product as much as we do.
If you happen to encounter any issues while using the product, or if you have any ideas on how we can enhance it, please don't hesitate to get in touch with us. You can contact us through our official website at **www.pelsee.com** or by emailing us at **support@pelsee.com**.
Our dedicated support team will be delighted to help you find a solution that meets your satisfaction as quickly as possible.

Yours Sincerely,
Pelsee Team

ENGLISH

SAFETY PRECAUTIONS

To prevent injury or damage, please read and follow these safety precautions:

1. Read and understand the user manual before using the product and keep it safe for future reference.
2. Only use the original accessories provided by the manufacturer.
3. Remove the protection film on the LCD display and lenses before using the product.
4. DO NOT try to disassemble, alter or repair the product yourself. Please ask for the help from the manufacturer or similarly qualified person in order to avoid a hazard. After repairing, please do a safety check to ensure that the product is working properly.
5. This product must not be placed in a location that may affect the deployment of air bags, and must not obstruct the driver's view.
6. If there is a malfunction or abnormality, such as smoke or strange odor, please stop using the product immediately, then cut off the power supply and contact us.
7. NEVER install the unit in the place where is exposed to the direct sunlight or extremely high temperature. The operating temperature of this product ranges from -10°C(14°F) to 60°C(140°F).
8. Drive safe! NEVER operate the App and the product when you are driving to avoid a traffic accident caused by distraction. Be sure to park the car in a safe place before operating.
9. This product must be securely mounted before driving.

WHAT'S INCLUDED

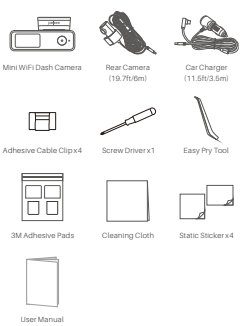

KNOW YOUR DASH CAM

Dash Cam

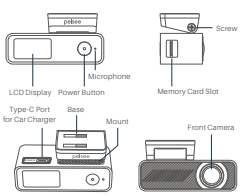

Function of the Power Button

① Press this button once to check the live view from the rear camera if you have installed it.
② Press this button twice to see the date and time.
③ Press this button three times to turn on the WiFi of the camera.
④ Press this button the fourth time to go back to the recording interface.
⑤ Press and hold this button for 3 seconds to manually power off/on the camera.
⑥ Press and hold this button for 8 seconds to restore the camera to factory settings.

LCD Display



① **Recording Status:**
Flash Red: Recording Standard Videos
Flash Yellow: Lock the Current Video
② **Memory Card Status**
③ **Microphone On/Off**
④ **WiFi Connection Status:**
WiFi Not Connected: Gray
WiFi Connected: Green

INSTALLATION INSTRUCTIONS

Step 1:
To start, insert a formatted memory card(not included) into the dash cam. This dash cam can take a card with a capacity of up to 256GB.



Tips:

1. Before first use, please format the memory card.
   Option 1:
   Install the memory card into a card reader, then connect it to the computer to format it to FAT32.
   Option 2:
   After connecting your mobile device to the camera, install the memory card into the dash cam and go to the **Pelsee Cam App** > **Camera Settings** > **Format SD Card** to format the card.
2. To ensure smooth video recording, use a reputable Class 10 or higher speed memory card.
3. Never remove the memory card while the camera is on, as this can cause the camera to shut down immediately and potentially damage the video.

Step 2:
Turn off your vehicle's engine, and find a suitable location on the front windshield to attach the dash cam. Use the cleaning cloth provided to clean the spot and affix the larger static sticker on it.

Step 3:
Peel off one side of the **3M Adhesive Pad** and stick it to the base of the camera. Then, attach the base of the camera to the static sticker using the other side of the **3M Adhesive Pad**.

Step 4:
Connect the Type-C connector of the **Car Charger** to the **Type-C Port** on the camera, and plug the other end into the **Cigarette Lighter Receptacle** in your vehicle.



Tips:

1. After installation, start your vehicle's engine to ensure the dash cam powers on and records automatically. If it does, stop the engine and proceed to install the rear camera.
2. You can adjust the angle of the base to adjust the lens view.

3. To remove the dash cam from the base, first disconnect the Type-C cable, then firmly press and hold the base while slowly sliding the dash cam leftward with force.



Step 5:
Connect the 4-pin male connector of the rear camera to the 4-pin female connector of the car charger cable. Snake the cable of the rear camera through the vehicle to the rear part.

Tip:
To keep your vehicle tidy, we recommend using the **Adhesive Cable Clips** provided to fix the cables of the car charger or rear camera over the edge of your vehicle.

Step 6:
Select an appropriate location on the upper part of your vehicle's rear windshield, clean it thoroughly, and affix the smaller static sticker onto it. Next, remove the **3M Adhesive Pad** from the rear camera and securely attach it to the static sticker. The camera lens can be adjusted by rotating it to alter the viewing angle.



Attach the rear camera inside the back windshield as shown to avoid upside down view.

Step 7:
Finally, start your vehicle's engine to verify that the rear camera is installed correctly and working well.

OPERATION GUIDE OF USING THE APP

1. Connect the Dash Cam with the App

Step 1:
Download and install the **Pelsee Cam** App on your mobile device by scanning the QR code below or searching for it on Google Play™/App Store™.

Step 2:
Ensure that the dash camera is turned on and mobile device is within 5 meters of the camera.

Step 3:
Press the power button three times to activate the WiFi of the dash cam.

Step 4:
Open the **Pelsee Cam** App and grant the necessary permissions. Tap on **Add Camera** to check the wizard and start connecting.

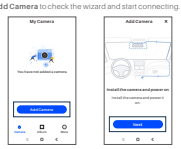

Step 5:
Tap on **Connect WiFi** and go to the **Settings** > **WLAN** of your mobile device to search for the **P1_Duo_******** WiFi. Enter the password **12345678** to complete the connection process.

Step 6:
Return to the App and wait for the connection. Tap on **Into Camera** to enter the homepage.

Tips:

① If a window pops up on your mobile device asking if you want to continue connecting to the camera's WiFi even though it can't access the Internet, select **Yes**. Selecting **No** will disconnect the camera's WiFi.
② Only one mobile device can connect to one camera at a time.
③ Any videos or photos downloaded from the App will also be saved in the **Album** on the main page. Tap on **More** to access options such as **App Settings**, **Get Support**, **Help**, and **About**. In **App Settings**, you can change the language of the App and the date format of the camera; **Get Support** allows you to directly send an email to us about any detailed issues; Help provides access to frequently asked questions on our website; **About** lets you check and update the App version, and view the official website and email address.

2. Overview of the App

Homepage

① Recording Status
② Live View
③ Date and Time
④ Orientation (Portrait or Landscape)
⑤ Switch Front and Rear Cameras' Views
⑥ Audio On/Off
⑦ Start/Stop Recording
⑧ Take Photo
⑨ Recorded Videos and Captured Images
⑩ Camera's Detailed Settings

Camera File

To view and manage your camera files, tap on **Camera File** on the homepage. From here, you can see all your videos and photos, and select a file to delete or download.

① **Loop:** Standard Videos from the front and rear cameras
Snapshot: Captured Photos from the front and rear cameras
Locked: Locked Videos from the front and rear cameras
Parking: Videos Recorded when Parking(An extra hardwire kit is needed)
F: Videos or Photos from the front camera
R: Videos or Photos from the rear camera

② Tap **Select** on the upper right corner to select the file(s) to download it/them into your mobile device or delete the file(s).
After downloading the file(s), you can edit or directly share it(them) to social media.

Settings

Tap **Camera Settings** on the homepage to check and change the settings of your dash cam.

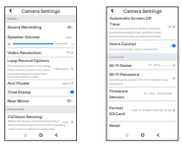

③ **Sound Recording**
Turn on or turn off the audio when recording videos.

④ **Speaker Volume**
Set the volume of the speaker for the camera.

⑤ **Video Resolution**
If you have only installed the front camera, you will be given the option to choose from three different resolutions: 4K, 2K, and 1080P. You can adjust the resolution of the front camera based on these options.
However, if you install both the front and rear cameras simultaneously, you will only have the choice between 2K and 1080P. The front camera will be set to 2K resolution, while the rear camera will be set to 1080P resolution.

⑥ **Loop Record Options**
Change the recording time of each video. The recording time is set to be 1 minute by default. You can choose from **1 Minute(s)**, **2 Minute(s)** and **3 Minute(s)**

⑦ **Anti Flicker**
Change the refresh rate of your video between 50Hz and 60Hz.

⑧ **Time Stamp**
Show or hide the date and time watermark on the recorded videos and captured photos.

⑨ **Rear Mirror**
Flip the rear camera view horizontally to change the orientation between leftward and rightward.

⑩ **Collision Sensing**
Set the G-sensor sensitivity for collision detection while driving. You can select from **Low**, **Middle**, **High**, and **Off** as needed. If you select High(low), the camera would automatically lock the current video when your car

encounters a minor(severe) collision. A flashing yellow dot on the upper left corner of the LCD display will be displayed, indicating the camera is locking the current video. This video will not be overwritten.

⑪ **Automatic Screen off Time**
Set a designated time for the screen to turn off automatically.

⑫ **Voice Control**
Turn on or turn off the voice control function. This camera can be controlled via four voice commands, including **Turn on Audio**, **Turn off Audio**, **Lock the Video** and **Take Photo**.

NOTE:
If you installed a hardwire kit (sold separately) for the dash cam, the Parking Mode option will be available for you to use. This mode can be turned on when your vehicle is parked, and you can adjust the sensitivity level for collision detection. Additionally, time-lapse video may also be available. Please contact Pelsee customer service team for more information.

⑬ **Wi-Fi Name**
Check and change the camera's WiFi name.

⑭ **Wi-Fi Password**
Check and change the camera's WiFi password.

⑮ **Firmware Version**
Check the firmware version of the dash camera.

⑯ **Format SD Card**
Format the memory card.

⑰ **Reset**
Restore the dash camera to the factory settings.

SPECIFICATIONS

Sensor	GC4653
Memory Card	Support up to 256GB (not included)
Resolution(Front Camera)	4K, 2K and 1080P
Resolution(Rear Camera)	1080P
Video Format	TS
Photo Format	JPG
Storage Temperature	-22°F(30°C)~ +185°F(85°C)
Working Temperature	-14°F(10°C)~ +140°F(60°C)

FCC CAUTION

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Statement

This device complies with Industry Canada license-exempt RSS standard(s).
Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.
The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).
Le présentappareilestconforme aux CNR-(Industrie Canada applicables aux appareils radio exempts de licence. L'exploitationestautorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareildoit accepter tout brouillagerad oélectriqueaubr, mêmesi le brouillageest susceptible d'encompromettre le fonctionnement.
l'appareil numérique du clem conforme canadien peut -3 (b) / nmb -3 (b).
This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information

on RF exposure and compliance.
Cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.
This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.
Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

⎓ The symbol indicates DC voltage

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.
This product can be used across EU member states.
EU Compliance Statement: Shenzhen Vycol-Glint Innovations Technology co., Ltd hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

親愛なるお客様へ、

「**Pelsee**」をご選択いただき、誠にありがとうございます！私たちがこの製品を楽しんで使っているように、あなたも同じくらい楽しんで使っていただけることを心から願っています。もし製品の使用中に何か問題が発生したら、製品をより良くするためのアイデアがあったりした場合は、どうぞお気軽にご連絡ください。公式ウェブサイトの「**www.pelsee.com**」からも、または「**support@pelsee.com**」宛にメールでご連絡いただけます。私たちの献身的なサポートチームが可能な限り早く、お客様の満足に応える解決策を見つけるのをお手伝いいたします。

敬具、
Pelseeチームより

日本語

安全上の注意事項

けがや損傷を防ぐために、以下の安全対策をお読みいただき、ご利用ください。

1. 製品を使用する前にユーザーマニュアルを読み、理解してください。将来の参照のために保管してください。
2. メーカーが提供したオリジナルのアクセサリーのみを使用してください。
3. 製品を使用する前に、LCDディスプレイとレンズの保護フィルムを取り除いてください。
4. 製品を自分で分解、改造、修理しないでください。危険を避けるために、メーカーまたは同様に資格のある人に助けを求めてください。修理後は、製品が正常に動作するかどうかを確認するために安全チェックを行ってください。
5. この製品は、エアバッグの展開に影響を及ぼす可能性のある場所に置かず、ドライバーの視界を妨げないようにしてください。
6. もし故障や異常など、煙や異臭などの現象が発生した場合は、直ちに製品の使用を停止し、電源を切って弊社に連絡してください。
7. 直射日光や極端な高温の環境には製品を設置しないでください。この製品の動作温度は-10℃から60℃までです。
8. 安全運転を心掛けてください！運転中にアプリや製品を操作することは避け、気を散らすことによる交通事故を防いでください。操作する前に必ず車を安全な場所に停めてください。
9. この製品は、運転前にしっかりと取り付けてください。

同梱品

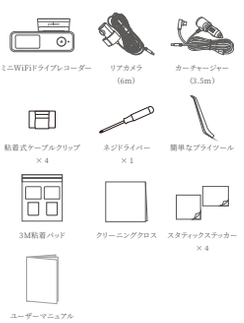

製品の概要

ドライブレコーダー

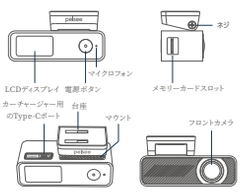

パワーボタンの機能

① 回押すと、もしリアカメラが装着されていればリアカメラのライブビューを確認できます。
② 回押すと、日付と時刻を表示します。
③ 回押すと、カメラのWiFiをオンにします。
④ 回押すと、録画画面に戻ります。
⑤ このボタンを3秒間長押しすると、カメラの電源を手動でオン/オフできます。
⑥ このボタンを8秒間長押しすると、カメラを工場出荷時の設定に復元します。

LCDディスプレイ



① **録画ステータス：**
赤点滅: 標準のビデオ録画中
黄点滅: 現在のビデオをロック中
② **メモリーカードのステータス**
③ **マイクのオン/オフ**
④ **WiFi接続のステータス**
WiFi未接続: グレー
WiFi接続中: グリーン

取り付け手順

ステップ1：
はじめに、フォーマットされたメモリーカード(別売)をドライブレコーダーに挿入します。このドライブレコーダーは、最大256GBの容量のカードに対応しています。



ヒント：
1. 初めて使用する前に、メモリーカードをフォーマットしてください。
オプション1：
メモリーカードをカードリーダーに挿入し、コンピュータに接続してFAT32形式でフォーマットします。
オプション2：
モバイルデバイスをカメラに接続した後、メモリーカードをドライブレコーダーに挿入し、「**Pelsee Cam**アプリ」の「**カメラ設定**」>「**メモリーカードをフォーマット**」でカードをフォーマットします。
2. スムーズなビデオ録画を確保するために、信頼性のあるクラス10以上の高速メモリーカードを使用してください。
3. カメラが作動している間は絶対にメモリーカードを取り外さないでください。これによりカメラが即座にシャットダウンし、ビデオが損傷する可能性があります。

ステップ2：
車のエンジンを切り、フロントウィンドシールドに適した場所を見つけてドライブレコーダーを取り付けてください。提供されたクリーニングクロスを使用してスポットをきれいにし、大きなスタティックステッカーを貼り付けます。

ステップ3：
「3Mの粘着パッド」の片側をはがし、カメラの台座に貼り付けます。次に、もう片側の「3Mの粘着パッド」を使用して、カメラの台座をスタティックステッカーに取り付けます。



ステップ4：
「**カーチャージャー**」の「**Type-Cポート**」をカメラの「**Type-Cポート**」に接続し、もう片側を車両の「**シガーライターコンセント**」に差し込んでください。

ヒント：
1. インストールが完了したら、車のエンジンを始動して、ドライブレコーダーが自動的に起動して録画を開始することを確認してください。正常に動作している場合は、エンジンを停止し、リアカメラの取り付けに進んでください。
2. レンズの視野を調整するために、台座の角度を調整することができます。

3. ドライブレコーダーをベースから取り外すには、まずType-Cケーブルを取り外し、その後台座をしっかりと押さえながら、力を加えてドライブレコーダーをゆっくりと左にスライドさせてください。

ステップ5：
リアカメラの4ピンメスコネクタをカーチャージャーの4ピンメスコネクタに接続します。リアカメラのケーブルを車内を通ってリア部に適切に配置します。



ヒント：
車両を整理するために、カーチャージャーやリアカメラのケーブルを車両のエッジに沿って固定するために、提供された「**粘着式ケーブルクリップ**」を使用することをおすすめします。



ステップ6：
車両のリアウィンドウの上部に適切な場所を選び、十分に清掃してください。それから、小さなスタティックステッカーをそこにしっかりと貼り付けてください。次に、リアカメラから「**3Mの粘着パッド**」を取り外し、スタティックステッカーにしっかりと取り付けてください。カメラレンズは回転させて視野角を変えることができます。

ステップ7：
最後に、車両のエンジンを始動して、リアカメラが正しく取り付けられていて正常に動作していることを確認してください。

アプリの使用方法に関する操作ガイド

アプリとドライブレコーダーの接続

ステップ1：
下記のQRコードをスキャンするか、Google Play™/App Store™で検索して、「**Pelsee Cam**」というアプリをモバイルデバイスにダウンロードしてインストールします。

ステップ2：
ドライブレコーダーがオンになっていることを確認し、モバイルデバイスがカメラから5メートル以内にあることを確認してください。

ステップ3：
ドライブレコーダーの電源ボタンを回押して、ドライブレコーダーのWiFiをアクティブにします。



ステップ4：
「**Pelsee Cam**」アプリを開き、必要な許可を与えてください。ウィザードを確認し、「**ドライブレコーダーを追加**」をタップして接続を開始します。

ステップ5：
「**Wi-Fi接続**」をタップし、モバイルデバイスの「**設定**」>「**Wi-Fi**」に移動して、「**P1_Duo_********」のWi-Fiを検索します。パスワード「**12345678**」を入力して接続プロセスを完了させてください。

ステップ6：
アプリに戻り、接続を待ちます。ホームページに入るために、「**ドライブレコーダーに入る**」をタップしてください。

ヒント：
① もしモバイルデバイス上に、カメラのWi-Fiがインターネットにアクセスできないという警告が表示された場合、「**はい**」を選択して続行します。「**いいえ**」を選択すると、カメラのWi-Fiが切断されます。
② 一度に1つのモバイルデバイスしかカメラに接続できません。
③ アプリからダウンロードした動画や写真は、メインページの「**アルバム**」にも保存されます。「**もっと**」をタップすると、「**アプリの設定**」、「**フィードバック**」、「**ヘルプ**」、および「**我々について**」にアクセスできます。「**アプリの設定**」では、アプリの言語とカメラの日付形式を変更できます。「**フィードバック**」すると、詳細な問題に関して直接メールを送信できます。「**ヘルプ**」では、ウェブサイト上のよくある質問にアクセスできます。「**我々について**」では、アプリのバージョンを確認および更新し、公式ウェブサイトとメールアドレスを表示できます。

2. アプリの概要

ホームページ

① 録画ステータス
② ライブビュー
③ 日付と時刻
④ 画面の向き(縦または横)
⑤ 前後カメラの表示切り替え
⑥ 音声のオン/オフ
⑦ 録画の開始/停止
⑧ 写真の撮影
⑨ 録画されたビデオとキャプチャーされた写真
⑩ カメラの詳細設定

カメラファイル

ホームページで「**カメラファイル**」をタップすると、カメラファイルを表示および管理することができます。ここから、すべてのビデオや写真を閲覧し、削除やダウンロードするファイルを選択することができます。

① **動画ファイル：**フロントおよびリアカメラからの標準ビデオ
スナップ：フロントおよびリアカメラからのキャプチャされた写真
ロック：フロントおよびリアカメラからのロックされたビデオ
駐車録画：駐車時に記録されたビデオ(別途ハードワイヤーキットが必要です)
F：フロントカメラからのビデオまたは写真
R：リアカメラからのビデオまたは写真
② 右上隅の「**選択**」をタップして、ダウンロードするファイルを選択し、モバイルデバイスにダウンロードするか、ファイルを削除します。ファイルをダウンロードした後、編集や直接ソーシャルメディアで共有することもできます。

設定

ホーム画面でカメラの設定を確認および変更するには、「**カメラ設定**」をタップします。

① 録画音声
ビデオの録音時に音声をオンまたはオフにします。

② スピ･カ･の音量
カメラのスピーカーの音量を設定します。

③ 録画品質
フロントカメラのみをインストールした場合、3つの異なる解像度(4K、2K、1080P)から選択するオプションが表示されます。これらのオプションに基づいて、フロントカメラの解像度を調整することができます。ただし、フロントカメラとリアカメラを同時にインストールした場合、2K:1080Pの選択肢しかありません。フロントカメラは2K解像度に設定され、リアカメラは1080P解像度に設定されます。

④ 録画ファイルの長さ
各ビデオの録画時間を変更します。デフォルトでは録画時間は1分に設定されています。「1分」、「2分」、「3分」の中から選択できます。

⑤ 光源周波数
ビデオのリフレッシュレートを50HZと60HZの間で変更します。

⑥ 動画透かし
録画されたビデオとキャプチャされた写真に表示される日付と時刻のウォーターマークを表示または非表示にします。

⑦ リアミラー
リアカメラの画像を水平方向に反転させて、左右の向きを変更します。

⑧ 衝突検知
ドライブ中の衝突検知のためのGセンサーの感度を設定します。必要に応じて、「低、中、高、閉じる」から選択できます。「高(低)」を選択すると、車が「軽微(重大)」な衝突に遭遇した際にカメラが自動的に現在のビデオをロックします。LCDディスプレイの左上隅に点滅する黄色い点が表示され、カメラが現在のビデオをロックしていることを示します。このビデオは上書きされません。

⑨ 自動スクリ･ンオフ時間
画面を自動的にオフにするために指定された時間を設定してください。

⑩ 音声スイッチ
音声制御機能をオンまたはオフにします。このカメラは、音声コマンド（Turn on Audio, Turn off Audio, Lock the Video と Take Photo）によって操作することができます。

ご注意：
ドライブレコーダー 用のハードワイヤーキット（別売）をインストールした場合、駐車監視オプションを使用することができます。このモードは、車両が駐車されているときにオンにすることができ、衝突検知の感度レベルを調整することができます。また、タイムラプスビデオも利用できる場合があります。詳細については、Pelseeのカスタマーサービスチームにお問い合わせください。

⑪ Wi-Fi名称
カメラのWi-Fi名を確認および変更します。

⑫ Wi-Fiパスワード
カメラのWi-Fiパスワードを確認および変更します。

⑬ ファームウェアバージョン
ドライブレコーダー のファームウェアバージョンを確認します。

⑭ メモリカードをフォーマット
メモリカードをフォーマットします。

⑮ リセット
ドライブレコーダー を工場出荷時の設定にリセットします。

仕様

センサー	GC4653
メモリーカード	最大256GBまで対応（別売）
解像度（フロントカメラ）	4K、2K、1080P
解像度（リアカメラ）	1080P
ビデオフォーマット	TS
写真フォーマット	JPG
保存温度	-30℃～+85℃
動作温度	-10℃～+60℃