BINBOK PLAY

Welcome Guide

GEMINI

Feature Pro Controller

Layout

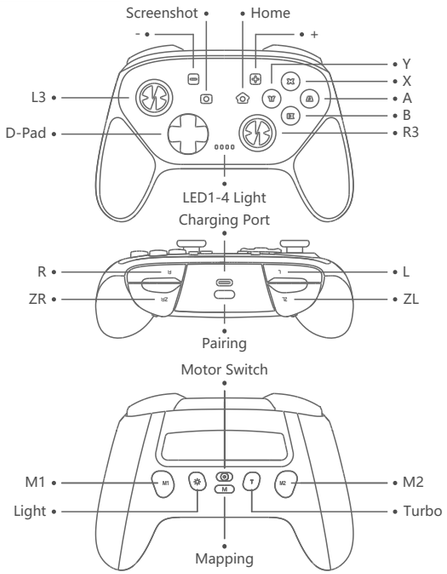

Specifications

Working voltage: DC3.7-4.2V
Input voltage/current: DC5V/1A
Charging time: about 3 hours
Continuous running time: >10 hours
5. Battery capacity: 1000mAh

Wired Pairing

① Please make sure that the Switch has turned on the wired connection mode.

(Setting - Controllers and Sensors - Pro Controller Wired Communication)

② Connect the controller to the dock of switch with a USB cable.

③ After the wired connection is successful, unplug the USB cable, and the controller will automatically connect wirelessly.

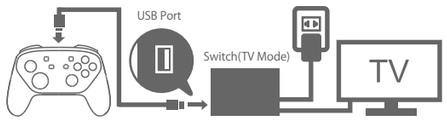

Wireless Pairing

① Press the power button of Switch to start the host and enter the "Controller Settings - Change Grip / Order" page.

②While the controller is in the powered-off state, press and hold the Pairing button for 1.5s or hold the Home button for 5s til the LED1-4 Light flash quickly.

③After successfully connected, the LED1-4 Light indicate the corresponding game player. (Controller will vibrate)

Reconnection

①Short press the Home button, the controller will turn on and automatically reconnect to the Switch.

②After successfully connected, the LED1-4 Light indicate the corresponding game player. (Controller will vibrate)

Status

Wake Up

After the first successful connection, press the Home button to wake up the switch and reconnect (other buttons can not wake up).

Power Off

To power off the controller, press and hold the Pairing button for 0.5s or hold the Home button for 5 seconds.

Low Battery

When the battery power is low, the LED1-4 Light lights flash quickly at the same time.

Charge

Disconnected State:
The LED1-4 Light will display the charging progress and flash slowly. When the battery is fully charged, the The LED1-4 Light will turn off.

Connected State:
The corresponding LED Light will flash slowly. When the battery is fully charged, The LED Light light will stay solid.

Light

Change Colors

Press the Light button once to change the color successively in: Single Color Breathing Mode & Single Color Breathing Mode

Colors: symmetric rainbow - rainbow - pink - red - orange - yellow - green - blue - cyan - purple

Vibrating Lights

The lights will quickly transition from the current brightness to the brightest level when the vibration occurs in:
Single Color Breathing Mode & Automatic Single Color Breathing Mode

Change Modes

Double press the light button to switch light modes.
(Controller will vibrate)

Mode 1: Single Color Breathing
Mode 2: Automatic Single Color Breathing
Mode 3: Single Color Solid
Mode 4: Lights Off

Brightness Adjustment

Press and hold the light button for 1s to start adjusting the brightness: 40%-70%-100% (Controller will vibrate)

Mapping M + M1 | M2

Seting

①Hold the M button and press any of M1/M2 button to enter the programming mode.

②Then input the button or button combination you want to set.

*Each programmed button(M1/M2) can record up to 21 inputs(Each press of function buttons is regarded as an input), When the input exceeds 21 times, the programming will automatically end.

③When you're done , press the M1/M2 button that was pressed earlier to end the programming.

Note: The controller will vibrate when you start or end the programming.

Cancel

Method a: After entering the programming mode, directly press the M1/M2 button that was pressed earlier to exit without setting any buttons.
(at this time, M1/M2 button is empty and there is no function)

Method b: Press the M button for 5s to reset the assaign function.

Note: The controller will vibrate when you cancel the programming.

Turbo

Buttons can be set

A / B / X / Y /R / ZR / L / ZL / M1/ M2 / D-Pad.

Seting

A: Hold the Turbo button and press the button that you want to set to turn on the turbo function. (Controller will vibrate)

Cancel

A: Hold the Turbo button and press the button that you have set to turn off its turbo function. (Controller will vibrate)

B: Hold the Turbo button for 4s to cancel the Turbo function of all buttons.(Controller will vibrate)

Vibration Adjustment

① The controller is set to linear motor mode by default (motor switch on the left).

② Move the Motor Switch to the left for linear motor mode, move it to the right for rotor motor mode, or keep it in the middle to turn off all motors.

③The controller will vibrate for 0.5s when you successful switch on vibration .

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Binbok Marketing

@BINBOKOffcial

Official Homepage : binbok.com
(Register on this web to activate aftersales)

support@binbok.com

Business Contact: contact@binbok.com

DISCORD

Join our community

材质：铜版纸，彩色打印