Ultimi

Professionally Test And Recommend Each Toy For You!

1 * WARRANTY & AUTHENTICATION
2 * BRAND STORY
3 * AFTER SALES SERVICE
4 * HOW TO USE

* Your manual
* Warranty card for your product
* Note: Our manual may be updated without notice.

WARRANTY & AUTHENTICATION

Vitally, Act Now!

The default warranty period for the product is 12 months.
Scan the QR code below to

Extend the warranty period to 2 years

Verify the authenticity of the product

Get exclusive Promos & Giveaways

WWW.ULTIMI.COM

* Or visit the "Warranty" menu on the official website to complete your product registration.

* Note: Warranty service could only under normal use of the product.

BRAND STORY

ULTIMI

Professional testing and recommendation of each toy

All sex-oriented products are selected through online screening, Alpha tested and recommended by professional players, and judged by the platform as excellent products before they hit the shelves.
Choose Ultimi, no longer bad mood by buying inferior products.

Evolution:
In 2014, ULTIMI was founded.
In 2016, ULTIMI become the largest seller in the Sexual Wellness category on Amazon.
In 2018, ULTIMI has 100+ patents for adult products.

Over the years, we found a large number of problems with adult products such as short life span, poor use, no privacy packaging, and use of materials that are harmful to the body. To solve these problems, we carried out a comprehensive strategic upgrade and determined to allow users to easily find the right and reassuring products.

Pleasure Products
Ultimi provides "high-quality, safe, creative, effective, cost-effective" erotic products, as well as one-on-one expert customer service.

Each product is selected and developed from the real needs of users, careful analysis and research on the pain points of similar products. We focus on product rationality and how to use it longer and safer.
Each product is tested by professional players around the world, and receives their unanimous recommendation, and then is judged by the platform to be excellent before it goes on sale.
For each order, we invite users to participate in a satisfaction survey. The number of participants reaches more than 50. Products with a rating or a recommendation ratio significantly lower than 4.3 or 80% will be permanently banned from sale. It's our priority to collect users' experience.

Interactions
Freedom, equality, respect, sharing, tolerance!
Sex is a fundamental human need, one that transcends gender, age, color, class, and culture, shameless and unyielding one with no obscurity and no indication, a spiritual life that humans enjoy equally!
Ultimi unites a group of certified professional sex educators, sex&gay experts, sex toy connoisseurs, and sex bloggers together a group of men and women, LGBTQ, SM players who seek enchantment and love to explore and share. You can easily communicate and share with us, and together we can create a very inclusive spiritual paradise.

OUR SLOGAN:

Professionally Test And Recommend Each Toy For You!

AFTER-SALES SERVICE

If you are not satisfied with the product, please contact us first, we will try our best to solve your problem as soon as possible.

Other questions, such as: warranty and authentication, instructions for use, product advice, product representation, etc.

Please contact us through the following ways.

support@ultimi.com
(+424) 419 1400
(GMT+8: 09:00 am - 06:00 pm Weekday)
https://www.facebook.com/Ultimi Toys
(+424) 419 1400
https://www.ultimi.com/

support@ultimi.com
(+424) 419 1400
(GMT+8: 09:00 am - 06:00 pm Weekday)
https://www.facebook.com/Ultimi Toys
(+424) 419 1400
https://www.ultimi.com/

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
FCC Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that may cause undesired operation.

EN EN

SPECIFICATION

Chinese name: (Amazon Boutique) ICE and WEEDlabels required Couple wearing vibration insertion double ring lock sperm male and female sharing invisible underwear dimon lock sperm ring personal testicular vibration massage with remote control Black
Origin: China

Material: silicone+ABS
Product: 19.5 * 1.46 * 3.8mm
Remote control: 16.3 * 34 * 67.5mm
Weight: 154g
Maximum noise: <32dB
Waterproof grade: ip7
Function: 10 frequency vibration (3 frequency speed+7 frequency switching)
Accessory list:
1pcs * Storage bag
1pcs * Product body
1pcs * Charging cable
1pcs * Remote control
1pcs * Instruction manual

EN EN

INSTRUCTION OF BUTTON

Charging time: about 2H Discharge time: 1H
Charging display: flashing, fully charged display always on
Power on operation: LED light flicker with frequency
Insufficient battery: lights flicker
Country of origin: China
Charging mode: magnetic suction charging
Battery capacity: 450mAh
Charging current: ≤ 310MA
Working current: ≤ 450MA
Standby current: ≤ 6MA
Charging voltage: 4.7V~5.2V
Working voltage: 3.3V~4.2V
Static current: ≤ 0.28μ A
Motor speed: M20, vibration motor 9000 rpm

Key on:
Press and hold the 1.5 seconds to power on, the main motor vibration for 0.2 seconds and enter standby mode.
The LED light will keep on for a long time.
Short press for the first frequency of personal vibration, short press for frequency change, the light will flash once and then remain on.
Each time the frequency change occurs, the light will flicker 3+7 frequency vibration, and the LED light will flicker with the frequency. Long press for 1.5 seconds to shut down the product. (Short press the remote control to control frequency conversion in standby mode)

EN EN

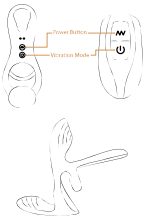

EN EN

Vibration key:
Vibration control key: After the product is turned on, short press the insertion end of the inner body and the head to vibrate in the first frequency, and the light will flash once and remain on. The light will flash once every time the frequency is changed, then press for frequency conversion, and the LED light will flash with the frequency. Long press for 1.5 seconds for the motor to standby. Light off, press to start. Short press remote control to control frequency conversion in standby mode.

Power button:
Short press on the product is in standby mode to activate the insertion end and the default frequency of head vibration. Short press again to switch frequency, a total of 10 frequencies, 1,2,3...10.3. Cycle. Every time you change frequency, flash once. Long press to turn off the motor.

Vibration mode:
Short press while the product is in standby mode to activate the default frequency of the personal end. Short press to switch frequency again, a total of 10 frequencies, cycle 1,2,3...10.1. Every time you change frequency, flash once. Long press to turn off the motor.

EN EN

HOW TO USE

before use, please disinfect the product.

first, then fully charge it.

When using, the lubricating should pass through the bottles and penis to align the bottom vibrator with the perineum. Then, use the small ring to pass through the penis and lock the base of the penis. Once activated, it can be used.

It is recommended to use with a condom.

EN EN

MATTERS NEEDING ATTENTION

Insert the USB charging cable into the charging port of the product.
Insert the USB charging cable into an available PC USB port or AC adapter.
After the connection is correct, the indicator light flashes every few seconds.
When the device is fully charged, the indicator light remains on.
Before connecting, please ensure that the computer's USB port is connected to the product. Before the first use or prolonged non-use, please fully charge this product. To ensure the quality of the battery, please fully charge it at least every six months.
Do not use non-included USB charging cables. The accompanying USB charging cable is not waterproof. Please be careful not to put it into water to avoid other accidents such as electric shock or burns

EN EN

CLEANING & STORAGE

To clean directly after use, gently pat dry with a dry, lint-free linen cloth or towel until dry after dry cleaning.
If there is lubricant or dirt on the product, wipe with a soft cloth and clean with a mild soap or neutral stain remover. The product body is waterproof and can be rinsed underwater.

Do not store with hot water or hot. Do not clean with solvents such as benzene, alcohol, etc. to avoid deformation and discoloration of the product.
Pre-vacation (in order to make the product have a longer service life, it is recommended to add talcum powder on the TPE cloth, if the powder is left unused, it should be stored in a dry and ventilated place, avoiding direct sunlight, and away from oil (free) contact range.

It is strictly prohibited to immerse the product in water when charging to avoid electric shock, short circuit, fire and other accidents.

Do not store the product in places exposed to sunlight, high temperature or high humidity. This may cause discoloration, breakage, heating, or even cause a fire.

EN EN

FAULT RESOLUTION

Product does not work properly/vibrating or vibrating function is weak
Do you have pressed the 1-2 seconds after pressing the power button? Is it fully charged?
Please observe the power supply, and the product cannot be turned on, and frantically charge it. If it still does not work after several attempts, the battery may be damaged.

The product cannot be charged. Indicator light not flashing!
Is the charging cable disconnected from the adapter or charging port? When using your computer's USB port, the product will not charge if your computer is in standby mode. Please check if your computer is in standby mode.
There may be dust and stains on the charging port, when charging again, please wipe it with a dry cloth or cotton swab.
Is the product fully charged? When the product is fully charged, the indicator light will stay on.

Charging will not complete. Indicator light does not go off!
Dust and stains may be adsorbed to the charging port. Please wipe it with a dry cloth or cotton swab before charging.
If the indicator light is still on after 180 minutes of charging, it may be due to poor contact with the charging contacts.

EN EN

SAFETY & WARNING

If you are using a medical device/receiving treatment/pregnant, consult your doctor before use.
If you feel any discomfort while using the product, please stop using it and consult your doctor or pharmacist.
When you notice that the product is working abnormally, please stop using it and turn off the power immediately to avoid injury or accident.
Keep it out of reach of children to prevent them from accidentally swallowing product parts or accessories.
Please use the provided USB charging cable to charge and connect it correctly otherwise it may overheat or burn out.
To avoid electric shock or burns, please keep your hands dry when unplugging the charging cable.
Please turn off the power before charging or it may cause malfunction, heat or even fire.
Turn off the power before cleaning, otherwise it may cause malfunction, overheating or burning.
When unplugging the included USB charging cable, please hold the connection part and do not stretch the cable, otherwise it may accelerate the deterioration of the cable and lead to electric shock and short circuit or even fire.
Unplug the USB charging cable when it is not needed for charging, otherwise it may be short-circuited due to dust and moisture, and lead to electric leakage or fire accidents.
Please clean the USB charging cable connector regularly to avoid dust causing a short circuit or fire

EN EN

SAFETY & WARNING

Please do not use it in bathroom or immerse in it.
If you find any abnormality, please stop using it.
Do not use it when you are extremely tired or drunk as it may cause other discomforts. Do not charge, use or store at extreme temperatures as this may cause losses or breakage.
Do not pull or remove the surface of the silicone gel to avoid breakage or malfunction.
Do not bend or pull the included USB charging cable excessively and do not wrap the charging cable around the product for storage as this may damage the charging cable.
Do not use the included USB charging cable when it is damaged as it may cause electric shock, short circuit or fire.
Do not share this product with others. Share one person's sexual spreading sexually transmitted diseases.

DE DE

SPEZIFIKATION

Chinesischer Name: (Amazon Boutique) ICE- und WEEDlabelsen erforderlich) Paar, das Vibrationseinsätze mit doppelter Ringsperre hält, Sperrmen männlich und weiblich, die unsichtbare Unterwäsche Dimon Lock Sperrmenringpersönliche Hodenschwingungsmassagegerät mit Fernbedienung schwarz teilen
Ort: China

Material: Silikon+ABS
Artikel: 19.5*1.46*3.8mm
Fernbedienung: 16.3*34.67.5mm
Gewicht: 154g
Maximales Rauschen: <32dB
Wasserdichte Qualität: ip67
Funktion: 10 Frequenzschwingung (3 Frequenzgeschwindigkeit+7 Frequenzumschaltung)
Zubehörliste:
1pcs Aufbewahrungstasche
1pcs Produktkörper
1pcs Fernbedienung
1pcs Aufbewahrungstasche

DE DE

WICHTIGE ANWEISUNGEN

Ladezeit: ca. 2H Entladezeit: 1H
Ladeanzeige: blinkend, vollaufgeladenes Display: immer eingeschaltet
Einschaltbetrieb: LED-Lichtflackern mit Frequenz.
Unzureichende Batterie: lichter flackern
Herkunftsland: China
Lademodus: magnetische Saugladung
Batteriekapazität: 450mAh
Ladestrom: ≤ 310MA
Arbeitsstrom: ≤ 450MA
Standby-Strom: ≤ 6MA
Ladespannung: 4.7V~5.2V
Arbeitsspannung: 3.3V~4.2V
Statischer Strom: ≤ 0.28 μ A
Motordrehzahl: M20, Vibrationsmotor 9000 Drehzahl

Taste an:
Drücken und halten Sie für 1.5 Sekunden, um einzuschalten, der Hauptmotor vibriert für 0.2 Sekunden und tritt in den Standby-Modus. Die LED-Leuchtanzeige bleibt an. Kurzes Drücken für die erste Frequenz der persönlichen Vibration, kurze Drücken für Frequenzumschaltung, das Licht blinkt einmal und bleibt dann an, jedes Mal, wenn die Frequenzumschaltung erfolgt, blinkt das Licht für 3+7 Frequenzvibration, und das LED-Licht blinkt mit der Frequenz. Lange Drücken für 1.5 Sekunden, um das Produkt herunterzufahren. Drücken Sie kurz die Fernbedienung, um Frequenzumwandlung im Standby-Modus zu steuern.

DE DE

DE DE

Vibrationstaste:
Vibrationsmotor unterer Nachdem das Produkt eingeschaltet ist, drücken Sie zu das Drücken und die Hauptsperre und das Kopfteil, um für die erste Frequenz zu vibrieren, und das LED-Licht einmal aufleuchtet und blinkt eingeschaltet. Das Licht tritt jedes Mal, wenn die Frequenz geändert wird, Drücken Sie zu ändern Frequenz, um zu vibrieren, und das LED-Licht blinkt mit der Frequenz. Drücken Sie lange für 1.5 Sekunden, um den Motor Standby zu. Licht aus, drücken Sie zum Start (wenn Fernbedienung zur Steuerung der Frequenzumwandlung im Standby-Modus).

Ein-/Aus-Taste:
Drücken Sie lang, während sich das Produkt im Standby-Modus befindet, um das Gerät zu aktivieren und die Standardfrequenz der Kopfvibrierung zu aktivieren. Drücken Sie erneut kurz, um die Frequenz zu wechseln, insgesamt 10 Frequenzen, 1,2,3...10.3. Zyklus. Jedes Mal, wenn Sie die Frequenz ändern, blinken Sie einmal. Lange drücken Sie, um den Motor auszuschalten.

Vibrationsmodus:
Kurz drücken, während sich das Produkt im Standby-Modus befindet, um die Standardfrequenz der Persönlichkeitsvibration zu aktivieren. Kurz drücken, um die Frequenz erneut zu schalten, insgesamt zehn Frequenzen, Zyklus 1,2,3...10.1. Jedes Mal, wenn Sie die Frequenz ändern, blinken Sie einmal. Lange drücken Sie, um den Motor auszuschalten.

DE DE

WIE BENUTZT MAN

Vor dem Gebrauch desinfizieren Sie bitte das Produkt zuerst und laden Sie es vollständig auf.

Bei der Verwendung sollte der große Ring durch das Hoden und Penis gehen, um den unteren Vibrator mit dem Perineum auszurichten.

Dann verwenden Sie den kleinen Ring, um durch den Penis zu gehen und die Basis des Penis zu sperren. Sobald aktiviert, kann es verwendet werden.

Es wird empfohlen, mit einem Kondom zu verwenden.

DE DE

VORBEHALTE

Stecken Sie das USB-Ladekabel in den Ladeanschluss des Produkts.
Stecken Sie das USB-Ladekabel in einen verfügbaren PC-USB-Anschluss oder Netzadapter.
Nach korrekter Verbindung blinkt die Kontrollleuchte alle paar Sekunden.
Wenn das Gerät vollständig aufgeladen ist, bleibt die Kontrollleuchte eingeschaltet.
Stellen Sie vor dem Anschließen sicher, dass der USB-Anschluss des Computers an das Produkt angeschlossen ist. Stecken Sie dieses Produkt vor dem ersten Gebrauch oder längerem Nichtgebrauch vollständig auf. Um die Qualität der Batterie zu gewährleisten, laden Sie sie bitte mindestens alle sechs Monate vollständig auf.
Verwenden Sie keine nicht mitgelieferten USB-Ladekabel. Das mitgelieferte USB-Ladekabel ist nicht wasserdicht. Bitte achten Sie darauf, es nicht in Wasser zu geben, um andere Unfälle wie Stromschlag oder Verbrennungen zu vermeiden

DE DE

REINIGUNG & LAGERUNG

Wischen Sie das Produkt direkt nach dem Gebrauch und trocknen Sie es mit einem trockenen, fusselfreien Leinentuch oder Handtuch, anschließend trocknen Sie nach der Trockenreinigung trocken. Wenn sich Schmiermittel oder Schmutz auf dem Produkt befindet, wischen Sie es mit einem weichen Tuch ab und reinigen Sie es mit einem milden Seifen oder einem neutralen Reinigungsmittel.
Das Produktgehäuse ist wasserdicht und kann unter Wasser abgespült werden.
Stellen Sie es nicht mit heißem Wasser ab und lagern Sie es nicht ab. Reinigen Sie nicht mit Lösungsmitteln wie Benzol, Alkoholen, um Verformungen und Verfärbungen des Produkts zu vermeiden.
Konservierung (Im Lieferzustand des Produkts ist ein Beutel, wird empfohlen, Talkumpulver auf die TPE-Abdeckung zu streuen, Wenn das Produkt nicht benutzt wird, sollte es zur Aufbewahrung an einem trockenen und lichtfreien Ort aufbewahrt werden, direkter Sonnenlichtaufbewahrungsbereich und nicht in den Kontaktbereich von Ölen (gelagert).

Es ist strengstens untersagt, das Produkt beim Aufladen in Wasser zu tauchen, um Stromschlag, Kurzschluss, Feuer und andere Unfälle zu vermeiden.

Lagern Sie das Produkt nicht an Orten, die dem Sonnenlicht, hohen Temperaturen oder hohen Luftfeuchtigkeit ausgesetzt sind. Dies kann zu Verfärbungen, Brüchen, Erhitzung oder sogar Bränden führen.

DE DE

FEHLERBEHEBUNG

Das Produkt funktioniert nicht richtig / die Telescop-oder Drehfunktion ist schwach
Haben Sie die Einschaltzeit nach dem Drücken 1-2 Sekunden lang gedrückt?
Ist es vollständig aufgeladen?
Bitte beachten Sie die Stromversorgung, bis das Produkt nicht eingeschaltet ist, und lassen Sie es dann vollständig auf. Wenn es nach mehreren Versuchen nicht funktioniert, kann die Akku beschädigt sein.

Das Gerät kann nicht geladen werden. (Anzeigelampe blinkt nicht!)
Ist das Ladekabel nicht mit dem Adapter oder dem Ladeanschluss verbunden?
Wenn Sie den USB-Anschluss Ihres Computers verwenden, wird das Produkt nicht aufgeladen, wenn sich der Computer im Standby-Modus befindet. Bitte überprüfen Sie, ob sich Ihr Computer im Standby-Modus befindet.
Der Ladeanschluss kann verstaubt oder verschmutzt sein. Wischen Sie den Ladeanschluss vor dem Laden mit einem trockenen Tuch oder Wattestäbchen ab.
Ist das Produkt vollständig aufgeladen? Wenn das Produkt vollständig aufgeladen ist, leuchtet die Kontrollleuchte.

DE DE

Der Ladevorgang wird nicht abgeschlossen. (Die Kontrollleuchte erlischt nicht)
An der Ladeanschlussstelle kann Staub und Flecken ansammeln. Bitte wischen Sie Sie vor dem Aufladen mit einem trockenen Tuch oder Baumwollstäbchen ab.
Wenn die Kontrollleuchte auch nach 180 Minuten Ladezeit noch

SICHERHEIT & WARNUNG

Wenn Sie ein medizinisches Gerät benutzen/behandelt werden/schwanger sind, kann Ihnen Sie vor der Verwendung Ihren Arzt.
Wenn Sie während der Verwendung des Produkts Beschwerden verspüren, beenden Sie bitte die Verwendung und wenden Sie sich an Ihren Arzt oder Apotheker.
Wenn Sie feststellen, dass das Gerät nicht ordnungsgemäß funktioniert, schalten Sie es bitte sofort aus, um Verletzungen oder Unfälle zu vermeiden.
Bewahren Sie das Gerät außerhalb der Reichweite von Kindern auf, um zu verhindern, dass diese versehentlich Produktteile oder Zubehör verschlucken.
Bitte verwenden Sie zum Aufladen das mitgelieferte USB-Ladekabel und achten Sie darauf, dass es korrekt oder sonst kann es oder überhitzen kann.
Achten Sie darauf, dass Produkt nicht mit mehr als einer Person, um die Verbreitung von sexuell übertragbaren Krankheiten zu vermeiden.

DE DE

SICHERHEIT & WARNUNG

Um einen plötzlichen Schlag oder Verletzungen zu vermeiden, halten Sie Ihre Hände bitte trocken, wenn Sie das Ladekabel abziehen. Schalten Sie das Gerät vor dem Aufladen aus, da es sonst zu Fehlbetrieben, Überhitzung oder Verbrennungen kommen kann.
Wenn Sie das mitgelieferte USB-Ladekabel aus der Steckdose ziehen, halten Sie bitte den Anschlussteil und dehnen Sie das Kabel nicht, da dies zu einer Verschlechterung des Kabels führen kann, was zu einem elektrischen Schlag, Kurzschluss oder sogar einem Brand führen kann.
Ziehen Sie den Stecker des USB-Ladekabels, wenn es nicht zum Laden benötigt wird, da es sonst aufgrund von Staub und Feuchtigkeit zu einem Kurzschluss kommen kann, der zu einem elektrischen Leck oder einem Brand führen kann.
Bitte reinigen Sie den Stecker des USB-Ladekabels regelmäßig, um zu vermeiden, dass Staub einen Kurzschluss oder einen Brand verursacht.

Bitte benutzen Sie es nicht auf gewaschener Weise und trotzdem Sie es nicht mit Wasser.
Wenn Sie sich unwohl fühlen, hören Sie bitte auf, es zu benutzen.
Lassen Sie es nicht, wenn Sie extrem müde oder betrunken sind, da dies zu anderen Unannehmlichkeiten führen kann. Laden, verwenden oder lagern Sie es nicht bei extremen Temperaturen, da dies zu Verlusten oder Bruch führen kann.
Ziehen Sie nicht an der Oberfläche des Silikons, um ein Brechen des Produkts zu vermeiden.

DE DE

Bitte ziehen Sie das mitgelieferte USB-Ladekabel nicht überhaupt, und wickeln Sie das Ladekabel zur Aufbewahrung nicht um das Produkt, da dies das Ladekabel beschädigen kann.
Verwenden Sie das mitgelieferte USB-Ladekabel nicht, wenn es beschädigt ist, da dies zu einem Stromschlag, Kurzschluss oder Brand führen kann.
Tipp: Da dieses Produkt nicht mit mehr als einer Person, um die Verbreitung von sexuell übertragbaren Krankheiten zu vermeiden.