Alloy RC Excavator Instruction

1. Remote Control Function

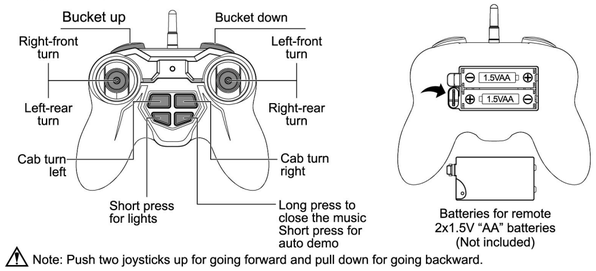

⚠ Note: Push two joysticks up for going forward and pull down for going backward.

2. Car Body Function

A. Twist off the battery cover

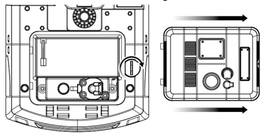

B. Use one 3.7V rechargeable battery pack

Accessories:
1. USB charging cable.
2. Rechargeable battery pack. (included)

Note:
Please remove the battery if it is not used for a long time.



Attention for Charging via USB

1. Battery should be fully charged for the first time using. The battery will still self-discharge when not in use. If not in use for a long time, please ensure that the battery has about half of the power to prevent over discharge damage. Overcharging can shorten battery life.
2. Please regularly check the cord, plug, casing and other accessories and stop using before being repaired if any damages are found.
3. Do not connect the toys with the power that is not recommended. Charging conditions: Connect the USB smart charging cable with the original battery.
4. Please use appropriate adapter instead of fast charger for charging.
5. Please use the right adapter for charging. Input: 100-240V~50/60Hz 0.2A; output: 5.0V⎓500mA 0.5-1.5A.
6. Charging notes: To charge the battery, please connect the battery with smart USB charging cable, which has access to power media with USB interface, such as: desktop, laptop, mobile power, USB socket. Alternatively, you can use a USB adapter to connect with the power for charging.
7. Please remove the battery for the remote control truck and the remote controller if they are not expected to use for a long period of time.

C. Power switch

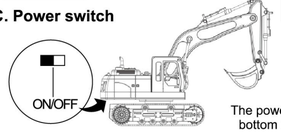

The power switch is at the bottom of the turntable.

Pairing Open remote control first. When the light of the controller flashes quickly, turn on the car. After the red light of the controller is off, the pairing is finished.

3. Remote Control Introduction

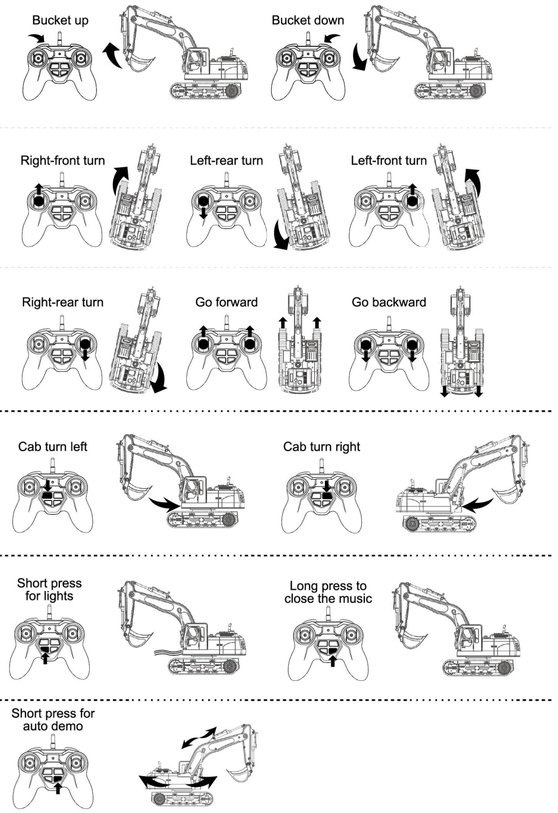

Alloy RC Excavator Instruction

1. Remote Control Function

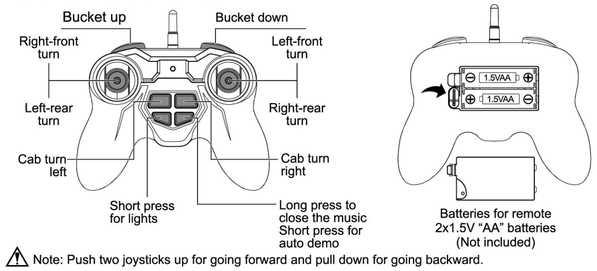

⚠ Note: Push two joysticks up for going forward and pull down for going backward.

2. Car Body Function

A. Twist off the battery cover

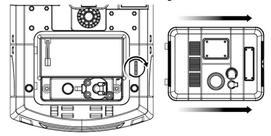

B. Use one 3.7V rechargeable battery pack

Accessories:
1. USB charging cable.
2. Rechargeable battery pack. (included)

Note:
Please remove the battery if it is not used for a long time.



Attention for Charging via USB

1. Battery should be fully charged for the first time using. The battery will still self-discharge when not in use. If not in use for a long time, please ensure that the battery has about half of the power to prevent over discharge damage. Overcharging can shorten battery life.
2. Please regularly check the cord, plug, casing and other accessories and stop using before being repaired if any damages are found.
3. Do not connect the toys with the power that is not recommended. Charging conditions: Connect the USB smart charging cable with the original battery.
4. Please use appropriate adapter instead of fast charger for charging.
5. Please use the right adapter for charging. Input: 100-240V~50/60Hz 0.2A; output: 5.0V⎓500mA 0.5-1.5A.
6. Charging notes: To charge the battery, please connect the battery with smart USB charging cable, which has access to power media with USB interface, such as: desktop, laptop, mobile power, USB socket. Alternatively, you can use a USB adapter to connect with the power for charging.
7. Please remove the battery for the remote control truck and the remote controller if they are not expected to use for a long period of time.

C. Power switch

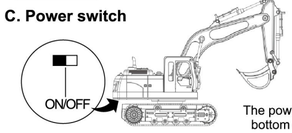

The power switch is at the bottom of the turntable.

Pairing Open remote control first. When the light of the controller flashes quickly, turn on the car. After the red light of the controller is off, the pairing is finished.

3. Remote Control Introduction

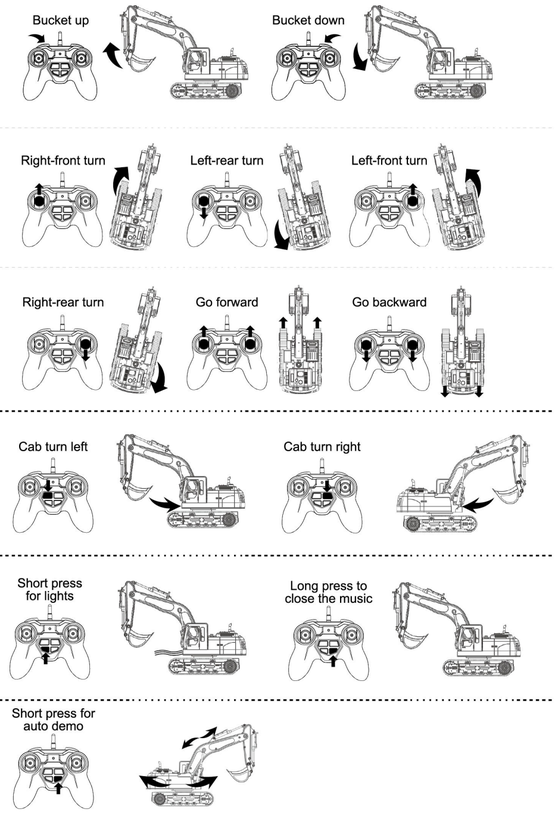

Alloy RC Excavator Instruction

1. Remote Control Function

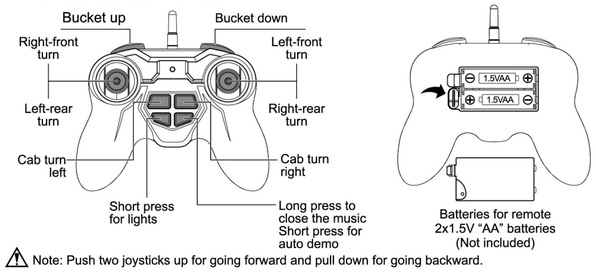

⚠ Note: Push two joysticks up for going forward and pull down for going backward.

2. Car Body Function

A. Twist off the battery cover

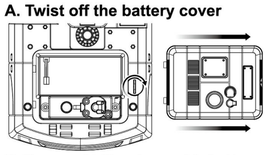

B. Use one 3.7V rechargeable battery pack

Accessories:
1. USB charging cable.
2. Rechargeable battery pack. (included)

Note:
Please remove the battery if it is not used for a long time.



Attention for Charging via USB

1. Battery should be fully charged for the first time using. The battery will still self-discharge when not in use. If not in use for a long time, please ensure that the battery has about half of the power to prevent over discharge damage. Overcharging can shorten battery life.
2. Please regularly check the cord, plug, casing and other accessories and stop using before being repaired if any damages are found.
3. Do not connect the toys with the power that is not recommended. Charging conditions: Connect the USB smart charging cable with the original battery.
4. Please use appropriate adapter instead of fast charger for charging.
5. Please use the right adapter for charging. Input: 100-240V~50/60Hz 0.2A; output: 5.0V⎓500mA 0.5-1.5A.
6. Charging notes: To charge the battery, please connect the battery with smart USB charging cable, which has access to power media with USB interface, such as: desktop, laptop, mobile power, USB socket. Alternatively, you can use a USB adapter to connect with the power for charging.
7. Please remove the battery for the remote control truck and the remote controller if they are not expected to use for a long period of time.

C. Power switch

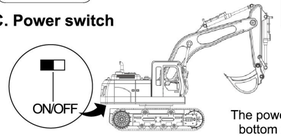

The power switch is at the bottom of the turntable.

Pairing Open remote control first. When the light of the controller flashes quickly, turn on the car. After the red light of the controller is off, the pairing is finished.

3. Remote Control Introduction

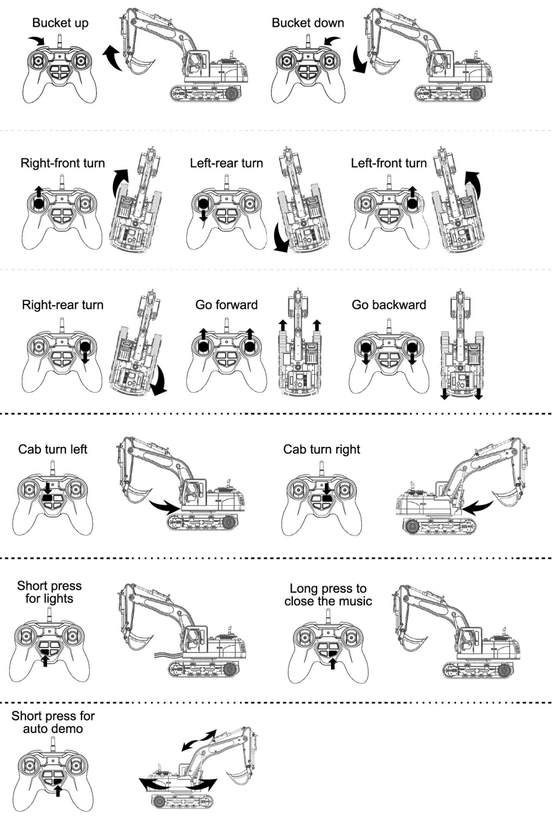

Alloy RC Excavator Instruction

1. Remote Control Function

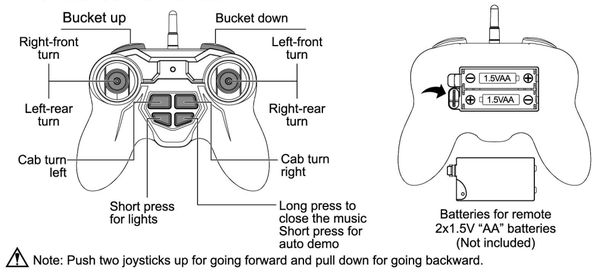

⚠ Note: Push two joysticks up for going forward and pull down for going backward.

2. Car Body Function

A. Twist off the battery cover

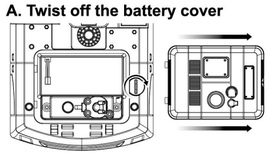

B. Use one 3.7V rechargeable battery pack

Accessories:
1. USB charging cable.
2. Rechargeable battery pack. (included)

Note:
Please remove the battery if it is not used for a long time.



Attention for Charging via USB

1. Battery should be fully charged for the first time using. The battery will still self-discharge when not in use. If not in use for a long time, please ensure that the battery has about half of the power to prevent over discharge damage. Overcharging can shorten battery life.
2. Please regularly check the cord, plug, casing and other accessories and stop using before being repaired if any damages are found.
3. Do not connect the toys with the power that is not recommended. Charging conditions: Connect the USB smart charging cable with the original battery.
4. Please use appropriate adapter instead of fast charger for charging.
5. Please use the right adapter for charging. Input: 100-240V~50/60Hz 0.2A; output: 5.0V⎓500mA 0.5-1.5A.
6. Charging notes: To charge the battery, please connect the battery with smart USB charging cable, which has access to power media with USB interface, such as: desktop, laptop, mobile power, USB socket. Alternatively, you can use a USB adapter to connect with the power for charging.
7. Please remove the battery for the remote control truck and the remote controller if they are not expected to use for a long period of time.

C. Power switch

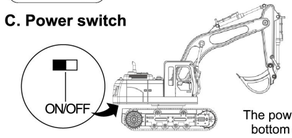

The power switch is at the bottom of the turntable.

Pairing Open remote control first. When the light of the controller flashes quickly, turn on the car. After the red light of the controller is off, the pairing is finished.

3. Remote Control Introduction

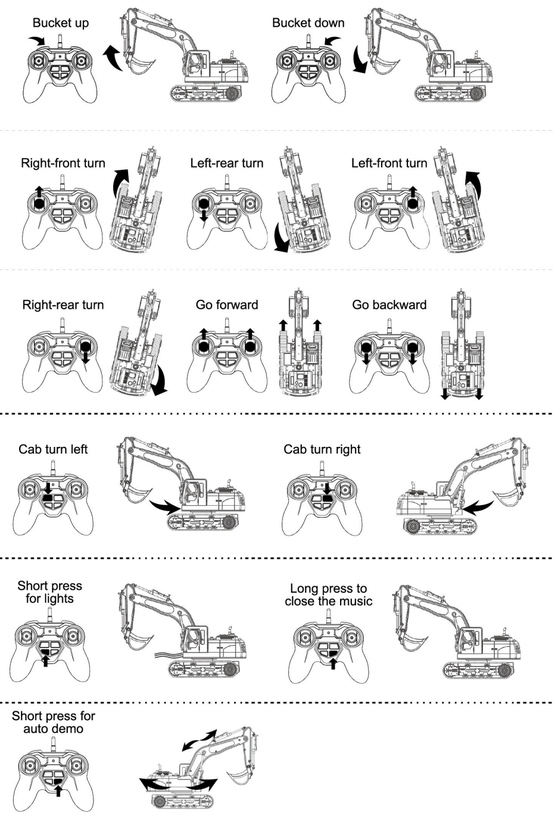

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.